

OPERATING INSTRUCTIONS

POWER

Activates Massage System

- * Turn On: Press PWR.
- * Turn Off: Press PWR again.

15 and 30 minute Timers:

Green light = 15 minute Timer.

Hold down PWR for a few seconds:

Amber light = 30 minute Timer.

- * Unit may also be turned on by pressing any ZONE 1-3 key.

To restart after Timer shuts off:

- * Press PWR or any ZONE 1-3 key.

The microprocessor controller is programmed to remember its last function prior to being turned off.

ZONES*

- 1 - Upper Back
- 2 - Mid Back
- 3 - Thigh


Any Zone can be made active by pressing that Zone button when operating in the SELECT or PULSE modes. RED zone LED's indicate which massage trasducers are active at any given instant.

INTENSITY

Controls INTENSITY of the massage pulse transducers while in any function. Momentary presses will generate a slight change. Holding down either the + (UP) or - (DOWN) button will achieve a greater increase or decrease. The maximum massage intnsity will be slightly less if the engine is off because the alternator increases the voltage at the battery terminals when running.

SPEED

Controls the rate at which the massage action travels. The Speed feature operates in the WAVE, PULSE and ZIGZAG modes. Momentary presses will generate a slight change. Holding down either + (FAST) or - (SLOW) button will achieve a greater increase or decrease.

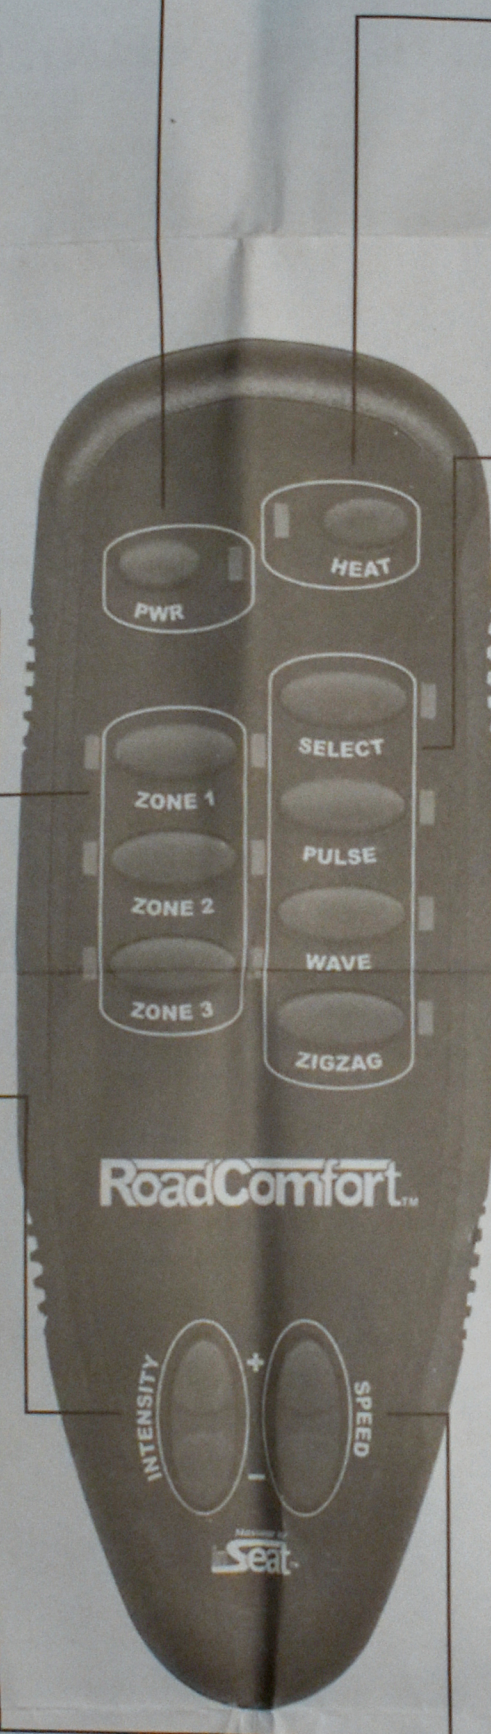

HEAT (OPTIONAL)

Activates Heat option.

- * Press Once fo low heat. (Amber Light)
- * Press Twice for high heat. (Red Light)
- * Press again to turn off.

Works with massage or independently.

30 minute Timer

To continue after Timer shuts off, press HEAT button again.

MODES

SELECT -

Lets you choose any or all zones for massage.

- * Press SELECT.
- * Press any or all Zones (1-3) to activate.
- * Press any or all Zones (1-3) to cancel.

PULSE -

Massage motors turn On and Off to simulate a pulsing action.

- * Press PULSE.
- * Press any or all Zones (1-3) to activate.
- * Press any or all Zones (1-3) to cancel.

WAVE -

Massage motors move up and down in a wave-like action.

- * Press WAVE.
- * Press any or all Zones (1-3) to activate.
- * Press any or all Zones (1-3) to cancel.

ZIGZAG -

Alternating Wave Massage.

- * Press ZIGZAG.
- * Alternates between Left and Right in a wave cycle down and up through all zones.
- * Press any other mode key to cancel.

SAVE THESE INSTRUCTIONS!

WARNING!
 OPERATE
 YOUR
 SYSTEM
 ACCORDING
 TO THIS
 MANUAL
 USE ONLY
 THE POWER
 DEVICE
 SUPPLIED
 WITH THIS
 PRODUCT

NOTICE!

IMPORTANT SAFETY CONSIDERATIONS

Please read and follow all safety & warning instructions provided below and on the system before using & connecting to the power source. Failure to comply with safety instructions may result in fire, electrical shock, or personal injury and may damage or impair protection provided by the equipment. Please save all safety instructions.

To reduce the risk of potential product damage:

- Follow these instructions to help ensure product quality over the life of the system. Failure to follow these instructions may invalidate the warranty.
- Do not attempt to disconnect the power cord by pulling the power cord. Always hold the power plug and pull it out.
- Only use replacement parts specified by your dealer. Unauthorized substitutions may result in fire, electrical shock or injury and will void the warranty. Only use the power supply that accompanied this system.
- If there is a malfunction of any kind, please contact your dealer for further instructions, and for returning it for examination, repair or replacement.

To reduce the risk of potential serious injury to user:

- To reduce the risk of fire or electric shock, do not expose this product or any component of this product to rain or moisture.
- Do not spill liquid on the system. Spilled liquid may damage the system.
- Do not reach for any portion of the system that has fallen into water or any other liquid. Unplug immediately. Contact dealer for service.
- Use the power cord provided only. Do not overload wall outlets. The power outlet used to power this product should be readily accessible for fast disconnection in case of emergency.
- Unplug the power supply should you find it necessary to clean and or move the product. Strongly recommend using only a clean dry cloth.
- Recommend unplugging the system when it will not be used for long periods of time.
- Keep all cords away from heated surfaces and pinch points.
- Any changes or modifications to your system, or use of unauthorized accessories to your system not expressly approved by the manufacturer may be dangerous and void any applicable warranties.
- Close supervision is recommended when this product is used by, on or near children, invalids, or disabled persons. Always check the skin in contact with the heated area of the product (if heat function included).
- Do not use outdoors. FOR INDOOR USE ONLY.

MAINTENANCE INSTRUCTIONS:

No maintenance of this product is required. For service contact your dealer.

If there is a malfunction of any kind, contact your dealer for instructions on returning it for examination and repair.


Write to: Customer Service InSeat Solutions, LLC, Corporate Office

1871 Wright Avenue, La Verne, California 91750.

call or fax us at:

1-562-447-1780 ext. 204
 FAX: 1-562-447-1798

www.relaxor.com
 www.inseat.com

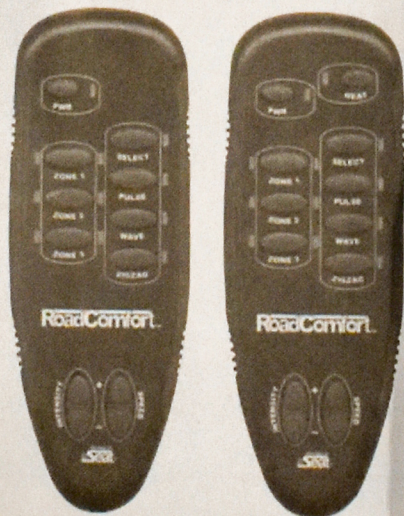

Relaxor by
InSeat
 Solutions

Models
 RC63 / RC63H* / FL63H*
 *(Lumbar Heat)

OWNER'S MANUAL and OPERATING INSTRUCTIONS

Welcome to the world of Massage!

You are now the proud owner of another great InSeat® vehicular pulse massage system.

Your new RoadComfort massage system uses proprietary microprocessor controller to select unique massage patterns and heat from a pre-programmed digital menu.

This ergonomically designed system is scientifically researched, with strategically placed pulsing motors to improve seating comfort by reducing fatigue and improving circulation and alertness.

We know you will enjoy your new InSeat® massage system product.

Limited Manufacturer's Warranty

Patents Pending

©Copyright 2015 InSeat Solutions, Inc. La Verne, CA

MNL-21010-00-21020-00_B

1115

RC63-RC63H