

3307906.010 WeatherPro FOB Kit

This kit contains:

1-3307906.002 FOB


1-3307996.003 FOB Programming Instructions

General Instructions

1. These instructions must be read and understood before attempting to program the electronic board.
2. This programming procedure should be done by a Dometic Service Center or a qualified service technician.

CAUTION

The electronic board is susceptible to static charge. Do not insert metal object inside control box. Damage to electronic board will occur if a short is created. Use only a nonconductive material to depress programming button inside control box.

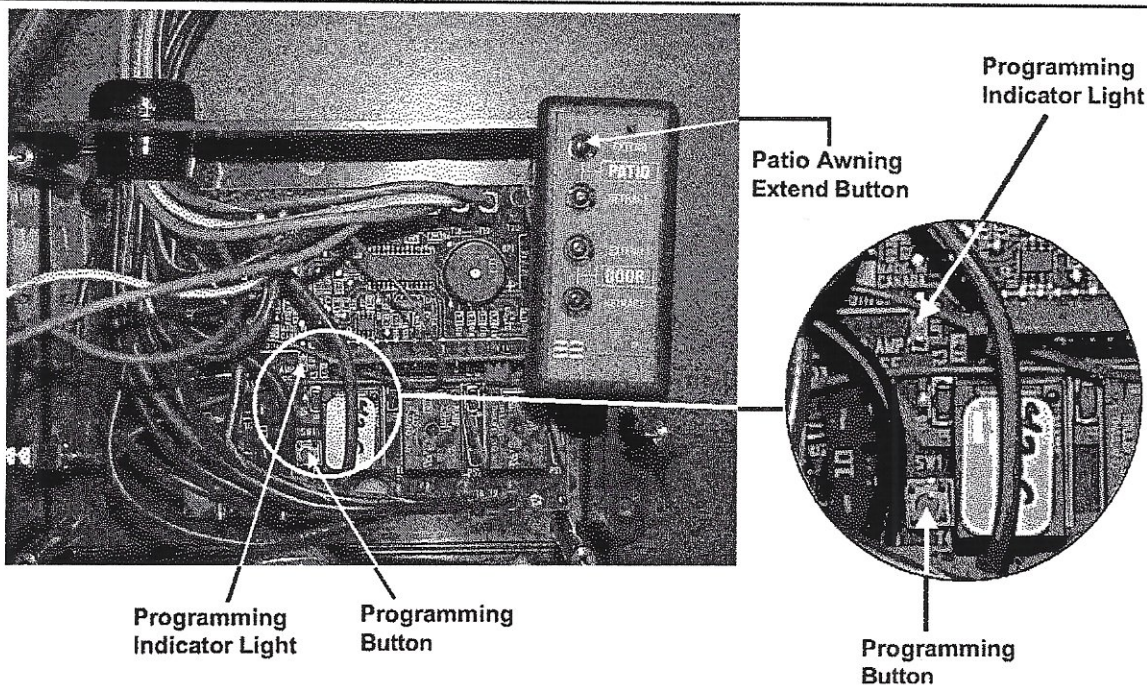

1. Remove four (4) screws from control box cover and lift cover to expose circuit board.
2. Press and release Programming Button . Programming Indicator Light will illuminate.
3. Press and hold FOB Patio Awning Extend Button for four (4) seconds.
4. Release FOB Patio Awning Extend Button. This completes the programming process.
5. Place control box cover on control box and secure with four (4) screws .
6. Test awning operation.