


- J3**
- | | |
|---------------------|----------------|
| 1) 16 WHT/BLU (F14) | DOME LIGHT |
| 2) 12 BLU (F15) | 12V OUTLET AUX |
| 3) 16 BLK (F21) | A/C CLUTCH |
| 4) 16 BLK (F13) | AUX BATTERY |
| 5) -- -- (F12) | SHADE VISOR |
| 6) 16 RED (F11) | SOLAR PANEL |

- J2**
- | | |
|-----------------|-----------------|
| 1) 14 PUR (F9) | DEFROST FAN |
| 2) 14 BRN (F10) | SPOT LIGHT |
| 3) | IGNITION RELAY |
| 4) 16 BRN (F8) | JACK BUZZER |
| 5) -- -- (F7) | ENT/STEP AUTO |
| 6) -- -- (F6) | CLIMATE CONTROL |

- J1**
- | | |
|--------------------|-----------------|
| 1) 14 GRY (F4) | AUX. HEATER |
| 2) 12 ORG (F5) | POWER WINDOW |
| 3) | EMPTY |
| 4) 16 GRY (F3) | POWER MIRROR |
| 5) 16 RED/BLU (F2) | BACK-UP MONITOR |
| 6) 14 PUR (F1) | NAVIGATION |

- J4**
- | | |
|-----------------|---------------|
| 1) 14 PUR (F19) | STEP COVER |
| 2) 14 RED (F20) | NAV. SYSTEM |
| BATT | |
| 3) (F |)OPEN |
| 4) 10 YEL (F18) | CARGO LOCKS |
| 5) 12 RED (F17) | KEYLESS ENTRY |
| 6) 14 ORG (F16) | DOCK LIGHTS |

- J5**
- | | |
|----------------|-------------------------|
| 1) -- -- (F23) | OPEN RELAY |
| 2) -- -- (F25) | AUX LOCKOUT |
| 3) -- -- (F24) | DOOR IN/LOCK |
| 4) -- -- | BRAKE SWITCH ACTIVE GND |
| 5) -- -- (F23) | RELAY SWITCH ACTIVE GND |
| 6) -- -- (F23) | RELAY SWITCH ACTIVE |
| BATT | |

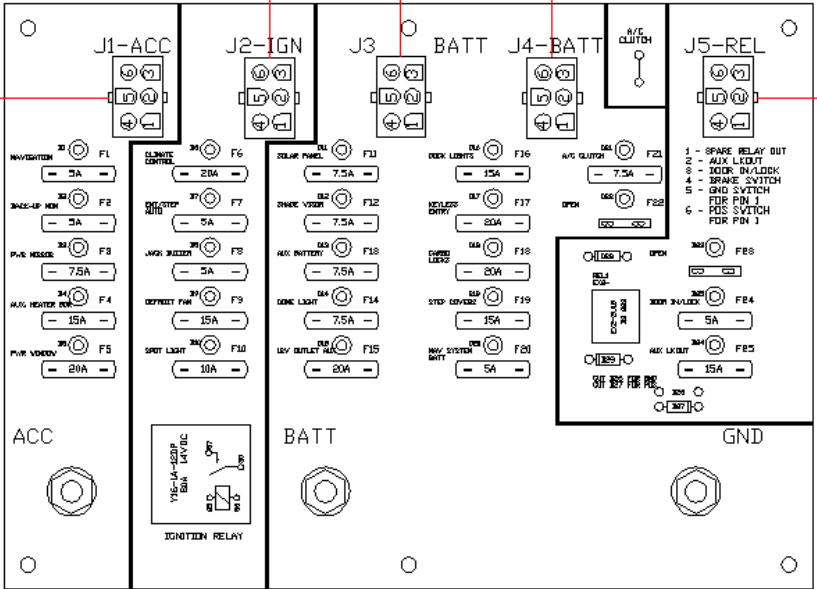

NEWMAR FUSE PANEL #115640

DIESEL PUSHER:
FUSE PANEL LOCATED IN FRONT
CARGO COMPARTMENT DRIVER
SIDE