

PARTS LIST

G-2085 Automatic Awning

Girard Part No. Description

1	1502085-01	Main Housing
2	1502085-02	Main Housing Cover
3	1502085-03	Right Side Plate
4	1502085-04	Left Side Plate
5	1502085-05	Right Cover
6	1502085-06	Left Cover
7	1502085-07	Screw Plate to Main Housing
8	1502085-08	Adapter 2085
9	1502085-09	Hex socket Screw
10	1502085-10	Bearing Support 1085/2085
11	1502085-11	Screw Plate to Bearing Support
12	1502085-12	Nut M6 A2 DIN 985
13	1502085-13	Tube Bushing
14	1502085-14	Roller Tube
17	1550034-17	Screw Plate to Motor
18	9700510-00	Motor - Standard
18	9700515-00r	Motor - Remote
34	1502085-34	Lead Rail Connector - Left Hand
35	1502085-35	Lead Rail Connector - Right Hand
38	1502085-38	Lead Rail
39	1502085-39	Right end cap Lead Rail
40	1502085-40	Left end cap Lead Rail
41	1502085-41	Philips Head Screw 3.5 x 13
42	1502085-42	Lead Rail Cover
43	1502085-43	Clip, Lead Rail Cover
71	1285000-71	Right Arm Assembly 2085 70mm

Girard Part No. Description

72	1285000-72	Left Arm Assembly 2085 70mm
73	1502085-73	Arm Plug - Bottom
74	1502085-74	Arm Plug - Top
75	1500530-02	Screw, Main Housing Cover
76	1500086-00	Motor Cord Grommet
77	1502085-77	Cotter Pin, Side Plate
78	1500372-00	Poly Rope 5.6mm
79	1500374-00	Poly Rope 1/8"
94	1502085-94	Plug - Fabric Rope
95	1502085-95	Screw - Plug to Fabric R
100	8001070-042	Fabric - 42"
100	8001070-060	Fabric - 60"
100	8001070-066	Fabric - 66"
100	8001070-072	Fabric - 72"
100	8001070-078	Fabric - 78"
100	8001070-084	Fabric - 84"
100	8001070-096	Fabric - 96"
100	8001070-120	Fabric - 120"
100	8001070-144	Fabric - 144"
100	8001070-156	Fabric - 156"
101	9800109-100	Paddle Switch
102	9800131-00	Single Remote Control
103	9800132-00	4 Awning Remote Control
104	9800136-01	Single Wireless Switch
105	9800135-01	4 Awning Wireless Switch

