



**Owner's manual**

# NX602

---



**DVD MULTIMEDIA STATION WITH BUILT-IN NAVIGATION  
& 6.2" TOUCH PANEL CONTROL**

## **CLARION PRODUCT REGISTRATION INFORMATION**

For USA and Canada only  
[www.clarion.com](http://www.clarion.com)

Dear Customer:

Congratulations on your purchase of a Clarion mobile electronic products. We are confident that you'll enjoy your Clarion experience.

There are many benefits to registering your product. We invite you to visit our website at [www.clarion.com](http://www.clarion.com) to register your Clarion product.

We have made product registration simple with our easy to use website. The registration form is short and easy to complete. Once you're registered, we can keep you informed of important product information.

Register at [www.clarion.com](http://www.clarion.com) - it's easy to keep your Clarion product up to date.

## **INFORMATIONS DE L'ENREGISTREMENT DE PRODUITS CLARION**

Pour les États Unis et le Canada seulement  
[www.clarion.com](http://www.clarion.com)

Cher client:

Nous vous remercions d'avoir acheté ce produit électronique mobile Clarion. Nous sommes confiants que vous apprécierez votre expérience Clarion.

Il y a beaucoup d'avantage à enregistrer votre produits. Nous vous invitons à visiter notre site Web [www.clarion.com](http://www.clarion.com) pour enregistrer votre produit Clarion.

Nous avons facilité la tâche d'enregistrement de produit simple et facile grâce à notre site Web. Le formulaire d'enregistrement est court et facile à compléter. Lorsque vous êtes enregistrer, nous pouvons vous tenir informé des informations important de produits.

Enregistrer à [www.clarion.com](http://www.clarion.com) - c'est facile de mettre à jour votre produit Clarion.

## **INFORMACIÓN DEL REGISTRO DE PRODUCTO DE CLARION**

Para USA y Canada nomas  
[www.clarion.com](http://www.clarion.com)

Querido Cliente:

Felicitaciones por su compra de producto electrónico móvil de Clarion. Estamos seguros que usted gozará de su experiencia con el producto de Clarion.

Hay muchas ventajas al registrar su producto. Le invitamos a que visite nuestro sitio en internet [www.clarion.com](http://www.clarion.com) para registrar su producto de Clarion.

Hemos hecho el registro de producto fácil en nuestro sitio. La forma de registro es corta y fácil de completar. Una vez que lo registre, podremos proporcionarle la información de su producto.

Regístrese en [www.clarion.com](http://www.clarion.com) - es fácil mantener su producto de Clarion actualizado.

*Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.*

*Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.*

# Contents

Thank you for purchasing this **Clarion** product.

- Please fully read this owner's manual before operating this equipment.
- Check the contents of the enclosed warranty card and store it in a safe place with this manual.

<b>1. FEATURES</b>	<b>3</b>
Expanding Systems	3
<b>2. PRECAUTIONS</b>	<b>4</b>
<b>3. CAUTIONS ON HANDLING</b>	<b>6</b>
Front Panel / Generalities	6
Cleaning the body	6
USB Port	6
SD Slot	6
Handling Discs	7
<b>4. CONTROLS</b>	<b>8</b>
Operational Panel	8
Names of Buttons	8
Remote Control	9
<b>5. MAIN MENU OPERATION</b>	<b>11</b>
<b>6. SYSTEM SETUP</b>	<b>12</b>
<b>7. DISC OPERATION</b>	<b>15</b>
DVD System	15
Accessing a Disc	17
DVD Player Operation	18
CD Player Operation	20
MP3/WMA Playback	21
MP4 Playback	23
<b>8. SD/USB OPERATION</b>	<b>24</b>
Accessing an USB	24
Accessing an SD Card	24
SD/USB Audio Operation	25
SD/USB Video Operation	25
<b>9. BLUETOOTH OPERATION</b>	<b>26</b>
Bluetooth Telephone Operation	26
Bluetooth Audio Operation	28
<b>10. RADIO OPERATION</b>	<b>29</b>
<b>11. SiriusXM Satellite Radio OPERATION</b>	<b>31</b>
<b>12. HD Radio OPERATION</b>	<b>35</b>
<b>13. iTunes Tagging</b>	<b>37</b>
<b>14. iPod &amp; iPhone OPERATION</b>	<b>38</b>
<b>15. PANDORA OPERATION</b>	<b>40</b>
<b>16. NAVIGATION OPERATION</b>	<b>41</b>
<b>17. AUX OPERATION</b>	<b>41</b>
<b>18. TROUBLE SHOOTING</b>	<b>42</b>
<b>19. ERROR DISPLAYS</b>	<b>45</b>
<b>20. SPECIFICATIONS</b>	<b>46</b>
<b>21. WIRING AND CONNECTIONS</b>	<b>48</b>

# 1. FEATURES

- 6.2" Wide-VGA color LCD TOUCH PANEL
- Compatible with iPod® / iPhone® with PANDORA® internet radio App
- SiriusXM-Ready™ and HD Radio Ready™ with iTunes® Tagging
- Latest Map Guarantee



Bluetooth®

PANDORA®  
internet radio

Made for



iPod iPhone

HD Radio® ((SiriusXM))  
READY READY

USB

MP3/WMA


MP4



Parrot

move wireless

## Expanding Systems

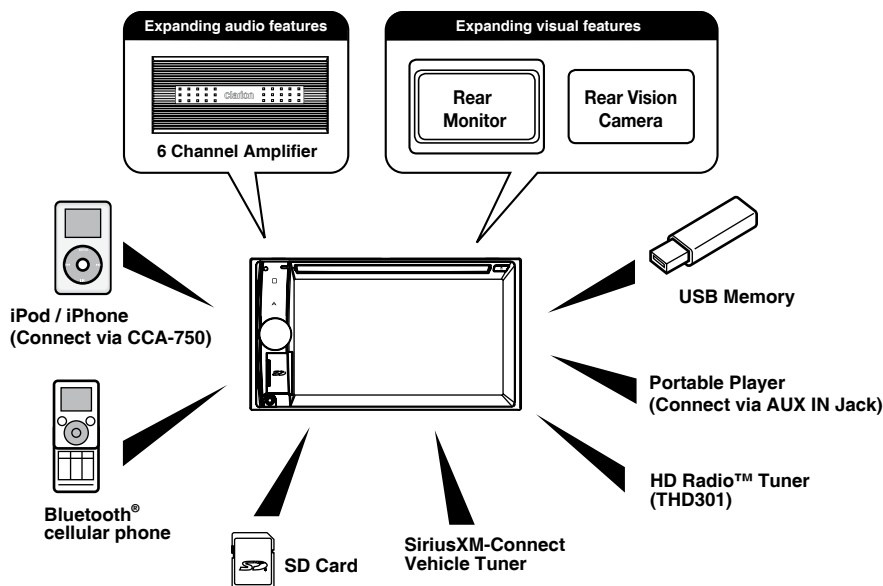


### Notes:

- The items listed outside of the frames are the commercial products generally sold.
- CCA-750: Sold by separately.

## 2. PRECAUTIONS

### WARNING

For your safety, the driver should not operate the controls while driving.  
Also, while driving, keep the volume to a level at which external sounds can be heard.

1. When the interior of the car is extremely cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
2. Driving on extremely bumpy or rough roads can cause the disc to skip during playback.
3. This unit uses precision parts and components for its operation. In the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts. Contact your **Clarion** dealer or service center.
4. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.  
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio reception, which can be determined by turning the equipment off and on, the user is encouraged to consult the dealer or an experienced radio technician for help.
5. "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.  
Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.  
iPhone, iPod and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.
6. SiriusXM™ and all related marks and logos are trademarks of Sirius XM Radio, Inc. All rights reserved.
7. HD Radio™, HD Radio Ready™, and the HD Radio Ready logo are proprietary trademarks of iBiquity Digital Corporation.  
This HD Radio Ready receiver is ready to receive HD Radio broadcasts when connected to the THD301, sold separately.
8.  **DOLBY**  
DIGITAL  
Manufactured under license from Dolby Laboratories.  
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
9. This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.  
Use of this product by the customer is restricted to play program materials to which the Rovi copyright protection process has been applied.
10. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Clarion Co., Ltd, is under license.



## INFORMATION FOR USERS:

Changes or modifications to this product unapproved by the manufacturer will void the warranty and will violate FCC approval.

## 3. CAUTIONS ON HANDLING

### *Front Panel / Generalities*

---

For a longer service life, be sure to read the following cautions.

- Do not allow any liquids on the unit from drinks, umbrellas, etc. Doing so may damage the internal circuitry.
- Do not disassemble or modify the unit in any way. Doing so may result in damage.
- Do not let cigarettes burn the display. Doing so may damage or deform the body.
- If a problem should occur, have the unit inspected at your store of purchase.
- The remote control unit may not work if the remote control sensor is exposed to direct sunlight.

### *Cleaning the body*

---

- Use a soft, dry cloth and gently wipe off any dirt and/or dust.
- For tough dirt, apply some neutral detergent diluted in water to a soft cloth, wipe off the dirt gently, then wipe again with a dry cloth.
- Do not use benzene, thinner, car cleaner, etc., as these substances may damage the body or cause the paint to peel. Also, leaving rubber or plastic products in contact with the body for long periods of time may cause stains.

### *USB Port*

---

- The USB memory sticks must be recognized as "USB mass storage class" to work properly. Some models may not operate correctly.

**When the memorized data is lost or damaged by any chance, Clarion shall not be liable for any damage.**

When using an USB memory stick, we recommend that you backup your data stored on it before using a personal computer etc.

- Data files may be broken when using USB memory sticks in the following situation: When disconnecting the USB memory stick or turning the power off during reading data.  
When affected static electricity or electric noise.  
Connect/disconnect the USB memory stick when it is not accessed.
- Connecting with the computer is not covered.

### *SD Slot*


---

- When using a SD card, we recommend that you backup your data stored on it before using a personal computer etc.
- Data files may be broken when using SD card in the following situation: When taking off the card or turning the power off during reading data.  
When affected static electricity or electric noise.
- Connecting with the computer is not covered.

## Handling Discs

### Handling

- New discs may have some roughness around the edges. If such discs are used, the player may not work or the sound may skip. Use a ball-point pen or the like to remove any roughness from the edge of the disc.

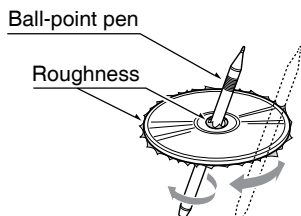

- Never stick labels on the surface of the disc or mark the surface with a pencil or pen.
- Never play a disc with any cellophane tape or other glue on it or with peeling off marks. If you try to play such a disc, you may not be able to get it back out of the player or it may damage the player.
- Do not use discs that have large scratches, are misshapen, cracked, etc. Use of such discs may cause misoperation or damage.
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Do not use commercially available disc protection sheets or discs equipped with stabilizers, etc. These may damage the disc or cause breakdown of the internal mechanism.

### Storage

- Do not expose discs to direct sunlight or any heat source.
- Do not expose discs to excess humidity or dust.
- Do not expose discs to direct heat from heaters.

### Cleaning

- To remove fingermarks and dust, use a soft cloth and wipe in a straight line from the center of the disc to the circumference.
- Do not use any solvents, such as commercially available cleaners, anti-static spray, or thinner to clean discs.
- After using special disc cleaner, let the disc dry off well before playing it.

### On Discs

- Never turn off the power and remove the unit from the car with a disc loaded.


### CAUTION

**For your safety, the driver should not insert or eject a disc while driving.**



# 4. CONTROLS

## Operational Panel

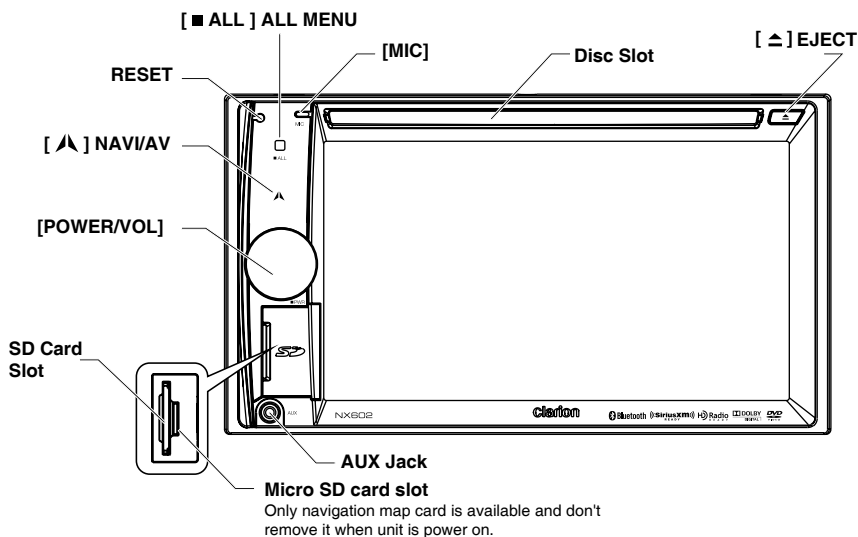

## Names of Buttons

### [POWER/VOL] Knob

- Press to power on the system when ignition on.
- When power on, short press to mute the volume.
- Rotate the knob to increase or decrease the volume.
- Press and hold this key more than 1 second to turn off the system.

### [ ■ ALL ] ALL MENU Button

- Short press to show/exit shortcut menu.
- Long press to show/exit main source menu.

### [ [ ▲ ] NAVI/AV Button

- Press to enter navigation mode;
- Press again to return current source.

### [ ▲ ] EJECT Button

- Press to eject disc.

### [ MIC ] Hole

- Internal microphone

### [RESET] Button

- Press to load original settings.

*Note: When the [RESET] button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.*



- NX602 9

## Remote Control

### 23 [▶/II / STOP] Button

- Play/Pause
- Stop (long press)

### 24 [◀◀], [▶▶] Buttons

- **RADIO / HD RADIO / DAB** mode
  - Previous / next preset station
  - Seek down/up (long press)
- **SiriusXM** mode
  - Previous / next position.
  - Seek down/up (long press)
- **DVD** mode
  - Previous/next chapter.
- **CD/BLUETOOTH** mode
  - Previous/next track.

### 25 [ZOOM] Button

- ZOOM (DVD)

### 26 [AUDIO] Button

- DVD audio stream change.

### 27 [SRC] Button (Rear)

- Change next rear source

### 28 [▶/II] Button (Rear)

- Play/Pause
- Stop (long press)

## Use and care of the remote control


### Using the remote control

Point the remote control in the direction of the front panel to operate.

When using for the first time, pull out the film protruding from the tray.

### Replacing the battery

- 1 Slide out the back cover of the remote control.
- 2 Insert the battery with the plus (+) and minus (–) poles aligned properly.
  - When using for the first time, pull out the film protruding from the tray.
3. Close the back cover.

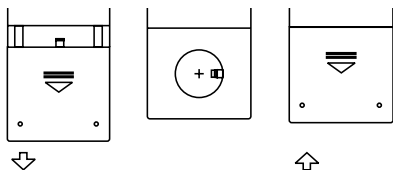

### ⚠ CAUTION

- Keep the battery out of the reach of children.  
Should the battery be swallowed, consult a doctor immediately.
- Batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like.

### ⚠ CAUTION

- Use one CR2025 (3 V) lithium battery.
- Remove the battery if the remote control is not used for a month or longer.
- There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
- Do not handle the battery with metallic tools.
- Do not store the battery with metallic objects.
- If the battery leaks, wipe the remote control completely clean and install a new battery.
- When disposing of used batteries, comply with governmental regulations or environmental public institutions' rules that apply in your country/area.

### ► Important

- Do not store the remote control in high temperatures or direct sunlight.
- The remote control may not function properly in direct sunlight.
- Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal.


## 5. MAIN MENU OPERATION

Long press [ **■ ALL** ] button on the PANEL to show main source menu.


Short press [ **■ ALL** ] button to show Short cut menu.

### Front Zone Source

Touch [ - ] on the bottom of screen to show front zone sources.

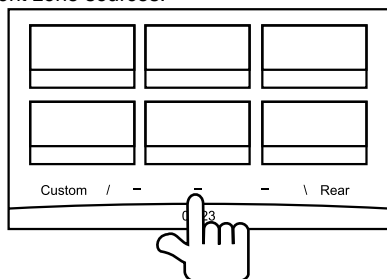


Change page by dragging left or right or touching other [ - ] buttons.

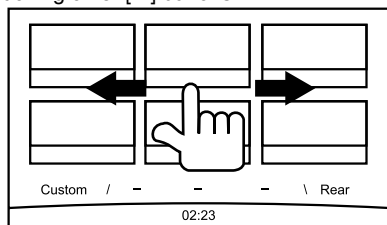

Touch the icons on the screen to enter corresponding work mode, such as Disc mode, Tuner mode, Telephone mode, etc. Touch [ **Audio Off** ] to mute the volume.

### Rear Zone Source

Touch [ **Rear** ] on the bottom of screen to show rear zone sources.

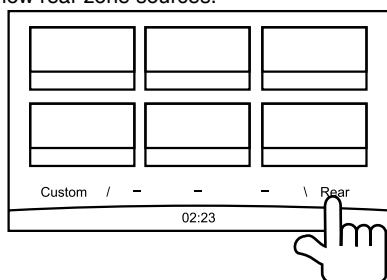


Touch the icons on the screen to enter corresponding work mode, such as Disc mode, USB mode, iPod mode, etc.

Touch [ **2ZoneOff** ] to turn off the rear zone monitor.

### Custom Setting

Touch [ **Custom** ] on the bottom of screen to show custom setting menu.

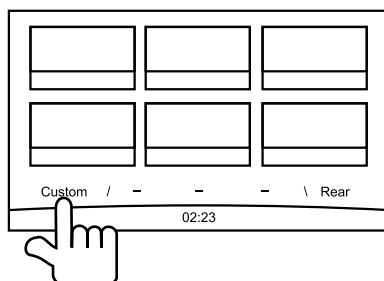

[ **Settings** ]: Touch the icon to enter system setting menu. (see "System Setup")

[ **Beat EQ** ]: Touch the icon to enter equalizer setting menu. (see "System Setup")

[ **Short Cut** ]: Touch the icon to enter Shortcut setting menu. Hold the desired icon for more than 2 seconds until it's activated, then drag it to the bottom. The name will appear on the bottom.

- Hold the center of the screen and drag left or right to show more icons.
- You can make total 5 shortcuts.
- You can access the shortcut list by pressing the [ **■ ALL** ] button.

[ **Illumi Color** ]: Touch the icon to enter Illumination color setting menu. (see "System Setup")


[ **Wallpaper** ]: Touch the icon to enter Wallpaper setting menu. (see "System Setup")

[ **Monitor Off** ]: Touch the icon to turn off the monitor.

To turn on the monitor, touch the monitor again.

## 6. SYSTEM SETUP

At all mode, long press [ **■ ALL** ] button to enter main source menu. Touch [ **Custom** ] on the bottom left of the screen, then select [ **Settings** ] on the screen to enter Setting menu. Touch the icons on the left of screen to select category: General, Time, Sound, Display or Setup. To exit Setting menu, touch [ **↶** ] on the bottom left of the screen.

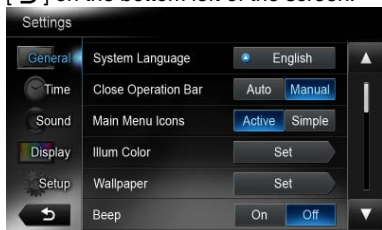

### General

#### System language

Touch the button to the right of “System language” to show language list. Select desired language, touch [ **OK** ] to confirm, or touch [ **Cancel** ] to exit without saving.

#### Close operation bar

When select [ **Auto** ], the operation bar will close automatically after 10 seconds.

When select [ **Manual** ], the operation bar will not close unless you touch the blank area on the screen.

#### Main Menu Icons

When select [ **Active** ], main menu show animation icons.

When select [ **Simple** ], main menu show simple icons.

#### Illumi Color

Touch [ **Set** ] to the right of “Illumi Color” to show key illumination setting menu.

**Edit Color:** There are 12 preset colors and 3 custom colors, you can select one color by touch Color 1~12 or Custom 1~3.

Touch [ **Adjust** ] to show edit color menu.

Drag the color bar or inputting the RGB value to select one color, touch [ **OK** ] to confirm.

**Initialize:** Load original buttons backlight.

Touch [ **↶ BACK** ] on the bottom left of the screen to return to main setting menu.

### Wallpaper

Touch [ **Set** ] to the right of “Wallpaper” to show Wallpaper setting menu.

Touch [ **◀** ] or [ **▶** ] button to select the scene, and touch the picture file name on the right to preview it, then touch [ **Set** ] to confirm the setting.

To import images, touch [ **Import** ].

Select a mobile storage device on the list, then select desired images and touch [ **Import** ]. Touch [ **Cancel** ] to exit.

### Beep

Touch [ **On** ] or [ **Off** ] to turn on/off the key beep sound.

### Blinking LED

Touch [ **On** ] or [ **Off** ] to turn on/off the blinking LED.

At blinking LED [ **On** ] mode, when ACC off, the LED on the top left of the panel will blink.

### Amplifier cancel

Touch [ **On** ] or [ **Off** ] to set the internal amplifier on or off.

### System software

Touch [ **Version** ] to show current software version.

### Factory default

Touch [ **Restore** ] to load the original factory settings.

### Time

#### GPS sync

Touch [ **On** ] to synchronize time with GPS and the following setting is disable: “Time”.

#### Time

Touch the button to the right of “Time” to show time setting menu. Touch [ **▲** ] or [ **▼** ] button to select hour or minute. Touch [ **Set** ] to confirm or [ **Back** ] to exit without saving.

#### 24-Hour format

Touch [ **On** ] to select 24-Hour format.

Touch [ **Off** ] to select 12-Hour format.

## Sound

### Beat EQ

Touch the button to the right of "Beat EQ" to show EQ setting menu. You can select : "Bass Boost", "Impact", "Excite", "Custom" or "Off". To adjust the value, touch [-] or [+] button on the screen.  
Touch **[Back]** to exit.

### Balance/Fader

Touch **[Set]** to the right of "Balance/Fader" to show Balance/Fader setting menu.  
Touch [ ▲ ] or [ ▼ ] button to adjust Fader, and touch [ ◀ ] or [ ▶ ] button to adjust Balance.  
Touch **[Center]** to reset the value.  
Touch **[Back]** to exit.

### Sub woofer control

Touch [-] or [+] button on the right of "Sub woofer control" to adjust sub woofer level.

### Sub woofer phase

Touch to select sub woofer phase Normal or Reverse.

### High pass filter

Touch the button to the right of "High pass filter" to show the sub-menu, then select the filter: "Through", "55Hz", "85Hz" or "120Hz".  
Touch **[Cancel]** to exit.

### Low pass filter

Touch the button to the right of "Low pass Filter" to show the sub-menu, then select the filter: "Through", "62Hz", "95Hz" or "135Hz".  
Touch **[Cancel]** to exit.

### Magna Bass Ex

Touch **[On]** to turn on the loudness.

## Display

### Dimmer Mode

Touch **[Auto]**, **[Day]** or **[Night]** to choose dimmer mode.  
Auto: The dimmer is controlled by your car light.

### Dimmer

Touch [-] or [+] button to the right of "Dimmer" to adjust dimmer.  
The setting is only for Day or Night.

## Setup

Touch **[Setup]** on the right of screen to spread the setting list. then touch the button to the right of desired option to adjust or show the sub-menu. Touch **[Close]** to close the list.

## AUX

- **Input Aux Sense (AUX1)**  
Choose "Low", "Middle" or "High" input sense of auxiliary device.

## Bluetooth

- **Bluetooth**  
Choose Bluetooth function on or off.
- **Telephone Speaker**  
Choose Front Left or Front Right speaker at telephone mode.
- **Tone Select**  
Touch **[Auto]** to use ringtones of your mobile phone.  
Touch **[Internal]** to use preset ringtone of the unit.
- **Software Update**  
Update the software.

## Camera

- **Camera Interrupt**  
Choose **[On]**, the screen will switch to rear camera menu automatically when backing.

## DVD

- **Menu Language**  
Select menu language from list.
- **Audio Language**  
Select audio language from list.
- **Subtitle Language**  
Select subtitle language from list.
- **Set Password**  
To set password for parental control, Touch **[Set]** to show password menu. Input numbers by touching the digit and **[OK]** buttons. Touch **[X]** button to delete a digit inputted. Touch **[Back]** to exit.

- **Parental Control**

Touch the button to the right of "Parental Control" to show parental control menu. Enter password, then select a parental level. Touch **[OK]** to confirm or **[Back]** to exit.

## **Navigation**

- **Navigation Interrupt**

Select navigation interrupt On, Pop-Up or Off.

- **Voice Guidance**

ON: Interrupt function of voice guidance is on. While interrupting no attenuate function of AV sound.

MUTE: Interrupt function of voice guidance is on. While interrupting attenuate function of AV sound is on.

OFF: Interrupt function of voice guidance is off. While interrupting no attenuate function of AV sound.

## **PANDORA**

- **PANDORA**

Select PANDORA On or Off.

If your iPhone with PANDORA application, please set on, else set off.

## **Anti Theft**

- **Anti Theft code**

You can set an Anti-theft code. After set successfully, when Battery wire reconnect, you need to input the Anti-theft code.

1. Long press the **[General]** button until a dialog box popped up. Touch **[Yes]** to set a personal code of Anti-Theft.
2. Input a 4-digit code. Touch **[OK]** to confirm. Then input it again for confirmation.
3. To remove the code, long press the **[General]** button and input the old password.

*Note:*

*Please make a note of the Anti theft code not to forget. if the right code is not inputted, it becomes impossible to operate this unit.*

# 7. DISC OPERATION

## DVD System

DVD video is a high-quality digital video source that provides crisp and clear images. One 12 cm disc contains either one film or four hours of music.

### DVD Video Features

This unit provides the following functions in addition to the high image quality and sound quality of DVD video.

#### Notes:

- The functions described in this section, for example, the recorded language, subtitles, angles, etc. differ depending on the DVD video disc.  
Refer to the instructions provided with the DVD video.
- Some disc functions may operate differently from described in this manual.

### Multi-sound function

DVD video can store up to 8 languages for one film; select the language of your preference.

- The languages stored on the disc are indicated by the icon shown below.



### Multi-angle function

A DVD video that is filmed from multiple angles allows you to select the angle of choice.

- The number of recorded angles are indicated by the icon shown below.



### Subpicture (subtitles) function

A DVD video can record subtitles for up to 32 languages and you can select the language of the subtitles you wish to see.

- The number of recorded subtitle languages are indicated by the icon shown below.



### Multi-story function

When a DVD video contains more than one story for a film, you can select the story you wish to enjoy.

The operation procedures vary with the disc; observe the instructions for selecting a story provided during playback.

### Menu screens

Menu can be called up during DVD video playback to perform menu setting.



- Example showing menu display





## Discs

### Playable discs

This DVD video player can play the following discs.

Playable discs		
 DVD video discs	 Audio CDs	 CD TEXT

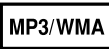Playable media files	
 MP3/WMA	 MP4

### About CD Extra discs

A CD Extra disc is a disc in which a total of two sessions have been recorded. The first session is Audio session and the second session is Data session. Your personally-created CDs with more than second data



sessions recorded cannot be played on this DVD video player.

**Note:**

- When you have a CD Extra disc, only the first session will be recognized.

**About playing a CD-R/CD-RW disc (MP3, WMA)**

This player can play CD-R/CD-RW discs previously recorded in music CD format (MP3, WMA)

**About playing a DVD-R/RW or DVD+R/RW disc**

This player cannot play DVD-R/RW and DVD+R/RW discs previously recorded in video CD format.

However, MP3/WMA files recorded on DVD-R/RW and DVD+R/RW discs can be played.

**Discs that cannot be played back**

This DVD video player cannot play back DVD-Audio, DVD-RAM, Photo CDs, etc.

**Notes:**

- It may also not be possible to play back CDs recorded on a CD-R unit and CD-RW unit. (Cause: disc characteristics, cracks, dust/dirt, dust/dirt on player's lens, etc.)
- If a CD-R or CD-RW disc that has not been finalized is played, it will take a long time to start playing. Also, it may not be possible to play depending on its recording conditions.
- You cannot play SuperAudio CDs Playback of the CD player is not supported even if it is a hybrid disc.

**About MP3/WMA playback**

This unit can play back CD-R/CD-RW, DVD-R/RW and DVD+R/RW discs on which MP3/WMA music data have been recorded. For a detailed information, see the section entitled "Listening to MP3/WMA".

**Note on region numbers**

The DVD video system assigns a region number to DVD video players and DVD discs by sales area. DVD video players sold in the America can play back DVD discs with the region number "ALL", "1" or any combination

of numbers that also incorporate a "1".

The DVD video region number is marked on the disc jacket as shown below.




## Accessing a Disc

### CAUTION

**For your safety, the driver should not insert or eject a disc while driving.**


### **Eject function**

Just pressing the [  ] button, ejects the disc even if the power to the unit was not turned on.

#### **Notes:**

- *If you force a disc into before auto reloading, this can damage the disc.*
- *If a disc (12 cm) is left ejected for 15 seconds, the disc is automatically reloaded (Auto reload).*

### **Listening to a disc already loaded in the unit**

Long press [  ALL ] button to enter main source menu, then select [Disc] to enter Disc mode.

If Disc is not on the current source menu, touch [ - ] buttons on the bottom of the screen, or hold the center of screen and drag left/right to show more icons.

When the unit enters the Disc mode, play starts automatically.

### **Loading a disc**

Insert a disc into the center of the disc slot with label facing up. The disc plays automatically after loading.

#### **Notes:**

- *Never insert foreign objects into the disc slot.*
- *If the disc is not inserted easily, there may be another disc in the mechanism or the unit may require service.*

## DVD Player Operation

### Playback menu

Touch the bottom half of screen to show operation bar.



1. Play/Pause/Stop(long press)
2. Show cursor keys in DVD title menu
3. Previous chapter
4. Progress bar
5. Next chapter
6. Root menu
7. Show other options



8. Repeat play
9. Select audio language
10. Select subtitle language
11. Show next page
12. Select DVD angle
13. Back to main operation bar



14. Show previous page
15. Turn on Widescreen mode
16. Direct search
17. Adjust picture effect
18. Show playback information
19. Mute indicator

### Pausing play

1. Touch the [II] button on the screen to pause play.
2. Touch [▶] button to resume play.

### Selecting a chapter

#### Chapter-up

Touch the [▶▶] button to move to the beginning of the next chapter.

#### Chapter-down

Touch the [◀◀] button to move back to the beginning of the current or previous chapter.

### Fast forward/Fast reverse

#### Fast forward

Touch and hold the [▶▶] button for more than 2 seconds.

#### Fast reverse

Touch and hold the [◀◀] button for more than 2 seconds.

### Repeat

During playback, touch [ⓘ], [Repeat] buttons to repeat play.

### Search function

During playback, touch [ⓘ], [Q] buttons to show search menu.


Input number by digit buttons, touch [OK] to begin searching or touch [Close] to clear inputting.

Touch [Chapter] or [Title] to show DVD chapter/title list.


### DVD audio select

During playback, touch [ⓘ], [Audio] buttons to select audio language to listen if the DVD has multiple audio languages.


### ***DVD subtitle select***

During playback, touch [  ], [ **Subtitle** ] buttons to select the subtitle language if the DVD has multiple language subtitles.


### ***Playback information***

During playback, touch [  ], [ **Information** ] buttons to view playback information.

### ***Adjust picture***

During playback, touch [  ], [ **Adjust Picture** ] button, then use [-], [+] buttons to adjust Dimmer/Brightness/Contrast/Color.


### ***DVD angle select***

During playback, touch [  ], [ **Angle** ] buttons to select different angle to view if the DVD has multiple-angle views.

# CD Player Operation

## Playback menu

Touch the bottom half of screen to show operation bar.

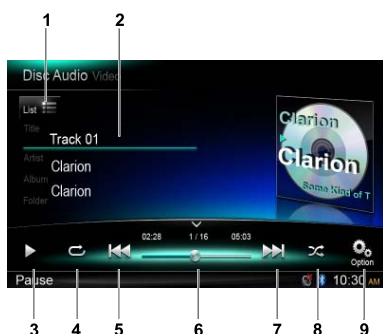

1. Show track list (Browse)
2. Title/Artist/Album information
3. Play/Pause
4. Repeat play
5. Previous track  
Fast reverse (long press)
6. Progress bar
7. Next track  
Fast forward (long press)
8. Random play
9. Show other options  
Scan: Scan play stored stations

## Browse mode

Touch the [List] button to show track list.  
Drag up/down to browse the tracks, and touch desired track to select it.

## Pausing play

1. Touch the [||] button on the bottom left of the screen to pause play.  
"PAUSE" appears in the display, and [||] button becomes [▶].
2. Touch [▶] button to resume play.

## Selecting a track

### Track-up

1. Touch the [▶▶] button to move to the beginning of the next track.

### Track-down

1. Touch the [◀◀] button to move back to the beginning of the current track.
2. Touch the [◀◀] button twice to move back to the beginning of the previous track.

## Fast forward/Fast reverse

### Fast forward

Touch and hold the [▶▶] button.

### Fast reverse

Touch and hold the [◀◀] button.

\* For MP3/WMA discs, it takes some time until the start of searching and between tracks. In addition, some error may occur in the play time.

## Search Function

1. Touch the [List] button to show track list.  
Touch [Q] button to enter search menu.
2. Input numbers by touching digit buttons, then touch [Search] to begin searching.  
To delete numbers, touch [⌫] button.
3. Touch [●] button to exit.

## Other various play functions

### Scan play

This function allows you to locate and play the first 10 seconds of all the tracks recorded on a disc.

Touch the [Scan] button, then touch [Scan] to scan play.

### Repeat play

This function allows you to play the current track repeatedly or play a track currently being played in the MP3/WMA folder repeatedly.

Touch the [Repeat] button to select Track Repeat, Folder Repeat or All Repeat.

### Random play

This function allows you to play all tracks recorded on a disc in a random order.

Touch the [Random] button to perform random play.

## MP3/WMA Playback

This unit is an ID3 Tag compatible model. This unit supports the ID3 TAGs of the Version 2.4, 2.3, 1.1 and 1.0. In displaying, this unit gives priority to the Version 2.3 and 2.4 TAGs.

### What is MP3/WMA

MP3 is an audio compression method and classified into audio layer 3 of MPEG standards.

WMA is an audio compression method developed by Microsoft Corporation. These audio compression methods have penetrated into PC users and become a standard format.

These features compress the original audio data to about 10 percent of its initial size with a high sound quality. This means that about 10 music CDs can be recorded on a CD-R disc or CD-RW disc to allow a long listening time without having to change CDs.

*Note: Some CDs recorded on CD-R/RW mode may not be usable.*

### Displaying MP3/WMA TAG titles

Tag information such as title, artist and album title can be displayed for MP3/WMA file containing Tag information.

### Precautions when creating MP3/WMA file

#### Usable sampling rates and bit rates

1. MP3: Sampling rate 8 kHz-48 kHz, Bit rate 8 kbps-320 kbps / VBR
2. WMA: Bit rate 8 kbps-320 kbps

#### File extensions

1. Always add a file extension “.MP3”, “.WMA” to MP3, WMA file by using single byte letters. If you add a file extension other than specified or forget to add the file extension, the file cannot be played.
2. Files without MP3/WMA data will not play. The files will be played soundlessly if you attempt to play files without MP3/WMA data.
  - \* When VBR files are played, the play time display may differ the play location.
  - \* When MP3/WMA files are played, a little no sound part is caused between tunes.

### Logical format (File system)

When writing MP3/WMA file on a CD-R disc or CD-RW disc, please select “ISO9660 level 1, 2 or Joliet or Romeo” or Apple ISO as the writing software format. Normal play may not be possible if the disc is recorded on another format.

### Folder structure

A disc with a folder having more than 8 hierarchical levels will be impossible.

### Number of files or folders

1. Up to 999 files can be recognized per folder.  
Up to 6000 files can be played.
2. Tracks are played in the order that they were recorded onto a disc. (Tracks may not always be played in the order displayed on the PC.)
3. Some noise may occur depending on the type of encoder software used while recording.

### Playing MP3 folders


When selected for play, files and folders (Folder Search, File Search or Folder Select) are accessing in the order in which they were written to the media.

As a result, the order in which they are expected to be played may not match the order in which they are actually played.

You may be able to set the order in which MP3/WMA files are to be played by assigning file names beginning with play sequence numbers such as “01” to “99”.

For example, a medium with the following folder/file hierarchy is subject to Folder Search, File Search or Folder Select.

See the diagram below.

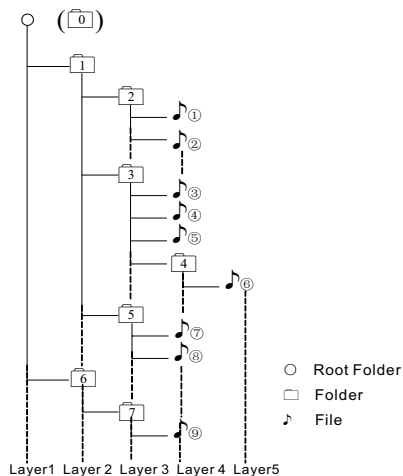

The player will only recognize three folder levels and does not display folders containing other folders. In the example above, the unit will display folders 2, 3, 5 and 7, but 1 and 6 since they do not contain others.

## Playback menu

Touch the bottom half of screen to show operation bar.



1. Show folder/file list (Browse)
2. Folder/Title/Artist/Album information
3. Play/Pause
4. Repeat play
5. Previous track  
Fast reverse (long press)
6. Progress bar
7. Next track  
Fast forward (long press)
8. Random play
9. Show other options




10. Scan play
11. Rotate the album image
12. Back to main operation bar

## Folder Select


This function allows you to select a folder containing MP3/WMA files and start playing from the first track in the folder.

Touch the [List] button on the upper left of the screen to show folder/file list. You can select a folder or file by touching it.

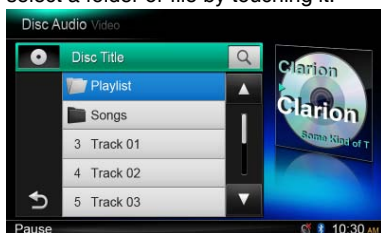

## Search Function

1. Touch the [List] button to show folder/file list. Touch [Q] button to enter search menu.
2. Input numbers by touching digit buttons, then touch [Search] to begin searching.  
To delete numbers, touch [X] button.

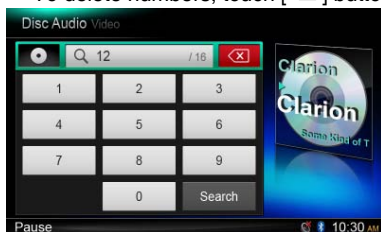


Other operations about playing MP3/WMA are as CD Player mode.

## MP4 Playback

### Playback menu

When playing, touch the bottom half of screen to show operation bar.

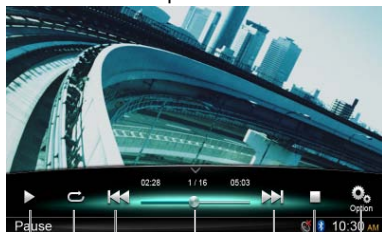

1. Play/Pause
2. Repeat playback
3. Previous file  
Fast reverse (long press)
4. Progress bar
5. Next file  
Fast forward (long press)
6. Stop and show list menu (Browse)
7. Show other options



8. Select audio language
9. Select subtitle language
10. Turn on Widescreen mode
11. Show playback information
12. Back to main operation bar

### Browse mode

Touch the [■] button to show folder/file list. Drag up/down to browse, and touch desired option to select it.

### Pausing play

1. Touch the [||] button on the screen to pause play.  
"PAUSE" appears in the display.
2. Touch [▶] button to resume play.

### Selecting a file

#### File-up

Touch the [▶▶] button to move to the beginning of the next file.

#### File-down

Touch the [◀◀] button to move back to the beginning of the current or previous file.

### Fast forward/Fast reverse

#### Fast forward

Hold the [▶▶] button .

#### Fast reverse

Hold the [◀◀] button .

### Repeat play

This function allows you to play the current file repeatedly or play files currently being played in the folder repeatedly.

Touch the [↺] button to select File Repeat, Folder Repeat, All Repeat or Repeat Off.

### Search function

1. At video main menu, touch the [■] button to show folder/file list.
2. Touch [Q] button to enter search menu.
3. Input numbers by touching digit buttons, then touch [Search] to begin searching.  
To delete numbers, touch [X] button.

### Audio select

Touch the [Option] button and touch [Audio] button to select audio language to listen if the file has multiple audio languages.

### Subtitle select


Touch the [Option] button and touch [Subtitle] to select the subtitle language if the file has multiple language subtitles.



## 8. SD/USB OPERATION


### Accessing an USB

1. Insert an USB device into the USB cable.  
When connecting an USB device, the unit will read the files automatically.
2. To remove the USB device, you should first select another source or turn off the power, in order to avoid damaging the USB device. Then take off the USB device.
3. To access an USB device already connected to the unit, long press [ **■ ALL** ] button to enter main source menu, then select [ **USB** ] to enter USB mode.  
If [ **USB** ] is not on the current source menu, touch [ - ] buttons on the bottom of the screen, or hold the center of screen and drag left/right to show more icons.

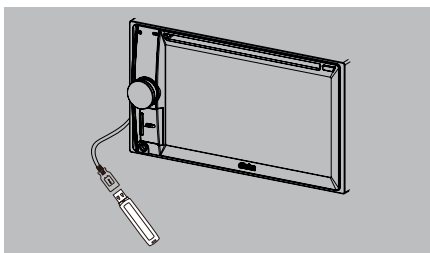

### Accessing an SD Card

1. Slide the cover of the card slot located on the bottom left of the panel to the right. Insert an SD card into the card slot.  
When inserting a card, the unit will read the files automatically.
2. To remove the card, you should first select another source or turn off the power, in order to avoid damaging the card. Press to pop it out, then take off the card. Close the cover to the left.
3. To access an SD card already inserted in the unit, long press [ **■ ALL** ] button to enter main source menu, then select [ **SD** ] to enter SD mode.  
If [ **SD** ] is not on the current source menu, touch [ - ] buttons on the bottom of the screen, or hold the center of screen and drag left/right to show more icons.

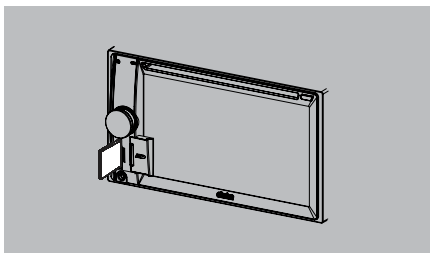

## SD/USB Audio Operation

---

This system can play audio files (MP3/WMA) stored in a SD card or USB memory. You can use it as an audio device by simply copying desired audio files into it.

**Notes:**

- *This system will not operate or may operate improperly with some card or USB.*
- *Files protected with any DRM cannot be played.*

**Select SD/USB Audio mode**

Touch top left corner of the screen until SD Audio or USB Audio appears.

Operations about SD/USB audio operations are same as MP3/WMA playback mode.

## SD/USB Video Operation

---

This system can play video files (MP4, etc) stored in an SD card or USB memory. You can use it as an video device by simply copying desired video files into it.

**Notes:**

- *This system will not operate or may operate improperly with some card or USB.*
- *Files protected with any DRM cannot be played.*

Operations about SD/USB video are same as MP4 playback mode.

## 9. BLUETOOTH OPERATION


The Bluetooth allows you to utilize your car's built-in audio system for wireless mobile phone or music handsfree communication. Some Bluetooth mobile phones have the audio features, and some portable audio players support Bluetooth feature. This system can play audio data stored in a Bluetooth audio device. The car stereo with Bluetooth will be able to retrieve phonebook contacts, received call, dialled call, missed call, incoming calls, outgoing call and listen to music.

### Notes:

- Do not set the microphone of Bluetooth handsfree in the places with wind passing such as air outlet of the air conditioner, etc. This may cause a malfunction.
- If set it in the places subjected to direct sun, high temperature can cause distortion, discoloration which may result in a malfunction.
- This system will not operate or may operate improperly with some Bluetooth audio players.
- **Clarion** cannot guarantee the compatibility of all mobile phones together with the unit.
- Audio playback will be set to the same volume level as set during telephone call. This might cause problems, if extreme volume level is set during telephone call.

## Bluetooth Telephone Operation

### Pairing

1. Turn on the Bluetooth function of the unit.  
(see <System Setup>, <Bluetooth>)
2. Turn on Bluetooth function of your mobile phone.
3. Enter mobile phone's Bluetooth setup menu.
4. Search for new Bluetooth devices.
5. Select **NX602** from the pairing list on the mobile phone.
6. Enter "0000" as the password.
7. After pairing successfully,  indicator on the bottom right of the screen turns blue.

### Search from the unit


You can search Bluetooth device from the unit.

1. Touch **[Add]** on the right of the screen, the unit will search the Bluetooth devices and list on the screen.
2. If your desired device isn't on the list, touch the button on the bottom left of the screen to refresh.  
To stop searching, touch **[Cancel]**.
3. Touch the device name on the screen to select it, then input PIN code on the sub-menu.
4. After paired successfully, select device image, touch **[OK]** to confirm.

5. If connect unsuccessfully, select **[Retry]** to reconnect or select **[Cancel]** to return to list menu.

### Choose paired device

After paired, the mobile device information appears on the right of screen, such as model number, Signal, Battery.

1. To select other paired device, hold the middle right of the screen, and drag it left or right, touch it to show control buttons.
2. Touch **[Connect]** to connect the Bluetooth device. Touch **[Cut]** to disconnect.
3. Touch  to delete the paired device from pairing list.


### Telephone menu

Long press **[ ■ ALL ]** button to enter main source menu, then select **[Telephone]** to enter telephone mode.

If **[Telephone]** is not on the current source menu, touch **[ - ]** buttons on the bottom of the screen, or hold the center of screen and drag left/right to show more icons.



1. Show history categories
2. Backspace
3. Paired device information
4. Number pad
5. Call/Hang up

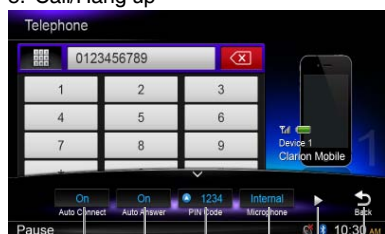

6. Turn on/off Auto Connect function
7. Turn on/off Auto Answer function
8. Set PIN code
9. Select internal or external microphone
10. Show next page
11. Back to main operation bar



12. Show previous page
13. Adjust microphone gain
14. Show Bluetooth information
15. Bluetooth indicator

## Making a call

### Dial Number

1. Input numbers by digit-keys on the screen.
2. Touch [Call] button to dial.  
Touch [X] button to delete characters.
3. Touch [End] button to terminate call.

### Dialed/Received/Missed Call History

You can search any Dialed/Missed/Received Call History.



1. Touch [Menu] button to show following history categories: Dialed, Received, Missed and Contacts.  
Touch [Dialer] to dial number manually.
2. Touch to select a category, the numbers of the category are displayed.
3. Select a number, touch [Call] button to dial.  
Touch [Back] to return previous menu.

### Call from Phonebook

You can search the contact name in the phonebook and make call.

1. Touch [Menu] button and select [Contacts].  
It may take a few minutes to synchronize the phone book at first time.
2. Select a number, touch [Call] button to dial.  
Touch [Back] to return previous menu.

### Note:

*Some cellular phones may not be able to transfer the Phone Book data.*

### Answering a call

You can answer an incoming call by pressing the [Call] button.

- \* Touch [End] button to reject an incoming call.

## Bluetooth Audio Operation

### Audio Streaming Operation

#### What is audio streaming?

Audio streaming is a technique for transferring audio data such that it can be processed as a steady and continuous stream. Users can stream music from their external audio player to their car stereo wirelessly and listen to the tracks through the car's speakers. Please consult your nearest **Clarion** dealer for more information on the product of wireless audio streaming transmitter offered.

#### ⚠ CAUTION

**Please avoid operating your connected mobile phone while audio streaming as this may cause noise or sound choppy on the song playback.**

**Audio streaming may or may not resume after telephone interrupt as this is dependent on mobile phone.**

#### Note:

*Be sure to read the chapter "Pairing" and "Choose paired device" before proceeding.*

### Playback menu

Touch the bottom half of screen to show operation bar.



1. Title/Artist/Album information
2. Play/Pause
3. Previous track  
Fast reverse (long press)
4. Stop
5. Next track  
Fast forward (long press)

### Play / Pause a track

1. Touch the [ || ] button to pause audio playback.
2. To resume audio playback, touch the [ ▶ ] button.

### Selecting a track

#### Track-up

1. Touch the [ ►► ] button to move to the beginning of the next track.
2. Each time you touch the [ ►► ] button, the track advances to the beginning of the next track.

#### Track-down

1. Touch the [ ◀◀ ] button to move back to the beginning of the current track.
2. Touch the [ ◀◀ ] button twice to move back to the beginning of the previous track.

### Stop playback

Touch [ ■ ] button to stop playback.

#### Note:

*Playing order will depend on Bluetooth audio player. When [ ◀◀ ] button is pressed, some A2DP devices will restart the current track depends on the duration of playback. Some Bluetooth audio players may not have play/pause synchronized with this unit. Please make sure both device and main unit are in the same play/pause status in Bluetooth Audio mode.*

# 10. RADIO OPERATION


## Select tuner for listening to the radio

Long press [ **ALL** ] button to enter main source menu, then select [ **Tuner** ] to enter Tuner mode.

If Tuner is not on the current source menu, touch [ - ] buttons on the bottom of the screen, or hold the center of screen and drag left/right to show more icons.

## Menu of listening to the radio

Touch the bottom half of screen to show operation bar.

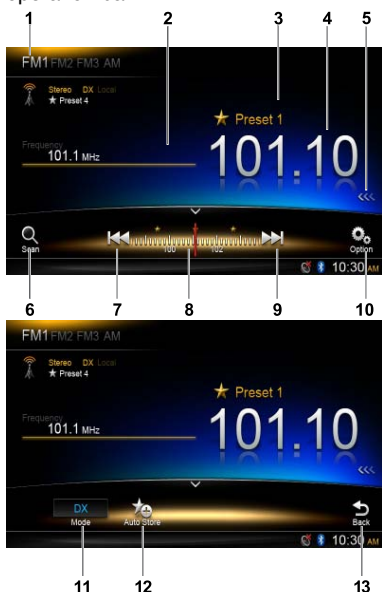

1. Band switch
2. Information area
3. Preset station number
4. Current station frequency
5. Show preset stations list
6. Scan preset stations
7. Manual tune backward  
Auto tune backward. (long press)
8. Frequency bar
9. Manual tune forward  
Auto tune forward. (long press)
10. Show other options
11. Choose local or distant seeking mode
12. Store stations automatically
13. Back to main operation bar

## Select one radio band

Touch the top left corner of the screen to select one radio band among FM1, FM2, FM3 and AM.

## Manual tuning

During manual tuning, the frequency will be changed in steps.

Touch the [ **◀◀** ] or [ **▶▶** ] button on the operation bar to tune in a higher / lower station.

## Auto tuning

Hold the [ **◀◀** ] or [ **▶▶** ] button on the operation bar for more than 2 seconds to seek a higher / lower station.

To stop searching, repeat the operation above or press other buttons having radio functions.

### Note:

*When a station is received, searching stops and the station is played.*

## Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Touch the [ **Scan** ] button on the operation bar.
2. When a desired station is tuned in, press the [ **Stop** ] button to continue receiving that station.

## Auto store

Only stations with sufficient signal strength will be detected and stored in the memory.

To start automatic station search, touch following buttons on the operation bar in sequence: [ **System** ] -> [ **Auto Store** ] -> [ **OK** ].

To stop auto store, press other buttons having radio functions.

### Notes:

1. After auto store, the previous stored stations will be overwritten.
2. The unit has 4 bands, such as FM1, FM2, FM3 and AM. FM3 and AM can store by AS function. Each bands can store 6 stations, NX602 can store 24 stations in total.

## Manual store


When one expected radio station has been detected, touch [ <<< ] button on the right edge of the screen to show the preset station list, hold one of the six preset stations for more than 2 seconds to store it in the memory. Touch [ >>> ] button near the center of screen to hide the preset station list.

## Recall the stored stations

Touch [ <<< ] button on the right edge of the screen to show the preset station list, touch to select a preset station. Touch [ >>> ] button near the center of screen to hide the preset station list.

## Local seeking

When LOCAL seeking is on, only those radio stations with strong radio signal could be received.

To open LOCAL function, touch [  ] button on the operation bar, then touch the [Mode] button to select "Local" or "DX".

### Note:

*The number of radio stations that can be received will decrease after the local seeking mode is on.*

# 11. SiriusXM Satellite Radio OPERATION

Everything worth listening to is on SiriusXM, getting over 130 channels, including the most commercial-free music, plus the best sports, news, talk and entertainment. A SiriusXM Vehicle Tuner (sold separately) and Subscription are required. For more information, visit [www.siriusxm.com](http://www.siriusxm.com).


## Accessing satellite radio mode

Long press [ **ALL** ] button to enter main source menu, then select [SiriusXM] to enter **SiriusXM** mode.

If [SiriusXM] is not on the current source menu, hold the center of screen and drag left/right to show more icons.

## Operation menu

Touch the bottom half of screen to show operation bar.

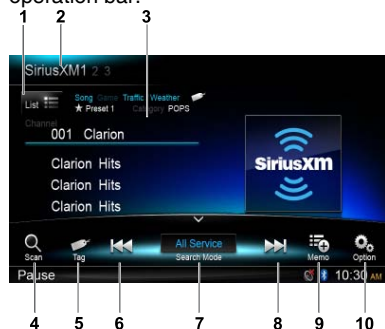

1. Show channel list
2. Band switch
3. Information area
4. Scan play (Depends on search mode)
5. iTunes tag
6. Manual tune backward (Depends on search mode)
7. Select search mode
8. Manual tune forward (Depends on search mode)
9. Add Artist/Song for Alert list
10. Show other options



11. Enter Replay mode
12. Select Song/Artist Alert
13. Select Game Alert
14. Select Traffic/Weather Jump
15. Show next page
16. Back to main operation bar





17. Show previous page
18. Show Parental Lock setting menu
19. Show password setting menu
20. Show SiriusXM Radio ID
21. Show Tag information

## Displaying the Identification (ID) Code

Before you listen to satellite radio, you must subscribe to the service using the SiriusXM Radio ID number.

To display the Radio ID, touch following buttons on the operation bar in sequence:

[  ] -> [  ] -> [ **Radio ID** ]

The screen displays the radio ID where the channel name is usually displayed.

The SiriusXM Radio ID can be found by tuning to Channel 0. In addition, the Radio ID is located on the bottom of the SiriusXM Connect Vehicle Tuner.

Please note that the SiriusXM Radio ID does not include the letters I, O, S or F.



Activate the SiriusXM Vehicle Tuner using one of the two methods below:

- **Online:** Go to “www.siriusxm.com/activatenow” and choose ACTIVATE RADIO.
- **Phone:** Call 1-800-XM-RADIO (1-800-967-2346).

## Select a band

Touch the top left corner of the screen to change between three SiriusXM bands (SiriusXM1, SiriusXM2 and SiriusXM3). Each band stores up to 10 preset stations.

## Select a station

Touch the [◀▶] or [▶▶] button on the operation bar to tune to another station.

## Preset mode

10 numbered preset buttons store and recall stations for each band.

## Preset scan

1. Touch the [🔍] button on the operation bar.
2. When a desired station is tuned in, press the [🔍] button to continue receiving that station.

## Storing a station

To access Preset Channels Store menu, touch [List≡] button.

Touch [★] to enter store menu. Select a preset position on the screen to store current channel.



## Delete preset channel

To access Delete Preset Channel menu, touch [List≡] button.

Select unneeded channels and touch [🗑️] to delete it.

## Select Preset channel

1. Select a band (if needed).
2. Touch [List≡] button on the upper left of the screen to show list menu.
3. Touch the option on the preset channel list to select corresponding stored station.

## Category and Channel search

1. Touch [List≡] button on the upper left of the screen to show list menu.
2. Touch [★], then select Channel or Category list.
3. Hold the list and drag it up or down to scroll.
4. Touch to select it.

## Direct search

To access search menu, touch following buttons: [List≡] -> [🔍].

Input numbers by touching digit buttons, then touch [Search] to begin searching.

To delete numbers, touch [✕] button.

## My Music / My Games search

You can access the channels which broadcast the contents in the activated Alert list.

1. Touch [List] button on the upper left of the screen to show list menu.
2. Touch [★], then select My Music or My Games list.
3. Hold the list and drag it up or down to scroll.
4. Touch to select it.

The most recent Alert content is listed at the top.

## Password

To access password setting menu, touch following buttons on the operation bar in sequence: [🔍] -> [▶] -> [Password].

Input old password by touching digit buttons, then touch [OK] to confirm.

To delete a number, touch [✕] button.

To delete all numbers, touch [Clear] button.



Then input a new 4-digit password as above.

(Original password: 0000)



## Parental Lock / Unlock


 
The SiriusXM Parental Control feature allows you to control access to channels that you consider inappropriate for younger listener. When enabled, the Parental Control feature requires you to enter a passcode to tune to the locked channels. Information on setting up the passcode, setting up the channels to be locked, and the method to access the locked channels is described below.

To show channel lock menu, touch following buttons on the operation bar in sequence:

[  ] -> [  ] -> [ **Lock** ].



You need input password.

Touch [  ] or [  ] button to scroll the list.

Touch [  ] to lock station, and [  ] to unlock.

## Replay

The Replay feature allows you to pause, rewind, and replay up to 30 minutes of live SiriusXM Satellite Radio.


 
To enter replay mode, touch [  ] and [  ].



23. Play/Pause
24. Previous track/program  
Fast reverse (long press)
25. Progress Bar to show remain time and current position
26. Next track/program  
Fast forward (long press)
27. Exit replay mode

## Artist & Song Alerts

While listening to SiriusXM Satellite Radio, you can be alerted when your favorite songs or artists are playing on other channels. The radio will display an Alert message when a matching artist or song is found on another channel. Then you can choose if you want to tune to that favorite or you can ignore it and stay on your current channel. Information on setting up the Artist and Song alerts is described below.

1. While listening to favorite song, touch [  ] button on the operation bar to show Memorize sub-menu. Touch [ **This song** ] to add it to the "Song Alert" list. Touch [ **This artist** ] to add it to the "Artist Alert" list.
2. Touch [  ] button on the operation bar, then touch [ **Song/Artist Alert** ] to show the sub-menu.  
Select [ **On** ] / [ **Off** ] to set alert function On or Off.


To adjust the alert list, touch [ **Edit** ], then select [ **Enable** ] / [ **Disable** ] to enable/disable the alert function for each Artist or Song. To remove it from the list, touch [ **Delete** ].

3. When the memorized song/artist is broadcasted on another Channels. Alert dialog box is displayed. Select [ **OK** ] on the dialogue box to broadcast desired artist or song.

Touch [ **Cancel** ] on the dialogue box to return to previous screen.

Alerted artist/song contents are listed in My Music while those contents are being broadcasted.

## Game Alerts


Touch [  ] button on the operation bar, then touch [ **Game Alert** ] to show the sub-menu. Select [ **On** ] / [ **Off** ] to set alert function on/off. To adjust the alert list, touch [ **Edit** ], select League and Team on the list menu, then select [ **Enable** ] / [ **Disable** ] to enable/disable the alert function.

When the memorized game is broadcasted on another Channels. Alert dialog box is displayed. Select [ **OK** ] on the dialogue box to broadcast desired game.

## ***Traffic/Weather Jump***

This feature allows you to tune to the channel broadcasting the traffic and weather report for the city you selected.

Operation is described below.

Touch [  ] button on the operation bar, then long touch [**Traffic/Weather Jump**] and [**Edit**] to select state and City on the list menu for desired city. You can select only one city for Traffic/Weather Jump feature.

While you listen to a certain channel, touch [Traffic/Weather Jump] for jump to another channel broadcasting selected city's report. (Traffic/Weather indicator will be turned on during tuning to this channel.) Touch again [Traffic/Weather Jump] to return to previous channel.

If there is no channel broadcasting for selected city, Jump will be pending until desired city report will be started. (indicator will be blinking during pending mode)

## 12. HD Radio OPERATION

### About HD Radio™ Technology

HD Radio Technology allows CD-quality digital broadcasting of your local AM and FM radio stations. HD Radio broadcasts can include multiple channels on the same frequency, which is called multicasting. With multicasting, you can receive up to eight additional multicast channels: HD1~HD8. With an HD Radio tuner connected, you will receive HD Radio digital broadcasts automatically when tuned to a station that offers HD Radio Technology.

**NOTE: Not all FM or AM stations offer HD Radio (digital) broadcasting. You can receive both analog and digital stations with the unit.**

### Accessing radio mode

Long press [ **ALL** ] button on the panel to enter main source menu, then select [ **HD Radio** ] to enter **HD Radio** mode.

If HD Radio is not on the current source menu, touch [ - ] buttons on the bottom of the screen, or hold the center of screen and drag left/right to show more icons.

**At radio mode, touch the bottom half of screen to show operation bar.**



1. Band switch
2. Information area
3. Preset station number
4. Current station frequency
5. Show preset stations list
6. Scan preset stations
7. Store iTunes® Tagging info
8. Manual tune backward
9. Frequency bar
10. Multicast button
11. Option button
12. Auto tune backward button

10. Manual tune forward
- Auto tune forward (long press)
11. Select next multicast
12. Show other options



13. Select local or distant seeking mode
14. Select Blending mode
15. Select PTY type
16. Show Tag Information (Touch [OK] after information Box displayed to delete all tag)
17. Show next page
18. Back to main operation bar



19. Show previous page
20. Auto store preset stations

### Select a band

Touch the top left corner of the screen to select one radio band among FM1, FM2, FM3 and AM.

### Tuning

#### - Seek Tuning

Hold the [ **◀◀** ] or [ **▶▶** ] button for more than 2 seconds on the operation bar to seek a higher / lower station.

#### - Manual Tuning

Press the [ **◀◀** ] or [ **▶▶** ] button on the operation bar to move the radio frequency number up or down one step.



## Preset stations

Up to six stations on each band can be stored as presets, which can then be instantly recalled by pressing the associated preset button.

**NOTE:** *Multicast stations can be stored as presets, but the unit must be in Digital or Auto reception mode to receive them.*



## Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Touch the [  ] button on the operation bar.
2. When a desired station is tuned in, press the [  ] button to continue receiving that station.

## Automatic store (AS)

Only stations with sufficient signal strength will be detected and stored in the memory.


To start automatic station search, touch following buttons on the operation bar in sequence: [  ] -> [  ] -> [Auto Store] -> [OK] .

To stop auto store, press other buttons having radio functions.

### Notes:

1. After auto store, the previous stored stations will be overwritten.
2. The unit has 4 bands, such as FM1, FM2, FM3 and AM. FM3 and AM can store by AS function. Each bands can store 6 stations, NX602 can store 24 stations in total.

## HD Radio multicast channels

Touch [  ] button to switch to next sub-station of the channel.

## 13. iTunes Tagging

The NX602 offers iTunes Tagging, which allows the user to “Tag” songs playing on HD Radio™ and SiriusXM stations for purchase later through iTunes. When touch **[Tag]** button, the unit stores the title and artist song information that can then be transferred to your iPod when connected to the unit. A list titled “Tagged” will appear in iTunes, allowing you the option to purchase your tagged songs.

### Note:

“iTunes Tagging” function works by connecting THD301 or SXV100 (sold separately).

### iPod compatibility

For detailed information on the playable iPod models, see our home page: [www.clarion.com](http://www.clarion.com)

### Notes:

- iPhone can also be connected to this system and “iPod” appearing in this manual should be referred to as “iPod/iPhone”.
- This system will not operate or may operate improperly with unsupported versions.

### Tagging music

To begin tagging music, tune to an HD Radio station. The DIGITAL icon at the display must be illuminated, indicating a digital station is being received. TAG icon lights up when Tagging function is ready. Touch the **[Tag]** button on the screen. The tagging function is highly depends on the receptions of the radio station. If the channel reception is insufficient, it will effect the operation of the tagging function.

“Tagging Finished...##%100” will appear in the display. The song information is saved to the unit memory until an iPod is connected. You can tag up to 100 songs before the tags must be transferred to an iPod or deleted. When the Tag memory reaches capacity (100 tags) the bottom of the screen displays “Memory Full”.

Table 5: TAG Messages

Tag Message	Reason
Tagging Finished...##%100	Tag data is stored on the unit.
Tagging...	Searching tag data.
Tagging Fail	Tagging is unsuccessful.

### Note:

Tags saved to your iPod can be managed using the iTunes software, available at [www.apple.com/itunes](http://www.apple.com/itunes).

### Downloading tags to your iPod

To download tags to your iPod, plug an iPod into the unit. All existing tags are automatically transferred to the iPod and deleted from the head unit's memory.

### Note:


When transferring Tags to an iPod, the unit must remain in HD Radio mode. To purchase tagged songs, you must sync your iPod to iTunes and then click the “Tagged” list on the left side of the iTunes software screen. Click the “view” button for purchasing information.

- The tagging operations of SiriusXM are the same with HD Radio mode.

# 14. iPod & iPhone OPERATION

Connect an iPod or iPhone to the USB connector via CCA-750 cable.

When connecting a device, the unit will read the files automatically. The track information display on the screen once playback start.

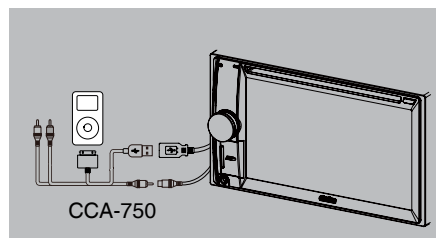


## Accessing iPod mode

Long press [ **ALL** ] button to enter main source menu, then select [iPod] to enter iPod mode.

If [iPod] is not on the current source menu, hold the center of screen and drag left/right to show more icons.

At iPod Audio mode, touch the bottom half of screen to show operation bar.

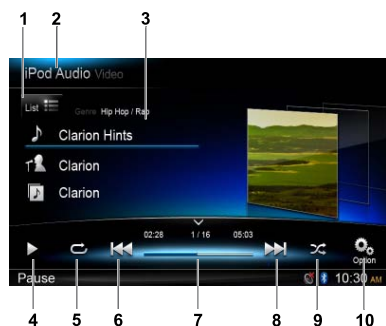

1. Show file list (Browse)
2. Switch between iPod Audio and Video
3. Song/Artist/Album information
4. Play/Pause
5. Repeat play
6. Previous track  
Fast reverse (long press)
7. Progress bar
8. Next track  
Fast forward (long press)
9. Random play
10. Show other options



11. Turn on / off Simple Control
12. Select Audiobook play speed
13. Back to main operation bar

## Browse mode

1. Touch the [ **List** ] button to show file list.  
Drag up/down to browse. Touch a item of list on the screen to select it.
2. Touch [ **Play** ], [ **Next** ] and [ **Previous** ] buttons to show the following categories: Playlists, Songs, Artists, Albums, Genres, Composers, Audiobooks, Podcasts.  
Touch to select a category, the contents of the category are displayed. Drag up/down to browse. Touch an option to select it.

## Pausing play

1. Touch the [ **Pause** ] button on the bottom left of the screen to pause play.  
"PAUSE" appears in the display, and [ **Pause** ] button becomes [ **Next** ].
2. Touch [ **Next** ] button to resume play.

## Selecting a track

### Track-up

1. Touch the [ **Next** ] button to move to the beginning of the next track.
2. Each time you touch the [ **Next** ] button, the track advances to the beginning of the next track.

### Track-down

1. Touch the [ **Previous** ] button to move back to the beginning of the current track.
2. Touch the [ **Previous** ] button twice to move back to the beginning of the previous track.

## Fast forward/Fast reverse

### Fast forward

Touch and hold the [ **Next** ] button .

### Fast reverse

Touch and hold the [⏮] button .

### Repeat play

This function allows you to play the track repeatedly.

Touch the [↺] button to select Repeat one or Repeat all.

### Random play

This function allows you to play all tracks in a random order.

Touch the [⏮] button to perform random play.

### iPod menu alphabet search

This function searches the subfolders for desired alphabetical letters.

1. Touch the [List] button to show file list.  
Touch [Q] button to enter search menu.
2. Input characters by touching buttons on the screen, then touch [Search] to begin searching.  
Touch [123] to show digit keypad, touch [ABC] to show letter keypad.  
Touch [Space] to input a blank space.  
Touch [X] button to delete characters.

### Setting iPod simple control mode

Use this function if you wish to operate through your iPod connected to this unit via the USB cable.

Touch the [Option] button, then touch [Simple Control] to set it to [On].


### iPod video playback

To playback video from iPod, touch top left corner of the screen, then select a video file to play.

During playback, touch the bottom half of screen to show operation bar.



1. Play/Pause
2. Repeat play
3. Previous file  
Fast reverse (long press)
4. Progress bar
5. Next file  
Fast forward (long press)
6. Show iPod list menu
7. Show other options

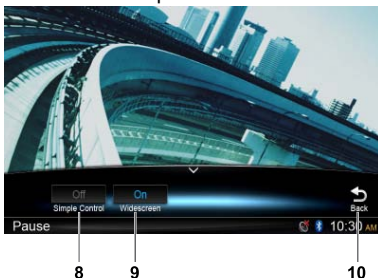

8. Turn on / off Simple Control
9. Turn on Widescreen mode
10. Back to main operation bar

### Return to video list menu

Touch [List] button on the operation bar to return to video list menu.

### Play videos in wide screen

To play videos in wide screen, touch the [Option] button, then touch [Wide screen] to set it to [On].



# 15. PANDORA OPERATION

PANDORA®, the leading internet radio service, gives people music they love anytime, anywhere, through personalized radio stations available on a wide variety of connected devices.

To listen to PANDORA internet radio, you can do as follows:

1. Connect a compatible iPhone to the unit. (refer to “Wiring and Connections”).
2. Touch PANDORA icon from Main Source Menu and open PANDORA mode.
3. PANDORA will automatically start to play streaming. If it does not start automatically, just launch PANDORA App on the iPhone.

Touch the bottom half of screen to show operation bar.



1. Show station list
2. Song/Title/Artist/Album information
3. Play/Pause
4. Skip
5. Thumbs Down
6. Progress bar
7. Thumbs Up
8. Add bookmark
9. Show other option



10. Create a new station
11. Back to main operation bar

11. Back to main operation bar

## Add bookmark

Touch [ ] button, then select [Track] or [Artist] to add it to the bookmark list.

## Create a new station

Touch [ ] button and [New Station] button. Then select [Track] or [Artist] to add it to the station list.

## Thumbs up/down

Touch [ ] button, “Thumbs-Up” feedback will be sent to PANDORA station.  
Touch [ ] button, “Thumbs-Down” feedback will be sent to PANDORA station.

PANDORA limits the number of Skip or Thumbs down allowed on their service. If you attempt to Skip or Thumbs down songs beyond the limit, the current song continues to playback.

PANDORA limits the number of thumbs down allowed on their service.

If you attempt to thumbs down songs beyond the limit, the current song continues to playback.

## Select a stored station


Touch [ ] button to show station list.  
Touch [By Date] to list the stations by date.  
Touch [A-Z] to list the stations from A to Z.  
Drag up or down to scroll the list, select a desired station to play it.



## 16. NAVIGATION OPERATION

### Access navigation mode

1. Slide the cover of the card slot located on the bottom left of the panel to the right. Insert a map card into the mini card slot.
  2. To remove the card, you should first select another source or turn off the power, in order to avoid damaging the card. Press to pop it out, then take off the card. Close the cover to the left.
  3. Press [ **▲** ] button on panel to visit Navigation mode.
- \* The navigation operations depend on your map, it may be different from the following content.

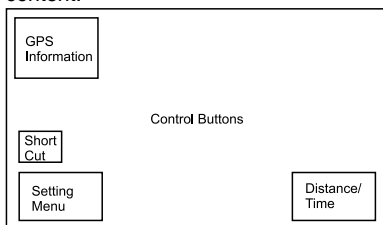

### Control buttons

1. Touch top left corner of the screen to show GPS informations. Touch **[Back]** to return.
  2. Touch bottom left corner of the screen to enter Navigation menu. Touch **[Show Map]** to return.
  3. Touch middle left of the screen to show shortcuts of general functions. Touch [ **<** ] button to hide.
  4. Touch bottom right corner of the screen to show Distance/Time Left/Arrival Time. Touch it again to hide.
  5. Touch the blank area to show control buttons.
- Top left corner: Plane/three-dimensional  
 Top right corner: Cursor location.  
 [ **←** ]/[ **→** ]: Move left/right  
 [ **↑** ]/[ **↓** ]: Move up/down  
 [ **+** ]/[ **-** ]: Enlarge/reduce the map  
**[Back]**: Hide the buttons.  
**[More]**: Show more informations.  
**[Select]**: Select the route.

## 17. AUX OPERATION

Long press [ **■ ALL** ] button to enter main source menu, then select **[AUX 1]** to visit front auxiliary device, and touch **[AUX 2]** to enter rear auxiliary device.

If **[AUX 1]** or **[AUX 2]** is not on the current source menu, touch [ **-** ] buttons on the bottom of the screen, or hold the center of screen and drag left/right to show more icons.

# 18. TROUBLE SHOOTING

## GENERAL

Problem	Cause	Measure
Unit can not power on.	Unit fuse blown.	Replace with new fuse of correct rating.
	Car battery fuse blown.	Replace with new fuse of correct rating.
Unit can not power on.	The microprocessor has malfunctioned due to noise, etc.	Turn off the power and press the <b>[RESET]</b> button with a thin rod.
Nothing happens when buttons are pressed.		<b>Note:</b> When the <b>[RESET]</b> button is pressed, turn off the power.*
Display is not accurate.		* When the <b>[RESET]</b> button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.
Remote control does not work.	Battery depleted.	Change the battery.
	Battery installed incorrectly.	Install the battery correctly.
No/low audio output	Improper audio output connection.	Check wiring and correct.
	Volume set too low.	Increase volume level.
	Speakers damaged.	Replace speakers.
	Heavily biased volume balance.	Adjust the channel balance to center position.
	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
Poor sound quality or distortion	Non-standard disc used.	Use a standard disc.
	Speaker power rating does not match unit.	Replace speakers.
	Wrong connections.	Check wiring and correct.
	Speaker is shorted.	Check wiring and correct.
Unit resets itself when engine is off.	Incorrect connection between ACC and Battery.	Check wiring and correct.
The display is dark.	The brightness control is too low.	Adjust the brightness properly.
	The operating condition is not good.	The temperature inside the vehicle may be 0°C or lower. Set to an appropriate temperature (25°C or so) and check it again.
	The headlight of the vehicle is lit.	The display is made dark at night to prevent the glare (When the headlight of the vehicle is lit in the daytime, the display gets dark.)
There are red, green, and blue points in display		This is not a failure, but a phenomenon peculiar to a liquid crystal panel (The liquid crystal panel is produced according to technology with very high precision. Note that, though there are effective pixels of 99.99% or more, pixel missing or normally lit pixels account for 0.01%).

## DISC Player

Problem	Cause	Measure
Disc cannot be loaded.	Another disc is already loaded.	Eject the disc before loading the new one.
	There is an object installed inside the unit.	Remove the object inside the unit.
Sound skips or is noisy.	Disc is dirty.	Clean the compact disc with a soft cloth.
	Disc is heavily scratched or warped.	Replace with a compact disc with no scratches.
Sound is bad when power is first turned on.	Condensation may form on the internal lens when the car is parked in a humid place.	Let dry for about 1 hour with power on.
Video images are not displayed.	The parking brake is not engaged.	Check that the parking brake is engaged.
Disc cannot play with the display "PARENTAL VIOLATION" shown.	Feature exceeds set parental level.	Release the view limitation or change the parental level. See the subsection "Setting up the parental level."

## SD/USB Devices

Problem	Cause	Measure
SD card or USB device cannot be inserted.	The SD card or USB device has been inserted with wrong direction.	Reversing the connection direction of the SD card or USB device, try it again.
	The SD card or USB connector is broken.	Replace with a new card or USB device.
SD card or USB device is not recognized.	The SD card or USB device is damaged.	Disconnect the card or USB device and reconnect. If still not recognized, try replacing with a different card or USB device.
	Connectors are loose.	
Sound skips or is noisy.	MP3/WMA files are not encoded properly.	Use MP3/WMA files encoded properly.
No sound heard with the display "NO FILE" shown.	No MP3/WMA file is stored in the card or USB device.	Store these files properly in the card or USB device.
The video image of iPod/iPhone is disturbed.	The TV Signal setting of the iPod/iPhone is not set correctly.	Set the TV Signal setting (NTSC/PAL) of the iPod/iPhone correctly.

## SiriusXM Advisory Messages

Message	Description
Check Tuner	Check the SiriusXM tuner connection on the back of the unit to ensure that its correctly connected.
Check Antenna	Ensure the SiriusXM antenna cable is connected to the SiriusXM tuner correctly. Check the SiriusXM antenna wire for breaks or sharp bends. Replace the antenna if necessary. Load "Factory default" settings on Setting menu. If the message remains, the antenna may have been damaged.
No Signal	The vehicle must be outside, and the antenna must have a clear view of the southern sky.
Channel Not Subscribed	This channel is not included in your SiriusXM subscription plan. Call 1-800-XM-RADIO (1-800-967-2346) to subscribe.
Channel Not Available	This channel is not a valid SiriusXM channel. The channel number has been entered incorrectly, or the channel was removed from the SiriusXM channel lineup.
Channel Locked	The selected channel has been locked by the parental controls, or a mature channel has been selected. A prompt to enter the unlock code will appear. Enter the unlock code as described on page 32.
Subscription Updated	An update to your SiriusXM subscription has been received by the SiriusXM tuner. Press any button to continue.

## Bluetooth

Problem	Cause	Measure
Cannot pair the Bluetooth enabled device with the car audio system.	The device does not support the profiles required for the system.	Use another device to connect.
	The Bluetooth function of the device is not enabled.	Refer to the user manual of the device for how to enable the function.
The audio quality is poor after connection with a Bluetooth-enabled device.	The internal microphone gain is not set correctly.	Adjust the gain of the internal microphone in System Setup.
	The external microphone is not set correctly nor properly positioned.	Adjust the gain and position of the external microphone. For example, stick the microphone onto the dashboard so it is close to the driver.

## 19. ERROR DISPLAYS

If an error occurs, one of the following displays is displayed.  
Take the measures described below to solve the problem.

Display	Cause	Measure
Disc loading	Disc is being read	Please wait, it may take several minutes for some disc or storage device.
No Disc	Disc is dirty	Clean disc with soft cloth
	Disc is upside down	Insert disc with label side up
	Disc not present in loading compartment	Insert disc
Unsupported Disc	Disc is dirty	Clean disc with soft cloth
	Disc is upside down	Insert disc with label side up
Unknown disc	Disc format is not compatible with this unit	Change another disc.
Region Error	DVD is not compatible with region code of unit	Use discs with corresponding regional code.
Error	Illegal mechanism operation	Press EJECT key for 5 seconds to reset loading mechanism

If an error display other than the ones described above appears, press the **[RESET]** button. If the problem persists, turn off the power and consult your store of purchase.

- \* When the **[RESET]** button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.

## 20. SPECIFICATIONS

### FM Tuner

Frequency range: 87.9-107.9MHz  
 Usable sensitivity: 13dBf  
 Frequency response: 30Hz-15kHz  
 Stereo separation: 30dB(1kHz)  
 Signal/noise ratio: >55dB

### AM Tuner

Frequency range: 530-1710kHz  
 Usable sensitivity (S/N=20dB): 30dBμ

### Disc Player

System: Disc digital audio system  
 Frequency response: 20Hz-20kHz  
 Signal/noise ratio: >93dB  
 Total harmonic distortion:  
     Less than 0.1% (1kHz)  
 Channel separation: >60dB  
 Video signal output: NTSC  
 Video output level: 1±0.2V

### MP3/WMA mode

MP3 sampling rate: 8 kHz to 48 kHz  
 MP3 bit rate: 8 kbps to 320 kbps / VBR  
 WMA bit rate: 8 kbps to 320 kbps

### USB

Specification: USB 1.0/2.0  
 Playable audio format:  
     MP3(.mp3): MPEG 1/2/Audio Layer-3  
     MP4(.MPEG4 / .AAC)  
     WMA(.wma): Ver 7/8/9.1/9.2  
 Playable video format:  
     AVI, MP4, MPG/MPEG, 3GP  
     480x272

### SD

Memory cards:  
     Standard SD/SDHC, micro SD/SDHC  
 File system: FAT, FAT16, FAT32  
 Playable audio format:  
     MP3(.mp3): MPEG 1/2/Audio Layer-3  
     MP4(.MPEG4 / .AAC)  
     WMA(.wma): Ver 7/8/9.1/9.2  
 Playable video format:  
     AVI, MP4, MPG/MPEG, 3GP  
     480x272

### Bluetooth

Specification: Bluetooth Ver. 2.0+EDR  
 Profile: HFP (Hands-free Profile)  
     A2DP (Advanced Audio Distribution Profile)  
     AVRCP (AV Remote Control Profile)  
     PBAP (Phone Book Access Profile)  
 Send/Receive Sensitivity: Class 2

### Audio Amplifier

Maximum power output:  
     200W (50W x 4)  
 Speaker impedance: 4Ω (4 to 8 Ω allowable)

### 6.2 Inch TFT LCD


Display resolution (dot):  
     800RGB (H) x 480(V)  
 Active area (mm): 137.52(H) x 77.232 (V)  
 Screen size (inch): 6.2 (Diagonal)  
 Dot pitch (mm): 0.1719(H) x 0.1609(V)

### Input

Audio input sensitivity:  
     High: 320mV (at 2V output)  
     Mid: 650mV (at 2V output)  
     Low: 1.3V (at 2V output)  
     (input impedance 10 kΩ or greater)  
 AUX-in Audio level : ≤2V  
     Video level : NTSC/PAL 1Vp-p@75Ω

### General

Power supply voltage:  
     14.4VDC (10.8 to 15.6V allowable),  
     negative ground  
 Pre-Amp output voltage:  
     4.0V (CD play mode: 1kHz, 0dB, 10kΩ  
     load, volume max.)  
 Fuse: 15A  
 Dimensions of the Main Unit:  
     7"(Width) x 4"(Height) x 6.4"(Depth)  
     [178(W) x 100(H) x 163(D)mm]  
 Weight of the Main Unit: 4.19lb (1.90kg)  
 Dimensions of the Remote Control unit:  
     1.9"(Width) x 0.5"(Height) x 5.5"(Depth)  
     [49(W) x 12(H) x 139(D)mm]  
 Weight of the Remote Control Unit:  
     1.94oz (55g) (including battery)

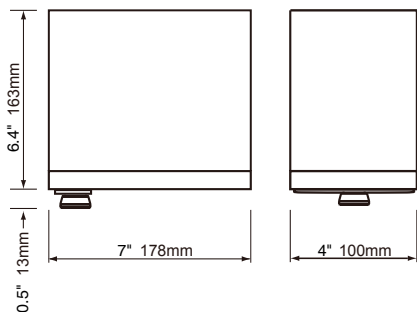

**Note:**

- Specifications and design are subject to change without notice for further improvement.

**Power Output:**

18W RMS x 4 Channels at 4Ω  
and ≤1% THD+N


**Signal to Noise Ratio:**


93 dBA (reference: 1 W into 4 Ω)





# 21. WIRING AND CONNECTIONS

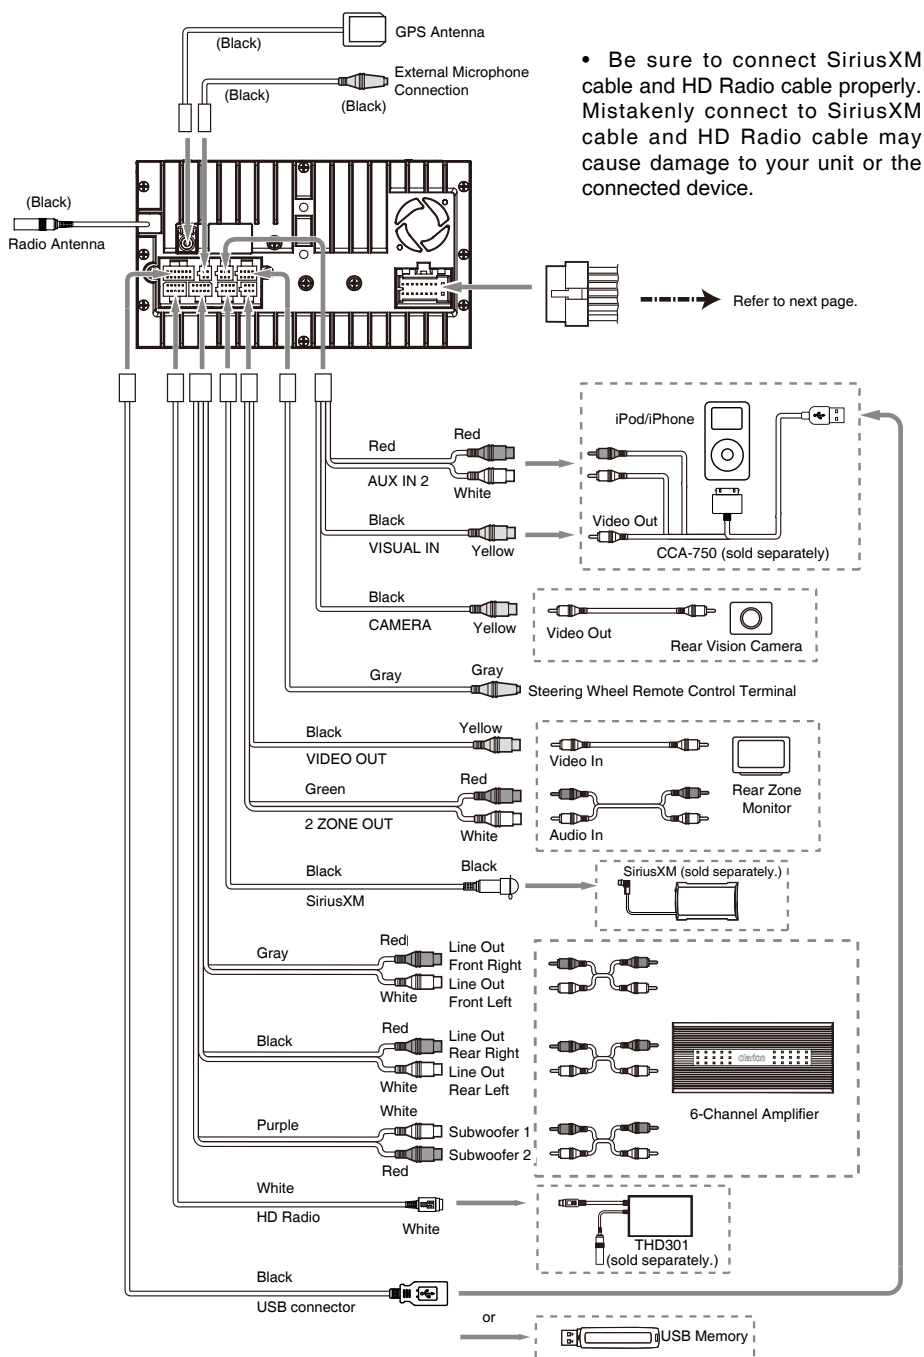

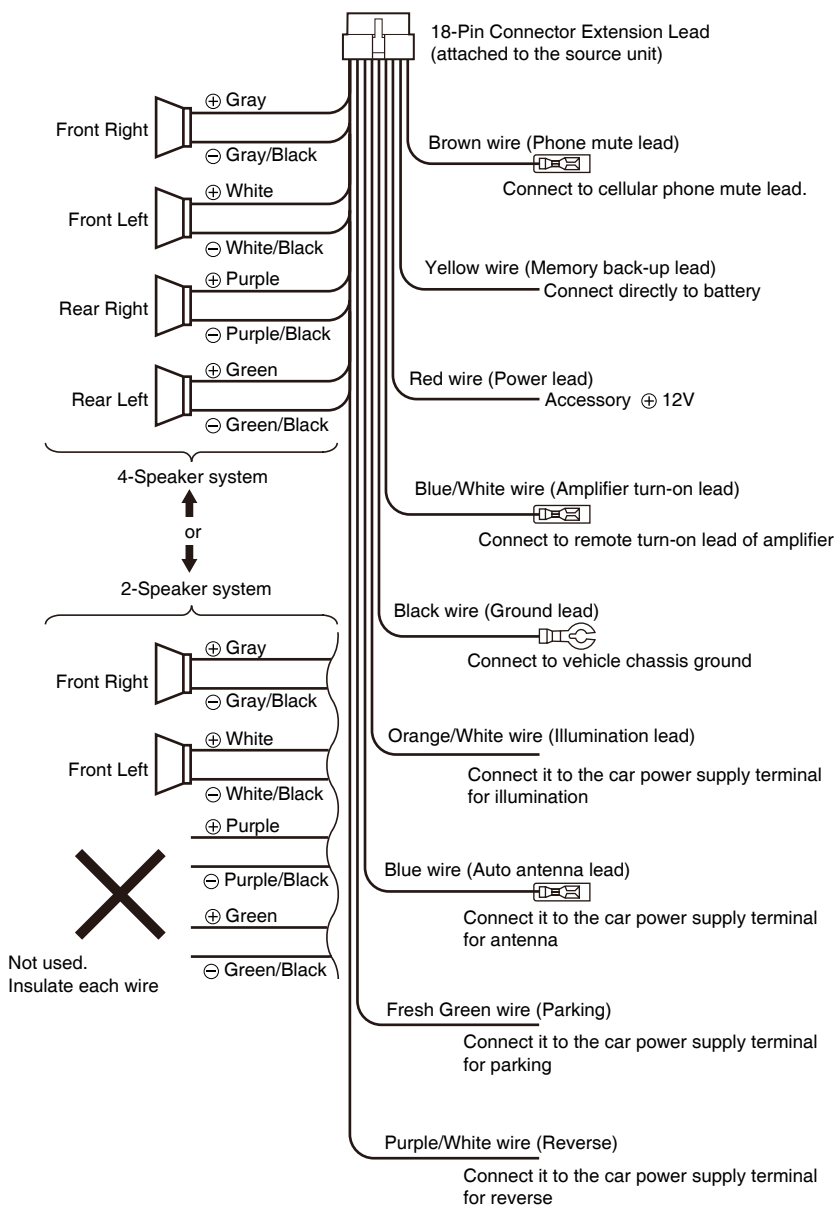

# **Clarion Co., Ltd.**

---

All Rights Reserved. Copyright © 2012: Clarion Co., Ltd.

Printed in China



**QUICK START GUIDE & INSTALLATION MANUAL**  
**GUIDE DE DÉMARRAGE RAPIDE & MANUEL**  
**D'INSTALLATION**  
**KURZANLEITUNG & MANUAL DE INSTALACIÓN**

**NX602**

---



**DVD MULTIMEDIA STATION WITH BUILT-IN NAVIGATION**  
**& 6.2" TOUCH PANEL CONTROL**  
**STATION MULTIMÉDIA DVD AVEC NAVIGATION**  
**INTÉGRÉE ET COMMANDE PAR ÉCRAN TACTILE DE 6,2"**  
**ESTACIÓN MULTIMEDIA DVD CON NAVEGACIÓN**  
**INTEGRADA Y CONTROL DE PANEL TÁCTIL DE 6,2"**

### **CLARION PRODUCT REGISTRATION INFORMATION**

For USA and Canada only  
[www.clarion.com](http://www.clarion.com)

Dear Customer:

Congratulations on your purchase of a Clarion mobile electronic products. We are confident that you'll enjoy your Clarion experience.

There are many benefits to registering your product. We invite you to visit our website at [www.clarion.com](http://www.clarion.com) to register your Clarion product.

We have made product registration simple with our easy to use website. The registration form is short and easy to complete. Once you're registered, we can keep you informed of important product information.

Register at [www.clarion.com](http://www.clarion.com) - it's easy to keep your Clarion product up to date.

### **INFORMATIONS DE L'ENREGISTREMENT DE PRODUITS CLARION**

Pour les États Unis et le Canada seulement  
[www.clarion.com](http://www.clarion.com)

Cher client:

Nous vous remercions d'avoir acheté ce produit électronique mobile Clarion. Nous sommes confiants que vous apprécierez votre expérience Clarion.

Il y a beaucoup d'avantage à enregistrer votre produits. Nous vous invitons à visiter notre site Web [www.clarion.com](http://www.clarion.com) pour enregistrer votre produit Clarion.

Nous avons facilité la tâche d'enregistrement de produit simple et facile grâce à notre site Web. Le formulaire d'enregistrement est court et facile à compléter. Lorsque vous êtes enregistrer, nous pouvons vous tenir informé des informations important de produits.

Enregistrer à [www.clarion.com](http://www.clarion.com) - c'est facile de mettre à jour votre produit Clarion.

### **INFORMACIÓN DEL REGISTRO DE PRODUCT O DE CLARION**

Para USA y Canada nomas  
[www.clarion.com](http://www.clarion.com)

Querido Cliente:

Felicitaciones por su compra de producto electrónico móvil de Clarion. Estamos seguros que usted gozará de su experiencia con el producto de Clarion.

Hay muchas ventajas al registrar su producto. Le invitamos a que visite nuestro sitio en internet [www.clarion.com](http://www.clarion.com) para registrar su producto de Clarion.

Hemos hecho el registro de producto fácil en nuestro sitio. La forma de registro es corta y fácil de completar. Una vez que lo registre, podremos proporcionarle la información de su producto.

Registrese en [www.clarion.com](http://www.clarion.com) - es fácil mantener su producto de Clarion actualizado.

*Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.*

*Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.*

## Contents

---

This guide is intended to guide you through the basic functions of the unit.

<b>Precautions</b> .....	<b>3</b>
<b>Operational Panel</b> .....	<b>5</b>
<b>Turning the Power On</b> .....	<b>6</b>
<b>Selecting a Source</b> .....	<b>6</b>
<b>Source Media Modes</b> .....	<b>7</b>
DVD Video mode .....	7
CD Playback .....	7
MP3/WMA Playback .....	8
MP4 Playback .....	8
iPod Audio Playback .....	9
iPod video playback .....	9
Radio mode .....	10
HD Radio mode .....	10
<b>Bluetooth Operations</b> .....	<b>12</b>
Pairing .....	12
Bluetooth Telephone menu .....	12
Making a call .....	12
Bluetooth Audio Playback .....	12
<b>Start using Clarion Mobile Map</b> .....	<b>13</b>
Selecting the destination of a route .....	13
Map screen .....	14
Quick menu .....	14
<b>Installation Guide</b> .....	<b>15</b>
Before Starting .....	15
Cautions On Installation .....	15
Installing The Main Unit .....	16
Cautions On Wiring .....	17
Installing The Gps Antenna .....	18
Wire Connection .....	19


### Notes


- For details of functions and operation of this product, refer to "Owner's manual".
- The screens shown in the examples may differ from actual screens. Actual screens may be changed without notice for performance and function improvements.

## Precautions

### WARNING

For your safety, the driver should not operate the controls while driving.  
Also, while driving, keep the volume to a level at which external sounds can be heard.

1. When the interior of the car is extremely cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
2. Driving on extremely bumpy or rough roads can cause the disc to skip during playback.
3. This unit uses precision parts and components for its operation. In the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts. Contact your **Clarion** dealer or service center.
4. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.  
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio reception, which can be determined by turning the equipment off and on, the user is encouraged to consult the dealer or an experienced radio technician for help.
5. "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.  
Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.  
iPhone and iPod are trademarks of Apple Inc., registered in the U.S. and other countries.
6. SiriusXM™, the SiriusXM-Ready™ logo and related marks are trademarks of SIRIUS XM Radio, Inc.
7. HD Radio™, HD Radio Ready™, and the HD Radio Ready logo are proprietary trademarks of iBiquity Digital Corporation.  
This HD Radio Ready receiver is ready to receive HD Radio broadcasts when connected to the THD301, sold separately.
8.   
Manufactured under license from Dolby Laboratories.  
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
9. This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.  
Use of this product by the customer is restricted to play program materials to which the Rovi copyright protection process has been applied.
10. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Clarion Co., Ltd, is under license.

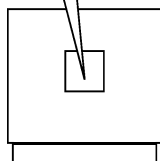


Changes or modifications to this product unapproved by the manufacturer will void the warranty and will violate FCC approval.



## Operational Panel

English

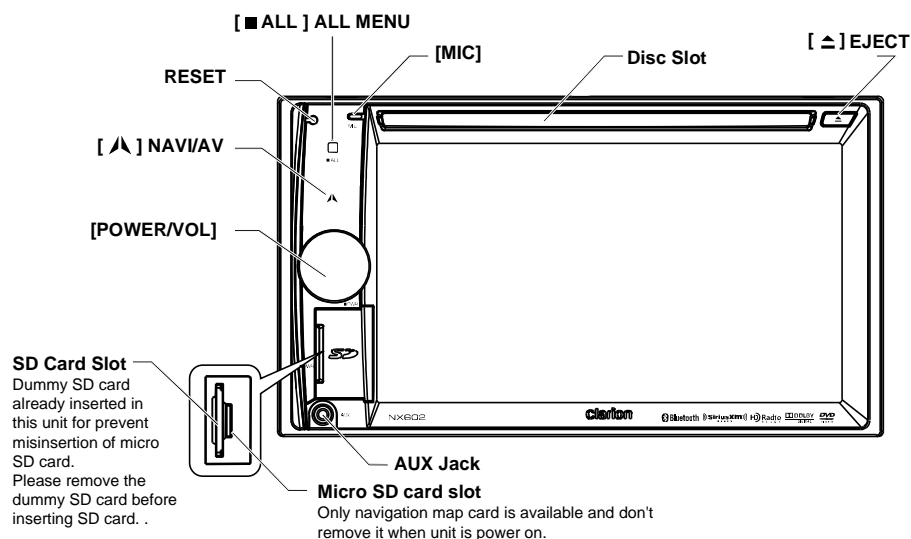

### [POWER/VOL] Knob

- Press to power on the system when ignition on.
- When power on, short press to mute the volume.
- Rotate the knob to increase or decrease the volume.
- Press and hold this key more than 1 second to turn off the system.

### [ ■ ALL ] ALL MENU Button

- Short press to show/exit shortcut menu.
- Long press to show/exit main source menu.

### [ ▲ ] NAVI/AV Button

- Press to enter navigation mode;
- Press again to return current source.

### [ ▲ ] EJECT Button

- Press to eject disc.

### [ MIC ] Hole

- Internal microphone

### [RESET] Button


- Press to load original settings.

*Note: When the [RESET] button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.*


## Turning the Power On



Start the engine. The power is supplied to this unit.

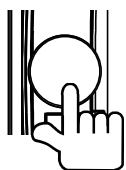

Press **[POWER/VOL]** button on the panel to turn on the unit.

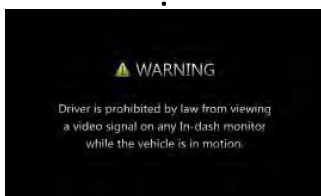

## Selecting a Source

Long press [ **ALL** ] button on the PANEL to show main source menu.

Touch [ - ] on the bottom of screen to show front zone sources.

Change page by dragging left or right or touching other [ - ] buttons.

Touch the icons on the screen to enter corresponding work mode, such as Disc mode, Tuner mode, Telephone mode, etc.

## Source Media Modes

When you select the desired source mode (for example, the DVD Video, USB or iPod mode), the following screen will appear.

During playback, touch the bottom half of screen to show operation bar.

### DVD Video mode

1. Play/Pause
2. Show cursor keys in DVD title menu
3. Previous chapter  
Fast backward (long press)
4. Progress bar
5. Next chapter  
Fast forward (long press)
6. Root menu  
Root Title (long press)
7. Show other options
8. Repeat play
9. Select audio language
10. Select subtitle language
11. Select DVD angle
12. Show next page
13. Back to main operation bar
14. Show previous page
15. Turn on Widescreen mode
16. Direct search
17. Adjust picture effect
18. Show playback information
19. Mute indicator



14 15 16 17 18 19 13

### CD Playback

1. Show track list (Browse)
2. Title/Artist/Album information
3. Play/Pause
4. Repeat play
5. Previous track  
Fast reverse (long press)
6. Progress bar
7. Next track  
Fast forward (long press)
8. Random play
9. Show other options  
Scan: Scan play stored stations



3 4 5 6 7 8 9

## Source Media Modes


### MP3/WMA Playback

1. Show folder/file list (Browse)
2. Folder/Title/Artist/Album information
3. Play/Pause
4. Repeat play
5. Previous track
6. Progress bar
7. Next track
8. Fast forward (long press)
9. Show other options
10. Scan play
11. Rotate the album image
12. Back to main operation bar



### MP4 Playback

1. Play/Pause
2. Repeat playback
3. Previous file
4. Progress bar
5. Next file
6. Stop and show list menu (Browse)
7. Show other options
8. Select audio language
9. Select subtitle language
10. Turn on Widescreen mode
11. Show playback information
12. Back to main operation bar

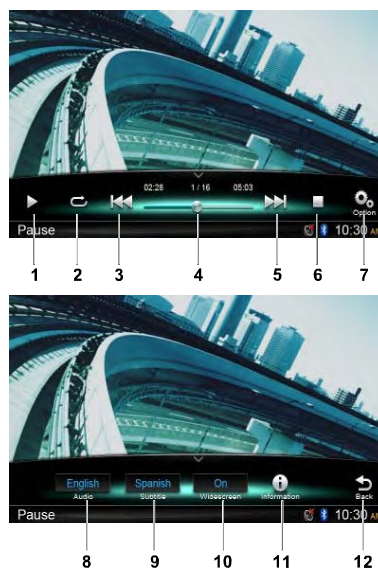

## Source Media Modes


### iPod Audio Playback

1. Show file list (Browse)
2. Switch between iPod Audio and Video
3. Song/Artist/Album information
4. Play/Pause
5. Repeat play
6. Previous track  
Fast reverse (long press)
7. Progress bar
8. Next track  
Fast forward (long press)
9. Random play
10. Show other options
11. Turn on / off Simple Control
12. Select Audiobook play speed
13. Back to main operation bar



### iPod video playback


1. Play/Pause
2. Repeat play
3. Previous file  
Fast reverse (long press)
4. Progress bar
5. Next file  
Fast forward (long press)
6. Show iPod list menu
7. Show other options
8. Turn on / off Simple Control
9. Turn on Widescreen mode
10. Back to main operation bar

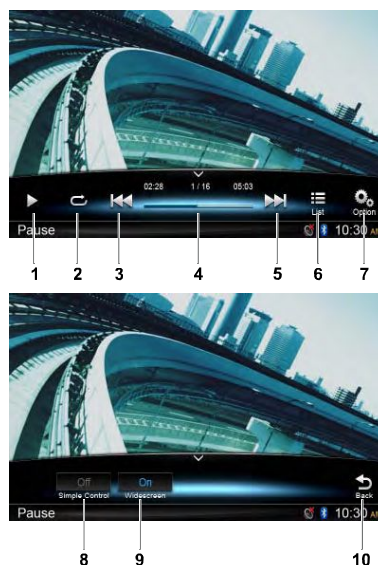

## Source Media Modes

### Radio mode

1. Band switch
2. Information area
3. Preset station number
4. Current station frequency
5. Show preset stations list
6. Scan preset stations
7. Manual tune backward  
Auto tune backward. (long press)
8. Frequency bar
9. Manual tune forward  
Auto tune forward. (long press)
10. Show other options
11. Choose local or distant seeking mode
12. Store stations automatically
13. Back to main operation bar

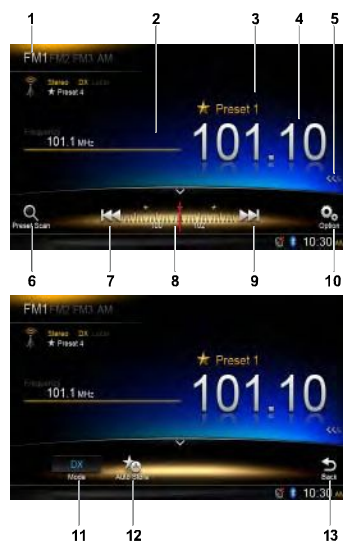

### HD Radio mode

1. Band switch
2. Information area
3. Preset station number
4. Current station frequency
5. Show preset stations list
6. Scan preset stations
7. Store iTunes Tagging info
8. Manual tune backward  
Auto tune backward (long press)
9. Frequency bar
10. Manual tune forward  
Auto tune forward (long press)
11. Select next multicast
12. Show other options
13. Select local or distant seeking mode
14. Select Blending mode
15. Select PTY type
16. Show Tag Information (Touch [OK] after information Box displayed to delete all tag)
17. Show next page
18. Back to main operation bar
19. Show previous page
20. Auto store preset stations



## Source Media Modes

English

### SiriusXM Satellite Radio Mode

1. Show channel list
2. Band switch
3. Information area
4. Scan play (Depends on search mode)
5. iTunes tag
6. Manual tune backward (Depends on search mode)  
Rapid browse backward (long press)
7. Select search mode
8. Manual tune forward (Depends on search mode)  
Rapid browse forward (long press)
9. Show memorize sub-menu
10. Show other options
11. Instant replay
12. Select Song/Artist Alert
13. Select Game Alert
14. Select Traffic/Weather Jump
15. Show next page
16. Back to main operation bar
17. Show previous page
18. Show Parental Lock setting menu
19. Show password setting menu
20. Show SiriusXM Radio ID
21. Show Tag information



### PANDORA Mode


1. Show station list
2. Song/Title/Artist/Album information
3. Play/Pause
4. Skip
5. Thumbs Down
6. Progress bar
7. Thumbs Up
8. Add bookmark
9. Show other option
10. Create a new station
11. Back to main operation bar






## Bluetooth Operations

### Pairing

1. Touch **[Custom]** on the bottom left of the main menu, then select **[Settings]** to enter Setting menu.
2. Touch **[Setup]**, then touch the button to the right of "Bluetooth" to show Bluetooth setting menu.
3. Select **[On]** to the right of "Bluetooth".
4. Turn on Bluetooth function of your mobile phone.
5. Enter mobile phone's Bluetooth setup menu.
6. Search for new Bluetooth devices.
7. Select **NX602** from the pairing list on the mobile phone.
8. Enter the password. (Default password: "0000" )
9. After pairing successfully,  icon on the bottom right of the screen turns blue.




### Bluetooth Telephone menu


1. Show history categories
2. Backspace
3. Paired device information
4. Number pad
5. Call/Hang up

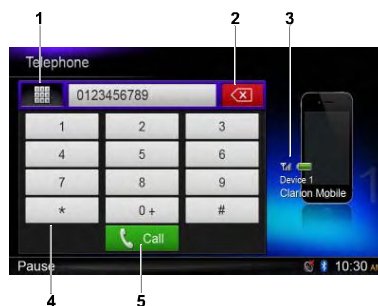


### Making a call

  
#### • Dial Number

1. Input numbers by digit-keys on the screen.
2. Touch [  ] button to dial.  
Touch [  ] button to delete characters.
3. Touch [  ] button to terminate call.

You can access Dialed/Missed/Received Call History and your phone book by touching  button.

#### • Answering a call

  You can answer an incoming call by pressing the [  ] button.

- \* Touch [  ] button to reject an incoming call.

### Bluetooth Audio Playback

1. Title/Artist/Album information
2. Play/Pause
3. Previous track  
Fast reverse (long press)
4. Stop
5. Next track  
Fast forward (long press)





## Start using Clarion Mobile Map


When Clarion Mobile Map is started the first time, you need to do the following:

1. Select the written language of the application interface. Later you can change it in Settings.
2. Select the language and speaker used for voice guidance messages. Later you can change it in Settings.
3. Read and accept the End User Licence Agreement.
4. Read and accept the road safety warning.



After this, the Navigation menu appears and you can start using Clarion Mobile Map.

### Selecting the destination of a route

To enter an address as the destination, do as follows:


1. If you are on the Map screen, tap  to return to the Navigation menu.



2. In the Navigation menu, tap the following buttons:  and .



3. Selecting a destination by entering the address or the postal code
4. Selecting the destination from the Places of Interest
5. Selecting a map location as the destination
6. Selecting the destination from your Favourites
7. Selecting your Home location
8. Searching for a Place of Interest by its phone number
9. Entering the coordinate of the destination
10. Selecting a recent destination from the History
11. Additional options

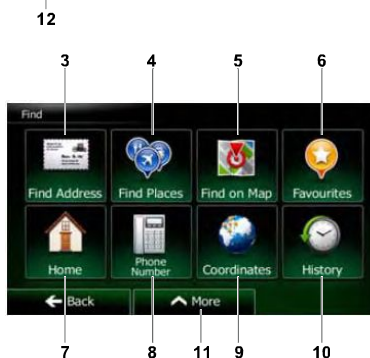

- For the information about other ways, see the user manual.


## Start using Clarion Mobile Map

### Map screen

12. To enlarge this small map and open the Map screen, tap [Show Map] button
13. Zooming in and out
14. Tilting up and down
15. Rotating left and right
16. 2D or 3D view
17. Compass in 2D map view mode
18. Compass in 3D map view mode
19. Location information
20. Return to normal navigation
21. Select destination




### Quick menu

22. The Quick menu is a selection of controls and functions that are frequently needed during navigation. It can be opened directly from the Map screen by tapping .
23. Find / Find Places / Quick Search (This function lets you search for a Place along your route or around your current location if there is no route calculated)
24. Find / Favourite (This button opens the list of your Favourite destinations)
25. Find / History (This button opens the History list. You can select one of your previous destinations)
26. My Route / Edit Route (This button opens the route editing function)
27. More / Settings / Route Settings (This button opens the route related settings)
28. More / Settings / Map Settings (This button opens the map related settings)
29. Tap the Current Street field on the Map screen (This button opens a special screen with information about the current position and a button to search for nearby emergency or roadside assistance).
30. My Route / Cancel Route (This button cancels the route and stops navigation. The button is replaced with the next one if waypoints are given)



## Installation Guide

### Before Starting

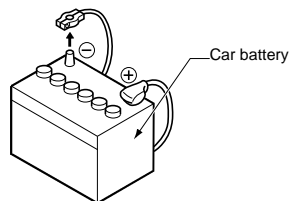

1. This set is exclusively for use in cars with a negative ground, 12 V power supply.
2. Read these instructions carefully.
3. Be sure to disconnect the battery "⊖" terminal before starting. This is to prevent short circuits during installation.



### Package Content

Source unit .....	1
Wiring harness.....	1
GPS antenna.....	1
CLAMP for GPS antenna's cable .....	3
DOUBLE FACE TAPE for GPS Antenna...	1
Remote control unit .....	1
Battery (CR2025).....	1
(Installed in remote control)	
2Din Trim ring (wide) .....	1
2Din Trim ring (narrow).....	1
Cleaning cloth.....	1
Warranty Card .....	1
Quick Start Guide .....	1

Owner's manual (CD-R) .....	1
Electro tap .....	2
Flush mount bolts(M5x6) .....	8
Hexagon Head Screw(M5x6) .....	8
AV cable .....	1
Line out cable .....	1
Rear Zone out cable .....	1
SWC cable.....	1
SiriusXM cable.....	1
HD Radio cable .....	1
External Microphone cable .....	1
Camera Visual IN AUX2 cable .....	1
USB cable.....	1

### Cautions On Installation

1. Prepare all articles necessary for installing the main unit before starting.
2. Install the unit within 30° of the horizontal plane.
3. If you have to do any modification on the car body, such as drilling holes, consult your car dealer beforehand.
4. Use the included screws for installation. Using other screws can cause damage.
5. This unit has a fan motor in the back of the main unit so as not to raise the temperature in the source unit. When the fan motor vent is covered with cords or mounting bracket, it may cause a malfunction. Be sure not to cover it when wiring cords.

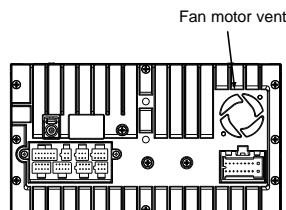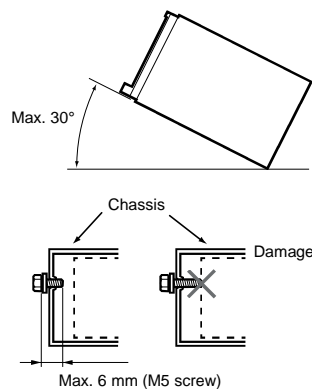


## Installation Guide

### Installing The Main Unit


This unit is designed for fixed installation in the dashboard.

1. When installing the main unit in NISSAN vehicles, use the parts attached to the unit (see "■ NISSAN"). When installing the main unit in TOYOTA vehicles, use the parts attached to the vehicle (see "■ TOYOTA").
2. Wire as shown in "Wire Connection".
3. Reassemble and secure the unit in the dashboard and set the face panel and center panel.


Mounting Screw Holes (Side View of the Main Unit)

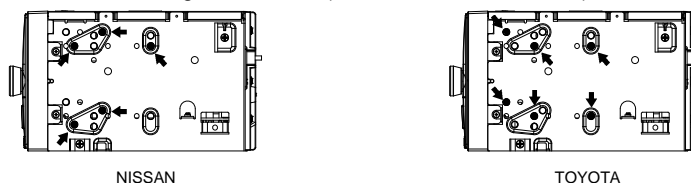

#### ■ NISSAN

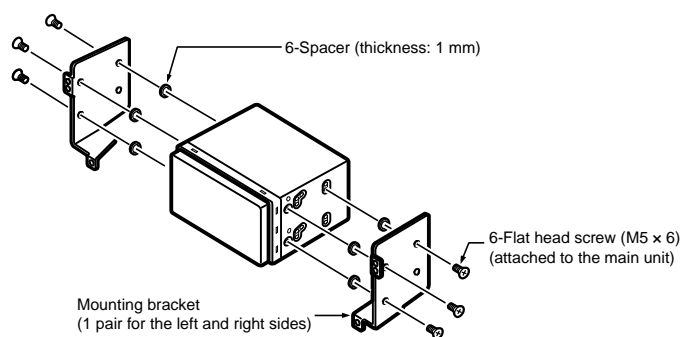

#### ■ TOYOTA

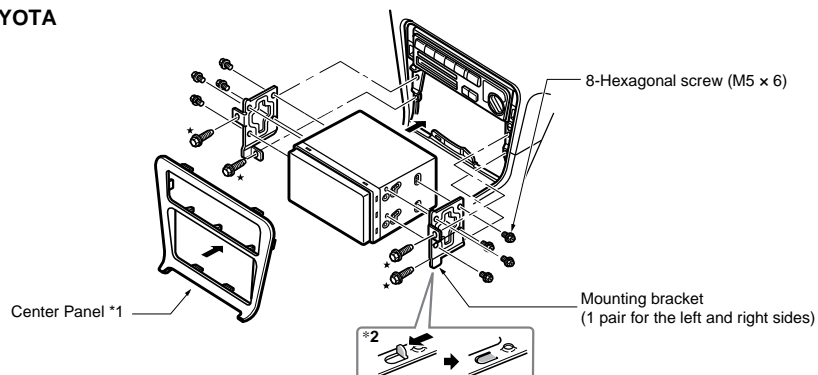

Screws marked ★ and mounting bracket are attached to the vehicle.

## Installation Guide

### Note:

\*1 Some panel openings are too small for the unit depending on the vehicle type and model. In such a case, trim the upper and lower sides of the panel frame by about 0.5 to 1.5 mm so the unit can be inserted smoothly.

 
\*2 If a hook on the installation bracket interferes with the unit, bend and flatten it with a nipper or similar tool.

### ■ Vehicles other than NISSAN and TOYOTA

In some cases the center panel may require modification. (Trimming, filling, etc.)

### Typical Mounting Brackets

In some cases the center panel may require modification. (Trimming, filling, etc.)



Example 1-3


Affix the screws to the ● marks.

### Cautions On Wiring

- Be sure to turn the power off before wiring. Be particularly careful where you route the wires.
- Keep them well away from the engine, and exhaust pipe, etc. Heat may damage the wires.
- If the fuse should blow, check to see if the wiring is correct. If a fuse is blown, replace it with a new one of the same specification as the original.
- To replace the fuse, remove the old fuse of the power supply cord and insert the new one.

### Note:

- There are various types of fuse holder. Do not let the battery side touch other metal parts.

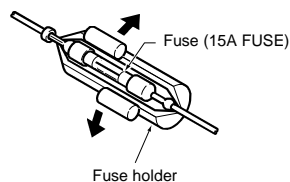

- After the connection, fix the cord by a clamp or insulation tape for protection.

## Installation Guide


### Installing The GPS Antenna

#### ⚠ WARNING


- Do not install the GPS antenna in a place where it may interfere with the operation of the airbag or hinder the driver's visual range.
- Do not use the navigation system with the GPS antenna cord cut off. The power cables in the cord may be short-circuited.

#### Note:

- The supplied GPS antenna is for installing inside the vehicle. Do not install it outside the vehicle.
- Install the GPS antenna more than 50 cm away from the main unit, other audio devices such as CD player, and a radar detector. If it is installed near these devices, GPS reception may be impaired.
- To improve the GPS signal reception, install the GPS antenna horizontally on a flat plane.
- Do not wax or paint the cover of the GPS antenna. This may reduce the performance of the GPS antenna.
- Install the GPS antenna at least 10 cm away from the windshield.
- Wipe off the dirt of the mounting surface before installing the GPS antenna.

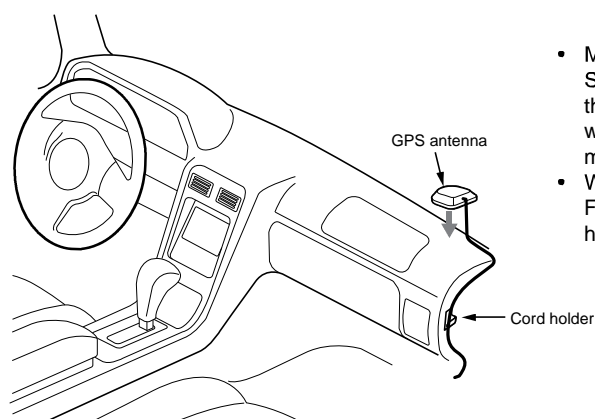

- Mount the GPS antenna.  
Stick it surely on a flat plane of the passengside dashboard where GPS signal interruption is minimized.
- Wire the GPS antenna cord.  
Fasten the cord using the cord holders.

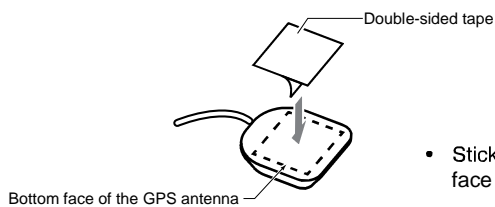


- Stick the double-sided tape to the bottom face of the GPS antenna.


# Installation Guide

## Wire Connection

English

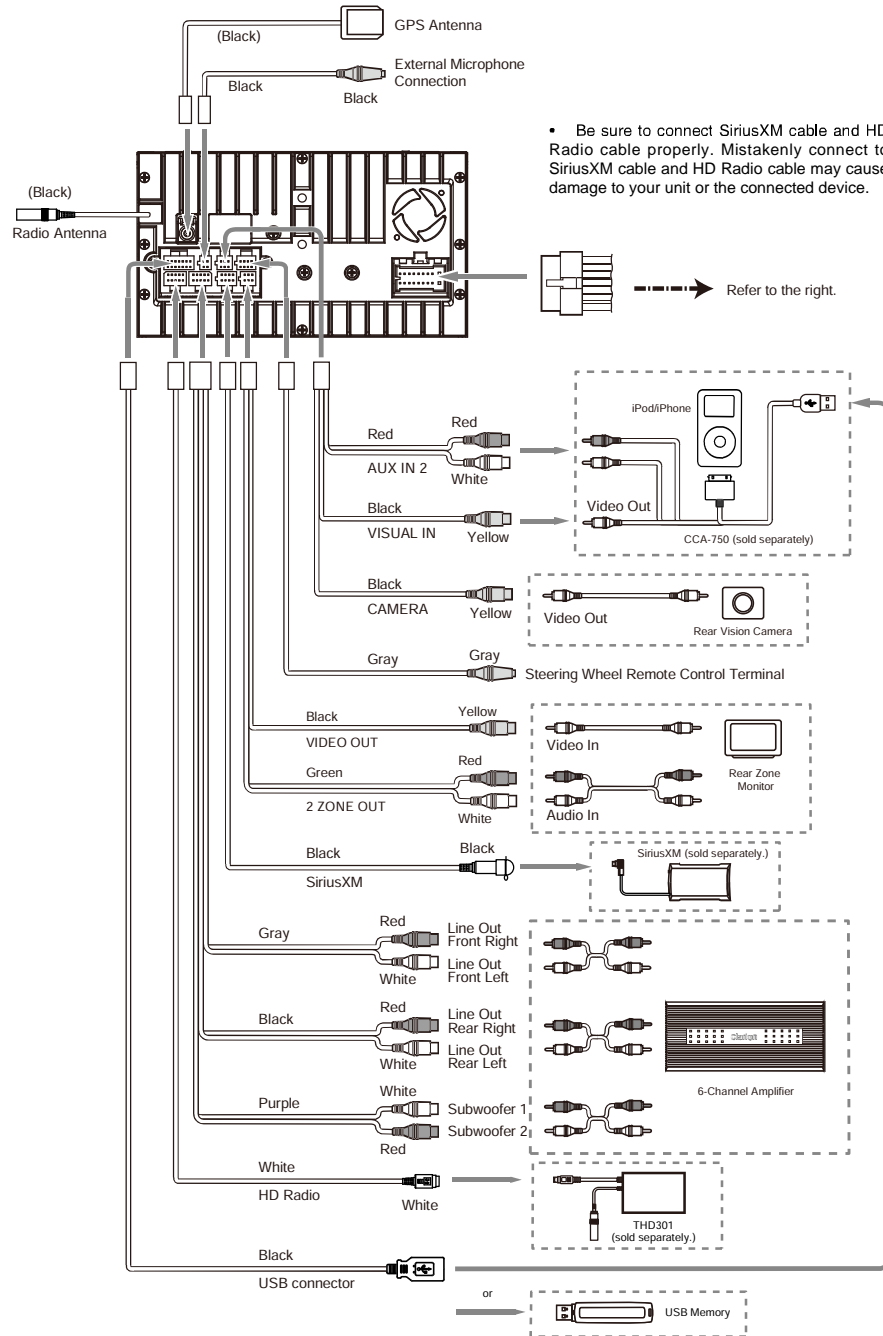

## Installation Guide

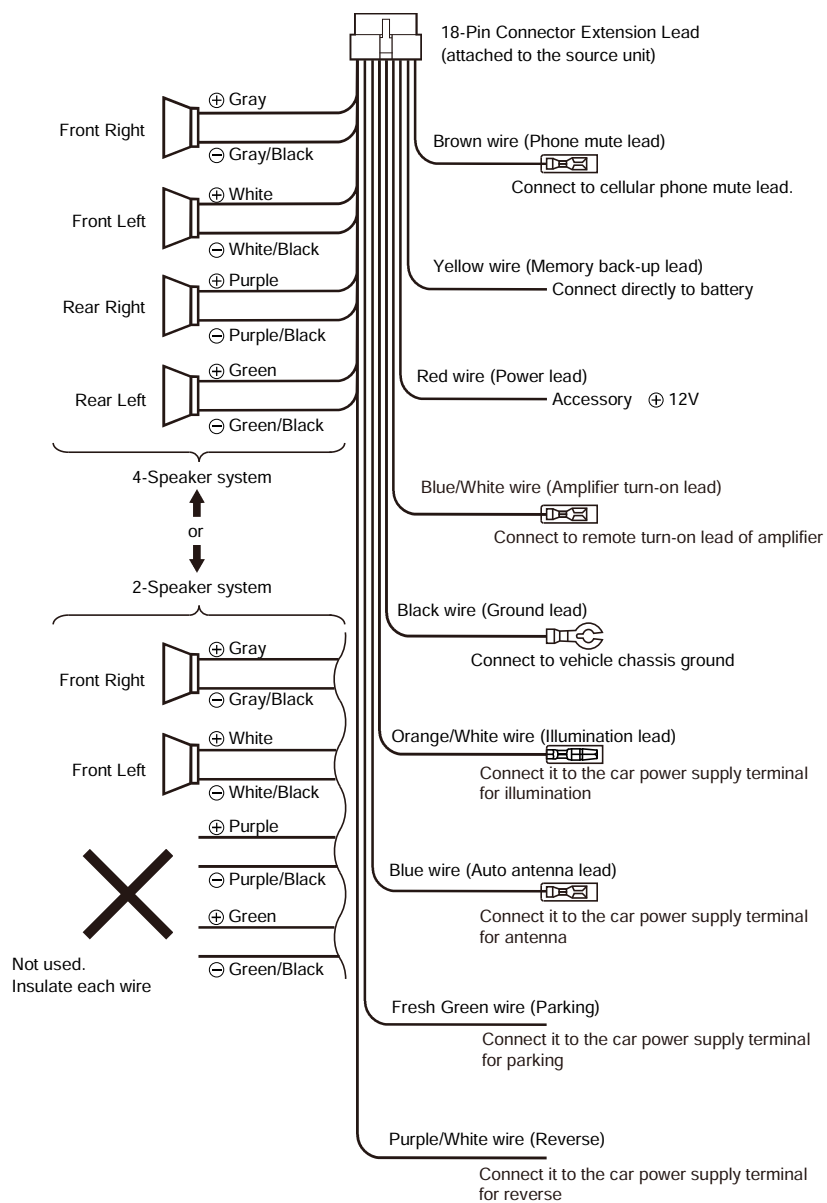



## Installation Guide

### Note:

\*1 Connect to the AUX audio input terminal and the iPod video input terminal. (Audio connection is required only when [Analog] is selected for the iPod output signal. See Owner's Manual.)

\*2 In certain vehicles - Volkswagen/Opel/Vauxhall - it is necessary to exchange the accessory <<Red>> and the main power <<Yellow>> connection, to avoid overload and loss of memory.

\*3 When the unit is installed in a 1998 or later Volkswagen model, make sure to interrupt the <<Remote>> output.


Disconnect the <<blue/white>> wire and insulate the front ends of this cord. A breakdown may occur if the cord is not disconnected, or front ends are not insulated.

### ■ Connecting the parking brake cord

Connect the cord to parking brake lamp ground in the meter panel.

#### Note:

- Connecting the parking brake cord to lamp ground allows you to watch video images when the parking brake is engaged.
- When the parking brake cord is not connected, the monitor will not display video images.

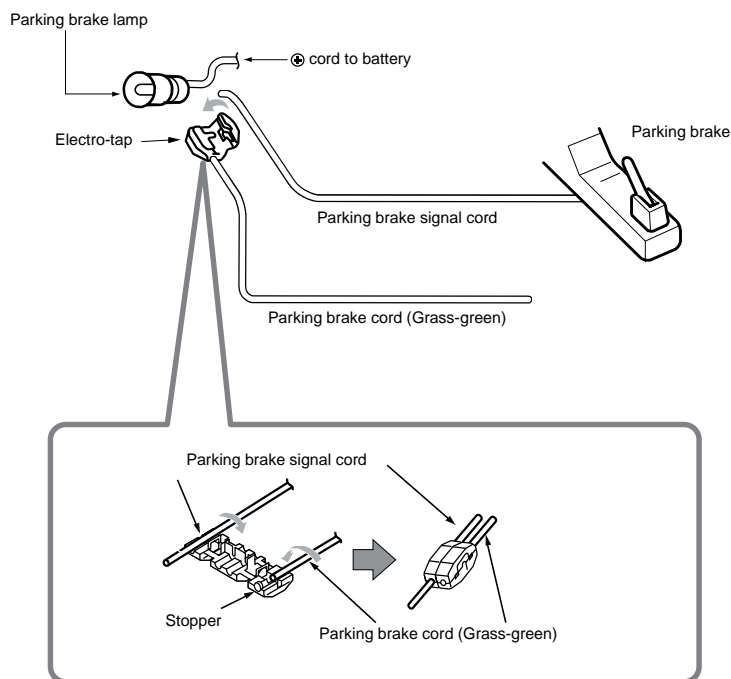

# Clarion Co., Ltd.

---

All Rights Reserved. Copyright © 2012: Clarion Co., Ltd.  
Printed in China / Imprimé en Chine / Impreso en China

PN: 127075003952