

SONY®

User guide

Xperia™ Z4 Tablet
SGP712

Contents

Getting started.....	6
About This User Guide.....	6
Overview.....	6
Assembly.....	7
Screen protection.....	8
Starting Your Device for the First Time.....	8
Why do I need a Google™ account?.....	9
Device security.....	10
Making Sure Your Device is Protected.....	10
Screen Lock.....	10
Unlocking Your Device Automatically.....	12
Finding the Identification Number of Your Device.....	15
Finding a Lost Device	16
Learning the basics.....	18
Using the touchscreen.....	18
Locking and Unlocking the Screen.....	19
Homescreen.....	19
Navigating Applications.....	21
Application screen.....	22
Small Apps.....	23
Widgets.....	24
Shortcuts and folders.....	25
Background and Themes.....	26
Taking a screenshot.....	26
Recording your screen.....	26
Notifications.....	27
Icons in the status bar.....	29
Applications Overview.....	31
Battery and Maintenance.....	33
Charging Your Device.....	33
Battery and Power Management.....	34
Updating Your Device.....	35
Maintenance Using a Computer.....	36
Storage and Memory.....	37
Backing Up and Restoring Content.....	38
Downloading applications.....	42
Downloading Applications from Google Play™.....	42
Downloading Applications from Other Sources.....	42

Internet and networks.....	43
Browsing the web.....	43
Wi-Fi.....	43
Tethering with Xperia Link™.....	45
Virtual private networks (VPNs).....	46
Synchronizing data on your device.....	47
Synchronizing with Online Accounts.....	47
Synchronizing with Microsoft® Exchange ActiveSync®.....	47
Basic settings.....	49
Accessing settings.....	49
Sound volume.....	49
Do Not Disturb Mode.....	50
Screen settings.....	51
Application settings.....	52
Resetting Your Applications.....	53
Screen Saver.....	54
Language settings.....	54
Date and time.....	55
X-Reality™ for mobile.....	55
Super-Vivid Mode.....	55
Enhancing the sound output.....	56
Noise cancellation.....	56
Multiple User Accounts.....	57
Typing text.....	59
On-Screen Keyboard.....	59
Entering text using voice input.....	60
Editing text.....	60
Personalizing the On-Screen Keyboard.....	61
Contacts.....	63
Searching and viewing contacts.....	63
Adding and editing contacts.....	63
Transferring contacts.....	64
Favorites.....	65
Sending contact information.....	65
Avoiding Duplicate Entries in the Contacts Application.....	66
Backing up Contacts.....	66
Email.....	67
Setting Up Email.....	67
Sending and Receiving Email Messages.....	67
Organizing your email messages.....	68
Email account settings.....	69
Gmail™.....	69

Music and FM Radio.....	71
Transferring Music to Your Device.....	71
Listening to Music.....	71
Music Menu.....	72
Playlists.....	73
Sharing music.....	74
Enhancing the sound.....	74
Recognizing Music with TrackID™.....	74
Listening to the Radio.....	75
Favorite radio channels.....	77
Radio Sound Settings.....	77
Camera.....	78
Taking Photos and Recording Videos.....	78
General camera settings.....	79
Still camera settings.....	83
Video camera settings.....	86
Photos and videos in Album.....	88
Viewing Photos and Videos.....	88
Sharing and Managing Photos and Videos.....	89
Editing photos with the Photo editor application.....	90
Editing videos with the Video editor application.....	90
Hiding photos and videos.....	91
Album Homescreen Menu.....	91
Viewing Your Photos on a Map.....	92
Videos.....	94
The Video Application.....	94
Transferring Video Content to Your Device.....	95
Managing video content.....	95
Movie Creator.....	95
Connectivity.....	97
Mirroring the Screen of Your Device on a TV Using a Cable.....	97
Mirroring the Screen of your Device Wirelessly.....	97
Sharing Content with DLNA Certified™ Devices.....	98
Connecting Your Device to USB Accessories.....	100
Connecting Your Device to a DUALSHOCK™ 4 Wireless Controller	100
NFC.....	100
Bluetooth® Wireless Technology.....	102
Smart apps and features that save you time.....	105
Overview of Smart Connect.....	105
Managing Accessories.....	106
Using the News Suite Application.....	106
Google Search & Now.....	106

Using your device as a wallet.....	107
Travel and maps.....	108
Using Location Services.....	108
Google Maps™ and Navigation.....	108
Airplane Mode.....	108
Clock and Calendar.....	110
Calendar.....	110
Alarm and Clock.....	111
Accessibility.....	114
Magnification Gesture.....	114
Font Size.....	114
Display Size.....	114
Color Correction.....	114
TalkBack.....	115
Mono Audio.....	115
TTY (Teletypewriter) Mode.....	115
Switch Access.....	115
Support and Legal.....	117
Support Application.....	117
Help in menus and applications.....	117
Running Diagnostic Tests on Your Device.....	117
Restarting, Resetting, and Repairing.....	117
Help us improve our software.....	119
Warranty, SAR, and Usage Guidelines.....	119
Recycling Your Device.....	119
Legal information.....	119

Getting started

About This User Guide

This is the **Xperia™ Z4 Tablet** User Guide for the **Android™ 7.0** software version. If you're not sure which software version your device is running, you can check it in the Settings menu.

- ! System and application updates can present the features in your device in another way than described in this User Guide. The Android™ version might not be affected in an update. For more information about software updates, see *Updating Your Device* on the 35 page.

To Check the Current Software Version of Your Device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **About tablet**.

To Find the Model Number and Name of Your Device

- 1 From your **Home screen**, tap .
- 2 Find and tap .


The device model number and name are displayed.


Limitations to Services and Features

Some of the services and features described in this User Guide may not be supported in all countries or regions, or by all networks or service providers. The GSM International Emergency Number can always be used in all countries, regions, networks and by all service providers, provided that the device is connected to the cellphone network. Please contact your network operator or service provider to determine the availability of any specific service or feature and whether additional access or usage fees apply.

The use of certain features and applications described in this guide may require access to the internet. You may incur data connection charges when you connect to the internet with your device. Contact your wireless service provider for more information.

Overview

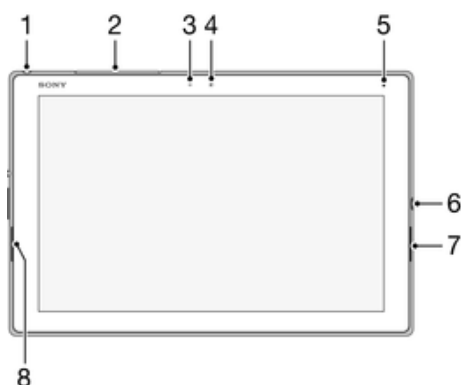

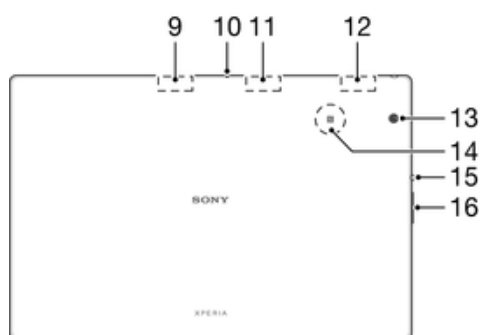


- | | |
|--|---------------------------------------|
| 1. Headset jack* | 9. GPS antenna |
| 2. Nano SIM and memory card slot cover | 10. Microphone |
| 3. Light sensor | 11. Second Wi-Fi antenna area |
| 4. Front camera lens | 12. Main Wi-Fi/Bluetooth antenna area |
| 5. Charging/Notification light | 13. Main camera |
| 6. Charger/USB port | 14. NFC™ detection area |
| 7. Speaker | 15. Power key |
| 8. Speaker | 16. Volume/Zoom key |

Assembly


A protective plastic sheet is attached to the screen. You should peel off this sheet before using the touchscreen. Otherwise, the touchscreen might not function properly.

To insert a memory card

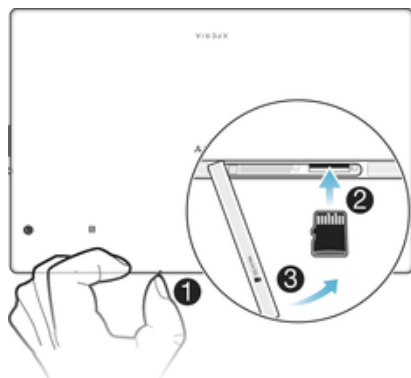

- 1 Detach the memory card slot cover.
- 2 Place the memory card in the memory card slot, then push the memory card all the way into the slot until you hear a clicking sound.
- 3 Re-attach the memory card slot cover.

To Remove the Memory Card

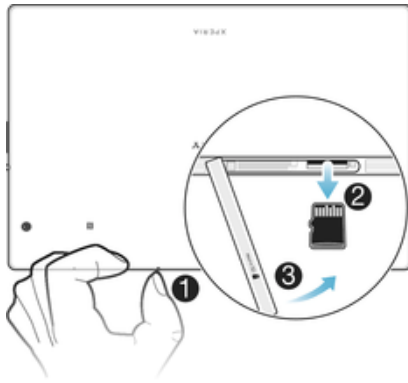

- 1 Turn off the device and detach the memory card slot cover.
- 2 Push the memory card inward, then release it quickly.
- 3 Re-attach the cover.

💡 You can also remove the memory card without turning the device off in step 1. To use this method, you must first unmount the memory card under **Settings > Storage > Unmount SD card**, then follow the rest of the instructions above.

Screen protection

- ! Before using your device, remove the transparent protection film by pulling up on the protruding tab.

It is recommended to protect your device with a Sony-branded screen cover or protector intended for your Xperia™ model. The use of third party screen protection accessories may prevent your device from working by covering sensors, lenses, speakers, or microphones and it can invalidate the warranty.


Starting Your Device for the First Time

It is recommended that you charge the battery for at least 30 minutes before starting up your device for the first time. You can still use your device while it is charging, see *Charging Your Device* on page 33.


The first time you start your device, a setup guide helps you to configure basic settings, personalize your device, and sign in to your accounts, for example a Google™ account.

To Turn on the Device



- 1 Press and hold down the power key  until the screen flashes.
- 2 Wait a while for the device to start.

To Turn off the Device

- 1 Press and hold down the power key  until the options menu opens.
- 2 In the options menu, tap **Power off**.

! It may take a while for the device to shut down.

Why do I need a Google™ account?


Your Xperia™ device from Sony runs on the Android™ platform developed by Google™. A range of Google™ applications and services is available on your device when you purchase it, for example, Gmail™, Google Maps™, YouTube™ and the Play Store™ application, which gives you access to the Google Play™ online store for downloading Android™ applications. To get the most out of these services, you need a Google™ account. For example, a Google™ account is mandatory if you want to:

- Download and install applications from Google Play™.
- Synchronize email, contacts and the calendar using Gmail™.
- Chat with friends using the Hangouts™ application.
- Synchronize your browsing history and bookmarks using the Google Chrome™ web browser.
- Identify yourself as the authorized user after a software repair using Xperia™ Companion.
- Remotely find, lock or clear a lost or stolen device using the my Xperia™ or Android™ Device Manager services.



For more information about Android™ and Google™, go to <http://support.google.com>.

- ! It is crucial that you remember your Google™ account username and password. In some situations, you may need to identify yourself for security reasons using your Google™ account. If you fail to give your Google™ username and password in such situations, your device is locked. Also, if you have more than one Google™ account, make sure to enter the details for the relevant account.

To Set Up a Google™ Account on your Device

- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings > Account sync > Add account > Google**.
 - 3 Follow the registration wizard to create a Google™ account, or sign in if you already have an account.
- 💡 You can also create a Google account using the setup guide when you first start your device, or go online later and create an account at www.google.com/accounts.

To Remove a Google™ Account

- 1 From your **Home screen**, tap .
 - 2 Tap **Settings > Accounts & sync > Google**.
 - 3 Select the Google™ account you want to remove.
 - 4 Tap  > **Remove account**.
 - 5 Tap **Remove account** again to confirm.
- ! If you remove your Google™ account, any security features that are linked to your Google™ account will no longer be available.

Device security

Making Sure Your Device is Protected

Your device includes several security options, strongly recommended in case of loss or theft.

These options are as follows:

- Set a secure screen lock on your device using a PIN, password, or pattern to prevent anyone from accessing or resetting your device.
- Add a Google™ account to prevent others from using your device if it gets stolen or wiped.
- Activate either the “Protection by my Xperia” or the Android™ Device Manager web service. Using one of these services, you can remotely locate, lock, or clear a lost device.

Verifying the Ownership of Your Device

Certain protection features require you to either unlock your screen with your PIN, password, or pattern, or enter your Google™ account information. Below are examples of protection features and some of the required credentials:

Factory Data Reset protection	You must unlock your screen before you are allowed to perform a Factory Data Reset.
Protection by my Xperia	If you remotely reset your device using this service, you must enter the username and password for a Google™ account associated with the service. The device must be connected to the internet before the setup process can be completed. Otherwise, you will not be able to use your device after the reset.
Android™ Device Manager	If you remotely reset your device using this service, you must enter the username and password for a Google™ account. The device must be connected to the internet before the setup process can be completed. Otherwise, you will not be able to use your device after the reset.
Software repair	If you use the Xperia™ Companion software to perform a software repair, you're asked to enter your Google™ account username and password when you start the device after the repair is complete.

- ! For Android™ Device Manager, it is necessary to enter information from a Google™ account. This can be any Google™ account which you have set up on the device as an owner. If you cannot provide the relevant account information during a setup process, you won't be able to use the device at all.

Screen Lock

- ! Fingerprint functionality is not available in the US market.

There are several screen lock options available. The security level of each lock type is listed below in order of weakest to strongest:

- **Swipe**
 - no protection, but you have quick access to the Homescreen.
- **Pattern**
 - draw a simple pattern with your finger to unlock your device.
- **PIN**
 - enter a numeric PIN of at least four digits to unlock your device.
- **Password**
 - enter an alpha-numeric password to unlock your device.

It is very important that you remember your screen unlock pattern, PIN, or password. If you forget this information, it may not be possible to restore important data, such as

contacts and messages. If you have set up a Microsoft® Exchange ActiveSync® (EAS) account on your Xperia™ device, the EAS security settings may limit the lockscreen type to only a PIN or password. This occurs when your network administrator specifies a lockscreen type for all EAS accounts for enterprise security reasons. Contact the network administrator of your company or organization to check what network security policies are implemented for cellular devices. Fingerprint functionality is not available in the United States.

💡 For more settings for each screen lock type, tap ⚙️ beside **Screen lock**.

To Create a Screen Lock Pattern

- 1 From your **Home screen**, tap ⋮.
 - 2 Find and tap **Settings** > **Lock screen & security** > **Screen lock** > **Pattern**.
 - 3 Follow the instructions on your device.
- ! If you enter an incorrect lock pattern five times in a row, you must wait 30 seconds before trying again.

To Change Your Screen Lock Type

- 1 From your **Home screen**, tap ⋮.
- 2 Find and tap **Settings** > **Lock screen & security** > **Screen lock**.
- 3 Follow the instructions on your device.

To Change the Screen Lock Pattern

- 1 From your **Home screen**, tap ⋮.
- 2 Find and tap **Settings** > **Lock screen & security** > **Screen lock**.
- 3 Draw your screen unlock pattern.
- 4 Tap **Pattern** and follow the instructions on your device.

To Create a Screen Lock PIN

- 1 From your **Home screen**, tap ⋮.
- 2 Find and tap **Settings** > **Lock screen & security** > **Screen lock** > **PIN**.
- 3 Enter a numeric PIN, and then tap **Continue**.
- 4 Re-enter and confirm your PIN, then tap **OK**.

To Create a Screen Lock Password

- 1 From your **Home screen**, tap ⋮.
- 2 Find and tap **Settings** > **Lock screen & security** > **Screen lock** > **Password**.
- 3 Follow the instructions on your device.

To Activate the Swipe Unlock Function

- 1 From your **Home screen**, tap ⋮.
- 2 Find and tap **Settings** > **Lock screen & security** > **Screen lock**.
- 3 Draw your screen unlock pattern, or enter your PIN or password depending on which of these screen lock types is enabled.
- 4 Tap **Swipe**, then tap **YES, REMOVE**.

Resetting a Forgotten Screen Lock

If you forgot your screen lock PIN, password, or pattern, you may be able to reset it using the Protection by my Xperia service. No content on your device is lost after you have performed a screen lock reset using this service.


To Reset the Screen Lock Using Protection by My Xperia

- 1 Make sure you know your Google™ account username and password and that you have enabled the Protection by my Xperia service on your device.
 - 2 Go to myxperia.sonymobile.com using any internet-connected device.
 - 3 Sign in using the same Google™ account you have set up on your device.
 - 4 Click the picture of your device under **Your devices**.
 - 5 Select **Protect** or **Change PIN** to replace the current screen lock with a new PIN code.
 - 6 Follow the on-screen instructions provided by Protection by my Xperia.
- ! Depending on your security settings, your device may lock after a screen lock reset. You then need to enter your Google™ account username and password in order to use the device.

Unlocking Your Device Automatically

- ! The Smart Lock feature may not be available in every market, country, or region.
- The Smart Lock feature makes unlocking your device easier by letting you set it to unlock automatically in certain situations. You can keep your device unlocked, for example, when it's connected to a Bluetooth® device or when you're carrying it with you.
- You can set Smart Lock to keep your device unlocked using the following settings:
- **Trusted face:** Unlock your device by looking at it.
 - **Trusted voice:** Set up voice recognition to search in any screen.
 - **Trusted devices:** Keep your device unlocked when a trusted Bluetooth® or NFC device is connected.
 - **Trusted places:** Keep your device unlocked when you're in a trusted location.
 - **On-body detection:** Keep your device unlocked when you're carrying your device with you.
- You have to manually unlock your device if you don't use it for 4 hours and after you restart it.
- ! The Smart Lock feature is developed by Google™ and the exact functionality may change over time due to updates from Google™.

To Enable Smart Lock

- 1 Set a pattern, PIN, or password as a screen lock if you have not already done so.
- 2 From your **Home screen**, tap .
- 3 Find and tap **Settings > Lock screen & security > Trust agents**.
- 4 Tap the **Smart Lock (Google)** slider to enable the function.
- 5 Tap the back arrow next to **Trust agents**.
- 6 Find and tap **Smart Lock**.
- 7 Enter your pattern, PIN, or password. You need to enter these credentials whenever you want to change your Smart Lock settings.
- 8 Select a Smart Lock type.

To Set Up Trusted Face

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Lock screen & security > Smart Lock > Trusted face**.
- 3 Tap **SET UP > NEXT**, follow the instructions on your device.

To Set Up Trusted Voice

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Lock screen & security > Smart Lock > Trusted voice**.
- 3 Follow the instruction on your device.

Keeping Your Device Unlocked while You're Carrying It


Using the On-body detection feature, you can keep your device unlocked while you're carrying it in your hand or in a pocket or bag. The accelerometer in your device keeps

your device unlocked while it senses that it's being carried. The device locks when the accelerometer detects that the device has been put down.

When you use the On-body detection feature, you need to be aware of the following behaviors:

- Any time you put your device down and it senses that it's no longer being carried, it locks automatically.
 - The device can take up to one minute to lock.
 - After you get into a car, bus, train, or other land vehicle, your device can take between 5 and 10 minutes to lock.
 - Note that when you get on an airplane or a boat (or another non-land-based vehicle), your device may not lock automatically, so be sure to lock it manually if needed.
 - When you pick up your device again or get out of the vehicle, just unlock it once and your device then stays unlocked for as long as you have it on you.
- ! The On-body detection feature can't distinguish whose body is connected. If you give your device to someone else while it's unlocked using On-body detection, your device may stay unlocked for the other user. Keep in mind that On-body detection as a security feature is less secure than a pattern, PIN, or password.

To Enable or Disable On-Body Detection

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Lock screen & security > Smart Lock > On-body detection**.
- 3 Tap the slider to enable the function, then tap **CONTINUE**. To disable the function, tap the slider beside **On**.

Connecting to Trusted Devices

You can designate a connected device as trusted and keep your Xperia™ device unlocked while connected. If you have a device that you connect to regularly using Bluetooth® or NFC, for example, a home entertainment system or a fitness tracker, you can add it as a trusted device and bypass the added security of the lockscreen to save time. This feature is suitable if you're normally in a relatively secure place when you use these devices. In some cases, you may still need to manually unlock your device before a trusted device can be connected.

- ! It is not recommended to add devices that are constantly connected to your device as trusted devices, such as Bluetooth® keyboards or cases.
- 💡 As soon as a trusted device is switched off or moves out of range, your screen locks and you need your PIN, pattern or password to unlock it.

To Add a Trusted Bluetooth® Device

- 1 Make sure your device is paired and connected to the Bluetooth® device that you want to add as a trusted device.
- 2 Find and tap **Settings > Lock screen & security > Smart Lock**.
- 3 In the Smart Lock menu tap **Trusted devices > ADD TRUSTED DEVICE > Bluetooth**
- 4 Tap a device name to select it from the list of connected and paired devices, then tap **YES, ADD**
- 5 Depending on the security of your connection, you may need to manually unlock your device before the trusted device can keep it unlocked.

To Remove a Trusted Bluetooth® Device

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Lock screen & security > Smart Lock > Trusted devices**.
- 3 Tap the device you want to remove.
- 4 Tap **Remove trusted device**.

To Add a Trusted NFC Device

- 1 Make sure your device is paired and connected to the Bluetooth® device that you want to add as a trusted device.
- 2 Find and tap **Settings** > **Lock screen & security** > **Smart Lock**.
- 3 Tap **Trusted devices** > **ADD TRUSTED DEVICE** > **NFC**.
- 4 Follow the on-screen instructions.

Making Sure You're Secure when Using Trusted Devices

Different Bluetooth® devices support different Bluetooth® standards and security capabilities. There's a chance someone could keep your Xperia™ device unlocked by imitating your Bluetooth® connection, even if your trusted device is no longer nearby. Your device is not always able to determine whether your connection is secure from someone trying to imitate it.

When your device can't determine whether you're using a secure connection, you'll get a notification on your Xperia™ device and may need to manually unlock it before the trusted device can keep it unlocked.

- 💡 Bluetooth® connectivity range can vary depending on factors like the model of your device, the connected Bluetooth® device, and your environment. Depending on these factors, Bluetooth® connections can work over distances up to 100 meters.



Connecting to Trusted Places

When the Trusted places feature is set up, the lockscreen security on your Xperia™ device gets disabled when you are in a designated trusted location. For this feature to work, you must have an internet connection (preferably over Wi-Fi) and allow your device to use your current location.



To set up trusted places, first make sure high-accuracy location mode or battery-saving location mode is enabled on your device before you add home or custom locations.

- ! The exact dimensions of a trusted location are an estimate and may extend beyond the physical walls of your home or other areas you have added as trusted locations. This feature can keep your device unlocked within a radius of up to 80 meters. Also be aware that location signals can be replicated or manipulated. Someone with access to specialized equipment could unlock your device.

To Add Your Home Location

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Location**, then tap the slider to enable location services.
- 3 Tap **Mode**, then choose **High accuracy** or **Battery saving** Location mode.
- 4 From your **Home screen**, tap .
- 5 Find and tap **Settings** > **Lock screen & security** > **Smart Lock** > **Trusted places** > **Home**.
- 6 To enter the desired location type the address in the search bar. Your device searches for the entered location.

To Edit Your Home Location

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings** > **Location**, then tap the slider to enable location services.
 - 3 Tap **Mode**, then choose **High accuracy** or **Battery saving** Location mode.
 - 4 From your **Home screen**, tap .
 - 5 Find and tap **Settings** > **Lock screen & security** > **Smart Lock** > **Trusted places**.
 - 6 Select your home location.
 - 7 Tap **Edit**.
 - 8 In the search bar, enter the location that you want to use as your home location.
- 💡 If other residences share your street address, you can add the actual location of your home within the building complex as a custom place.



 
To Remove Your Home Location

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Lock screen & security > Smart Lock > Trusted places > Home**.
- 3 Tap **Edit** > .



 
Using Custom Locations

You can add any location as a trusted, custom place where your device can remain unlocked.



To Add a Custom Place

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Location**, then tap the slider to enable location services.
- 3 Tap **Mode**, then choose **High accuracy** or **Battery saving** Location mode.
- 4 From your **Home screen**, tap .
- 5 Find and tap **Settings > Lock screen & security > Smart Lock > Trusted places**.
- 6 Tap **Add trusted place**.
- 7 To use your current location as a custom place, tap **Select this location**.
- 8 Alternately, to enter another location, tap the  and type the address. Your device searches for the entered location. To use the suggested address, tap the address.
- 9 To fine-tune the location, tap the back arrow next to the address, drag the location pin to the desired location, and then tap **Select this location**.

To Edit a Custom Place

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Location**, then tap the slider to enable location services.
- 3 Tap **Mode**, then choose **High accuracy** or **Battery saving** Location mode.
- 4 From your **Home screen**, tap .
- 5 Find and tap **Settings > Lock screen & security > Smart Lock > Trusted places**.
- 6 Select the place that you want to edit.
- 7 Tap **Edit Address**.
- 8 To enter another location, tap the  and type the address. Your device searches for the entered location. To use the suggested address, tap the address.
- 9 To fine-tune the location, tap the back arrow next to the address, then drag the location pin to the desired location, then tap **Select this location**.


To Remove a Custom Place

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Location**, then tap the slider to enable location services.
- 3 Tap **Mode**, then choose **High accuracy** or **Battery saving** Location mode.
- 4 From your **Home screen**, tap .
- 5 Find and tap **Settings > Lock screen & security > Smart Lock > Trusted places**.
- 6 Select the place you want to remove.
- 7 Tap **Delete**.

Finding the Identification Number of Your Device

Your device has a unique identification number. You should keep a copy of this number. You may require it, for example, when you access the Xperia™ Care support service to register your device.

To View Your IMEI Number on the Label Strip

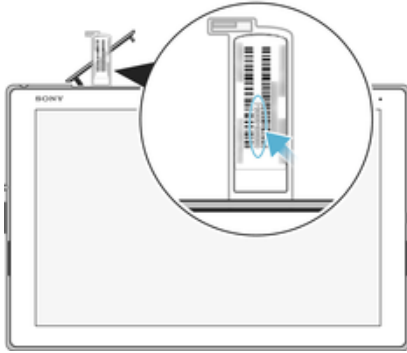

- 1 Open the cover for the memory card slot.
- 2 Remove the memory card tray. Place a fingernail or other object with a long, fine tip under the edge of the label strip, then drag the strip outward. The IMEI number is displayed on the strip.

💡 You can also view the IMEI number by opening the phone dialer and entering ***#06#**.

To View Your IMEI Number via the Device Settings

- 1 From your **Home screen**, tap **⋮**.
- 2 Find and tap **Settings > About tablet > Status > IMEI information**.


Finding a Lost Device



If you have a Google™ account, the “Protection by my Xperia” web service can help you locate and secure your device if you ever lose it. If you have activated this service on your device, you can:

- Locate your device on a map.
 - Sound an alert even if the device is in Do not disturb mode.
 - Remotely lock the device and make the device display your contact details to anyone who finds it.
 - Remotely clear the internal and external memory of the device as a last resort.
- ! If you’ve cleared the internal memory of the device using the “Protection by my Xperia” web service, you must sign in to a Google™ account that was previously synced on this device the next time you turn on the device.
- ! The “Protection by my Xperia” service may not be available in all countries or regions.

To Deactivate Protection by My Xperia

- 1 Make sure you have an active data connection, and enable location services on your device.
 - 2 From your **Home screen**, tap .
 - 3 Find and tap **Settings > Lock screen & security > Protection by my Xperia > ACTIVATE**.
 - 4 Mark the checkbox to agree to the terms and conditions of the service, then tap **ACCEPT**.
 - 5 If prompted, sign in to your Google™ account, or create a new account if you don't already have one.
 - 6 To verify that Protection by my Xperia can locate your device, go to myxperia.sonymobile.com and sign in using the Google™ account you are using on your device.
- ! If you are sharing a device with multiple users, note that the Protection by my Xperia service is only available to the user who is logged in as the owner.

Finding a Lost Device Using Android™ Device Manager


Google™ offers a location and security web service called Android™ Device Manager. You can use it in parallel with, or as an alternative to, the Protection by my Xperia service. If you lose your device, you can use Android™ Device Manager to:

- Find and show where your device is located.
- Ring or lock your device, erase everything on it, or add a phone number to the lockscreen.

For additional information about Android™ Device Manager, go to www.support.google.com.

- ! Android™ Device Manager does not work if your device is turned off or if it does not have a connection to the internet. The Android™ Device Manager service may not be available in all countries or regions.

To Activate Android™ Device Manager

- 1 If you are sharing a device with multiple users, make sure you are logged in as the owner.
 - 2 Make sure you have an active data connection and location services are enabled.
 - 3 From your **Home screen**, tap .
 - 4 Find and tap **Settings > Google > Security**.
 - 5 Tap the sliders beside **Remotely locate this device** and **Allow remote lock and erase** to enable both functions.
 - 6 If prompted, agree to the terms and conditions by tapping **Activate this device administrator**.
 - 7 To verify that Android™ Device Manager can locate your device after you activate the service, go to www.android.com/devicemanager and sign in using your Google™ account.
- 💡 You can also activate Android™ Device Manager from **Lock screen & security** under Device administrators.

Learning the basics


Using the touchscreen

Tapping




- Open or select an item.
- Mark or unmark a checkbox or option.
- Enter text using the on-screen keyboard.

Touching and holding

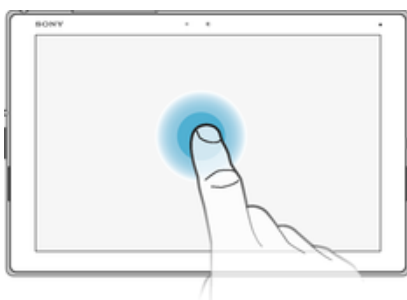


- Move an item.
- Activate an item-specific menu.
- Activate selection mode, for example, to select several items from a list.

Pinching and spreading

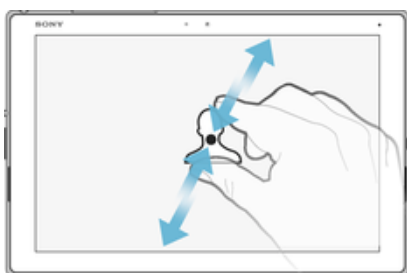


- Zoom in or out on web pages, photos, and maps, and when you're taking photos or shooting videos.

Swiping

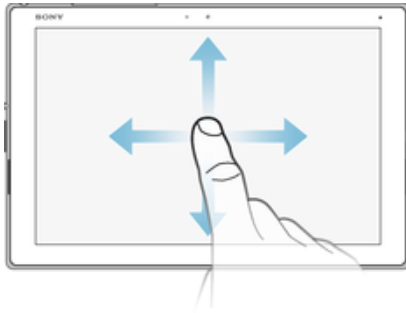

- Scroll up or down a list.
- Scroll left or right, for example, between Home screen panes.

Flicking

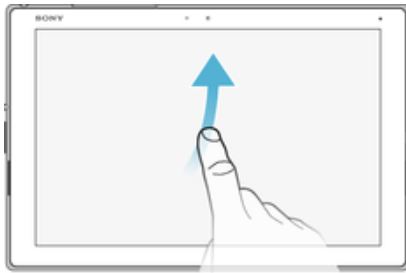


- Scroll quickly, for example, in a list or on a web page. You can stop the scrolling movement by tapping the screen.

Locking and Unlocking the Screen


When your device is on and left idle for a set period of time, the screen darkens to save battery power and locks automatically. This lock prevents unwanted actions on the touchscreen when you are not using it. When you buy your device, a basic screen swipe lock is already set. This means you have to swipe upward on the screen to unlock it. You can change the security settings later and add other kinds of locks. See *Screen Lock* on the 10 page.



To activate the screen

- Briefly press the power key .

To lock the screen

- When the screen is active, briefly press the power key .

Homescreen

The Homescreen is the starting point for using your device. It's similar to the desktop on a computer screen. Your Homescreen can have up to twenty panes, which extend beyond the regular screen display width. The number of Homescreen panes is represented by a series of dots on the lower part of the Homescreen. The highlighted dot shows the pane that is currently displayed.



To go to the Home screen

- Press .

To browse the Home screen




Homescreen Panes


You can add new panes to your Homescreen (up to a maximum of twenty panes) and delete panes. You can also set the pane that you want to use as the main Homescreen pane.




To Set a Pane as the Main Homescreen Pane

- 1 Touch and hold any area on your Homescreen.
 - 2 Flick left or right to browse to the pane you want to set as your main Homescreen pane, then tap  in the upper-left corner of the screen.
- ! When Google Search & Now is enabled, the left-most pane is reserved for this service and the main Homescreen pane cannot be changed. For more information, see *Google Search & Now* on page 106.

To Add a Pane to Your Homescreen

- 1 Touch and hold any area on your Homescreen until the device vibrates.
 - 2 Flick the panes all the way to the right or left, then tap .
- ! When Google Search & Now is enabled, the left-most pane is reserved for this service and additional panes cannot be added to the left. For more information, see *Google Search & Now* on page 106.

To Delete a Pane from your Homescreen


- 1 Touch and hold any area on your Homescreen until the device vibrates.
- 2 Flick left or right to browse to the pane you want to delete, then tap  in the top-right corner of the pane.

Homescreen Settings

You can use the **Settings** shortcut to adjust some basic Homescreen settings. For example, you can adjust the size of icons on your Homescreen.

To Disable or Uninstall an Application from the Homescreen


- ! Disabling a pre-installed app deletes all data, but the app can be enabled again from **Settings** > **Apps**. Only downloaded apps can be fully uninstalled.

- 1 Touch and hold any area on your Homescreen until the device vibrates.
- 2 Flick left or right to browse the panes. All applications that can be disabled or uninstalled are indicated by .
- 3 Tap the relevant application, then tap **DISABLE** if the app came pre-installed on your device or **OK** if the app was downloaded and you would like to uninstall it.

To Adjust the Size of Icons on your Homescreen

- 1 Touch and hold an empty area on your Homescreen until the device vibrates, and then tap **Settings**.
- 2 Tap **Icon size**, and then select an option.

Navigating Applications

You can navigate between applications using the navigation keys and the recently used applications window, which lets you switch easily between all recently used applications. The navigation keys are the Back key, the Home key, and the Recent apps key. You can also pop open two applications on the screen at once using the split screen mode, if the application supports multi-window function. Some applications get closed when you press the Home key  to exit while others are paused or continue to run in the background. If an application is paused or running in the background, you can continue where you left off the next time you open the application.



- 1 Small apps – Open small apps window
- 2 Clear all – Close all the recently used applications
- 3 Recently used applications window – Open a recently used application
- 4 Recent apps key – Open the recently used applications window
- 5 Home key – Exit an application and go back to the Homescreen
- 6 Back key - Go back to the previous screen within an application or close the application

To open the recently used applications window

- Press .


To Quickly Switch Between Recently Used Applications

- Quickly press  twice.

To Close All the Recently Used Applications

- Tap  and then tap **CLEAR ALL**.

To Open a Menu in an Application

- While using the application, tap .
- ! Menus are not available in all applications.

Split Screen Mode



Split screen mode enables you to view two applications at once, for example, if you want to view your email inbox and a web browser at the same time.



- 1 Application 1
- 2 Split screen border – Drag to resize windows
- 3 Application 2
- 4 Split screen key – Select a recently used application
- 5 Home key – Go back to the Homescreen
- 6 Back key – Go back to the previous screen within an application or close the application


! Not all applications support Split Screen mode.

To Use Split-Screen Mode


- 1 Make sure that the two applications that you want to use in Split Screen mode are open and running in the background.
- 2 Open the application you would like to use in Split Screen mode, then tap and hold . The application will be assigned to the first part of the split screen.
- 3 Select the second desired application from the thumbnail list.
- 4 If you want to resize the split screen windows, drag the split screen border in the center.
- 5 To exit Split Screen mode, tap and hold  while the split screen windows are displayed.

Application screen

The Application screen, which you open from the Homescreen, contains the applications that come pre-installed on your device as well as applications that you download.

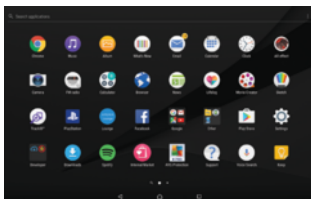


To view all applications on the Application screen

- 1 From your Home screen, tap .
- 2 Flick left or right on the Application screen.

To Enable or Disable the Recommended Apps Listings

The first time you access the application screen, you get the option to enable or disable recommended apps listings. You can also enable or disable this feature later by following the steps below:

- 1 Touch and hold any area on your Homescreen until the device vibrates, then tap .
- 2 Tap the **App recommendations** slider.


To Open an Application from the Application Screen

- When the Application screen is open, flick left or right to find the application, and then tap the application.

To Search for an Application from the Application Screen

- 1 When the Application screen is open, tap **Search applications** or simply swipe down on the Application screen or Homescreen.
- 2 Enter the name of the application you want to search for.


To Arrange Applications on the Application Screen

- 1 When the Application screen is open, tap .
- 2 Tap **Sort apps**, then select an option.


To Add an Application Shortcut to the Homescreen

- 1 On the Application screen, touch and hold an application icon until the device vibrates, and then drag the icon to the top of the screen. The Homescreen opens.
- 2 Drag the icon to the desired location on the Homescreen, then release it.

To Move an Application on the Application Screen

- 1 When the Application screen is open, tap .
- 2 Make sure **Own order** is selected under **Sort apps**.
- 3 Touch and hold the application until the device vibrates, and then drag it to the new location.

To Disable or Uninstall an Application from the Application Screen


- ! Disabling a pre-installed app deletes all data, but the app can be enabled again from **Settings** > **Apps**. Only downloaded apps can be fully uninstalled.
- 1 Touch and hold any area on the Application screen until the device vibrates. All applications that can be disabled or uninstalled are then indicated by .
 - 2 Tap the relevant application, then tap **DISABLE** if the app came pre-installed on your device or **OK** if the app was downloaded and you would like to uninstall it.

Small Apps

Small apps are miniature apps that can run on top of other applications on the same screen to enable multi-tasking. For example, you can have a web page open showing details of currency exchange rates and then open the Calculator small app on top of it and perform calculations. You can open the small apps window from the Recently Used Applications screen. To download more small apps, go to Google Play™.




To Open a Small App

 


- 1 To open the recently used applications screen, tap .
- 2 Tap **SMALL APPS**.
- 3 Tap the small app you want to open.

- 💡 You can open several small apps at the same time.

To Close a Small App

- Tap  on the small app window.

To Download a Small App

- 1 To open the recently used applications screen, tap .
- 2 Tap **SMALL APPS**.
- 3 Tap .
- 4 Tap .
- 5 Search for the small app you want to download, then follow the instructions to download it and complete the installation.

To move a small app



- When the small app is open, touch and hold the top left corner of the small app, then move it to the desired location.

To Minimize a Small App




- When the small app is open, touch and hold the top left corner of the small app, then drag it to the right edge or to the bottom of the screen.

- 💡 Some small apps can be minimized by tapping the  icon.




To Remove a Small App

- 1 Tap .
- 2 Find and tap **SMALL APPS**.
- 3 Tap .
- 4 Tap **Uninstall small app**, then choose the small app you want to remove.
- 5 Tap **OK**.

To Add a Widget as a Small App




- 1 To open the recently used applications screen, tap .
- 2 Tap **SMALL APPS**, then tap .
- 3 Tap .
- 4 Select a widget.
- 5 Enter a name for the widget, if desired, then tap **OK**.

To Rename a Widget

- 1 To open the recently used applications screen, tap .
- 2 Tap **SMALL APPS**.
- 3 Tap .
- 4 Tap **Rename widget**, then select the widget you want to rename.
- 5 Enter the name, then tap **OK**.
- 6 Tap .

- 💡 Not all widgets can be renamed.

To Delete a Widget

- 1 To open the recently used applications screen, tap .
- 2 Tap **SMALL APPS**.
- 3 Tap .
- 4 Tap **Delete widget**.
- 5 Select the icon of the widget you want to delete, then tap **OK**.
- 6 Tap .

- 💡 Not all widgets can be deleted.

Widgets

Widgets are small applications that you can use directly on your Homescreen. They also function as shortcuts. For example, the Weather widget allows you to see basic weather information directly on your Homescreen. But when you tap the widget, the full Weather application opens. You can download additional widgets from Google Play™.



To Add a Widget to the Homescreen

- 1 Touch and hold any empty area on your **Home screen**, then tap **Widgets**.
- 2 Find and tap the widget you want to add.

To Resize a Widget

- 1 Touch and hold a widget until the device vibrates, and then release it. If the widget can be resized, for example, the Calendar widget, then a highlighted frame and resizing dots appear.
- 2 Drag the dots inward or outward to shrink or expand the widget.
- 3 To confirm the new size of the widget, tap anywhere on the **Home screen**.

To Move a Widget

- Touch and hold the widget until the device vibrates, and then drag it to the new location.


To Remove a Widget

- Touch and hold the widget until the device vibrates, and then drag it to **Remove from home screen**.

Shortcuts and folders

Use shortcuts and folders to manage your applications and keep your Home screen tidy.

Shortcuts and Folders Overview

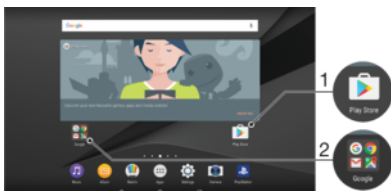

- 1 Access an application by using a shortcut
- 2 Access a folder containing applications

To Add an Application Shortcut to Your Homescreen

- 1 Touch and hold an empty area on your **Home screen**.
- 2 In the customization menu, tap **Widgets** > **Shortcuts**.
- 3 Scroll through the list and select an application. The selected application gets added to the **Home screen**.

To Move an Item on the Homescreen

- Touch and hold the item until the device vibrates, and then drag the item to the new location.

To Remove an Item from the Homescreen

- Touch and hold the item until the device vibrates, and then drag the item to **Remove from home screen** at the top of the screen.

To Create a Folder on the Homescreen

- Touch and hold an application icon or a shortcut until the device vibrates, and then drag and drop it on top of another application icon or shortcut.

To Add Items to a Folder on the Homescreen

- Touch and hold an item until the device vibrates, and then drag the item to the folder.

To rename a folder on the Home screen

- 1 Tap the folder to open it.
- 2 Tap the folder's title bar to show the **Folder name** field.
- 3 Enter the new folder name and tap **Done**.

Background and Themes

You can adapt the Homescreen to your own style using wallpapers and themes.

To Change Your Homescreen Wallpaper

- 1 Touch and hold any empty area on your **Home screen**.
 - 2 Tap **Wallpapers** and select an option.
- 💡 You can also change your Lockscreen wallpaper or set the same image for both your Homescreen and Lockscreen. Follow the steps above, then tap **Album**. Tap the desired image and choose an option.

 
To Set a Theme

- 1 Touch and hold an empty area on your **Home screen**.
 - 2 Tap **Themes**.
 - 3 Choose an option:
 - To use an existing theme, select the theme, then tap **APPLY THEME**.
 - To download a new theme, tap **GET MORE THEMES**.
- ! When you change a theme, the background also changes in some applications.

Taking a screenshot

You can capture still images of any screen on your device as a screenshot. Screenshots you take are automatically saved in Album.

To Take a Screenshot

- 1 Press and hold down the power key until a prompt window appears.
 - 2 Tap .
- 💡 You can also take a screenshot by pressing and holding the power key and volume down key at the same time.

To View Your Screenshot

- 1 Double-tap the status bar to display the Notification panel.
 - 2 Tap the screenshot.
- 💡 You can also view your screenshots in the Album application.

Recording your screen




You can use the screen recording feature to capture videos of what's happening on your device's screen. This feature is useful, for example, when you want to create tutorials or record videos of you playing a game on your device. Recorded video clips are automatically saved in Album.

Record Screen Window Overview







- 1 Minimize/restore the screen recording window
- 2 Record your screen
- 3 Record your screen when the front camera is activated
- 4 Record your screen with/without audio
- 5 Access screen recording settings
- 6 Close the screen recording window

To record your screen

- 1 Press and hold down the power key until a prompt window appears.
- 2 Tap .
- 3 After the screen recording window opens, tap . The record screen function starts and a timer button is displayed.
- 4 To stop the recording, tap the timer button, then tap .

To record your screen when the front camera is activated

- 1 When the screen recording window opens, tap . A window opens showing a viewfinder for the front camera.
- 2 To start recording your screen and video captured by the front camera, tap .
- 3 To stop recording, tap the timer button, then tap .
- 4 To close the front camera viewfinder window, tap .

To View Recent Screen Recordings

- 1 Double-tap the status bar to display the Notification panel.
 - 2 Tap the screen recording.
- 💡 You can also view your screen recordings in the Album application.

Notifications

Notifications inform you of events such as new messages and calendar notifications as well as activities in progress, such as file downloads. Notifications appear in the following places:


- The status bar
- The Notification panel
- The lockscreen

To Open or Close the Notification Panel



- 1 To open the Notification panel, drag the status bar downward, or simply double-tap it.
 - 2 To close the Notification panel, drag or flick the panel upward.
- 💡 After opening the Notification panel, you can access the Quick Settings panel by dragging the status bar down again.

To Take Action on a Notification in the Notification Panel

- Tap the notification.
- ! You can directly reply to chat or email messages in the Notification panel. To change settings for notifications, simply swipe left or right on the notification, then tap .

To Dismiss a Notification from the Notification Panel

- Swipe the notification left or right.
- ! Not all notifications can be dismissed.

To Expand a Notification on the Notification Panel

- Simply tap to expand and view more information about the notification without opening the app.
- ! Not all notifications are expandable.

To Clear All Notifications from the Notification Panel

- Tap **CLEAR ALL**.

To Take Action on a Notification from the Lockscreen

- Double-tap the notification.

To Dismiss a Notification from the Lockscreen

- Swipe the notification left or right.



To Expand a Notification on the Lockscreen

- Drag the notification downward.
- ! Not all notifications are expandable.

Managing Notifications on the Lockscreen

Show all notification content	Get all notifications on the lockscreen. When you have this setting turned on, keep in mind that all content (including the content of incoming email and chat messages) will be visible on your lockscreen unless you designate the relevant apps as Hide sensitive content in the App notifications settings menu.
Hide sensitive notification content	You must have a PIN, password, or pattern set up as your screen lock in order for this setting to be available. Contents hidden is displayed on the lockscreen when sensitive notifications arrive. For example, you'll get a notification for an incoming email or chat, but the content won't be visible on your lockscreen.
Don't show notifications at all	You won't get any notifications on the lockscreen.


To Select the Notifications to Display on the Lockscreen

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings > Notifications**.
 - 3 Tap , and then tap **On the lock screen**.
 - 4 Select an option.
- 💡 You can keep notifications on the lockscreen until you swipe to dismiss them. To enable this feature, tap the **Keep notifications on lock screen** slider.

Setting the Notification Level for an App

Block all	Never receive notifications from the selected app.
Sounds and vibrations off	Receive notifications but without sound, vibration, or peeking into view.
Interrupts Priority only	Receive notifications from this app even when Do not disturb is set to Priority only.

To Set the Notification Level for an App

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Notifications**.
- 3 Select the desired app.
- 4 Tap the sliders to adjust notification settings as desired.

Notification Light

The notification light informs you about battery status and some other events. The notification light is enabled by default but can be disabled manually.










- ! When the notification light is disabled, it only lights up when there is a battery status warning, such as when the battery level falls below 15 percent.







To Enable or Disable the Notification Light

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Notifications** > .
- 3 Tap the slider beside **Notification light** to enable or disable the function.

Icons in the status bar


Status icons

	A Wi-Fi connection is enabled and data is being transmitted
	A Wi-Fi connection is enabled but there is no internet connection. This icon also appears when you are trying to connect to a secured Wi-Fi network. After successful login, the exclamation point disappears. If Google™ is blocked in your area, the exclamation point may appear even when the device is connected to a Wi-Fi network and there is a working internet connection.
60% 	Battery status
	The battery is charging
	Airplane mode is activated
	The Bluetooth® function is activated
	The microphone is muted



















	Do Not Disturb mode is activated
	Vibrate mode
	An alarm is set
	GPS is activated
	Synchronization is ongoing
	Problem with sign-in or synchronization

! Depending on your service provider, network, or region, the functions or services represented by some icons in this list may not be available.

To Manage Status Bar Icons


- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Display > System icons**.
- 3 Mark the checkboxes for the system icons that you want to appear in the status bar.

Notification Icons

	New email message
	Perform a basic setup of your device
	A software update is available
	System updates are available
	Downloading system updates
	Tap to install the downloaded system updates
	STAMINA mode is activated
	Noise canceling is on
	Screenshot captured
	New Hangouts™ chat message
	Video chat with friends using the Hangouts™ application
	A small app is running
	A song is playing
	The radio is on
	The device is connected to a computer via a USB cable
	Internal storage is 75% full. Tap to transfer data to a memory card
	Warning
	More (undisplayed) notifications

! Not all icons that may appear on your device are listed here. These icons are for reference purposes only, and changes may be made without notice.

To Block an Application from Sending Notifications

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Notifications**.
- 3 Select an application.
- 4 Tap the **Block all** slider.

Applications Overview

- ! Some applications may not be included on your device or may not be supported by all networks or service providers in all areas.



Use the Album application to manage, view, and edit your photos and videos.



Protect your device against viruses, malware, spyware, phishing attempts, and online exploitation.



Use the Calculator application to perform basic calculations.



Use the Calendar application to keep track of events and manage your appointments.



Use the camera to take photos and record video clips.



Use the Chrome web browser to navigate and view web pages and manage bookmarks, text, and images.



Use the Clock application to set various kinds of alarms and timers.



Use the Contacts application to manage email addresses and other information related to your contacts.



Access your downloaded applications, documents, and pictures.



Save your documents and files for easy access from any device, share them with your friends, and collaborate with coworkers.



Use the Email application to send and receive emails through both personal and work accounts.



Use the Facebook™ application for social networking with friends, family members, and coworkers around the world.



Browse and listen to FM radio stations.



Use the Gmail™ application to read, write, and organize email messages.



Search for information on your device and on the web.



Use the Hangouts™ application to chat with friends online.



Enjoy music, movies, apps, and games on your device, and get exclusive access to unique content available only with Xperia™ devices.



View your current location, find other locations, and calculate routes using Google Maps™.



Use the Music application to organize and play music and audio books.



View news stories from News Suite.



Organize, search, or browse through all your photos and videos.



Use the Google Play Movies & TV application to watch movies and TV shows purchased or rented on Google Play.



Discover and play thousands of songs with the Google Play Music application.



Use the Play Store™ application to find applications to buy or download for free.



Stay connected with your gaming friends and the games you love to play, shop on the PlayStation® Store, and more.



Optimize settings to suit your own requirements.



Stream music, browse through your friend's collections or through artist's discographies, or create your own radio station.



Use the Support application to access user support on your device. For example, you can access a User guide, troubleshooting information, plus tips and tricks.



Identify music tracks that you hear playing in your surroundings, and get artist, album, and other information.



Use the Video application to play videos on your device and share content with your friends.



Search content on the web using your voice.



Use the What's New application to discover new games, apps, and media content.



Use YouTube™ to watch videos from users around the world, and share your own.

Battery and Maintenance

Charging Your Device


- ! Always use an original Sony charger and USB cable intended for your specific Xperia™ model. Other chargers and cables may increase charging time, not charge at all, or may even damage your device. Make sure all USB ports and connectors are completely dry, before inserting the USB cable.


A wall socket charger will charge your device faster than charging via your computer. You can still use your device while charging.

If the battery is depleted, it may take up to 30 minutes for your device to respond to the charging. During this time, the screen may remain completely dark, not showing the charging icon. Also note that it can take up to 4 hours for a completely drained battery to charge fully.

- ! Your device has an embedded, rechargeable battery that can only be replaced by an authorized Sony repair center. You should never try to open or take apart the device yourself. Doing so can cause damage and void your warranty.

To Charge Your Device

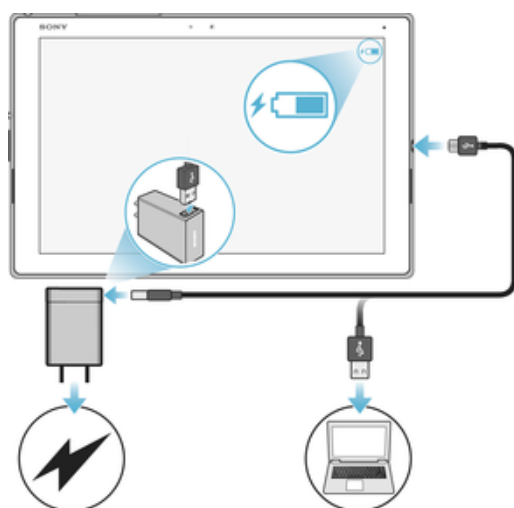

- 1 Plug the charger into a power outlet.
 - 2 Plug one end of the USB cable into the charger (or into the USB port of a computer).
 - 3 Plug the other end of the cable into the micro USB port on your device, with the USB symbol facing up. The notification light illuminates when charging begins.
 - 4 When the device is fully charged, disconnect the cable from your device by pulling it straight outward. Be sure not to bend the connector.
- ! Only use the charger provided with your device or another Sony charger intended for charging your device.
 - 💡 If the battery is completely depleted, it may take a few minutes before the notification light illuminates and the charging icon  appears.

Battery Notification Light Status

Green	The battery is charging and the battery charge level is greater than 90%
Orange	The battery is charging and the battery charge level is less than 90%
Red	The battery is charging and the battery charge level is less than 15%


Battery and Power Management

Your device has an embedded battery. To get the most use from it, keep track of the power consumed by different apps and features. Background power-saving features are activated by default to help you reduce battery consumption, and additional power saving modes are available to help you reduce battery consumption further when necessary.


Power-saving features lower the priority for certain non-essential device functions, such as higher-grade image performance, network activities such as location services, app synchronization and background Wi-Fi scanning. If you do not want an application to be affected, you can exempt it in the Battery Optimization menu.

- ! System updates may change the power saving features available on your device.

To View Battery Consumption, Estimated Time, and Power-Saving Tips

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Battery**. An overview appears showing the battery percentage and an estimated battery time.
- 3 Tap **SHOW BATTERY USAGE** to view a list of features and services that have consumed battery power since the last charging cycle. Tap an item to get information on how to reduce its battery consumption.

To View Battery Consumption For Applications



- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Apps**.
- 3 Select an application and review its battery consumption under **Battery usage**.

General Usage Tips to Improve Battery Performance

The following tips can help you improve battery performance:

- Lower the screen brightness level, see *Screen settings* on page 51.
- Turn off Bluetooth®, Wi-Fi, and location services when you don't need these features.
- Turn off your device or use Airplane mode if you are in an area with no or low network coverage. Otherwise, your device repeatedly scans for available networks, and this consumes power.
- Change the synchronization settings for your email, calendar, and contacts, see *Synchronizing with Online Accounts* on page 47.
- Check the applications that have a high battery consumption and consider the battery saving tips provided on your device for these applications.
- Change the notification level for an application, see *Notifications* on page 27.
- Turn off the location-sharing permission for an application, see *Application settings* on page 52.
- Uninstall applications that you are not using, see *Application screen* on page 22.
- Use a Sony original handsfree device to listen to music. Handsfree devices consume less battery than your device's loudspeakers.
- Restart your device every now and then.

To Make Exceptions to Power Saving Features for Apps


- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Battery**.
- 3 Tap  and select **Battery optimization**. You will see a list of applications that are not optimized.
- 4 To add or remove applications from this list, tap **APPS** and select or de-select an application from the list to edit its optimization settings.
- 5 The list of applications that are not optimized will get updated according to your settings.

- 💡 You can also configure **Battery optimization** from **Settings > Apps >  > Special access**.



Power-Saving Modes

There are power-saving modes available for you to use if you want to make your battery last longer:


STAMINA mode

Depending on the STAMINA level, different features will be restricted or disabled in order to reduce battery consumption. These include rendering performance, animation and screen brightness, image enhancement, background app data syncing, vibration, streaming, and GPS (while the screen is off).  appears in the status bar.

To Activate or Deactivate STAMINA Mode

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings > Battery**.
 - 3 Tap **STAMINA mode** and tap the slider to activate or deactivate the function.
When STAMINA mode is activated you can select additional options, for example you can adjust the Auto-start percentage according to your preferences.
-  You can exempt applications from being optimized by STAMINA mode in the Battery Optimization menu.

Updating Your Device

You should update the software on your device to get the latest functionality, enhancements, and bug fixes in order to ensure optimal performance. When a software update is available,  appears in the status bar. You can also check for new updates manually, or schedule an update.



The easiest way to install a software update is to do it wirelessly from your device. However, some updates are not available for wireless download. You then need to use the Xperia™ Companion software on a PC or on an Apple® Mac® computer to update your device.

Before updating your device, consider the following:

- Ensure you have sufficient storage capacity before attempting to update.
- If you are using a device with multiple users, you must log in as the owner, that is, the primary user, to update the device.
- System and application updates can present the features on your device in another way than described in this User Guide. The Android™ version might not be affected after an update.

For more information about software updates, go to www.sonymobile.com/update/.


To Check for New Software

- 1 If you are using a device with multiple users, make sure you are logged in as the owner.
 - 2 From your **Home screen**, tap .
 - 3 Find and tap **Settings > About tablet > Software update**.
-  If no new software is available, it's possible that you may not have enough free memory on your device. If your Xperia™ device has less than 500 MB of free internal memory available, you do not receive any information about new software. In this case, you receive a warning in the Notification panel:
"Storage space running out. Some system functions may not work."
If you receive this notification, you must free up internal memory to get notifications about new available software.

Updating Your Device Wirelessly

Use the Software update application to update your device wirelessly. If no updates are available, you have the latest software.

To Download and Install a System Update


- 1 If you are sharing a device with multiple users, make sure you are logged in as the owner.
- 2 From your **Home screen**, tap .
- 3 Find and tap **Settings** > **About tablet** > **Software update**.
- 4 If a system update is available, tap **Download** to download it to your device.
- 5 When the download is finished, tap **Continue**, and follow the on-screen instructions to complete the installation.

 You can schedule when to update your device after tapping **Continue**.

To Set Up Automatic Installation

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **About tablet** > **Software update**.
- 3 Tap , then tap **Settings** and select an option.

To Update Your Device Using a Computer

- 1 Using a USB cable, connect your device to the computer.
 - 2 Make sure the screen of your device is unlocked, and the USB connection mode on the device is set to **Transfer files**.
 - 3 Open Xperia™ Companion, if it is not automatically launched.
 - 4 Make sure the computer can access the internet.
 - 5 **Computer:** If a new software update is detected, a popup window appears. Follow the on-screen instructions to run the relevant software updates.
-  If you don't have the Xperia™ Companion software installed on the relevant computer, connect your device to the computer and follow the on-screen installation instructions. Make sure you are using the USB cable that came with your device and it is properly connected to the device and computer.

Maintenance Using a Computer

Xperia™ Companion

Xperia™ Companion is a software service which provides a collection of tools and applications you can use when you connect your device to a computer. With Xperia™ Companion, you can:

- Update or repair your device's software.
- Transfer your content from an old device using Xperia™ Transfer.
- Back up and restore content on your computer.
- Sync multimedia content—photos, videos, music, and playlists—between your device and computer.
- Browse files on your device.

To use Xperia™ Companion, you need an internet-connected computer running one of the following operating systems:

- Microsoft® Windows® 7 or later
- Mac OS® X 10.11 or later

Learn more and download Xperia™ Companion for Windows at <http://support.sonymobile.com/tools/xperia-companion/> or Xperia™ Companion for Mac at <http://support.sonymobile.com/tools/xperia-companion-mac/>.

Managing Files Using a Computer

Use a USB cable connection between a Windows® computer and your device to transfer and manage your files.

Once the two devices are connected, you can choose if you want to charge your device, transfer files, or use it for MIDI input. Your computer will detect your device when you

select the **Transfer files** connection mode. The default connection mode is set to **Charge this device**.

With Xperia™ Companion you can access the file system of your device. If you do not have Xperia™ Companion installed, you are requested to install it when you connect your device to the computer.

- ! Always use a USB cable intended for your specific Xperia™ model and make sure it is completely dry.

USB Connection Mode

You can use the **Transfer files** connection mode for managing files and updating device software. This USB mode is used with Microsoft® Windows® computers. Charging is enabled by default.

Using the **Use device as MIDI** mode, your device can function as a MIDI input for musical instrument apps.

To Change USB Connection Mode

- 1 Attach a USB connector to your device.
- 2 Drag down the Status bar, and then tap **Charge this device**.
- 3 Tap either **Transfer files** or **Use device as MIDI** as desired.

Storage and Memory

Your device has several different storage and memory options.

- The **internal storage** is about **32 GB** and is used to store downloaded or transferred content along with personal settings and data. Some examples of data saved to internal storage are alarm, volume, and language settings; emails; bookmarks; calendar events; photos; videos and music.
- You can use a removable **memory card** with a storage capacity of up to **128 GB** to get more storage space. Media files and some apps, along with their associated data, can be moved to this type of memory to free up internal storage. Some apps, for example, the Camera app, can save data directly to a memory card.
- The **dynamic memory (RAM)** is about **3 GB** and cannot be used for storage. RAM is used to handle running applications and the operating system.

- ! You may have to purchase a memory card separately.

- 💡 Read more about the use of memory in Android devices by downloading the White paper for your device at www.sonymobile.com/support/.


Improving Memory Performance

Your device memory tends to fill up as a result of normal usage. If the device starts to slow down, or applications suddenly shut down, you should consider the following:



- Always try to keep at least **500 MB** of free internal storage available.
- Close running applications that you are not using.
- Clear the cache memory for all applications.
- Uninstall downloaded applications that you don't use.
- Move applications to the memory card if the internal storage is full.
- Transfer photos, videos, and music from the internal memory to the memory card.

- If your device can't read content on the memory card, you may need to format the card. Note that all content on the card gets erased when you format it.
- ! If you are sharing a device with multiple users, you must log in as the owner, that is, the primary user, to be able to perform certain actions, such as transferring data to the memory card and formatting the memory card.


To View the Memory Status

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Storage & memory**.

To View the Amount of Free and Used RAM


- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Storage & memory**.
- 3 Tap , then tap **Advanced > Memory**.

To Clear the Cache Memory for All Applications


- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Storage & memory**.
- 3 Tap **Internal shared storage**, and then find and tap **Cached data > OK**.
- 4 If you have a memory card inserted, tap **Storage > Internal shared storage**.

- 💡 When you clear the cache memory, you don't lose any important information or settings.

To Transfer Media Files to the Memory Card

- 1 Make sure you have a memory card inserted in your device.
- 2 From your **Home screen**, tap .
- 3 Find and tap **Settings > Storage & memory > Transfer data**.
- 4 Mark the files that you want to transfer to the memory card.
- 5 Tap **Transfer**.

To Stop Applications and Services from Running

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Apps**.
- 3 Select an application or service, and then tap **FORCE STOP > OK**.

To Format the Memory Card

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Storage & memory**.
- 3 Tap , tap **Advanced > Storage > SD Card > **, and then tap **Settings > Format > Erase & format**.

- ! All content on the memory card gets erased when you format it. Make sure you first make backups of all data you want to save. To back up your content, you can copy it to a computer. For more information, see *Managing Files Using a Computer* on the 36 page.

Backing Up and Restoring Content

Generally, you should not save photos, videos, and other personal content solely on the internal memory of your device. If your device is damaged, lost or stolen, the data stored on its internal memory may be impossible to recover. It is recommended to use the Xperia™ Companion software to make backups which save your data safely to an external device. This method is especially recommended if you are updating your device software to a newer Android version.

The Xperia™ Backup & restore application is recommended for backing up data before you do a factory data reset. With this application you can back up data to an online account, an SD card or to an external USB storage device that you have connected to your device using a USB Host adapter:

With the Google Backup & restore application, you can back up data to a Google server.

Backing up Data to a Computer

Use the Xperia™ Companion software to back up data from your device to a PC or an Apple® Mac® computer. You can back up the following types of data:

- Calendar
- Settings
- Media files such as music and videos
- Photos and images

To Back Up Your Data Using a Computer

- 1 Unlock the screen of your device and connect it to the computer using a USB cable.
 - 2 Open the Xperia™ Companion software on your computer if it is not automatically launched. After a few moments, the computer detects your device. Make sure to select **Transfer files** mode on your device.
 - 3 Click on **Backup** on the Xperia™ Companion main screen.
 - 4 Follow the on-screen instructions to back up data from your device.
- ! If you do not have Xperia™ Companion installed, you are requested to install it when you connect your device to the computer.

To Restore Your Data Using a Computer

- 1 Unlock the screen of your device and connect it to the computer using a USB cable.
 - 2 Open the Xperia™ Companion software on your computer if it is not automatically launched. After a few moments, the computer detects your device. Make sure to select **Transfer files** mode on your device.
 - 3 Click on **Restore** on the Xperia™ Companion main screen.
 - 4 Select a backup file from the backup records, then click on **Next** and follow the on-screen instructions to restore data to your device.
- ! If you do not have Xperia™ Companion installed, you are requested to install it when you connect your device to the computer.



Backing up Data with the Xperia™ Backup & Restore Application

Using the Xperia™ Backup & restore application, you can make an online or a local data backup. You can do so manually or turn on the automatic backup function to save data periodically.


The Xperia™ Backup & restore application is recommended for backing up data before you do a factory data reset. With this application, you can back up the following types of data to an online account, to an SD card, or to an external USB storage device that you have connected to your device using a USB host adapter:

- Contacts
- Calendar
- Email Accounts
- Wi-Fi Accounts
- Device Settings
- Applications
- Xperia™ Home layout


To Set Up the Automatic Backup Function

- 1 If you are backing up content to a USB storage device, make sure the storage device is connected to your device using a USB host adapter. If you are backing up to an SD card, make sure the SD card is properly inserted in your device. If you are backing up content to an online account, make sure you have signed in to your Google™ account.
- 2 From your **Home screen**, tap .
- 3 Find and tap **Settings > Backup & reset**.
- 4 Under **Xperia™ Backup & restore**, tap **Automatic backup**.
- 5 To enable the automatic backup function, tap the on-off switch.
- 6 Select where to save backup files.
- 7 If desired, select a backup frequency, when to back up, and the specific data to back up. Otherwise the backup is completed according to the default settings.
- 8 To save your settings, tap .


To Back Up Content Manually

- 1 If you are backing up content to a USB storage device, make sure the storage device is connected to your device using a USB host adapter. If you are backing up to an SD card, make sure the SD card is properly inserted in your device. If you are backing up content to an online account, make sure you have signed in to your Google™ account.
- 2 From your **Home screen**, tap .
- 3 Find and tap **Settings > Backup & reset**.
- 4 Under **Xperia™ Backup & restore**, tap **More**.
- 5 Tap **Manual backup**, then select a backup destination and the data you want to back up.
- 6 Tap **Backup**.
- 7 After the data is backed up, tap **Finish**.

To Edit a Backup File

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Backup & reset**.
- 3 Under **Xperia™ Backup & restore**, tap **More**.
- 4 Tap **Edit backup file**, then select a backup source and the data types you want to delete.
- 5 Tap **Delete data**.
- 6 Tap **OK** to confirm.
- 7 After the data is deleted, tap **Finish**.

To Restore Backed-Up Content

- 1 If you are restoring content from a USB storage device, make sure the storage device is connected to your device using the USB Host adapter. If you are restoring content from an SD card, make sure the SD card is properly inserted into your device. If you are restoring content from Xperia Backup & Restore service, make sure you have signed in to your Google™ account.
 - 2 From your **Home screen**, tap .
 - 3 Find and tap **Settings > Backup & reset**.
 - 4 Under **Xperia™ Backup & restore**, tap **Restore data**, then select a restore source and the data you want to restore.
 - 5 Tap **Restore data**.
 - 6 After the content is restored, tap **Finish**.
- ! Remember that any changes that you make to your data and settings after you create a backup—such as any new apps you install—get deleted during any subsequent restore procedure.

Backing Up Data With the Google Backup & Restore Application

Using the Google Backup & restore application, you can back up data to a Google server. You can also turn on the automatic restore function to restore application data and settings when you reinstall an application.

With this application you can back up the following types of data:

- Applications
- Bookmarks
- Wi-Fi networks
- Other settings

To Back Up Data to a Google™ Account

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Backup & reset**.
- 3 Under **Google™ Backup & restore**, tap **Back up my data**, then tap the slider.

To Enable or Disable Automatic Restore when you Reinstall an Application

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Backup & reset**.
- 3 Under **Google™ Backup & restore**, tap the **Automatic restore** slider.


Downloading applications

Downloading Applications from Google Play™

Google Play™ is the official online Google store for downloading applications, games, music, movies, and books. It includes both free and paid applications. Before you start downloading from Google Play™, make sure you have a working internet connection, preferably over Wi-Fi to limit data traffic charges.

- ! To use Google Play™, you need to have a Google™ account. Google Play™ may not be available in all countries or regions.

To Download an Application from Google Play™


- 1 From the **Home screen**, tap .
 - 2 Find and tap **Play Store**.
 - 3 Find an item you wish to download by browsing categories, or by using the search function.
 - 4 Tap the item to view its details, and follow the instructions to complete the installation.
- ! Some applications may need to access data, settings, and various functions on your device in order to work properly. Only install and give permissions to applications you trust. You can view the permissions granted to a downloaded application and also change their status by tapping the application under **Settings > Apps**.

Downloading Applications from Other Sources

When your device is set to allow downloads from sources other than Google Play™, you can download applications directly from other websites by following the relevant download instructions.

- ! Installing applications of unknown or unreliable origin can damage your device. Download applications only from reliable sources. Contact the application provider if you have any questions or concerns.
- 💡 If you are using a device with multiple users, only the owner, that is, the primary user, can allow downloads from sources other than Google Play™. Changes made by the owner affect all other users.

To Enable or Disable the Downloading of Applications from Other Sources

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings > Lock screen & security**.
 - 3 Tap the **Unknown sources** slider.
 - 4 Tap **OK**.
- ! Some applications may need to access data, settings, and various functions on your device in order to work properly. Only install and give permissions to applications you trust. You can view the permissions granted to a downloaded application and also change their status by tapping the application under **Settings > Apps**.

Internet and networks

Browsing the web

The Google Chrome™ web browser for Android™ devices comes pre-installed in most markets. Go to <http://support.google.com/chrome> and click the "Chrome for Mobile" link to get more detailed information about how to use this web browser.

To Browse the Web



- 1 From your **Home screen**, tap .
- 2 Find and tap .
- 3 If you are using Google Chrome™ for the first time, select to either sign in to a Google™ account or browse with Google Chrome™ anonymously.
- 4 Enter a search term or web address in the search and address field, then tap the  on the keyboard.

Wi-Fi


Use Wi-Fi to surf the internet, download applications, or send and receive emails. Once you connect to a Wi-Fi network, your device remembers the network and automatically connects to it the next time you come within range.

Some Wi-Fi networks require you to log in to a web page before you can get access. Contact the relevant Wi-Fi network administrator for more information.




Available Wi-Fi networks may be open or secured:

- Open networks are indicated by  next to the Wi-Fi network name.
 - Secured networks are indicated by  next to the Wi-Fi network name.
- ! Some Wi-Fi networks do not show up in the list of available networks because they do not broadcast their network name (SSID). If you know the network name, you can add it manually to your list of available Wi-Fi networks.



To Turn Wi-Fi On or Off

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings > Wi-Fi**.
 - 3 Tap the slider to enable or disable Wi-Fi.
- ! It may take a few seconds before Wi-Fi is enabled.

To Connect to A Wi-Fi Network

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings > Wi-Fi**.
 - 3 Tap the slider to turn on Wi-Fi. All available Wi-Fi networks are displayed.
 - 4 Tap a Wi-Fi network to connect to it. For secured networks, enter the relevant password.  is displayed in the status bar once you are connected.
- 💡 To search for new available networks, tap , then tap **Refresh**. If you cannot connect to a Wi-Fi network successfully, refer to the relevant troubleshooting tips for your device at www.sonymobile.com/support/.

To Add a Wi-Fi Network Manually

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings** > **Wi-Fi**.
 - 3 Scroll down and tap  at the end of the listed items.
 - 4 Enter the **Network name (SSID)** information.
 - 5 To select a security type, tap the **Security** field.
 - 6 If required, enter a password.
 - 7 To edit advanced options, such as proxy and IP settings, tap **Advanced options** and then edit the options as desired.
 - 8 Tap **SAVE**.
- ! Contact your Wi-Fi network administrator to get the network SSID and password.

Increasing Wi-Fi Signal Strength





There are a number of things you can do to improve Wi-Fi reception:

- Move your device closer to the Wi-Fi access point.
- Move the Wi-Fi access point away from any potential obstructions or interference.
- Don't cover the Wi-Fi antenna area of your device (the highlighted area in the illustration).


Wi-Fi Settings

When you are connected to a Wi-Fi network or when there are Wi-Fi networks available in your vicinity, you can view the status of these networks. You can also enable your device to notify you whenever an open Wi-Fi network is detected.



To Enable or Disable Wi-Fi Network Notifications

- 1 Turn on Wi-Fi, if it is not on already.
- 2 From your **Home screen**, tap .
- 3 Find and tap **Settings** > **Wi-Fi**.
- 4 Tap , then tap the **Network notification** slider.


To View Detailed Information About a Connected Wi-Fi Network

- 1 From the **Home screen**, tap .
- 2 Find and tap **Settings** > **Wi-Fi**.
- 3 Tap the Wi-Fi network you are currently connected to. Detailed network information is displayed.



To Add a Wi-Fi Sleep Policy

- 1 From the **Home screen**, tap .
- 2 Find and tap **Settings** > **Wi-Fi**.
- 3 Tap , then tap **Keep Wi-Fi on during sleep**.
- 4 Select an option.


To Check Your Data Usage

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Data usage**.
- 3 To view information about the amount of data transferred via Wi-Fi connection, tap the **Wi-Fi data usage**.



To Control the Data Usage of Individual Applications

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings** > **Apps**.
 - 3 Tap the application that you want to control, then tap **Data usage**.
-  The performance of individual applications may be affected if you change the related data usage settings.

To Help Reduce Data Usage

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Data usage** > **Data Saver**.
- 3 Tap the slider to enable or disable the function.

To Find the MAC Address for Your Device

- 1 From the **Home screen**, tap .
- 2 Find and tap **Settings** > **Wi-Fi**.
- 3 Tap . The **MAC address** is displayed in the list.


 
WPS

WPS (Wi-Fi Protected Setup™) is a wireless networking standard that helps you to establish secure wireless network connections. WPS makes it easy for you to set up Wi-Fi Protected Access® (WPA) encryption to secure your network. You can also add new devices to an existing network without entering long passwords.


 
Use one of these methods to enable WPS:

- Push button method – simply push a button on a WPS-supported device, for example, a router.
- PIN method – your device creates a random PIN (Personal Identification Number), which you enter on the WPS-supported device.

To Connect to a Wi-Fi Network Using a WPS Button


- 1 From the **Home screen**, tap .
- 2 Find and tap **Settings** > **Wi-Fi**.
- 3 Turn on Wi-Fi if it is not already on.
- 4 Tap , then tap **More features** > **WPS Push Button**, then press the WPS button on the WPS-supported device.

To Connect to a Wi-Fi Network Using a WPS PIN



- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Wi-Fi**.
- 3 Turn on Wi-Fi if it is not already on.
- 4 Tap  > **More features** > **WPS PIN Entry**.
- 5 On the WPS-supported device, enter the PIN that appears on your device.

Tethering with Xperia Link™



If you have an Xperia™ device, you can share your internet connection with another Xperia™ device. This way, your device can connect to the internet without having to use its own connection. This feature is useful when you are out and about and your device doesn't have or support a cellular or Wi-Fi connection on your tablet. Before you use tethering with Xperia Link™, make sure the Xperia Link™ application is installed and set up on both devices. Also, your Xperia™ device must have a camera with auto focus.

-  The Xperia Link™ application is only supported by Xperia™ devices running the Android™ 4.0 software version or higher. If the Xperia Link™ application is not pre-installed on your Xperia™ device, you can download it from Google Play™.

To Connect Your Xperia™ Devices Using a QR Code™

- 1 Make sure the Bluetooth function is activated on both Xperia™ devices and that the devices have an active internet connection.
- 2 **Tablet:** From your Homescreen, tap  > **Xperia Link** > **Add device**, then follow the instructions to complete the setup. A QR Code™ appears on the screen.
- 3 **The other device:** From your Homescreen, tap  > **Xperia Link** > **Add device** > **Scan**.
- 4 Hold your device over the QR Code™ on the screen until the complete QR Code™ is visible in the viewfinder of the device.
- 5 Your device automatically scans the QR Code™ and connects to your tablet once the QR Code™ is recognized.
- 6 To confirm the connection, tap **OK**.

To Connect Your Tablet with an Xperia™ Device Using NFC

- 1 Make sure the NFC and the Android Beam functions are activated on both your Xperia™ devices and have an active internet connection.
- 2 **Tablet:** From your Homescreen, tap  > **Xperia Link** > **Add device**, then follow the instructions to complete the setup. Once the setup is complete, a QR Code™ appears on the screen. You can ignore this code.
- 3 **The other device:** From your Homescreen, tap  > **Xperia Link** > **Add device**.
- 4 Hold the devices back to back so the NFC detection areas of each device touch each other.
- 5 When **Touch your screen to beam** appears, touch the screen of one of the devices.
- 6 To confirm the connection, tap **OK**.


Virtual private networks (VPNs)

Use your device to connect to virtual private networks (VPNs), which allow you to access resources inside a secured local network from a public network. For example, VPN connections are commonly used by corporations and educational institutions for users who need to access intranets and other internal services when they are outside of the internal network, for example, when they are traveling.

 
VPN connections can be set up in many ways, depending on the network. Some networks may require you to transfer and install a security certificate on your device. For detailed information about how to set up a connection to your virtual private network, contact the network administrator of your company or organization.

- ! If you are using a device with multiple users, you may need to log in as the owner, that is, the primary user, to adjust the settings for VPN.

To Add a Virtual Private Network

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **More** > **VPN**.
- 3 Tap **+**.
- 4 Select the type of VPN to add.
- 5 Enter your VPN settings.
- 6 Tap **SAVE**.

To Connect to a Virtual Private Network

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **More** > **VPN**.
- 3 In the list of available networks, tap the VPN that you want to connect to.
- 4 Enter the required information.
- 5 Tap **Connect**.

To Disconnect from a Virtual Private Network


- 1 Double-tap the status bar to open the Notification panel.
- 2 Tap the notification for the VPN connection to turn it off.

Synchronizing data on your device


Synchronizing with Online Accounts

Synchronize your device with contacts, email, calendar events, and other information from online accounts, for example, email accounts such as Gmail™ and Exchange ActiveSync, Facebook™, and Flickr™. You can synchronize data automatically for such accounts by activating the auto-sync function, or you can synchronize each account manually.



To Set Up an Online Account for Synchronization

- 1 From your **Home screen**, tap .
- 2 Tap **Settings > Accounts & sync > Add account**, then select the account that you want to add.
- 3 Follow the instructions to create or sign in to an account.

To Synchronize Manually With an Online Account

- 1 From your **Home screen**, tap  > **Settings > Accounts & sync**.
- 2 Tap the name of the account you want to synchronize with. A list of items appears showing what can be synchronized with the account.
- 3 Tap the slider next to the item that you want to synchronize.

To Remove an Online Account


- 1 From your **Home screen**, tap  > **Settings > Accounts & sync**.
- 2 Select the account type, then tap the account you want to remove.
- 3 Tap , then tap **Remove account**.
- 4 Tap **REMOVE ACCOUNT** again to confirm.

Synchronizing with Microsoft® Exchange ActiveSync®



If your company uses a Microsoft Exchange ActiveSync account, you can access your corporate email messages, calendar appointments, and contacts directly on your device. After setup, you can find your information in the **EmailCalendar** and **Contacts** applications.

- ! If you have set up a Microsoft® Exchange ActiveSync® (EAS) account on your Xperia™ device, the EAS security settings may limit the lockscreen type to only a PIN or password. This occurs when your network administrator specifies a lockscreen type for all EAS accounts for enterprise security reasons. Contact the network administrator of your company or organization to check what network security policies are implemented for cellular devices. Fingerprint functionality is not available in the United States.



To Set Up an EAS Account for Synchronization

- 1 From your **Home screen**, tap .
- 2 Tap **Settings > Accounts & sync > Add account > Exchange ActiveSync**.
- 3 Enter your corporate email address and password.
- 4 Tap **NEXT**. If a failure occurs, enter the domain and server details for your account manually and then tap **NEXT**.
- 5 Tap **OK** to allow your corporate server to control your device.
- 6 Select a synchronization method, a synchronization interval and the data that you want to sync with your device.
- 7 Tap **NEXT**, then select how you want to be notified when a new email arrives.
- 8 Tap **NEXT**, enter a name for the corporate account, then tap **FINISH SETUP**.
- 9 If prompted, activate the device administrator to allow your corporate server to set certain security rules on your device, such as disabling voice recording and using storage encryption.



To Change the Settings of an EAS Account

- 1 From your **Home screen**, tap .
- 2 Find and tap **Email**, then tap .
- 3 Tap **Settings**, select an EAS account, and then change the settings of the EAS account as desired.

To Set a Synchronization Interval for an EAS Account

- 1 From your **Home screen**, tap .
- 2 Tap **Email**, then tap .
- 3 Tap **Settings** and select an EAS account.
- 4 Tap **Check frequency**.
- 5 Under **Off-peak time settings**, tap **Check frequency** and select an interval option.

To Remove an EAS Account

- 1 From your **Home screen**, tap  > **Settings** > **Accounts & sync**.
- 2 Tap **Exchange ActiveSync**, then select the EAS account that you want to remove.
- 3 Tap , then tap **REMOVE ACCOUNT**.
- 4 Tap **REMOVE ACCOUNT** again to confirm.

Basic settings

Accessing settings

View and change settings for your device from the Settings menu. The Settings menu is accessible from both the Application screen and the Quick settings panel.

To Open the Device Settings Menu from the Application Screen

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings**.


To view information about your device

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **About tablet**.

To Activate the Screen Using Tap to Wake Up Mode

- 1 Be sure that Tap to Wake Up mode is turned on. To turn it on, tap **Settings** > **Display**, then drag the slider beside **Tap to wake up** to the right.
- 2 Double-tap the screen.

To Open or Close the Quick Settings Panel

- To open the Quick Settings panel, drag the status bar downward.
-  To open the Quick Settings panel, drag the status bar downward by using two fingers.

To Select Which Settings to Display on the Quick Settings Panel

- 1 Using two fingers, drag the status bar fully downward, then tap **Edit**.
- 2 In the section at the bottom of the screen, touch and hold the icon for the quick setting that you want to add, then drag and drop it into the upper part of the screen.

To Rearrange the Quick Settings Panel

- 1 Drag the status bar fully downward, and then tap **Edit**.
- 2 Touch and hold an icon, and then move it to the desired position.

Sound volume

You can adjust the ringtone volume for notifications as well as for music and video playback.




To Adjust the Media Playing Volume with the Volume Key

- When playing music or watching video, press the volume key up or down, even when the screen is locked.


To Turn on Vibrate Mode

- Press the volume key down until  appears.

To Adjust the Volume Levels

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings** > **Sound**.
 - 3 Drag the volume sliders to the desired positions.
-  You can also press the volume key up or down and tap  to adjust the notification, media playback, or alarm volume levels separately.

To Select the Notification Sound

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings > Sound > Notification sound**.
 - 3 Select an option from the list or tap **+** and select a music file that is saved on your device.
 - 4 To confirm, tap **Done**.
- 💡 Some applications have their own specific notification sounds, which you can select from the application settings.


To Enable Touch Tones

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Sound > Other sounds**.
- 3 Tap the sliders to enable or disable the different touch tones as desired.


 

 

Do Not Disturb Mode

You can set your device to Do not disturb mode and decide how long your device will be in Do not disturb mode manually. You can also preset when your device will be in Do not disturb mode automatically.


To Activate Do Not Disturb Mode

- 1 Using two fingers, drag the status bar fully downward to access the Quick Settings panel.
- 2 Find and tap .
- 3 Select an option, then tap **Done**.

To Quickly Shift Between Do Not Disturb/Vibrate/Sound Mode

- 1 Press the volume key up or down until , , or  appears.
- 2 Tap  or  to quickly shift between Vibrate/Sound mode. To activate Do not disturb mode, press the volume key down when in vibrate mode.

To Schedule Do Not Disturb Mode Time Intervals

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Sound > Do not disturb > Automatic rules**.
- 3 Select the time or event to schedule Do Not Disturb mode for, or add a new rule.
- 4 Enter the desired name for the rule, then tap **OK**.
- 5 Find and tap **Days** and mark the checkboxes for the relevant days, then tap **Done**.
- 6 To adjust the start time, tap **Start time** and select a value, then tap **OK**.
- 7 To adjust the end time, tap **End time** and select a value, then tap **OK**. Your device stays in Do Not Disturb mode during the selected time interval.


Setting Exceptions for Do Not Disturb Mode

You can select which types of notifications are allowed to sound in Do Not Disturb mode and you can filter exceptions based on who the notifications come from. The most common types of exceptions include:

- Events and reminders
- Alarms


Screen settings

To Adjust the Screen Brightness Manually Regardless of Lighting Conditions


- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Display** and tap the **Adaptive brightness** slider to disable this function, if it is not already disabled.
- 3 Tap **Brightness level**.
- 4 Drag the slider to adjust the brightness.



 Lowering the brightness level helps the battery last longer.

To Enable Vibrate on Tap


- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Sound** > **Other sounds**.
- 3 Drag the slider beside **Vibrate on tap** to the On position. The phone now vibrates when you tap soft keys.

To Adjust the Idle Time Before the Screen Turns Off


- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Display** > **Sleep**.
- 3 Select an option.

 To turn off the screen quickly, briefly press the power key (.

To Adjust the Font Size

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Display** > **Font size**.
- 3 Select the preferred option.

To Adjust the Display Size

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Display** > **Display size**.
- 3 Drag the slider to select the preferred option.

To Adjust the White Balance of the Display

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Display** > **White balance**.
- 3 Drag the sliders to the desired positions to adjust the white balance.

 To revert the white balance setting back to its default values, tap  **Default values**.

Smart backlight control

The smart backlight control keeps the screen on as long as the device is held in your hand. Once you put down the device, the screen turns off according to your sleep setting.

To Enable or Disable the Smart Backlight Control Function

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Display** > **Smart backlight control**.
- 3 Tap the slider to enable or disable the function.


Screen Pinning

Use screen pinning to set your device to display only the screen for a specific application. For example, if you are playing a game and you accidentally touch the Home navigation key, the screen pinning feature prevents the active game app screen from being minimized. You can also use this feature when you lend your device to another person to make it harder for them to access more than one application. For example, you can lend




your device to somebody to take a photo and pin the screen to the Camera application so that the person can't easily use other apps such as Email.

- ! Screen pinning is not a security feature and does not fully prevent other users from unpinning a screen and accessing your device. To protect your data, you should set up your device to request a screen lock PIN, password, or pattern before someone can unpin the screen.


To Enable or Disable Screen Pinning

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings** > **Security** > **Screen pinning**.
 - 3 Tap the slider to enable or disable the function.
 - 4 If you have enabled Screen pinning, you can tap the **Lock device when unpinning** slider to enable or disable this additional security function.
- 💡 A pattern, PIN, or password is not mandatory for screen pinning to work.

To Pin a Screen

- 1 Make sure screen pinning is activated on your device.
- 2 Open an app and go to the screen you want to pin.
- 3 Tap .
- 4 To display the screen pinning icon , swipe upward.
- 5 Tap .
- 6 In the window that appears, tap **Got it**.

To Unpin a Screen

- On the pinned screen, touch and hold  until the screen is unpinned.
- 💡 If you selected a security option when you activated the screen pinning function, you have to enter your pattern, PIN, or password to unlock the device before the screen can be unpinned.

Application settings

Some apps will ask for permissions once you start using them. You can allow or deny permissions individually for each app, either from the Settings menu or from the Permission confirm dialog. Permission requirements depend on the app's design.

Allowing or denying permissions

You can choose whether to allow or deny permissions when the dialog is shown. If you have used another Android version previously, most apps will have already been granted the necessary permissions.

To allow a permission

- 1 To allow a permission, tap **Allow**.
- 2 When the confirm dialog appears for the second time, you can choose the **Don't ask again** option if you wish.
- 3 A dialog will also explain why the app needs the permissions and what it uses them for specifically. To dismiss this dialog, tap **OK**.



To deny a permission

- To deny a permission, tap **Deny** when the dialog is shown.
- 💡 Some applications can still be used even if you have denied permissions.

Critical permissions

Some permissions are mandatory for apps to work as intended. In such cases, a dialog will inform you.

To Configure Applications

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Apps > **.
- 3 Select a configuration option, such as **App permissions**, and then choose an application that you want to configure.




To Allow Critical Permissions

- 1 To allow a permission, tap **Continue > APP INFO > Permissions**.
- 2 Find the critical permission you need.
- 3 Tap the slider.




Allowing or Denying Automatic Application Updates

If the automatic update feature is enabled, your applications get updated without you being asked, so you may not realize that large volumes of data are being downloaded. In order to avoid potentially high data transfer costs, you can disable automatic updates or enable automatic updates only over Wi-Fi connection. You have to disable the automatic update feature both in the Play Store™ app and the What's New app (where available) to avoid the automatic updating of apps.

To Enable or Disable Automatic Updates for All Applications in the Play Store

- 1 From your **Home screen**, tap , then find and tap .
- 2 Tap , then tap **Settings > Auto-update apps**.
- 3 Select the preferred option.



To Enable or Disable Automatic Updates for All Applications in What's New

- 1 From your **Home screen**, tap , then find and tap .
- 2 Tap , then tap **Settings > Auto-update apps**.
- 3 Select the preferred option.

Application linking

Your device can determine the default app to handle a particular web link. This means that if the link is set, you don't need to select an app each time you open a link. You can change the default app any time you want.



To manage app links from the Settings menu

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Apps**.
- 3 Tap  and find **Opening links**.
- 4 Select the app for which you want to set the supported links.
- 5 Set the **Opening links** property to **Open in this app** option.


Resetting Your Applications

You can reset an application or clear application data if your application stops responding or causes issues with your device.

To Reset Application Preferences


- 1 From your Homescreen, tap .
 - 2 Find and tap **Settings > Apps**.
 - 3 Tap , then tap **Reset app preferences**.
- ! Resetting application preferences does not delete any application data from your device.

To clear application data

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Apps**.
- 3 Select an application or service, then tap **Storage** > **CLEAR DATA**.

! When you clear application data, data for the selected application is deleted from your device permanently. The option to clear application data is not available for all applications or services.

To clear application cache

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Apps**.
- 3 Select an application or service, then tap **Storage** > **CLEAR CACHE**.

! The option to clear the application cache is not available for all applications or services.

To clear the application default setting

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings** > **Apps**.
- 3 Select an application or service, then tap **Open by default** > **CLEAR DEFAULTS**.


! The option to clear the application default setting is not available for all applications or services.

Screen Saver


Set up an interactive screen saver that automatically displays colours, photos, or a slideshow while your device is docked or charging and the screen is idle.

💡 On a device with multiple users, each user can have individual Screen saver settings.

To Enable or Disable the Screen Saver

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Display** > **Screen saver**.
- 3 Tap the slider to enable or disable the function.

To Select Content for the Screen Saver

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Display** > **Screen saver**.
- 3 Tap the slider to enable the function.
- 4 Select what the screen saver should display.





To Start the Screen Saver Manually

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Display** > **Screen saver**.
- 3 Tap the slider to enable the function.
- 4 To activate the Screen saver immediately, tap , then tap **Start now**.

Language settings

You can select a default language for your device and change it again at a later time. You can also change the writing language for text input. See *Personalizing the On-Screen Keyboard* on page 61.


To Change the Language

- 1 From the **Home screen**, tap .
 - 2 Find and tap **Settings > Languages & input > Languages**.
 - 3 To change the language, drag and drop the desired language to the top of the list.
If the desired language is not currently listed, tap  to add it.
 - 4 Tap **OK**.
- ! If you select the wrong language and cannot read the menu texts, find and tap . Then, select the text beside  and select the first entry in the menu that opens. You can then select the language you want.


Date and time

You can change the date and time on your device.

To Set the Date Manually

- 1 From the **Home screen**, tap .
- 2 Find and tap **Settings > Date & time**.
- 3 Disable the **Automatic date & time** function by tapping the slider.
- 4 Tap **Set date**.
- 5 Flick left or right, or use the arrows to set the desired date.
- 6 Tap **OK**.

To Set the Time Manually

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Date & time**.
- 3 Disable the **Automatic date & time** function by tapping the slider.
- 4 Tap **Set time**.
- 5 Select the relevant values for the hour and minute.
- 6 Tap **OK**.

To Set the Time Zone

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Date & time**.
- 3 Disable the **Automatic time zone** function by tapping the slider.
- 4 Tap **Select time zone**.
- 5 Select an option.

X-Reality™ for mobile

Sony's X-Reality™ for mobile technology improves the viewing quality of photos and videos after you take them, giving you clearer, sharper and more natural images. X-Reality™ for mobile is turned on by default, but you can turn it off if you want to reduce battery consumption.

To Turn On X-Reality™ for Mobile

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Display > Image enhancement**.
- 3 Tap the **X-Reality for mobile** radio button if it is not already selected.

Super-Vivid Mode

Super-Vivid mode enhances the color brightness and saturation of your photos and videos while you view them on your device.


To Turn on Super-Vivid Mode

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Display > Image enhancement**.
- 3 Tap the **Super-vivid mode** radio button if it is not already selected.


Enhancing the sound output

You can enhance the sound of your device by manually enabling individual sound settings such as Equalizer and Surround sound. You can also enable the Dynamic normalizer to minimize volume differences between songs or videos.

To Enhance the Sound Output Automatically

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Sound > Audio settings**.
- 3 Enable the **ClearAudio+** function by tapping the slider.

To Adjust the Sound Settings Manually

- 1 From the Homescreen, tap .
- 2 Find and tap **Settings > Sound > Audio settings**.
- 3 If the **ClearAudio+** function is enabled, tap the slider to disable it.
- 4 Tap **Sound effects > Equalizer**.
- 5 Adjust the sound settings by dragging the frequency band buttons up or down.

To Minimize Volume Differences Using the Dynamic Normaliser


- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Sound > Audio settings**.
- 3 Disable the **DSEE HX** function by tapping the slider, if it is enabled.
- 4 Enable the **Dynamic normalizer** function by tapping the slider.


Noise cancellation

Your device supports noise canceling headsets. By using a noise canceling headset with your device, you can get much clearer audio quality when listening, for example, to music in a noisy environment, such as on a bus, a train or a plane. You can also use this feature to create a silent environment in which to study, work or read.

-  To ensure optimal performance, noise canceling headsets from Sony are recommended.


To Use a Noise-Canceling Headset

- 1 Connect the noise-canceling headset to your device.
- 2 From your **Home screen**, find and tap  > **Settings > Sound > Accessory settings > Noise canceling**, then enable the **Noise canceling** function by tapping the slider.
- 3 Tap **Headset/Headphone type**, and select the type of your headset/headphone.
- 4 If you want **Noise canceling** to be enabled only during music or video playback or when the screen is active, tap the **Power save mode** slider to enable this function.
- 5 If you want **Noise canceling** to be enabled for as long as the headset is connected, tap the **Power save mode** slider to disable this function.

-  A noise-canceling headset may not be included with your device at purchase.

-  You can also enable the **Noise canceling** function via the Notification panel when a noise-canceling headset is connected to your device.

To Adjust the Settings to the Noise Environment

- 1 Make sure a noise-canceling headset is connected to your device.
- 2 From your **Home screen**, tap .
- 3 Find and tap **Settings > Sound > Accessory settings > Noise canceling > Noise environment**.
- 4 Select the relevant noise environment type, then tap **OK**.

Multiple User Accounts


Your device supports multiple user accounts so that different users can log in separately to the device and use it. Multiple user accounts work well in situations where you share the same device with other people or lend your device to someone to use for a while. The user who sets up the device for the first time becomes the owner of the device. Only the owner can manage the accounts of other users. Apart from the owner account, there are three different types of accounts:

- Regular User: This account type is suitable for someone who regularly uses your device.
 - Guest User: Enable the guest account option for someone who just wants to use your device temporarily.
 - Restricted Profile: Use this option if you want to make only a restricted number of applications available to a person using your device.
- ! Some features are only available to the owner. For example, only the owner can allow downloads from sources other than Google Play™.



About the Regular User Account

By adding Regular User accounts, you can allow different users to have different home screens, wallpapers, and general settings. They also get separate access to applications and memory storage for files such as music and photos. You can add up to seven Regular User accounts on your device.

To Add a Regular User Account

- 1 Be sure you are logged in as the owner, that is, the user who set up the device for the first time.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Users > Add user or profile > User**.
 - 4 Tap **OK > SET UP NOW**. The screen locks, and an icon representing the newly added user appears in the top-right corner.
 - 5 Unlock the screen, for example by swiping or entering your PIN.
 - 6 Follow the on-screen instructions to complete the procedure.
- 💡 You can also add a Regular User account from the status bar on any screen. Just drag the status bar downward using two fingers and tap the user icon, then tap **Add user**.


To Delete a Regular User Account from Your Device

- 1 Be sure you are logged in as the owner.
- 2 From your **Home screen**, tap .
- 3 Find and tap **Settings > Users**.
- 4 Tap  beside the name of the user who you want to delete, and then tap **Remove user > Delete**.


About the Guest User Account

If someone just wants to use your device temporarily, you can enable a guest account for that user. In Guest mode, your device starts up as a freshly installed system with only the preinstalled apps. Once your guest is finished using your device, you can wipe the session clean so that the next guest can start fresh. The Guest User account is preinstalled and cannot be deleted.

To Set Up the Guest User Account

- 1 Be sure you are logged in as the owner, that is, the user who set up the device for the first time.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Users > Guest**.
 - 4 Follow the on-screen instructions to complete the procedure.
- 💡 You can also set up a guest user account from the status bar on any screen. Just drag the status bar downward using two fingers and tap the user icon, then tap **Add guest**.

To Clear the Guest Session Data

- 1 Be sure you are logged in as a guest user.
 - 2 From your Homescreen, tap .
 - 3 Find and tap **Settings > Users**.
 - 4 Find and tap **Remove guest**.
 - 5 Tap **Remove**.
- 💡 You can also clear the guest session from the status bar on any screen. Just drag the status bar downward using two fingers and tap the user icon, then tap **Remove guest**.

Switching between Multiple User Accounts

To Switch between Multiple User Accounts

- 1 To view the list of users, drag the status bar downward using two fingers, then tap the user icon at the top right of the screen.
 - 2 Tap the icon representing the user account you want to switch to.
 - 3 If a password has been set for the account, enter this password to log in. Otherwise, just unlock the screen.
- 💡 When you switch to the guest account, tap **Start over** if you want to wipe the previous session or tap **Yes, continue** to continue the previous session.

Settings for Multiple User Accounts

There are three different types of settings on devices with multiple users:


- Settings that can be changed by any user and affect all users. Examples include language, Wi-Fi, Airplane mode, NFC, and Bluetooth®.
- Settings that only affect an individual user account. Examples include automatic data syncing, screen lock, various accounts added, and wallpaper.
- Settings that are only visible to the owner and affect all users, for example, VPN settings.




Typing text

On-Screen Keyboard

You can enter text with the on-screen QWERTY keyboard by tapping each letter individually, or you can use the Gesture input feature and slide your finger from letter to letter to form words. If you prefer to use a smaller and moveable version of the on-screen keyboard, you can activate the thumb keyboard or the mini keyboard instead.

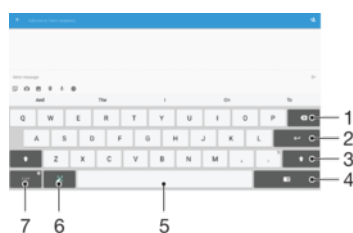You can select up to three languages for text input. The Smart language detection feature detects the language you are using and predicts the words for that language as you type.



- 1 Delete a character before the cursor.
- 2 Enter a carriage return or confirm text input.
- 3 Switch between lower-case , upper-case , and caps . For some languages, this key is used to access extra characters in the language.
- 4 Shift to the moveable thumb keyboard or the mini keyboard.
- 5 Enter a space.
- 6 Personalize your keyboard. This key disappears after the keyboard is personalized.
- 7 Display numbers and symbols. For even more symbols, tap 1|2.

To display the on-screen keyboard to enter text

- Tap a text entry field.

To use the on-screen keyboard in landscape orientation

- When the on-screen keyboard is displayed, turn the device sideways.
- ! You may need to adjust the settings in some applications to enable landscape orientation.


To enter text character by character

- 1 To enter a character visible on the keyboard, tap the character.
- 2 To enter a character variant, touch and hold a regular keyboard character to get a list of available options, then select from the list. For example, to enter "é," touch and hold "e" until other options appear, then, while keeping your finger pressed on the keyboard, drag to and select "é."

To enter a period

- After you enter a word, double-tap the space bar.




To enter text using the Gesture input function



- 1 When the on-screen keyboard is displayed, slide your finger from letter to letter to trace the word that you want to write.
- 2 After you finish entering a word, lift up your finger. A word suggestion appears based on the letters that you have traced.
- 3 If the word that you want does not appear, tap  to see other options and select accordingly. If the desired option does not appear, delete the entire word and trace it again, or enter the word by tapping each letter individually.

To Enable or Disable the Gesture Input

- 1 When the on-screen keyboard is displayed, tap .
- 2 Tap , then tap **Keyboard settings**.
- 3 Tap the **Gesture input** slider.

To Use the One-Handed Keyboard




- 1 Open the on-screen keyboard in portrait orientation, then tap .
- 2 Tap , then tap **One-handed keyboard**.
- 3 To move the one-handed keyboard to the left or right side of the screen, tap  or  accordingly.

-  To return to the full on-screen keyboard, tap .




Entering text using voice input



When you enter text, you can use the voice input function instead of typing the words. Just speak the words that you want to enter. Voice input is an experimental technology from Google™, and is available for a number of languages and regions.

To Enable Voice Input

- 1 When the on-screen keyboard is displayed, tap .
- 2 Tap , then tap **Keyboard settings**.
- 3 Tap the **Google™ voice typing key** slider. When the function is enabled,  appears on your keyboard.

To enter text using voice input

- 1 Open the on-screen keyboard.
- 2 Tap . When  appears, speak to enter text.
- 3 When you're done, tap  again. The suggested text appears.
- 4 Edit the text manually if necessary.

-  To make the keyboard appear and enter text manually, tap .

Editing text

You can select, cut, copy and paste text as you write. You can access the editing options by double-tapping the entered text. The editing options then become available via an application bar.

Text Editing Bar

After selecting text by double-tapping on a word, an editing bar appears with several tools available:

- **Cut**
- **Copy**
- **Paste**
- **Share**
- **Select all**
- **Assist**

-  The **Paste** option only appears when you have text saved on the clipboard.

To select text

- 1 Enter some text, then double-tap the text. The word you tap gets highlighted by tabs on both sides.
- 2 Drag the tabs to the left or right to select more text.

To edit text

- 1 Enter some text, then double-tap the entered text to make the application bar appear.
- 2 Select the text that you want to edit, then use the application bar to make your desired changes.

To use the magnifier



- When you enter text, tap and hold on the text field to view the text magnified and to place the cursor where you want within the text field.

Personalizing the On-Screen Keyboard



When entering text using the on-screen keyboard, you can access keyboard and other text input settings that help you, for example to set options for writing languages, text prediction and correction. You can get word suggestions for one language at a time by deactivating the Smart language detection feature.

The keyboard can use text that you have written in messaging and other applications to learn your writing style. There is also a Personalization guide that runs you through the most basic settings to get you started quickly. You can select to use other keyboards and switch between keyboards. For example, you can select the Xperia™ Chinese keyboard or the Xperia™ Japanese keyboard.


To access the on-screen keyboard settings

- 1 When you enter text using the on-screen keyboard, tap .
- 2 Tap , then tap **Keyboard settings** and change the settings as desired.
- 3 To add a writing language for text input, tap **Writing languages** and mark the relevant checkboxes.
- 4 Tap **OK** to confirm.


To change the word suggestion settings

- 1 When you enter text using the on-screen keyboard, tap .
- 2 Tap , then tap **Keyboard settings** > **Word suggestions**.
- 3 Select an option.

To Select a Different Keyboard

- 1 When you enter text using the on-screen keyboard, tap  at the bottom-right of the screen.
- 2 Select an option.



To Change Writing Language Using the On-Screen Keyboard

- When you enter text using the on-screen keyboard, tap the writing language icon to switch between the selected writing languages. For example, tap  until the desired writing language appears.
- ! This feature is only available if you have added more than one input language.



To use your writing style

- 1 When you enter text using the on-screen keyboard, tap .
- 2 Tap , then tap **Keyboard settings** > **Use my writing style** and select a source.

To Enable or Disable Smart Language Detection


- ! Smart language detection is only available for languages that use the Latin alphabet.
- 1 When the on-screen keyboard is displayed, tap .
 - 2 Tap , then tap **Keyboard settings**.
 - 3 Tap **Writing languages** and check the boxes for the languages you want to use.
 - 4 Tap the **Smart language detection** slider.

To Select a Keyboard Layout Variant

- ! Layout variants for the on-screen keyboard may not be available for all writing languages. You can select different keyboard layouts for each writing language.
- 1 When you enter text using the on-screen keyboard, tap 12!?.
- 2 Tap , then tap **Keyboard settings**.
- 3 Tap **Writing languages**, then tap  beside a writing language.
- 4 Select a keyboard layout variant.
- 5 Tap **OK** to confirm.




Contacts

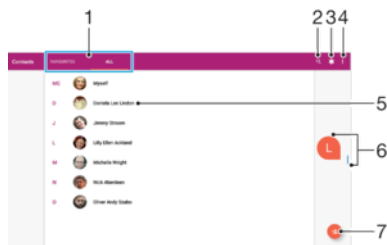Searching and viewing contacts






- 1 Favorites and All contacts tabs
- 2 Search for contacts
- 3 Edit and view medical and emergency information
- 4 View more options
- 5 View contact details
- 6 Use the slider to jump to contacts starting with the selected letter
- 7 Add a contact

To Search for a Contact




- 1 From your **Home screen**, tap , then tap .
- 2 Tap  and enter a name or other information in the **Find contacts** field. The results list is filtered as you enter each character.

To Select Which Contacts to Display in the Contacts Application




- 1 From your **Home screen**, tap , then tap .
- 2 Press , then tap **Contacts to display**.
- 3 In the list that appears, select the desired option. If you have synchronized your contacts with a synchronization account, that account appears in the list.
- 4 To further expand the list of options, tap **Customize**, select the appropriate drop-down list and mark or unmark the checkboxes as desired.
- 5 When you're done, tap **OK**.

Adding and editing contacts

To Add a Contact





- 1 From your **Home screen**, tap , then tap .
 - 2 Tap .
 - 3 If you synchronized your contacts with one or more accounts and you are adding a contact for the first time, you must select the account you want to add the contact to. Alternatively, tap **Tablet contact** if you only want to use and save this contact on your device.
 - 4 Enter or select the desired information for the contact.
 - 5 When you are done, tap **SAVE**.
- ! Once you save a contact to an account, that account will show as the default account to save to the next time you add a contact. If you want to change which account a contact is saved to, you need to create the contact again and save it to the correct account.

To Edit a Contact

- 1 From your **Home screen**, tap , then tap .
- 2 Tap the contact you want to edit, then tap .
- 3 Edit the desired information.
- 4 When you are done, tap **SAVE**.



 
! Some synchronization services do not allow you to edit contact details.

To Add a Picture to a Contact




- 1 From your **Home screen**, tap , then tap .
- 2 Tap the contact you want to edit, then tap .
- 3 Tap , then select a method for adding the contact picture and edit it as desired.
- 4 After you add the picture, tap **SAVE**.

💡 You can also add a picture to a contact directly from the **Album** application. If you want to add a picture that is saved to an online account, you must download the picture first.

To Delete Contacts

- 1 From your **Home screen**, tap , then tap .
- 2 Touch and hold the contact that you want to delete.
- 3 To delete several or all contacts, mark the checkboxes beside the contacts that you want to delete.
- 4 Tap , then tap **Delete contact**.
- 5 Tap **DELETE** to confirm.

To Edit Contact Information About Yourself

- 1 From your **Home screen**, tap , then tap .
- 2 Tap **ME**, then tap .
- 3 Enter the new information or make the changes you want.
- 4 When you are finished, tap **SAVE**.



 

Transferring contacts

There are several ways to transfer contacts to your new device. You can sync contacts from an online account or import contacts directly from another device.

Transferring Contacts Using an Online Account

If you sync the contacts in your old device or your computer with an online account, for example, Google Sync™ or Microsoft® Exchange ActiveSync®, you can transfer your contacts to your new device using that account.

To Synchronize Contacts on Your New Device With a Synchronization Account




- 1 From your **Home screen**, tap , then tap .
- 2 Tap , then tap **Manage accounts**.
- 3 Select the account that you want to sync your contacts with, then tap  > **Sync now**.

! You need to be signed in to the relevant sync account before you can sync your contacts with it.

Other methods for transferring contacts

There are several other ways to transfer contacts from your old device to your new device. For example, you can copy contacts to a memory card, or use Bluetooth® technology. For more specific information about transferring the contacts from your old device, refer to the relevant User guide.

To Import Contacts From a Memory Card

- 1 From your **Home screen**, tap , then tap .
- 2 Press , then tap **Import/export** > **Import from SD card or internal storage (.vcf file)**.
- 3 Select where to store your contacts.
- 4 Tap **SD card**.
- 5 Select the files that you want to import by tapping them.

 


To import contacts using Bluetooth® technology

- 1 Make sure you have the Bluetooth® function turned on and that your device is set to visible.
- 2 When you are notified of an incoming file to your device, drag the status bar downward and tap the notification to accept the file transfer.
- 3 Tap **Accept** to start the file transfer.
- 4 Drag the status bar downward. When the transfer is complete, tap the notification.
- 5 Tap the received file and select where to store your contacts.



Favorites

Contacts that you mark as favorites appear under the Favorites tab in the Contacts application along with your most frequently used contacts or "Top contacts." This way you get quicker access to these contacts.

To mark or unmark a contact as a favorite




- 1 From the Homescreen, tap , then tap .
- 2 Tap the contact you want to add to or remove from your favorites.
- 3 Tap .

To View Your Favorite Contacts


 

- 1 From your **Home screen**, tap , then tap .
- 2 Tap **FAVORITES**.

Sending contact information



 
To Send Your Business Card

- 1 From your **Home screen**, tap , then tap .
- 2 Tap **ME**.
- 3 Tap , then tap **Share**.
- 4 Select an available transfer method and follow the on-screen instructions.



 
To Send a Contact

- 1 From your **Home screen**, tap , and then tap .
- 2 Tap the contact whose details you want to send.
- 3 Tap , then tap **Share**.
- 4 Select an available transfer method and follow the on-screen instructions.

To Send Several Contacts at Once

- 1 From your **Home screen**, tap , then tap .
- 2 Touch and hold a contact then mark or unmark the checkboxes beside the contacts that you want to share.
- 3 Tap , then tap **Share**.
- 4 Select an available transfer method and follow the on-screen instructions.




To Send All Contacts

- 1 From your **Home screen**, tap , then tap .
- 2 Press , then tap **Import/export** > **Share all contacts** to start exporting all your contacts.
- 3 Drag the status bar downward. When the export is complete, tap the notification.
- 4 Select an available transfer method and follow the on-screen instructions.





Avoiding Duplicate Entries in the Contacts Application

If you synchronize your contacts with a new account or import contact information in other ways, you could end up with duplicate entries in the Contacts application. If this happens, you can link such duplicates to create a single entry. If you link entries by mistake, you can unlink them again later.

To Link Contacts

- 1 From your **Home screen**, tap , then tap .
- 2 Tap and hold the contact that you want to link with another contact.
- 3 Tick the checkbox beside the contact that you want to link.
- 4 Tap , then tap **Link**. The information from the first contact is merged with the second contact, and the linked contacts are displayed as one contact in the Contacts list.
- 5 Tap **LINK** to confirm.



 
 
To Separate Linked Contacts

- 1 From your **Home screen**, tap , then tap .
- 2 Tap the linked contact that you want to edit, then tap .
- 3 Tap , then tap **Unlink**.
- 4 Tap **UNLINK** to confirm.


 
Backing up Contacts

You can use internal storage or a memory card to back up contacts. See *Transferring contacts* on page 64 for more information about how to restore contacts to your device.

To Export All Contacts to a Memory Card

- 1 From your **Home screen**, tap , then tap .
- 2 Press , then tap **Import/export** > **Export to SD card or internal storage (.vcf file)**.
- 3 Tap , then tap **SD card**.
- 4 Tap **SAVE**.

To Export All Contacts to Internal Storage


- 1 From your **Home screen**, tap , then tap .
- 2 Press , then tap **Import/export** > **Export to SD card or internal storage (.vcf file)**.
- 3 Tap , then tap **Show internal storage**.
- 4 Tap , then tap your device's model number beside .
- 5 Select a destination folder or simply tap **SAVE**.

Email



Setting Up Email

Use the email application on your device to send and receive email messages through your email accounts. You can have one or several email accounts at the same time, including corporate Microsoft Exchange ActiveSync accounts.

To Set Up an Email Account

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Email**.
 - 3 Follow the instructions that appear on the screen to complete the setup.
- ! For some email services, you may need to contact your email service provider for information on detailed settings for the email account.

To Add an Extra Email Account

- 1 From your **Home screen**, tap .
- 2 Find and tap **Email**.
- 3 Tap , then tap **Settings > Add account**.
- 4 Follow the on-screen instructions. If the settings for the email account cannot be downloaded automatically, complete the setup manually.
- 5 When you are done, tap **NEXT**.

Sending and Receiving Email Messages






- 1 View the menu and a list of all email accounts and folders
- 2 Sort email messages
- 3 Search for email messages
- 4 Access settings and options
- 5 Write an email message
- 6 List of email messages


 


To Download New Email Messages

- When the email inbox is open, swipe downward on the message list.
- ! Before trying to download new email messages, make that you have a working data connection.


To Read Your Email Messages

- 1 From your Homescreen, tap .
- 2 Find and tap **Email**.
- 3 If you are using several email accounts, tap  and select the account you want to check. If you want to check all your email accounts at once, tap , and then tap **Combined inbox**.
- 4 In the email inbox, scroll up or down and tap the email message you want to read.


To Create and Send an Email Message

- 1 From your Homescreen, tap , then find and tap **Email**.
- 2 If you are using several email accounts, tap  and select the account you want to send the email from.
- 3 Tap , then type the recipient's name or email address and select one or more recipients from the drop-down list.
- 4 Enter the email subject and message text, then tap .


To reply to an email message

- 1 In your email inbox, find and tap the message that you want to reply to, then tap **Reply** or **Reply all**.
- 2 Enter your reply, then tap .

To Forward an Email Message

- 1 In your email inbox, find and tap the message that you want to forward, then tap **Forward**.
- 2 Enter the recipient's name or email address, then select one or more recipients from the drop-down list.
- 3 Enter your message text, then tap .

To Save or View an Email Message Attachment


 


- 1 Find and tap the email message containing the attachment that you want to view. Email messages with attachments are indicated by .
- 2 After the email message opens, find the attachment in the email body, then tap **SAVE** or **VIEW** next to it.

To Save a Sender's Email Address to Your Contacts


 
 


- 1 Find and tap a message in your email inbox.
- 2 Tap the name of the sender, tap **Add to Contacts** then tap **OK**.
- 3 Select an existing contact, or tap **Create new contact**.
- 4 Edit the contact information, if desired, then tap **SAVE**.

Organizing your email messages


 
To Sort Your Email

- 1 From your Homescreen, tap .
- 2 Find and tap **Email**.
- 3 If you are using several email accounts, tap  and select the account containing the email you want to sort. If you want to sort email in all your email accounts at once, tap , then tap **Combined inbox**.
- 4 Tap , then select a sorting option.


To Search for Emails

- 1 From your Homescreen, tap , and then find and tap **Email**.
- 2 If you are using several email accounts, tap  and select the account you want to search. If you want to search all your email accounts at once, tap , and then tap **Combined inbox**.
- 3 Tap .
- 4 Enter your search text, and then tap  on the keyboard.
- 5 The search result appears in a list sorted by date. Tap the email message you want to open.

To View All Folders for One Email Account

- 1 From your Homescreen, tap , and then find and tap **Email**.
- 2 Tap , and then select the account you want to check.
- 3 Under the account you want to check, select **Show all folders**.

To delete email messages

- 1 Tap and hold the message that you want to delete until the device vibrates.
- 2 Mark the checkboxes for the messages that you want to delete.
- 3 Tap 



! You can also flick the message to the right to delete it.

To move an email message to another folder



- 1 In your email inbox, flick the message that you want to move to the left.
- 2 Tap **Move**, then select a folder.

Email account settings



To Remove an Email Account from Your Device

- 1 From your **Home screen**, tap .
- 2 Find and tap **Email**.
- 3 Tap , then tap **Settings**.
- 4 Select the account you want to remove.
- 5 Tap **Delete account** > **OK**.

To Change the Inbox Check Frequency

- 1 From your **Home screen**, tap .
- 2 Find and tap **Email**.
- 3 Tap , then tap **Settings**.
- 4 Select the desired account.
- 5 Tap **Check frequency** > **Check frequency** and select an option.

To Set an Out of Office Auto-Reply in an Exchange ActiveSync Account

- 1 From your **Home screen**, tap , then find and tap **Email**.
- 2 Tap , then tap **Settings**.
- 3 Select the EAS (Exchange ActiveSync) account that you want to set an Out of Office auto-reply for.
- 4 Tap **Out of office**.
- 5 Tap the slider to enable the function.
- 6 If needed, mark the **Set time range** checkbox and set the time range for the auto-reply.
- 7 Enter your Out of Office message in the body text field.
- 8 Tap **OK** to confirm.

Gmail™

If you have a Google™ account, you can use the Gmail™ application to read and write email messages.



- 1 View a list of all Gmail accounts and folders
- 2 Search for email messages
- 3 Archive an email message
- 4 Delete an email message

- 5 Mark an email message as unread
- 6 Move an email message to a folder
- 7 Access settings and options
- 8 List of email messages
- 9 Write an email message

[To Learn More about Gmail™](#)

- When the Gmail application is open, tap ≡, then find and tap **Help & feedback**.

Music and FM Radio


Transferring Music to Your Device

There are different ways to transfer music from a computer to your device:

- You can transfer music files between your device and a computer using the provided USB cable. After connecting, select **Transfer files** on your device and then simply copy and paste or drag and drop the files using the computer. See *Managing Files Using a Computer* on page 36.
 - You can use the Xperia™ Companion software to transfer your media files between the computer and your device. Learn more and download Xperia™ Companion for Windows at <http://support.sonymobile.com/tools/xperia-companion/> or Xperia™ Companion for Mac at <http://support.sonymobile.com/tools/xperia-companion-mac/>.
- ! The Music application may not support all music file formats. For more information about supported file formats and the use of multimedia (audio, image, and video) files, download the White Paper for your device at www.sonymobile.com/support/.


Listening to Music

 
Use the Music application to listen to your favorite music and audiobooks.

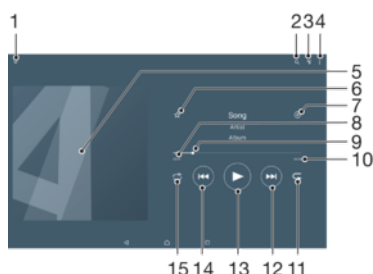




- | | |
|----|--|
| 1 | Minimize the full-screen player |
| 2 | Search all songs saved to your device |
| 3 | View the current play queue |
| 4 | View menu options |
| 5 | Album art (if available) |
| 6 | Add or remove a song as a favorite |
| 7 | Add a song to a playlist |
| 8 | Elapsed time of current song |
| 9 | Progress indicator – drag the indicator or tap along the line to fast forward or rewind |
| 10 | Total length of current song |
| 11 | Repeat all songs in the current play queue |
| 12 | Tap to go to the next song in the play queue, touch and hold to fast-forward within the current song |
| 13 | Play or pause a song |
| 14 | Tap to go to the previous song in the play queue, touch and hold to rewind within the current song |
| 15 | Shuffle songs in the current play queue |

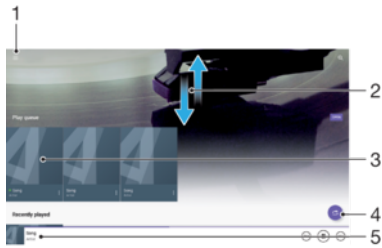Music Homescreen



- 1 Tap  in the upper-left corner to open the Music menu
- 2 Scroll up or down to view content
- 3 Play a song using the Music application
- 4 Play all songs in shuffle mode
- 5 Return to the music player screen

To Play a Song Using the Music Application


- 1 From your **Home screen**, tap , then find and tap .
- 2 Tap .
- 3 Select a music category.
- 4 Tap a song to play it.

- ! You might not be able to play copyright-protected items. Make sure you have the necessary rights for the content you wish to use.

To Find Song-Related Information Online

- While a song is playing in the Music application, tap the Album art, then tap **More about this**.
- 💡 Online resources related to the song can include videos on YouTube™, song lyrics, and artist information on Wikipedia.


To Edit Music Information and Download Album Art

- 1 From the Music application, tap the Album art, and then tap **Edit music info**.
 - 2 Edit the information as desired.
 - 3 To set or download album art, tap , then select an option.
 - 4 When you are finished, tap **SAVE**.
- 💡 You can also set album art to download automatically in the Music menu, under Settings.



To Adjust the Audio Volume

- Press the volume key up or down.

To Minimize the Music Application

- When a song is playing, tap  to go to the **Home screen**. The Music application keeps running in the background.

To Open the Music Application when it is Playing in the Background

- While a song is playing in the background, drag the status bar downward and tap the Music application.
- Alternatively, from your **Home screen**, tap , and then find and tap .




Music Menu

The Music menu gives you an overview of all the songs on your device. From here you can manage your albums and playlists.



- 1 Return to the Music homescreen
- 2 View the current play queue
- 3 Browse all playlists
- 4 Browse all artists
- 5 Browse all albums
- 6 Browse all songs
- 7 Browse all genres
- 8 Browse all folders
- 9 Play a shared music file on another device
- 10 View all subscribed or downloaded files in Podcast
- 11 Open the settings menu for the Music application
- 12 Open the support menu for the Music application

To Open the Music Menu

- 1 From your **Home screen**, tap , then find and tap .
- 2 Tap .

To Return to the Music Homescreen

- When the Music menu is open, tap **Home** or simply tap on the screen to the right of the menu.

To Delete a Song

- 1 From the Music menu, browse to the song that you want to delete.
- 2 Touch and hold the song title, then tap **Delete from storage** in the list that appears.
- 3 Tap **DELETE** to confirm.

- ! You cannot delete a song that is currently playing.

Playlists

On the Music homescreen, you can create your own playlists from the music that is saved on your device.

To Create Your Own Playlists

- 1 From the Music homescreen, touch and hold the name of the album or song that you want to add to a playlist.
 - 2 In the menu that opens, tap **Add to playlist** > **Create new playlist**.
 - 3 Enter a name for the playlist and tap **OK**.
- 💡 You can also open the Music homescreen menu, tap **Playlists**, and then tap **+** to create a new playlist.

To Play Your Own Playlists

- 1 Open the Music menu, and then tap **Playlists**.
- 2 Under **Playlists**, select the playlist you want to open.
- 3 If you want to play all songs, tap any song or **Shuffle all**.

To Add Songs to a Playlist

- 1 From the Music homescreen, browse to the song or album that you want to add to a playlist.
- 2 Touch and hold the song or the album title, then tap **Add to playlist**.
- 3 Tap the name of the playlist you want to add the album or song to. The album or song is now added to the playlist.

To Remove a Song from a Playlist

- 1 In a playlist, touch and hold the title of the song you want to remove.
- 2 Tap **Remove from playlist**.

To Delete a Playlist

- 1 Open the Music menu, then tap **Playlists**.
- 2 Touch and hold the playlist that you want to delete.
- 3 Tap **Delete from storage**.
- 4 Tap **DELETE** to confirm.

! You cannot delete smart playlists.

Sharing music

To share a song

- 1 From the Music homescreen, browse to the song or album that you want to share.
- 2 Touch and hold the song title, then tap **Share**.
- 3 Select an application from the list, then follow the on-screen instructions.

💡 You can also share albums and playlists in the same way.

Enhancing the sound

To Improve the Sound Quality Using the Equalizer


- 1 Open the Music menu, and then tap **Settings > Audio settings > Sound effects > Equalizer**.
- 2 To adjust the sound manually, drag the frequency band buttons up or down. To choose a preset arrangement, tap ▼ to select an arrangement, then tap **OK** to confirm.

 
To Turn On the Surround Sound Feature

- 1 Open the Music menu, and then tap **Settings > Audio settings > Sound effects > Surround sound (VPT)**.
- 2 Flick left or right to select a setting, and then tap **OK** to confirm.

Recognizing Music with TrackID™

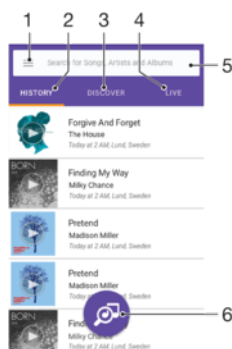


Use the TrackID™ music recognition service to identify a song you hear playing in your surroundings. Just record a short sample of the song and you'll get artist, title, and album info within seconds. You can purchase tracks identified by TrackID™ and you can view TrackID charts to see what TrackID users around the globe are searching for. For best results, use TrackID™ in a quiet area.



- 1 Tap  to open the TrackID™ homescreen menu
- 2 View the history of your previous searches
- 3 Explore top tracks, popular playlists, new songs, and more
- 4 Check out what others are tracking
- 5 Search for tracks, albums, and artists
- 6 Identify the music you're listening to

- ! The TrackID™ application and some features of the TrackID™ service may not be supported in all countries or regions or by all networks or service providers. TrackID™ can be connected to music streaming services available in your country.



To Identify Music Using TrackID™ Technology

- 1 From your **Home screen**, tap .
 - 2 Find and tap **TrackID™**, then hold your device close to the music source.
 - 3 Tap . If the song is recognized by the TrackID™ service, the results appear on the screen.
- 💡 To return to the **TrackID™** start screen, tap .

To View Artist Information for a Song

- 1 After a song is recognized by the **TrackID™** application, the result is displayed on the TrackID™ homescreen.
- 2 Scroll to the result you want to view and then tap to open it.

To Delete a Song from the Track History

- 1 Open the **TrackID™** application, then browse to the song you want to delete.
- 2 Touch and hold the screen to display .
- 3 Tap .


To Use TrackID™ LIVE

You can use TrackID™ LIVE to see real-time LIVE trackings from around the world.

- Open the **TrackID™** application, then tap the **LIVE** tab.
- 💡 You can change how fast you want to get the trackings and you can mute or unmute the song previews.



Listening to the Radio

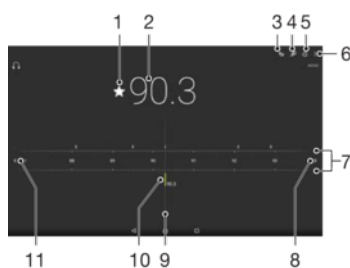The FM radio in your device works like any FM radio. For example, you can browse and listen to FM radio stations and save them as favorites. You must connect a wired headset or headphones to your device before you can use the radio. This is because the headset or headphones act as an antenna. After one of these devices is connected, you can then switch the audio to the speaker, if desired.



- 1 Save or remove a channel as a favorite
- 2 Tuned frequency
- 3 Favorites list
- 4 Launch the TrackID™ music recognition application
- 5 Radio on/off button
- 6 View menu options
- 7 Frequency band – drag left or right to move between channels
- 8 Move up the frequency band to search for a channel
- 9 Tuning dial
- 10 A saved favorite channel
- 11 Move down the frequency band to search for a channel


To Listen to the FM Radio

- 1 Connect a headset or a set of headphones to your device.
 - 2 From your **Home screen**, tap .
 - 3 Find and tap . The available channels appear as you scroll through the frequency band.
- ! When you start the FM radio, available channels appear automatically. If a channel has RDS information, it appears a few seconds after you start listening to the channel.



To Move between Radio Channels

- Drag the frequency band left or right.
- Alternately, tap the arrows on either side of the band to jump to the next clear radio signal.



To start a new search for radio channels

- 1 When the radio is open, tap .
- 2 Tap **Search for channels**. The radio scans the whole frequency band and marks all available channels.

To switch the radio sound to the speaker


- 1 When the radio is open, press .
 - 2 Tap **Play in speaker**.
- 💡 To switch the sound back to the wired headset or headphones, press  and tap **Play in headphones**.

To Identify a Song on the FM Radio Using TrackID™

- 1 While the song is playing on your device's FM radio, tap , then select **TrackID™**.
 - 2 A progress indicator appears while the TrackID™ application samples the song. If identification is successful, you are presented with a result or a list of possible results.
 - 3 To return to the FM radio, tap .
- ! The TrackID™ application and the TrackID™ service are not supported in all countries or regions, nor by all networks or service providers.

Favorite radio channels


To Save a Channel as a Favorite

- 1 When the radio is open, navigate to the channel that want to save as a favorite.
- 2 Tap .
- 3 Enter a name and select a color for the channel, then press **Save**.

To listen to a favorite radio channel



- 1 Tap .
- 2 Select an option.

To Remove a Channel as a Favorite

- 1 When the radio is open, navigate to the channel that you want to remove.
- 2 Tap , then tap **DELETE**.

Radio Sound Settings

To switch between mono and stereo sound mode


- 1 When the radio is open, press .
- 2 Tap **Enable stereo sound**.
- 3 To listen to the radio in mono sound mode again, press  and tap **Force mono sound**.

To select the radio region

- 1 When the radio is open, press .
- 2 Tap **Set radio region**.
- 3 Select an option.

Camera

Taking Photos and Recording Videos

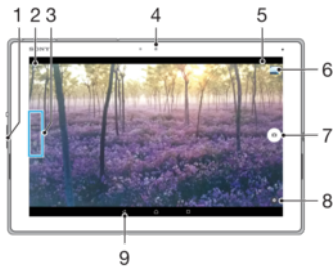

- | | |
|---|--|
| 1 | Zoom in or out |
| 2 | Switch between the front and main camera |
| 3 | Select capturing mode |
| 4 | Front camera |
| 5 | Save location |
| 6 | View photos and videos |
| 7 | Take photos or record videos |
| 8 | Capturing mode settings |
| 9 | Go back a step or exit camera |

To Take a Photo From the Lockscreen

- 1 To activate the screen, briefly press the power key .
- 2 To activate the camera, touch and hold , then swipe it anywhere.
- 3 After the camera opens, tap .

To Take a Photo by Tapping the On-Screen Camera Button

- 1 Activate the camera.
- 2 Point the camera toward the subject.
- 3 Tap the on-screen camera button . The photo is taken as soon as you release the camera button.

To Take a Selfie Using the Front Camera

- 1 Activate the camera.
- 2 Tap .
- 3 To take the photo, tap the on-screen camera button .


To Use the Zoom Function

- When the camera is open, pinch or spread on the camera screen.
- You can also use the volume key, pressing up or down. To enable this function, tap , then tap **More** > **Use Volume key as**.

To Record a Video

- 1 Activate the camera.
- 2 If video mode is not selected, swipe the screen to select .
- 3 Point the camera toward the subject.
- 4 To start recording, tap .
- 5 To pause when recording a video, tap . To resume recording, tap .
- 6 To stop recording, tap .


To Take a Photo when Recording a Video

- To take a photo while recording a video, tap . The photo is taken as soon as you release the camera button.

To view your photos and videos

- 1 Activate the camera, then tap a thumbnail to open a photo or video.
- 2 Flick left or right to view your photos and videos.





To Delete a Photo or Video

- 1 Find the photo or video you want to delete.
- 2 Tap the screen to display the toolbar.
- 3 Tap .
- 4 Tap **DELETE** to confirm.









General camera settings

Capturing Modes

- 💡 Swipe the screen to select the desired capturing mode or the application list.

-  **Manual**
Manually adjust camera settings such as resolution, white balance, and ISO.
-  **Superior auto**
Optimize your settings to suit any scene.
-  **Video camera**
Manually adjust video settings such as resolution and focus mode.
-  **Camera apps**
Select camera applications manually.




Camera Apps

-  **Sound Photo**
Take photos with background sound.
-  **Multi camera**
Record the same scene from multiple angles on a single screen.
-  **Face in picture**
Take photos using the front and rear cameras at the same time.
-  **AR effect**
Take photos or videos with virtual scenes and characters.
-  **Creative effect**
Apply effects to photos or videos.
-  **Sweep Panorama**
Take wide-angle and panoramic photos.
-  **AR mask**
Mask your face with features from the face of someone else to take fun selfies.
-  **Timeshift burst**
Find the best photo from a burst of images.

Sweep Panorama

You can take wide-angle and panoramic photos from the horizontal or vertical direction in an easy press-and-sweep motion.

To Take a Panoramic Photo

- 1 Activate the camera.
- 2 Swipe the screen to select , and then select .
- 3 To select a shooting direction, tap .
- 4 Tap the screen and move the camera slowly and steadily in the direction of movement indicated on the screen.

AR effect

You can apply AR (augmented reality) effects to your photos or videos and make them more fun. When using the camera, this setting lets you integrate 3D scenes into your photos or videos. Just select the scene you want and adjust its position in the viewfinder.




Face in Picture

You can use the Face in Picture mode to turn on the front and main cameras at the same time, so you can take a photo of yourself together with the subject.

Timeshift Burst

The camera takes a burst of 61 photos in a window of two seconds—one second before and after you tap the on-screen camera button. So you can go back and find the perfect image.

To Use Timeshift Burst

- 1 Activate the camera.
- 2 Swipe the screen to select , then select .
- 3 Take photos. The photos taken appear in thumbnail view.
- 4 Scroll through the thumbnails and select the photo you want to save, then tap .






Multi-Camera Mode

Multi-camera mode lets you shoot a photo or video that combines different angles from two different sources. Two camera displays appear on your device screen: one from your device's camera, the other from a connected Xperia® device or a Sony camera that supports NFC and Wi-Fi Direct® technology.

So if you're at a concert venue, for example, and you want to capture a photo or video that combines a view of the band from one angle and the audience from another, you can use Multi-camera mode for the best effect.

You can set up Multi-camera mode using NFC, which launches the pairing of the two devices using Wi-Fi Direct® technology.



 


To Use Multi-Camera Mode

- 1 Turn on the NFC function on both devices that you want to connect.
- 2 Activate the camera on your device.
- 3 Swipe the screen to select , and then select .
- 4 On the screens of both devices, tap .
- 5 Touch the NFC detection areas of each device together. Both devices should now connect using Wi-Fi Direct® technology.
- 6 Once the devices are connected, two camera displays appear on your device screen—one from your device's camera, the other from the camera of the connected device.
- 7 To rearrange or reshape the camera displays, tap .
- 8 When you are finished editing and are ready to capture the final combined photo or video, tap **Done** > .

AR Mask

Use the AR mask feature to mask a selfie of your face with facial features from another person or from an animal. For example, you can fuse your face with the face of a friend to make amusing hybrid selfies.



To use the AR mask feature

- 1 Activate the camera.
- 2 Swipe the screen to go to , then select .
- 3 Point the camera towards a face, then select the mask that you want to apply.
- 4 To take a photo, first tap  to hide all masks, then tap .
- 5 To display all mask types again, locate a face in the colored frame that appears in your camera viewfinder, then tap .

Downloading Camera Applications

You can download free or paid camera applications from Google Play™ or other sources. Before you start downloading, make sure you have a working internet connection, preferably over Wi-Fi to limit data traffic charges.

To Download Camera Applications

- 1 Open the camera application.
- 2 Swipe the screen to select , and then tap .
- 3 Select the application that you want to download, and follow the instructions to complete the installation.

Auto Face Detection

The camera automatically detects faces and indicates them with frames. A colored frame shows which face has been selected for focus. The focus is set to the face closest to the center of the camera. You can also tap one of the frames to select which face should be in focus.

Auto-Capturing

Turn on auto-capturing to take pictures automatically using one of the options below.

 
Smile Shutter

Use Smile Shutter™ technology to photograph a face just as it smiles. The camera detects up to five faces and selects one face for smile detection and auto focus. When the selected face smiles, the camera automatically takes a photo.

Off



When auto-capturing is off, you can take photos using the shutter button or the camera key.

To Turn On Smile Shutter™

- 1 Activate the camera.
- 2 Tap .
- 3 Find and tap **Auto capturing** > **Smile Shutter**.
- 4 When the camera is open and **Smile Shutter** is turned on, point the camera at your subject. The camera selects which face to focus on.
- 5 The face appears inside a colored frame and the photo is taken automatically as soon as a smile is detected.
- 6 If no smile is detected, you can press the camera key to take the photo manually.


Saving a Photo's Geographic Location

Enable the Saving location function to geotag your photos, saving the approximate geographical location as you shoot. The geographical location is determined by wireless networks and GPS technology.

When  appears on the camera screen, Saving location is turned on but the geographical position has not been found. When  appears, Saving location is turned

on and the geographical location is available, so the geographical location can be added to your photo. When neither of these two symbols appears, Saving location is disabled.

To Turn On Geotagging

- 1 Activate the camera.
- 2 Tap .
- 3 Tap **More**, then tap the slider beside **Save location** to enable or disable the function.
- 4 If you are enabling geotagging, you are prompted to enable Location services if they are not already enabled. Tap **OK**, then tap the **Location** slider.

Touch Capture

With Touch capture, simply tap anywhere on the camera screen to take a photo.


On

Only front camera

Off

Grid Lines

You can use grid lines as a visual aid while shooting to help you find the right composition for your photo.

-  Grid lines are only shown on the camera screen while shooting and do not appear in the final photo.

Auto photo preview

You can choose to preview photos just after you shoot them.

On

After you shoot a photo, a preview of it appears in the lower-right corner of the screen for 3 seconds.

Only front camera

After you shoot a photo with the front camera, a preview of it appears in the lower-right corner of the screen for 3 seconds.

Off

The photo or video is saved after you shoot it, and no preview appears.

Use Volume Key as

You can choose how you want to use the volume key when taking photos.

Zoom

Use the volume key to zoom in or out.

Volume

Use the volume key to adjust the volume of notifications, ringtones and music.

Shutter

Use the volume key to take photos.

Sound

When you take a photo or start recording a video, the camera makes a shutter sound. If you use the self-timer, it will make a series of beeps to mark the countdown. You can choose to turn these sounds on or off.

Data storage

You can choose to save your data either to a removable SD card or to your device's internal storage.

Internal storage

Photos or videos are saved on the device memory.


SD card

Photos or videos are saved on the SD card.

Quick Launch

Use Quick launch settings to launch the camera when the screen is locked.

Launch only

After you drag  inward, the main camera is launched from sleep mode.

Launch and capture


After you drag  inward, the still camera is launched from sleep mode and a photo is captured.

Launch and record video


After you drag  inward, the video camera is launched from sleep mode and starts recording.

Off

To Adjust Color and Brightness

- 1 Activate the camera.
 - 2 Tap  > **Color and brightness**.
 - 3 Drag the sliders to the desired positions to adjust color and brightness.
- ! This setting is only available in the Superior auto and Video camera modes.

White Balance

This setting, which is only available in **Manual** capturing mode, adjusts the color balance according to the lighting conditions. You can also adjust the exposure manually in the -2.0 EV to +2.0 EV range. For example, you can increase the image brightness or decrease the overall exposure by tapping the plus or minus controls accordingly when the white balance setting icon  is displayed.



Auto

Adjusts the color balance automatically to suit the lighting conditions.



Incandescent

Adjusts the color balance for warm lighting conditions, such as under light bulbs.



Fluorescent

Adjusts the color balance for fluorescent lighting.



Daylight

Adjusts the color balance for sunny outdoor conditions.




Cloudy

Adjusts the color balance for a cloudy sky.

Still camera settings

To adjust the still camera settings

- 1 Activate the camera.
- 2 To display all settings, tap .
- 3 Select the setting that you want to adjust, then edit as desired.

Still camera settings overview

Resolution

Choose between several resolutions and aspect ratios before taking a photo. A photo with a higher resolution requires more memory.

8MP

3264×2448(4:3)

8 megapixel resolution with 4:3 aspect ratio. Suitable for photos that you want to view on non-widescreen displays or print in high resolution.

6MP**3264×1836(16:9)**

6 megapixel picture size with 16:9 aspect ratio. Suitable for photos that you want to view on non-widescreen displays or print in high resolution.

3MP**2048×1536(4:3)**

3 megapixel resolution with 4:3 aspect ratio. Suitable for photos that you want to view on non-widescreen displays or print in high resolution.

2MP**1920×1080(16:9)**

2 megapixel resolution with 16:9 aspect ratio. Suitable for photos you want to view on widescreen displays.

! This setting is only available in **Manual** capturing mode.

Self-Timer

With the self-timer, you can take a photo without holding the device. Use this function to take self-portraits or group photos with everyone in the photo. You can also use the self-timer if you want to avoid shaking the camera when taking photos.

10 sec.

Set a 10-second delay in taking the photo from when you tap the shutter button or press the camera key.

3 sec.

Set a 3-second delay in taking the photo from when you tap the shutter button or press the camera key.

Off

The photo is taken as soon as you tap the shutter button or press the camera key.

Soft Skin Effect

You can turn on the **Soft skin effect** on your device to make skin tones slightly softened while taking selfies in **Manual** and **Superior auto** capturing modes.

Object Tracking

When you select an object by touching it in the viewfinder, the camera tracks it for you.

HDR

Use the HDR (High Dynamic Range) setting to take a photo against strong backlight or in conditions where the contrast is sharp. HDR compensates for the loss of detail and produces a picture that is representative of both dark and bright areas.

! This setting is only available in **Manual** capturing mode.

ISO

You can reduce image blurring caused by dark conditions or moving subjects by increasing the ISO sensitivity. Also, if you want to capture a bright image even in dark conditions, you can set the ISO sensitivity to a higher value.

Auto

Sets the ISO sensitivity automatically.

50

Sets the ISO sensitivity to 50.

100

Sets the ISO sensitivity to 100.

200

Sets the ISO sensitivity to 200.

400

Sets the ISO sensitivity to 400.

800

Sets the ISO sensitivity to 800.

1600

Sets the ISO sensitivity to 1600.

! This setting is only available in **Manual** capturing mode.

Metering

This function automatically determines a well-balanced exposure by measuring the amount of light striking the image you want to capture.

Face

Measures the amount of light on the face, and adjusts the exposure so that the face is neither too dark nor too bright.

Multi

Divides the image into multiple regions, and measures each region to determine a well-balanced exposure.

Center

Measures the center of the image, and determines the exposure based on the brightness of the subject there.

Spot

Adjusts the exposure in a very small part of the image that you want to capture.

! This setting is only available in **Manual** capturing mode.

Scene Selection

Use the Scene Selection feature to quickly set up the camera for common situations using pre-programmed scenes. The camera determines a number of settings for you to fit the selected scene, ensuring the best possible photo.

SCN Off

The Scene Selection feature is off and you can take photos manually.



Soft skin

Take portraits using an enhanced beauty effect.



Soft snap

Use for shooting photos against a soft background.



Anti motion blur

Use for minimizing camera shake when shooting a slightly dark scene.



Landscape

Use for landscape photos. The camera focuses on distant objects.



Backlight correction HDR

Use to improve details in high-contrast shots. The built-in backlight correction analyzes the image and automatically adjusts it to give you a perfectly lit shot.



Night portrait

Use for portrait photos taken at night or in poorly lit environments. Due to the long exposure time, the camera must be held still or placed on a stable surface.



Night scene

Use when taking photos at night or in poorly lit environments. Due to the long exposure time, the camera must be held still or placed on a stable surface.



Hand-held twilight

Use for taking hand-held low-light photos with reduced noise and blur.



High sensitivity

Use for taking photos without a flash in low-light conditions. Reduces blur.



Gourmet

Use for shooting food arrangements in bright color.



Pet

Use for taking photos of your pet. Reduces blur and red eyes.



Beach

Use for taking photos of seaside or lakeside scenes.



Snow

Use in bright environments to avoid overexposed photos.



Party

Use for indoor photos in poorly lit environments. This scene picks up indoor background lighting or candlelight. Due to the long exposure time, the camera must be held still or placed on a stable surface.



Sports

Use for taking photos of fast-moving objects. Short exposure time minimizes motion blurring.



Document

Use for photos of text or drawings. Gives the photo sharper contrast.





Fireworks

Use for taking photos of fireworks in all their glory.

! These settings are only available in **Manual** capturing mode.

Video camera settings

To Adjust the Video Camera Settings

- 1 Activate the camera.
- 2 Swipe the screen to select .
- 3 To display settings, tap .
- 4 Select the setting you want to adjust, then make your changes.

Video camera settings overview

Scene Selection

The Scene selection feature helps you quickly set up the camera for common situations using pre-programmed video scenes. Each scene setting is designed to produce the best possible video quality in a specific recording environment.

AUTO

Auto

Scene selection is automatic.

SCN

Off

The Scene selection feature is off and you can shoot videos manually.



Soft snap

Use for shooting videos against soft backgrounds.



Landscape

Use for videos of landscapes. The camera focuses on distant objects.



Night scene

When turned on, light sensitivity is increased. Use in poorly lit environments. Videos of fast-moving objects may get blurred. Hold your hand steady, or use a support. Turn off night mode when lighting conditions are good to improve the video quality.



Beach

Use for videos of seaside or lakeside scenes.



Snow

Use in bright environments to avoid overexposed videos.



Sports

Use for videoing fast-moving objects. Short exposure time minimizes motion blurring.



Party

Use for indoor videos in poorly lit environments. This scene picks up indoor background lighting or candlelight. Videos of fast-moving objects may get blurred. Hold your hand steady, or use a support.

Video Resolution

Adjust the video resolution for different formats.

Full HD

1920×1080(16:9)

Full HD (Full High Definition) format with 16:9 aspect ratio.

HD

1280×720(16:9)

HD (High Definition) format with 16:9 aspect ratio.

VGA

640×480(4:3)

VGA format with 4:3 aspect ratio.

MMS

Record videos suitable for sending in multimedia messages. The recording time of this video format is limited so that video files can fit in a multimedia message.

Auto-Capturing (Video)

Turn on auto-capturing to take pictures automatically while recording a video. When using the Smile Shutter™ feature, the camera automatically takes snapshots of smiling faces while you continue to record your video.

To Turn On Smile Shutter™ (Video)

- 1 Activate the camera.
- 2 Tap .
- 3 Find and tap **Auto capturing (video)** > **Smile Shutter**.

SteadyShot™

When recording a video, it can be difficult to hold the device steady. The stabilizer helps by compensating for the small movements of your hand.

Intelligent active

Activate to compensate for major and minor camera shakes.

Standard


Activate to remove the high-frequency camera shakes.

Off

The stabilizer is turned off.

Further Camera Support Information


Use the Help menu to search for camera-related tests and other useful information. To access support, follow the steps below.

- 1 Open the camera application.
- 2 Tap , then tap **More** > **Help**

Photos and videos in Album

Viewing Photos and Videos

Use the Album application to view photos and play videos you've taken with your camera, or to view similar content you've saved to your device. All photos and videos are displayed in a chronologically ordered grid.

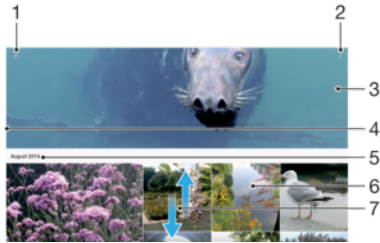

- 1 Tap to open the Album Homescreen menu
- 2 View menu options
- 3 A slideshow of all your photos and videos, or the ones you added to favorites
- 4 Drag the left edge of the screen to the right to open the Album Homescreen menu
- 5 The date of items in the group
- 6 Tap a photo or video to view it
- 7 Scroll up or down to view content

To View Photos and Videos

- 1 From your Homescreen, tap .
 - 2 Find and tap **Album**.
 - 3 Tap a photo or video you want to view. If prompted, tap .
 - 4 Flick left to view the next photo or video. Flick right to view the previous photo or video.
- To set the screen to rotate automatically when turned sideways, tap **Auto-rotate screen** under **Settings > Display > Screen rotation**.

To change the size of the thumbnails

- When viewing thumbnails of photos and videos in Album, spread two fingers apart to zoom in, or pinch two fingers together to zoom out.

To zoom a photo

- When you are viewing a photo, spread two fingers apart to zoom in, or pinch two fingers together to zoom out.


To Watch a Slideshow of Your Photos

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap > **Slideshow** to start playing all the photos in an album.
- 2 Tap a photo to end the slideshow.

To Play a Video

- 1 In Album, find and tap the video you want to play.
- 2 Tap .
- 3 If the playback controls are not displayed, tap the screen to display them. To hide the controls, tap the screen again.

To Pause a Video

- 1 When a video is playing, tap the screen to display the controls.
- 2 Tap .

To Fast-Forward and Rewind a Video

- 1 When a video is playing, tap the screen to display the controls.
- 2 Drag the progress bar marker left to rewind, or right to fast-forward.

To Adjust the Sound Volume of a Video


- Press the volume key up or down.

Sharing and Managing Photos and Videos


You can share photos and videos that you've saved on your device. You can also manage them in different ways. For example, you can work with photos in batches, delete photos, and link them to contacts. If you have lots of photos saved on your device, it's a good idea to routinely transfer them to a computer or to an external storage device in order to avoid any inadvertent loss of data. Doing so also frees up more space on your device. See *Managing Files Using a Computer* on the 36 page.

- ! You might not be able to copy, send, or transfer copyright-protected items. Also, some items may not send if the file size is too large.


To Share a Photo or Video

- 1 In Album, find and tap the photo or video you want to share.
- 2 Tap the screen to display the toolbars, then tap .
- 3 Tap the application you want to use to share the photo, then follow the steps to send it.


To Use a Photo as a Contact Picture

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap  > **Use as > Contact photo.**
- 2 Select a contact, then edit the photo as desired.
- 3 Tap **SAVE**.


To Use a Photo as Wallpaper

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap  > **Use as > Wallpaper.**
- 2 Follow the instructions on the screen.


To Rotate a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 Tap **Rotate**, and then select an option. The photo is saved in the new orientation.

To Delete a Photo or Video

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 Tap **DELETE**.


To Work with Batches of Photos or Videos in Album

- 1 When viewing thumbnails of photos and videos in Album, touch and hold an item until it's highlighted.
- 2 Tap other items you want to work with to select them. If you want to select all items, tap , then tap **Select all**.
- 3 Use the tools in the toolbar to work with your selected items.




Editing photos with the Photo editor application

You can edit and apply effects to original photos that you've taken with your camera. For example, you can change the light effects. After you save the edited photo, the original unchanged version of the photo remains on your device.





To edit a photo

- When you are viewing a photo, tap the screen to display the toolbars, then tap .



To Crop a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap  > **Crop**.
- 4 Tap **Crop** to select an option.
- 5 To adjust the crop frame, touch and hold the edge of the crop frame. When the circles at the edges disappear, drag inward or outward to resize the frame.
- 6 To resize all sides of the crop frame at the same time, touch and hold one of the four corners. When the circles at the edges disappear, drag the corner accordingly.
- 7 To move the crop frame to another area of the photo, touch and hold inside the frame, then drag it to the desired position.
- 8 Tap .
- 9 To save a copy of the cropped photo, tap **SAVE**.



To Apply Special Effects to a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap , , or , then select an option.
- 4 Edit the photo as desired, and then tap **SAVE**.



To Add a Photo Frame Effect to a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap , then select an option.
- 4 To save a copy of the edited photo, tap **SAVE**.

To Adjust the Light Settings for a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap , then select an option and edit as desired.
- 4 To save a copy of the edited photo, tap **SAVE**.


To Set the Saturation Level of Colors in a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars, then tap .
- 2 If prompted, select **Photo editor**.
- 3 Tap , then select an option.
- 4 To save a copy of the edited photo, tap **SAVE**.

Editing videos with the Video editor application

You can edit videos that you've taken with your camera. For example, you can trim a video to the desired length or adjust the speed of a video. After you save the edited video, the original unchanged version of the video remains on your device.


To Trim a Video

- 1 In the Album, find and tap the video you want to edit.
- 2 Tap the screen to display the toolbars, then tap .
- 3 If prompted, select **Video Editor**, and then tap **Trim**.
- 4 To move the trim frame to another part of the timeline, touch and hold the edge of the trim frame and drag it to the desired position, and then tap **Apply**.
- 5 To save a copy of the trimmed video, tap **SAVE**.

To Adjust the Speed of a Video

- 1 In the Album, find and tap the video you want to play.
- 2 Tap the screen to display the toolbars, then tap .
- 3 If prompted, select **Video Editor**, and then tap **Speed**.
- 4 Select an option, touch and hold the edge of the timeline and drag it to the desired position, and then tap **Apply**.
- 5 To save a copy of the edited video, tap **SAVE**.


To Capture a Photo from a Video

- 1 In the Album, find and tap the video you want to play.
- 2 Tap the screen to display the toolbars, and then tap .
- 3 If prompted, select **Video Editor**, and then tap **Photo Capture**.
- 4 With the help of the arrows, or by dragging the marker on the progress bar, select the preferred frame that you want to capture, and then tap **Save**.

 
Hiding photos and videos

You can hide any photos and videos from the Album homescreen. Once photos and videos are hidden from the Album homescreen, they can only be viewed from the Hidden folder.

 

To Hide a Photo or Video

- 1 In Album, find and tap the photo or video you want to hide.
- 2 Tap the screen to display the toolbars, then tap .
- 3 Tap **Hide** > **OK**.

To View Your Hidden Photos and Videos

- 1 In Album, tap , then tap **Hidden**.
- 2 Tap a photo or video to view it.
- 3 Flick left to view the next photo or video. Flick right to view the previous photo or video.

To Unhide a Photo or Video

- 1 In Album, tap , then tap **Hidden**.
- 2 Tap a photo or video that you want to unhide.
- 3 Tap the screen to display the toolbars, then tap .
- 4 Tap **Don't hide**.


 
Album Homescreen Menu

From the Album homescreen menu, you can browse your photo albums, including photos and videos taken using special effects, as well as content that you have shared online via services such as Picasa™ and Facebook. Once you are logged in to such platforms, you can manage content and view online images. From the Album application, you can also add geotags to photos, perform basic editing tasks, and use methods such as Bluetooth® wireless technology and email to share content.



- 1 Return to the Album application homescreen to view all content
- 2 View your favorite photos and videos
- 3 View all videos saved on your device
- 4 View your photos on a map or in Globe view
- 5 View photos and videos you've hidden from view
- 6 View all photos and videos taken with your device's camera using special effects
- 7 View all photos and videos saved on your device in different folders
- 8 View all photos with faces
- 9 View photos and videos on other devices in the same network
- 10 Open the settings menu for the Album application
- 11 Open web support
- 12 View photos from online services

To View Photos from Online Services in Album

- 1 From your **Home screen**, tap .
- 2 Find and tap **Album**, then tap .
- 3 Tap the desired online service, and then follow the on-screen instructions to get started. All available online albums that you have uploaded to the service are displayed.
- 4 Tap any album to view its content, and then tap a photo in the album.
- 5 Flick left to view the next photo or video. Flick right to view the previous photo or video.


Viewing Your Photos on a Map

Adding location information to photos is referred to as geotagging. You can view and tag your photos on a map and show friends and family where you were when you took a particular photo. See *Saving a Photo's Geographic Location* on page 81 for more information.


 



- 1 View geotagged photos in Globe view
- 2 Search a location on the map
- 3 View menu options
- 4 Double-tap to zoom in. Pinch to zoom out. Drag to view different parts of the map
- 5 A group of photos or videos geotagged with the same location


 

To Add or Edit the Geotag of a Photo

- 1 When you are viewing a photo, tap the screen to display the toolbars.
 - 2 Tap , then tap **Add geotag** or **Edit geotag** to open the map screen.
 - 3 Tap on the map to set the location for the photo.
 - 4 To reset the location for the photo, tap the new location on the map.
 - 5 When you are done, tap **OK**.
- 💡 If you have turned on location detection and activated geotagging in the camera, you can tag your photos directly for map viewing at a later stage.

To View Geotagged Photos on a Map

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Album**.
 - 3 Tap , then tap **Places**.
 - 4 Tap the photo that you want to view on a map.
- 💡 If several photos were taken at the same location, only one of them appears on the map. The total number of photos appears in the top-right corner, for example, . To view all photos in the group, tap the cover photo, then tap one of the thumbnails at the bottom of the screen.


To View Geotagged Photos on a Globe

- 1 From your **Home screen**, tap .
- 2 Find and tap **Album**.
- 3 Tap , then tap **Places** > .
- 4 Tap the photo that you want to view on a globe.

To change the geotag of a photo

- 1 When viewing a photo on the map in Album, touch and hold the photo until its frame turns blue, then tap the desired location on the map.
- 2 Tap **OK**.

To Change the Map View

- When viewing the map in Album, tap , then switch between **Classic view** and **Satellite view**.

Videos

The Video Application

Use the Video application to play movies and other video content that you've saved or downloaded to your device. The application also serves as a TV program guide with the option to show detailed program information and related content, including social media posts about the program you are interested in. You can use the application as a fully functioning remote controller with your compatible home device. You can also play your movies on other devices that are connected to the same network or saved in the cloud.



- ! Some video files may not be playable in the Video application. The availability of the TV program guide and the remote controller vary by market and connected device.




- 1 Tap ≡ to open the Video homescreen menu
- 2 View the program guide
- 3 Refresh content
- 4 Remote controller
- 5 Search content
- 6 Switch between viewing the contents of your library, Popular shows, On Air shows, Movies, TV Series, and Recommended shows
- 7 Drag the left edge of the screen to the right to open the menu, browse content, and adjust settings
- 8 Tap a show to get detailed information and related content

To Use Your Device as a Remote Controller


 


To use your device as a remote controller with another compatible home network device, you first need to pair the two devices. In order to do this, both devices need to be connected to the same network. For more information on compatible devices, visit *Compatible device list*.

- 1 From your **Home screen**, tap , then find and tap **Video**.
- 2 Tap ≡ to open the Homescreen menu, then tap **Add device**.
- 3 Select the home device from the list.
- 4 Enter the registration number shown on the home device and follow the instructions to finish pairing.
- 5 After the successful pairing, the  icon for the remote controller function appears. You can now use your device as a fully functional remote controller for the home device.


To Change Settings

- 1 From your **Home screen**, tap , then find and tap **Video**.
- 2 Tap ≡ to open the Homescreen menu, then tap **Settings**.
- 3 Change the settings as desired.


To Play a Video

- 1 From your **Home screen**, tap , then find and tap **Video**.
- 2 Find and tap the video you want to play. If the video is not displayed on the screen, tap  to open the Homescreen menu, then find and tap the video you want to play.
- 3 To display or hide the controls, tap the screen.
- 4 To pause playing, tap . To resume playing, tap .
- 5 To rewind, drag the progress bar marker to the left. To fast-forward, drag the progress bar marker to the right.

To Change the Sound Settings While a Video is Playing

- 1 While a video is playing, tap the screen to display the controls.
- 2 Tap  > **Audio settings**, then change the settings as desired.

To Share a Video

- 1 When a video is playing, tap , then tap **Share**.
- 2 Tap the application you want to use to share the selected video, then follow the instructions provided.



Transferring Video Content to Your Device

Before you start using the Video application, it's a good idea to transfer movies, TV shows, and other video content to your device from other devices, such as a computer. There are several ways to transfer your content:




- For Windows® only: Connect your device to a computer using a USB cable and drag and drop the video files directly using the file manager application on the computer. See *Managing Files Using a Computer* on the 36 page.
- If you have a PC or an Apple® Mac® computer, use Xperia™ Companion to organize content and transfer video files to your device.

Managing video content

To View Movie Information

- 1 From your **Home screen**, tap , then find and tap **Video**.
- 2 Tap  to open the Homescreen menu, then tap **Cellular device**.
- 3 Browse through the different categories and find the desired video.
- 4 Tap the video thumbnail.

To Delete a Video

- 1 From your **Home screen**, tap , then find and tap **Video**.
- 2 Tap  to open the Homescreen menu, then tap **Cellular device**.
- 3 Browse through the different categories and find the desired video.
- 4 Tap the video thumbnail, then tap .
- 5 Tap **Delete** again to confirm.



Movie Creator

The Xperia™ Movie Creator automatically creates short videos using existing photos and videos. The application automatically determines the timeline to create its movie. For example, it can take a selection of photos and videos from a Saturday afternoon outing or from a weekly, monthly, or even a yearly period and create a movie for you. When this highlight-style movie is ready, you get notified. You can then edit it as desired. For example, you can edit the title, delete scenes, change the music, or add more photos and videos. You can create Highlight Movies by selecting photos and videos manually. If you log in to a Facebook account, you can create Highlight Movies from your Facebook events, featuring photos from the event, friends' names, and more.

To Open Movie Creator

- 1 From your **Home screen**, tap .
- 2 Find and tap **Movie Creator**.



To Enable or Disable Movie Creator Notifications

- 1 From your **Home screen**, tap .
- 2 Find and tap **Movie Creator**.
- 3 Tap , then tap **Settings**, and tap the **Notifications** slider to enable or disable notifications.




To enable or disable the automatic creation of Highlight Movies

- 1 From your **Home screen**, tap .
- 2 Find and tap **Movie Creator**.
- 3 Tap , then tap **Settings**, and tap the **Auto creating** slider to enable or disable the function.

To Manually Create a Highlight Movie

- 1 From your **Home screen**, tap .
- 2 Find and tap **Movie Creator**.
- 3 Tap  > **Create new**.
- 4 Select the desired photos or videos by tapping them.
- 5 Tap **Create**. If you want to edit a Highlight Movie, tap **View story**, then use the toolbar to edit as desired.

To Create a Highlight Movie from Facebook Events

- 1 From your **Home screen**, tap .
- 2 Find and tap **Movie Creator**.
- 3 Tap  > **Settings**.
- 4 Tap the slider beside **Link Facebook**.
 - Movie Creator is now linked with your Facebook account if you are already logged in to Facebook.
 - If you are not logged in to Facebook yet, follow the on-screen instructions.
- 5 Tap , then scroll down to browse your Facebook events.
- 6 Choose an event to create a Highlight Movie about and tap **Create**.

Connectivity


Mirroring the Screen of Your Device on a TV Using a Cable

You can connect your device to a compatible TV set using an MHL cable and mirror the screen of your device on the TV screen.


💡 MHL and HDMI™ cables and adaptors are sold separately.

! Sony does not guarantee that all types of MHL and HDMI™ cables and adaptors are supported by your device.

To view content from your device on a TV which supports MHL input

- 1 Connect your device to the TV using an MHL cable.  appears in your device's status bar after a connection is established.
 - 2 The TV displays the screen of your device.
- ! If your device fails to detect the display that is connected to the MHL cable, reconnect the MHL cable and tap **Settings > Device connection > USB Connectivity > Detect USB device**.

To View Content from Your Device on a TV Which Supports HDMI™ Input

- 1 Connect your device to an MHL adaptor, and connect the adaptor to a powered USB port.
- 2 Connect the adaptor to a TV using a HDMI™ cable.  appears in your device's status bar after a connection is established.
- 3 The TV displays the screen of your device.

To View Help About Using a TV Remote Control

- 1 While your device is connected to the TV set, drag the status bar downward to open the Notification panel.
 - 2 Tap **MHL connected**. The MHL settings appear on the TV screen.
 - 3 Select **Remote control usage**.
- ! You can select **Video Output Size** to adjust the size of the output on the TV screen. If the TV already has an auto-scaling option enabled, this setting does not appear under the MHL settings.
- 💡 You can also press the yellow button on the TV remote control to open the Notification panel.



To disconnect your device from a TV set

- Disconnect the MHL™ cable or the MHL adaptor from your device.


Mirroring the Screen of your Device Wirelessly

You can use the Screen Mirroring feature to share the screen of another Xperia™ device on the screen of your device without using a cable connection. You can also view content on your device on a display or TV that supports Wi-Fi CERTIFIED Miracast™.

To mirror the screen of another Xperia™ device on your own device

- 1 **Your device:** From your Homescreen, tap .
- 2 Find and tap **Settings > Device connection > Screen mirroring**.
- 3 Under **Receive**, tap **Start**.
- 4 **Other device:** From the Homescreen, tap .
- 5 Find and tap **Settings > Device connection > Screen mirroring > Start**.
- 6 Tap **OK** and select a device.
- 7 **Your device:** Tap **Accept** to allow the connection to your device.

To Mirror the Screen of Your Device on a TV Screen

- 1 **TV:** Follow the instructions in the User Guide of your TV to turn on the Screen mirroring function.
 - 2 **Your device:** From your **Home screen**, tap .
 - 3 Find and tap **Settings** > **Device connection** > **Screen mirroring**.
 - 4 Tap **START** on the Send pane.
 - 5 Tap **OK** and select a device.
- ! Your TV must support Screen mirroring based on Wi-Fi CERTIFIED Miracast™ for the function to work. If your TV does not support Screen mirroring, you may need to purchase a wireless display adapter separately. Also, when using Screen mirroring, do not cover the Wi-Fi antenna area of your device.

To Stop Screen Mirroring between Devices

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Device connection** > **Screen mirroring**.
- 3 Tap **Disconnect**, then tap **OK**.

Sharing Content with DLNA Certified™ Devices




You can view or play media content saved to your device on other devices, like a TV or a computer. These devices must be on the same wireless network and can be Sony TVs or speakers, or products that are DLNA Certified™ by the Digital Living Network Alliance. You can also view or play content from other DLNA Certified™ devices on your device.

After you set up media sharing between devices, you can for example listen to music files stored on your home computer using your device, or view photos taken with your device's camera on a large-screen TV.





Playing Files from DLNA Certified™ Devices on Your Device

When you play files from another DLNA Certified™ device on your device, this other device acts as a server. In other words, it shares content over a network. The server device must have its content sharing function enabled and give access permission to your device. It also must be connected to the same Wi-Fi network as your device.




To Use Your Device to Play a Music Track Stored on Another Device

- 1 Make sure the device you want to share files with is connected to the same Wi-Fi network as your device.
- 2 From your **Home screen**, tap , then find and tap .
- 3 Tap , then tap **Home network**.
- 4 Select a device from the list of connected devices.
- 5 Browse the folders of the connected device and select the track you want to play. Once selected, the track starts playing automatically.

To play a shared video on your device

- 1 Make sure the devices that you want to share files with are connected to the same Wi-Fi network as your device.
- 2 From your **Home screen**, tap , then find and tap  or .
- 3 Tap , then tap **Home network**.
- 4 Select a device from the list of connected devices.
- 5 Browse the folders of the connected device and select the video you want to play.


To View a Shared Photo on Your Device

- 1 Make sure the devices you want to share files with are connected to the same Wi-Fi network as your device.
- 2 From your **Home screen**, tap , then find and tap .
- 3 Tap , and then tap **Home network**.
- 4 Select a device from the list of connected devices.
- 5 Browse the folders of the connected device and select a photo to view it.

Playing files from your device on DLNA Certified™ devices

Before you can view or play media files from your device on other DLNA Certified™ devices, you must set up file sharing on your device. The devices that you share content with are called client devices. For example, a TV, computer or tablet can act as client devices. Your device works as a media server when it makes content available to client devices. When you set up file sharing on your device, you must also give access permission to client devices. After you do so, such devices appear as registered devices. Devices that are waiting for access permission are listed as pending devices.


To Set Up File Sharing With Other DLNA Certified™ Devices

- 1 Connect your device to a Wi-Fi network.
 - 2 From your **Home screen**, tap , then find and tap **Settings** > **Device connection** > **Media server**.
 - 3 Tap the slider beside **Share media**.
 - 4 Use your computer or other DLNA™ client devices on the same Wi-Fi network to connect to your device.
 - 5 A notification appears in the status bar of your device. Open the notification and set access permissions for each client device attempting to connect to your device.
- ! The steps for accessing media on your device using a DLNA™ client differ between client devices. Refer to your client device User Guide for more information. If your device is inaccessible to a client on the network, check if your Wi-Fi network is working.
- 💡 You can also access the **Media server** menu from certain applications like Music or Album by dragging the left edge of the application's homescreen to the right and then tapping **Settings** > **Media server**.

To Stop Sharing Files With Other Home Network Devices

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Device connection** > **Media server**.
- 3 Tap the **Share media** slider.


To Set Access Permissions for a Pending Device

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Device connection** > **Media server**.
- 3 Select a device from the **Pending devices** list.
- 4 Select an access permission level.

To Change the Name of a Registered Device

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Device connection** > **Media server**.
- 3 Select a device from the **Registered devices** list, then select **Change name**.
- 4 Enter a new name for the device, then tap **OK**.

To Change the Access Level of a Registered Device

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Device connection** > **Media server**.
- 3 Select a device from the **Registered devices** list.
- 4 Tap **Change access level** and select an option.

To Get Help With Sharing Content With Other DLNA Certified™ Devices

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Device connection** > **Media server**.
- 3 Tap  and then tap **Help**.





Displaying Files on Another Device Using Cast

Using DLNA™ technology, you can push media content from your device to another device connected to the same Wi-Fi network. The receiving device must be able to



 

 
function as a Digital Media Renderer (DMR) device and play content received from your device. A TV that supports DLNA™ or a PC running Windows® 7 or later are examples of DMR devices.

- 💡 The steps for playing shared media may vary depending on the client device. Refer to the user guide of the DMR device for more information.
- ! Content secured with Digital Rights Management (DRM) cannot be played on a Digital Media Renderer device using DLNA™ technology.

To Display Photos or Videos on a Client Device Using Cast

- 1 Make sure you have correctly set up the DMR or DLNA™ client device and it is connected to the same Wi-Fi network as your device.
 - 2 From your **Home screen**, tap .
 - 3 Find and tap **Album**.
 - 4 Browse and open the photos or videos that you want to view.
 - 5 Swipe down the status bar with two fingers, then tap  and select the device you want to share your content with.
 - 6 To stop sharing the photo or video with the client device, tap  and then select **Stop casting**.
- 💡 You may also see Google Cast devices shown on the list when tapping .

To Play a Music Track on a Client Device Using Cast

- 1 Make sure you have correctly set up the DMR or DLNA™ client device and it is connected to the same Wi-Fi network as your device.
 - 2 From your **Home screen**, tap , then find and tap .
 - 3 Select a music category and browse to the track that you want to share, then tap the track.
 - 4 Tap  and select a client device to share your content with. The track starts playing on the device that you select.
 - 5 To disconnect from the client device, tap  and then select **Stop casting**.
- 💡 You may also see Google Cast devices shown on the list when tapping .

Connecting Your Device to USB Accessories

You can use a USB Host adapter to connect your device to USB accessories such as a mass storage device or a mouse. If the USB device has a micro USB connector, a USB Host adapter is not necessary. USB Host adapters are sold separately. Sony does not guarantee that all USB accessories are supported by your device.

- ! This device has a capless USB port. If your device gets exposed to water, ensure the USB port is completely dry before inserting a USB cable.

Connecting Your Device to a DUALSHOCK™ 4 Wireless Controller

Using a DUALSHOCK™ 4 wireless controller, you can play games stored on your Xperia device or game console using Remote Play.

To Connect a DUALSHOCK™ 4 Wireless Controller to your Device

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Device connection** > **DUALSHOCK™ 4**.
- 3 Tap **Pair controller**, and then follow the on-screen instructions to complete the connection.

NFC

Use Near Field Communication (NFC) to share data with other devices, such as videos, photos, web page addresses, music files, or contacts. You can also use NFC to scan

tags that give you more information about a product or service as well as tags that activate certain functions on your device.

NFC is a wireless technology with a maximum range of one centimeter, so the devices sharing data must be held close to each other. Before you can use NFC, you must first turn on the NFC function, and the screen of your device must be active.

The NFC detection area is located on the back of the device. Hold your device close to another device or an NFC reader so the NFC detection areas touch each other.





- ! NFC may not be available in all countries or regions. Using certain apps, some NFC functions can be enabled even when the device is switched off. Note that not all devices support this feature.

 

 
To Enable or Disable the NFC Function

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > More**.
- 3 Tap the **NFC** slider.


To Share a Contact with Another Device Using NFC

- 1 Make sure both devices have the NFC function turned on, and that both screens are active and unlocked.
- 2 To view contacts, go to your **Home screen**, tap , then tap .
- 3 Tap the contact you want to share.
- 4 Hold your device and the receiving device close to each other so that the NFC detection areas of each device touch. When the devices connect, a thumbnail of the contact appears.
- 5 Tap the thumbnail to start the transfer.
- 6 When the transfer is done, the contact information is saved on the receiving device and displayed on its screen.



To Share a Music File With Another Device Using NFC

- 1 Make sure both your device and the receiving device have the NFC function turned on and both screens are active and unlocked.
- 2 To open the Music application, tap , then find and tap .
- 3 Select a music category and browse to the track you want to share.
- 4 Tap the track to play it. You can then tap  to pause the track. The transfer works whether the track is playing or paused.
- 5 Make sure the track is displayed on full screen.
- 6 Hold your device and the receiving device close to each other so the NFC detection areas of each device touch. When the devices connect, a thumbnail of the track appears.
- 7 Tap the thumbnail to start the transfer.
- 8 When the transfer is done, the music file is saved on the receiving device.
- 9 To display the music file, double-tap the status bar to open the Notification panel, then tap **Beam complete**.

To Share a Photo or Video with Another Device Using NFC

- 1 Make sure both devices have the NFC function turned on, and that both screens are active and unlocked.
- 2 To view photos and videos on your device, go to your **Home screen**, tap , then find and tap **Album**.
- 3 Tap the photo or video you want to share.
- 4 Hold your device and the receiving device close to each other so that the NFC detection areas of each device touch. When the devices connect, a thumbnail of the photo or video appears.
- 5 Tap the thumbnail to start the transfer.
- 6 When the transfer is done, the photo or video is saved on the receiving device.

To Share a Web Address With Another Device Using NFC

- 1 Make sure both devices have the NFC function turned on, and both screens are active and unlocked.
- 2 From your **Home screen**, tap .
- 3 To open the web browser, find and tap .
- 4 Load the web page that you want to share.
- 5 Hold your device and the receiving device close to each other so the NFC detection areas of each device touch. When the devices connect, a thumbnail of the web page appears.
- 6 Tap the thumbnail to start the transfer.
- 7 When the transfer is done, the web page is displayed on the screen of the receiving device.

Scanning NFC Tags

Your device can scan various kinds of NFC tags to receive additional information, such as a web address. For example, it can scan embedded tags on a poster, on a billboard advertisement, or beside a product in a retail store.

To Scan an NFC Tag

- 1 Make sure your device has the NFC function turned on and the screen is active and unlocked.
- 2 Place your device over the tag so the NFC detection area touches it. Your device scans the tag and displays the content collected. Tap the content of the tag to open it.

Connecting to an NFC-Compatible Device

You can connect your device to other NFC-compatible devices produced by Sony, such as a speaker or a headphone. When establishing this kind of connection, refer to the User Guide of the compatible device for more information.

- ! You may need to have Wi-Fi or Bluetooth® activated on both devices for the connection to work.

Bluetooth® Wireless Technology

Use the Bluetooth® function to send files to other Bluetooth® compatible devices, or to connect to hands-free accessories. Bluetooth® connections work better within 10 meters (33 feet), with no solid objects in between. In some cases you have to manually pair your device with other Bluetooth® devices.

- ! Interoperability and compatibility among Bluetooth® devices can vary.
- 💡 If you are using a device with multiple users, each user can change the Bluetooth® settings, and the changes affect all users.

To Turn the Bluetooth® Function On or Off

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Bluetooth**.
- 3 Tap the **Bluetooth** slider to enable or disable the function.

Naming your device

You can give your device a name. This name is shown to other devices after you have turned on the Bluetooth® function and your device is set to visible.

To Give Your Device a Name

- 1 Make sure the Bluetooth® function is turned on.
- 2 From your **Home screen**, tap .
- 3 Find and tap **Settings > Bluetooth**.
- 4 Tap  > **Rename this device**.
- 5 Enter a name for your device.
- 6 Tap **RENAME**.


Pairing with Another Bluetooth® Device

When you pair your device with another device, you can for example connect your device to a Bluetooth® headset or a Bluetooth® car kit, and use these other devices to share music.


Once you pair your device with another Bluetooth® device, your device remembers this pairing. When pairing your device with a Bluetooth® device for the first time, you may need to enter a passcode. Your device will automatically try the generic passcode 0000. If this does not work, refer to the User guide for your Bluetooth® device to get the device passcode. You do not need to re-enter the passcode the next time you connect to a previously paired Bluetooth® device.

- ! Some Bluetooth® devices, for example, most Bluetooth® headsets, require you to both pair and connect with the other device.
- 💡 You can pair your device with several Bluetooth® devices, but you can only connect to one Bluetooth® profile at the same time.



To Pair Your Device with Another Bluetooth® Device

- 1 Make sure the device you want to pair with has the Bluetooth® function activated and is visible to other Bluetooth® devices.
- 2 From your device's **Home screen**, tap .
- 3 Find and tap **Settings > Bluetooth**.
- 4 Tap the **Bluetooth** slider to enable the function. A list of the available Bluetooth® devices appears.
- 5 Tap the Bluetooth® device you want to pair with.
- 6 Enter a passcode, if required, or confirm the same passcode on both devices.

To Connect Your Device to Another Bluetooth® Device

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Bluetooth**.
- 3 Tap the Bluetooth® device you want to connect to.

To Unpair a Bluetooth® Device


- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Bluetooth**.
- 3 Under **Paired devices**, tap  beside the name of the device that you want to unpair.
- 4 Tap **FORGET**.

Sending and receiving items using Bluetooth® technology

Use Bluetooth® technology to share items with other Bluetooth® compatible devices such as phones or computers. You can send and receive the following kinds of items:

- Photos and videos
- Music and other audio files
- Web pages



To Send Items Using Bluetooth®

- 1 **Receiving device:** Make sure the Bluetooth® function is turned on and that the device is visible to other Bluetooth® devices.
- 2 **Sending device:** Open the application which contains the item that you want to send, and scroll to the item.
- 3 Depending on the application and on the item that you want to send, you may need to, for example, touch and hold the item, open the item, and press .
- 4 Select **Bluetooth**.
- 5 Turn on Bluetooth® if you are prompted to do so.
- 6 Tap the name of the receiving device.
- 7 **Receiving device:** If prompted, accept the connection.
- 8 **Sending device:** If prompted, confirm the transfer to the receiving device.
- 9 **Receiving device:** Accept the incoming item.

To receive items using Bluetooth®


- 1 Make sure that the Bluetooth® function is on and is visible to other Bluetooth® devices.
- 2 The sending device now starts sending data to your device.
- 3 If prompted, enter the same passcode on both devices, or confirm the suggested passcode.
- 4 When you are notified of an incoming file to your device, drag the status bar downward and tap the notification to accept the file transfer.
- 5 Tap **Accept** to start the file transfer.
- 6 To view the progress of the transfer, drag the status bar downward.
- 7 To open a received item, drag the status bar downward and tap the relevant notification.

To View Files You Have Received Using Bluetooth®

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Bluetooth**.
- 3 Press  and select **Show received files**.



 
 

Smart apps and features that save you time

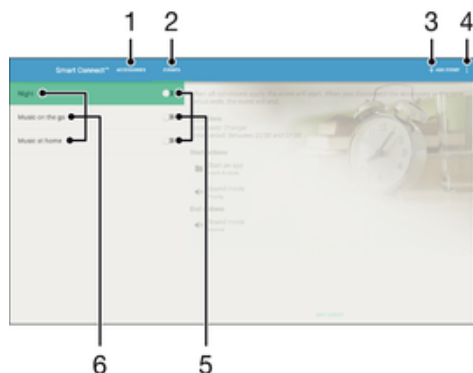Overview of Smart Connect



- 1 Tap to display available accessories
- 2 Tap to display available events
- 3 Add an event
- 4 View menu options
- 5 Tap to activate an event
- 6 Tap to view details of an event

To Create a Smart Connect™ Event

- 1 From your Homescreen, tap , then find and tap **Other** > .
 - 2 If you are opening Smart Connect™ for the first time, tap **OK** to close the introduction screen.
 - 3 On the **Events** tab, tap **ADD EVENT**.
 - 4 If you are creating an event for the first time, tap **OK** again to close the introduction screen.
 - 5 Add conditions under which you want to trigger the event. A condition could be the connection with an accessory, a specific time interval, or both.
 - 6 Tap  to continue.
 - 7 Add what you want to happen when you connect an accessory, and set other settings as desired.
 - 8 Tap  to continue.
 - 9 Set an event name, then tap **FINISH**.
-  To add a Bluetooth® accessory, you first have to pair it with your device.

To Edit a Smart Connect™ Event

- 1 Start the Smart Connect™ application.
- 2 On the **Events** tab, tap an event.
- 3 If the event is switched off, tap the slider to enable it.
- 4 Tap **EDIT EVENT**, then adjust the settings as desired.

To Delete an Event

- 1 Start the Smart Connect™ application.
 - 2 On the **Events** tab, touch and hold the event you want to delete, then tap **Delete event**.
 - 3 Tap **DELETE** to confirm.
- 💡 You can also tap the event you want to delete, then tap **:** > **Delete event** > **DELETE**.

Managing Accessories

Use the Smart Connect™ application to manage a range of smart accessories you can connect to your device, including Xperia™ SmartTags, a SmartWatch series watch, or a wireless headset from Sony. Smart Connect™ downloads any necessary applications and also finds third-party applications, when available. Previously connected accessories are shown in a list that allows you to get more information about the features of each accessory.

To Pair and Connect an Accessory

- 1 Start the Smart Connect™ application. If you are opening Smart Connect™ for the first time, tap **OK** to close the introduction screen.
- 2 Tap **Accessories**, then tap **ADD ACCESSORY**.
- 3 Turn on the Bluetooth® function if it is not already on, then tap the name of the accessory you want to pair and connect with.
- 4 If required, enter a passcode, or confirm the same passcode on both your device and the accessory.

To Adjust the Settings for a Connected Accessory

- 1 Pair and connect the accessory with your device.
- 2 Start the Smart Connect™ application.
- 3 Tap **Accessories**, then tap the name of the connected accessory.
- 4 Adjust the desired settings.

Using the News Suite Application


News Suite is a two-in-one news app featuring a new two-tab concept. Switch between the News tab, where you can find out about all the latest current affairs, and the My Feeds tab, where you can read up on all the news that's most relevant to your own interests.

- ! The News Suite application is not available in all markets.

To Open the News Suite Application

- 1 From your **Home screen**, tap .
- 2 Find and tap .


Google Search & Now

Use the Google app to search the internet. You can also enable a feed for regular updates - for example, you can get traffic information before commuting to work, find popular restaurants in your area, see your favourite team's current score, and more. The app can be accessed by tapping  in the application list, or you can reserve a pane on your Homescreen for quick access and easy reading.

To Enable or Disable GPS

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Google** > **Search & Now** > **Now cards**.
- 3 Tap the **Show cards** slider.

To Reserve a Pane on the Homescreen for Google Search & Now


- 1 Touch and hold any area on your Homescreen until the device vibrates.
 - 2 Tap , then tap the **Google Now™** slider.
 - 3 You can now swipe to the left-most pane on the Homescreen to access the Google Search & Now interface.
- ! If you reserve the left-most pane for Google Search & Now, the main Homescreen pane cannot be changed and additional panes cannot be added to the left. Only the left-most pane can be reserved.

Using your device as a wallet

Use your device as a wallet to pay for goods without reaching for your real wallet. All of your installed payment services are put together to be viewed and managed. Note that when making a payment, you must first turn on the NFC function before your device touches a card reader. For more information about NFC, see *NFC* on page 100.

- ! Mobile payment services may not yet be available in all regions.

To Manage Payment Services

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > More > Tap & pay**. A list of payment services appears.
- 3 Manage the payment services as desired, for example, you can change your default payment service.

Travel and maps

Using Location Services

Location services allow applications such as Maps and the camera to use information from your Wi-Fi network as well as Global Positioning System (GPS) information to determine your approximate location. If you're not within a clear line of sight of GPS satellites, your device can determine your location using the Wi-Fi function. And if you're not within range of a network, your device can determine your location using your cellphone network.

In order to use your device to find out where you are, you need to enable location services.


- ! You may incur data connection charges when you connect to the internet from your device.

To Enable or Disable Location Services

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Location**, then tap the slider to enable or disable location services.

Improving GPS Accuracy

The first time you use the GPS function in your device, it can take a few minutes for your location to be found. To help the search, make sure you have a clear view of the sky. Stand still and don't cover the GPS antenna (the highlighted area in the image). GPS signals can pass through clouds and plastic, but not through most solid objects such as buildings and mountains. If your location isn't found after a few minutes, move to another location.

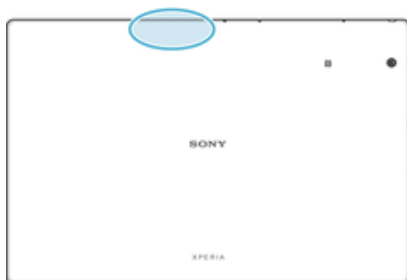

Google Maps™ and Navigation

Use Google Maps™ to track your current location, view real-time traffic situations, and receive detailed directions to your destination.

The Google Maps™ application requires an internet connection when used online. To get more detailed information about how to use this application, go to <http://support.google.com> and click the “Maps for mobile” link.

- ! The Google Maps™ application may not be available in every market, country, or region.


To Use Google Maps™

- 1 From your **Home screen**, tap .
- 2 Find and tap **Google** > **Maps**.

Airplane Mode

In Airplane mode, the network and radio transceivers are turned off to prevent disturbance to sensitive equipment. However, you can still make emergency calls, play games, listen to music, and watch videos and other content, as long as all this content is

saved on your memory card or internal storage. You can also be notified by alarms, if alarms are activated.

 Turning on Airplane mode reduces battery consumption.


To Enable or Disable Airplane Mode

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > More**.
- 3 Tap the **Airplane mode** slider.

Clock and Calendar

Calendar



Use the Calendar application to manage your time schedule. If you have signed in to and synchronized your device with one or several online accounts that include calendars, for example, your Google™ account or Xperia™ with Facebook account, then calendar events from these accounts will also appear in the Calendar application. You can select which calendars you want to integrate into the combined Calendar view.

When an appointment time approaches, your device plays a notification sound to remind you. Also,  appears in the status bar.




- 1 Select a view type and the calendars that you want to view
- 2 Search for events
- 3 Return to the current date
- 4 Access settings and other options
- 5 Selected date
- 6 Agenda for the selected day
- 7 Add a calendar event
- 8 Flick left or right to browse more quickly

To Create a Calendar Event

- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap .
- 3 If you have synchronized your calendar with one or more accounts, select the account you want to add this event to. If you only want to add this event on your device, tap **Device calendar**.
- 4 Enter or select the desired information and add attendees to the event.
- 5 To save the event and send out invites, tap **Save**.

To view a calendar event

- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap the event you want to view.



To View Multiple Calendars

- 1 From your Homescreen, tap , then find and tap **Calendar**.
- 2 Tap , then mark the checkboxes for the calendars you want to view.

To zoom the calendar view

- When the **Week** or the **Day** view is selected, pinch the screen to zoom in.



To display national holidays in the Calendar application


- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap , then tap **Settings** > **Calendar view settings**.
- 3 Tap **National holidays**.
- 4 Select an option, or a combination of options, then tap **OK**.

To Display Birthdays in the Calendar Application



- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap , then tap **Settings** > **Calendar view settings**.
- 3 Tap **Birthdays**, then drag the slider beside **Birthdays** to the right.

To Display Weather Forecasts in the Calendar Application

- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap , then tap **Settings** > **Calendar view settings**.
- 3 Tap **Weather forecast**, then drag the slider beside **Weather forecast** to the right.
- 4 If location services are disabled, tap **Home location**, then search for the city you want to add.

 For more information about how to enable location services, see *Using Location Services* on the 108 page.

To change weather forecast settings in the Calendar application

- 1 From your Homescreen, tap , then tap **Calendar**.
- 2 Tap , then tap **Settings** > **Calendar view settings**.
- 3 Tap **Weather forecast**.
- 4 Adjust the settings as desired.

Alarm and Clock



You can set one or several alarms and use any sound saved on your device as the alarm signal. The alarm does not sound if your device is turned off. But it does sound when the device is set to silent mode.

The alarm time format displayed is the same as the format you select for your general time settings, for example, 12-hour or 24-hour.



- 1 Access the alarms tab
- 2 Access the world clock tab
- 3 Access the stopwatch function
- 4 Access the timer function
- 5 View option for the current tab
- 6 Turn an alarm on or off
- 7 Add a new alarm
- 8 Open date and time settings for the clock



To Set a New Alarm

- 1 From your Homescreen, tap .
- 2 Find and tap **Clock**.
- 3 Tap .
- 4 Tap **Time** and select the desired value.
- 5 Tap **OK**.
- 6 If desired, edit other alarm settings.
- 7 Tap **Save**.

To snooze an alarm when it sounds

- Tap **Snooze**.

To Turn Off an Alarm When It Sounds

- Drag  to the right.
- 💡 To turn off a snoozed alarm, you can double-tap the status bar to open the Notification panel, then tap .

To Edit an Existing Alarm

- 1 Find and tap **Clock**, and then tap the alarm you want to edit.
- 2 Make the desired changes.
- 3 Tap **Save**.


To Turn an Alarm On or Off

- Find and tap **Clock**, and then tap the slider for the alarm you want to turn on or off.

To Delete an Alarm

- 1 Find and tap **Clock**, and then touch and hold the alarm you want to delete.
- 2 Tap **Delete alarm**, and then tap **Yes**.

To Set the Sound for an Alarm

- 1 Find and tap **Clock**, then tap the alarm that you want to edit.
- 2 Tap **Alarm sound** and select an option, or tap  and select a music file.
- 3 Tap **Done**, then tap **Save**.

- 💡 For more information about how to adjust the alarm volume levels, see *Sound volume* on the 49 page.

To Adjust the Volume Level for an Alarm

- 1 Find and tap **Clock**, and then tap the alarm you want to edit.
- 2 Drag the volume slider under **Alarm volume** to the desired position.
- 3 Tap **Save**.

To Set a Recurring Alarm

- 1 Find and tap **Clock**, and then tap the alarm you want to edit.
- 2 Tap **Repeat**.
- 3 Mark the checkboxes for the relevant days, and then tap **OK**.
- 4 Tap **Save**.

To Activate the Vibrate Function for an Alarm

- 1 Find and tap **Clock**, then tap the alarm that you want to edit.
- 2 Tap the **Vibrate** slider to enable or disable the function.
- 3 Tap **Save**.

To Set the Side Keys Behavior

- 1 Find and tap **Clock**, and then select the alarm you want to edit.
- 2 Tap **Side keys behavior**, and then select the desired behavior of side keys when they are pressed during the alarm.
- 3 Tap **Save**.

Accessibility

Magnification Gesture

Magnification gesture allows you to zoom in to parts of the screen by tapping an area of the touchscreen three times in succession.

To Enable or Disable Magnification Gesture

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Accessibility > Magnification gesture**.
- 3 Tap the slider under **Magnification gesture**.

To Magnify an Area and Pan Across the Screen

- 1 Make sure **Magnification gesture** is enabled.
- 2 To temporarily magnify an area, tap it three times.
- 3 Move the area by dragging it with two or more fingers.
- 4 To exit zoom mode, tap the area three times again.

💡 With certain applications, you can also zoom in or out by pinching an area.

Font Size

You can enable the **Font size** option to increase the default size of text displayed on your device.

To Set Font Size

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Accessibility**.
- 3 Tap **Font size**, and then set the desired font size by tapping the scale.

Display Size

You can use the **Display size** setting to increase or decrease all elements on your screen, not just text.


To Set Display Size

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Accessibility**.
- 3 Tap **Display size**, and then set the desired display size by tapping the scale.

Color Correction

The Color correction setting adjusts how colors are displayed on the screen for users who are color blind or have difficulty distinguishing between colors.



To Enable Color Correction

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings > Accessibility > Color correction**.
 - 3 Tap the slider under **Color correction**.
 - 4 Tap **Correction mode**, and then select the appropriate color sensitivity.
- ! Color correction is currently an experimental feature and may affect device performance.


TalkBack

TalkBack is a screen reader service for visually impaired users. TalkBack uses spoken feedback to describe any events or actions performed on your Android device. TalkBack describes the user interface and reads out software errors, notifications, and messages.

To Enable TalkBack

- 1 From your **Home screen**, tap .
 - 2 Find and tap **Settings** > **Accessibility** > **TalkBack**.
 - 3 Tap the slider under **TalkBack** and then tap **OK**.
- ! To change speech, feedback, and touch preferences for TalkBack, tap **Settings**, then tap the screen twice.
- 💡 TalkBack launches a tutorial immediately after you enable the feature. To exit the tutorial, tap , then tap the screen twice.


To Disable TalkBack

- 1 From your **Home screen**, tap , then tap anywhere on the screen twice.
- 2 Find and tap **Settings**, then tap anywhere on the screen twice.
- 3 Find and tap **Accessibility** by scrolling through the list with two or more fingers, then tap anywhere on the screen twice.
- 4 Find and tap **TalkBack** by scrolling through the list with two or more fingers, then tap anywhere on the screen twice.
- 5 Tap the on-off switch, and then tap anywhere on the screen twice.
- 6 Tap **OK**, and then tap anywhere on the screen twice.

Mono Audio

The Mono audio setting makes both left and right audio channels get played back simultaneously when playing audio. Using Mono instead of Stereo playback is most useful for users with certain types of hearing loss or for safety reasons, for example when you need to listen to your surroundings.


To Enable or Disable Mono Audio

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Accessibility**.
- 3 Tap the slider beside **Mono audio**.

TTY (Teletypewriter) Mode

The TTY (Teletypewriter) feature on your device allows people who are deaf, hard of hearing, or who have speech or language disabilities to communicate using a TTY device or a relay service.

To Enable TTY Mode

- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings** > **Call**.
- 3 Tap **Accessibility** > **TTY mode**.
- 4 Select the applicable TTY mode.

Switch Access

With Switch Access, you can interact with your Xperia™ device using one or more switches. A switch is a device used to send a keystroke signal to your Android device. These can be helpful for users with mobility limitations. For more information about Switch Access, see **Settings** > **Accessibility** > **Switch Access** > **SETTINGS** > **Help**.

To Enable or Disable Switch Access




- 1 From your **Home screen**, tap .
- 2 Find and tap **Settings > Accessibility > Switch Access**.
- 3 Tap the slider to enable or disable the function, then tap **OK**.

Support and Legal


Support Application

Use the Support application on your device to browse User Guides, troubleshooting guides, and to find information about software updates and other product-related information.

To Access the Support Application

- 1 From your **Home screen**, tap .
 - 2 Find and tap , then select the required support item.
-  Connect to the internet when using the Support application for the best available support.


Help in menus and applications

Some applications and settings have help available in the options menu, which is normally indicated by  in the specific applications.

Running Diagnostic Tests on Your Device

The Xperia™ Diagnostics application can test a specific function or run a full diagnostic test to check if your Xperia™ device is working properly.

Xperia™ Diagnostics can:


- Assess potential hardware or software issues on your Xperia™ device.
 - Analyze how well applications perform on your device.
 - Log the number of dropped calls during the previous 10 days.
 - Identify installed software and provide useful details about your device.
-  The Xperia™ Diagnostics application is pre-installed on most Android™ devices from Sony. If the Diagnostics option is not available under **Settings > About phone** or from the **TOOLS** menu in the Support application, you can download a light version using the Play Store™ application.

Restarting, Resetting, and Repairing



You can force your device to restart or shut down if it stops responding or won't restart normally. No settings or personal data get deleted.

You can also reset your device to its original factory settings. This action is sometimes necessary if your device stops functioning properly, but note that if you want to keep any important data, you should first back up this data to a memory card or other non-internal memory. For more information, see *Backing Up and Restoring Content* on page 38.


If your device fails to turn on or you want to reset your device's software, you can use Xperia™ Companion to repair your device. For more information on using Xperia™ Companion, see *Xperia™ Companion* on page 36.

-  If you are sharing a device with multiple users, you may need to log in as the owner, that is, the primary user, to reset your device to its original factory settings.

To Restart Your Device

-  Your device may fail to restart if the battery level is low. Connect your device to a charger and try restarting again.
- 1 Press and hold down the power key .
 - 2 In the menu that opens, tap **Restart**. The device restarts automatically.

To force the device to shut down

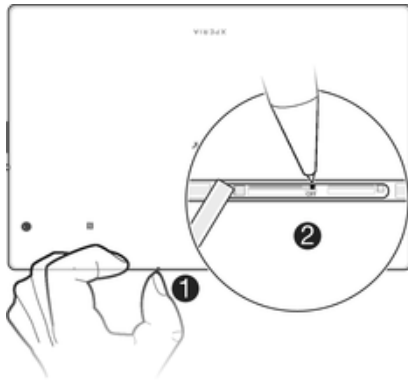


- 1 Remove the cover of the memory card slot.
- 2 Using the tip of a pen or a similar object, press and hold down the OFF button until the device shuts down.

! Do not use overly sharp objects that could damage the OFF button.

To perform a factory data reset

! Before you start, make sure to back up any important data that is saved on the internal memory of your device to a memory card or other non-internal memory. Factory data reset will erase all data from your device's internal storage, and you will not be able to access the files on any of your encrypted SD cards again.

! To avoid permanent damage to your device, do not restart your device while a reset procedure is underway.

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > Backup & reset > Factory data reset**.
- 3 Tap **Reset tablet**.
- 4 If required, draw your screen unlock pattern or enter your screen unlock password or PIN to continue.
- 5 To confirm, tap **Erase everything**.

! Your device does not revert to an earlier software version of Android™ when you perform a factory data reset.

Repairing the Device Software

If you forget your screen unlock password, PIN, or pattern, you can use the device repair feature in Xperia™ Companion to erase the security layer. You need to provide your Google account login details to perform this operation. By running the repair feature, you reinstall software for your device and you may lose some personal data in the process.

If you can't turn off your device before performing a software repair, force it to shut down.

💡 When you receive a new Google™ account username or password, you might not be able to use them to log in to and recover your device for 72 hours.

To Repair the Device Software Using Xperia™ Companion

! Before performing a software repair, make sure you know your Google™ account username and password. Depending on your security settings, you may need to enter them in order to restart the device after a software repair.


If your device seems to have frozen, restarts repeatedly or doesn't start at all after you updated the Xperia™ software or after you performed a software repair or a factory data reset, try forcing the device to shut down then try turning it back on. If the problem still exists, force the device to shut down then perform a software repair by following the steps below:

- 1 Make sure Xperia™ Companion is installed on your PC or Mac®.
- 2 Open the Xperia™ Companion software on the computer and click on **Software repair** on the main screen.
- 3 Follow the instructions that appear on the screen to reinstall the software and complete the repair.

Help us improve our software

You can enable the sending of usage info from your device so that Sony Mobile can receive anonymous bug reports and statistics that help improve our software. None of the information gathered includes personal data.

To allow the sending of usage info

- 1 From your Homescreen, tap .
- 2 Find and tap **Settings > About tablet > Usage info settings**.
- 3 Mark the **Send usage info** checkbox if it is not already marked.
- 4 Tap **Agree**.

Warranty, SAR, and Usage Guidelines

For information about warranty, SAR (Specific Absorption Rate), and safety guidelines, please read the **Important information** provided under **Settings > About tablet > Legal information** on your device.

Recycling Your Device

Got an old device lying around the house? Why not recycle it? By doing so, you will help us reuse its materials and components, and you'll protect the environment, too! Find out more about the recycling options in your region at www.sonymobile.com/recycle/.

Legal information

Sony SGP712

This User guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this user guide. All illustrations are for illustrative purposes only and may not accurately depict the actual device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. All other trademarks are property of their respective owners. Any rights not expressly granted herein are reserved. Visit www.sonymobile.com/us/legal/ for more information.

This User guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony does not warrant or guarantee the availability or performance of any third-party websites or offered services.

Your cellular device has the capability to download, store, and forward additional content, like ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony, are entirely responsible for additional content that you download to or forward from your cellular device. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony does not guarantee the accuracy, integrity or quality of any additional content or any other third-party content. Under no circumstances will Sony be liable in any way for your improper use of additional content or other third-party content.

Visit www.sonymobile.com for more information.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal, and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See www.mpegla.com. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

SONY MOBILE WILL NOT BE LIABLE FOR ANY LOSS, DELETION AND/OR DATA OVERWRITING OF PERSONAL DATA OR FILES STORED ON YOUR DEVICE (INCLUDING BUT NOT LIMITED TO CONTACTS, MUSIC TRACKS, AND PICTURES) ARISING OUT OF ANY UPDATE OF YOUR DEVICE BY ANY OF THE METHODS DESCRIBED IN THIS USER GUIDE OR DOCUMENTATION. IN NO EVENT SHALL SONY MOBILE OR ITS SUPPLIERS' TOTAL LIABILITY TO YOU FOR ANY AND ALL DAMAGES, LOSSES AND CAUSES OF ACTION (WHETHER IN CONTRACT OR TORT, INCLUDING, BUT NOT LIMITED TO NEGLIGENCE OR OTHERWISE) EXCEED THE AMOUNT ACTUALLY PAID BY YOU FOR YOUR DEVICE.

© 2016 Sony Mobile Communications Inc.
All rights reserved.