


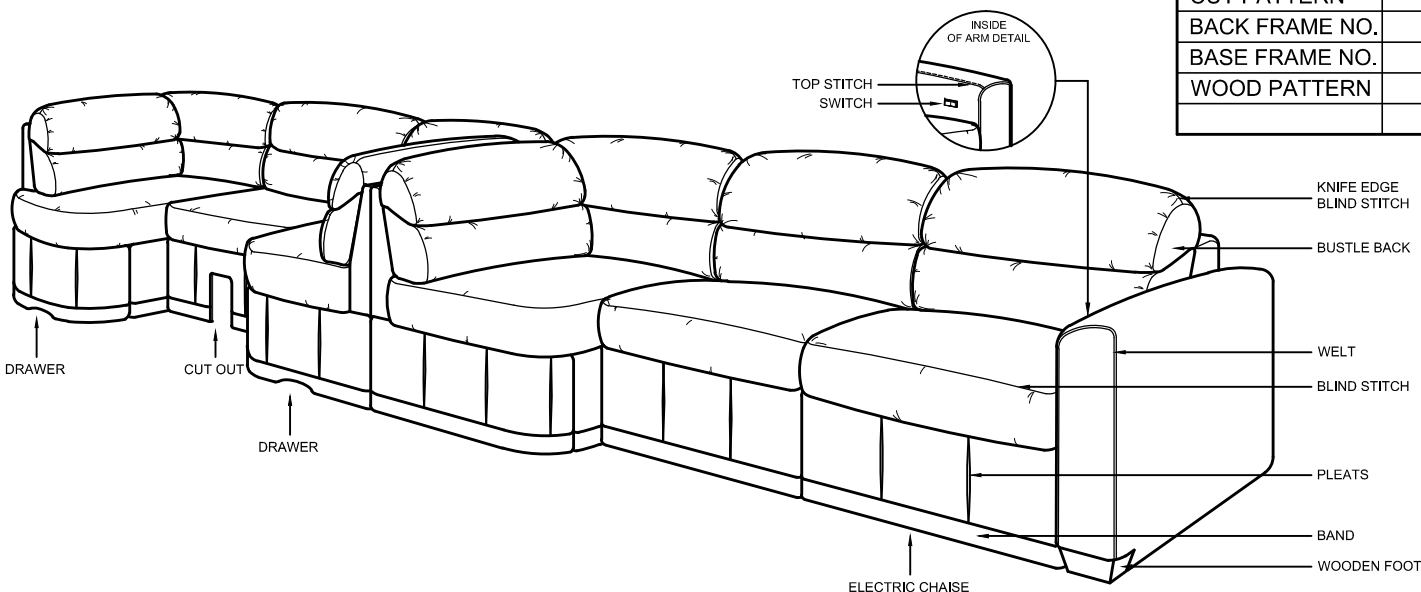

CUT PATTERN	
BACK FRAME NO.	
BASE FRAME NO.	
WOOD PATTERN	

INSIDE
OF ARM DETAIL

TOP SWITCH
SWITCH

KNIFE EDGE
BLIND STITCH

BUSTLE BACK

WELT

BLIND STITCH

PLEATS

BAND

WOODEN FOOT

ELECTRIC CHAISE

