


E

V

M

A

R

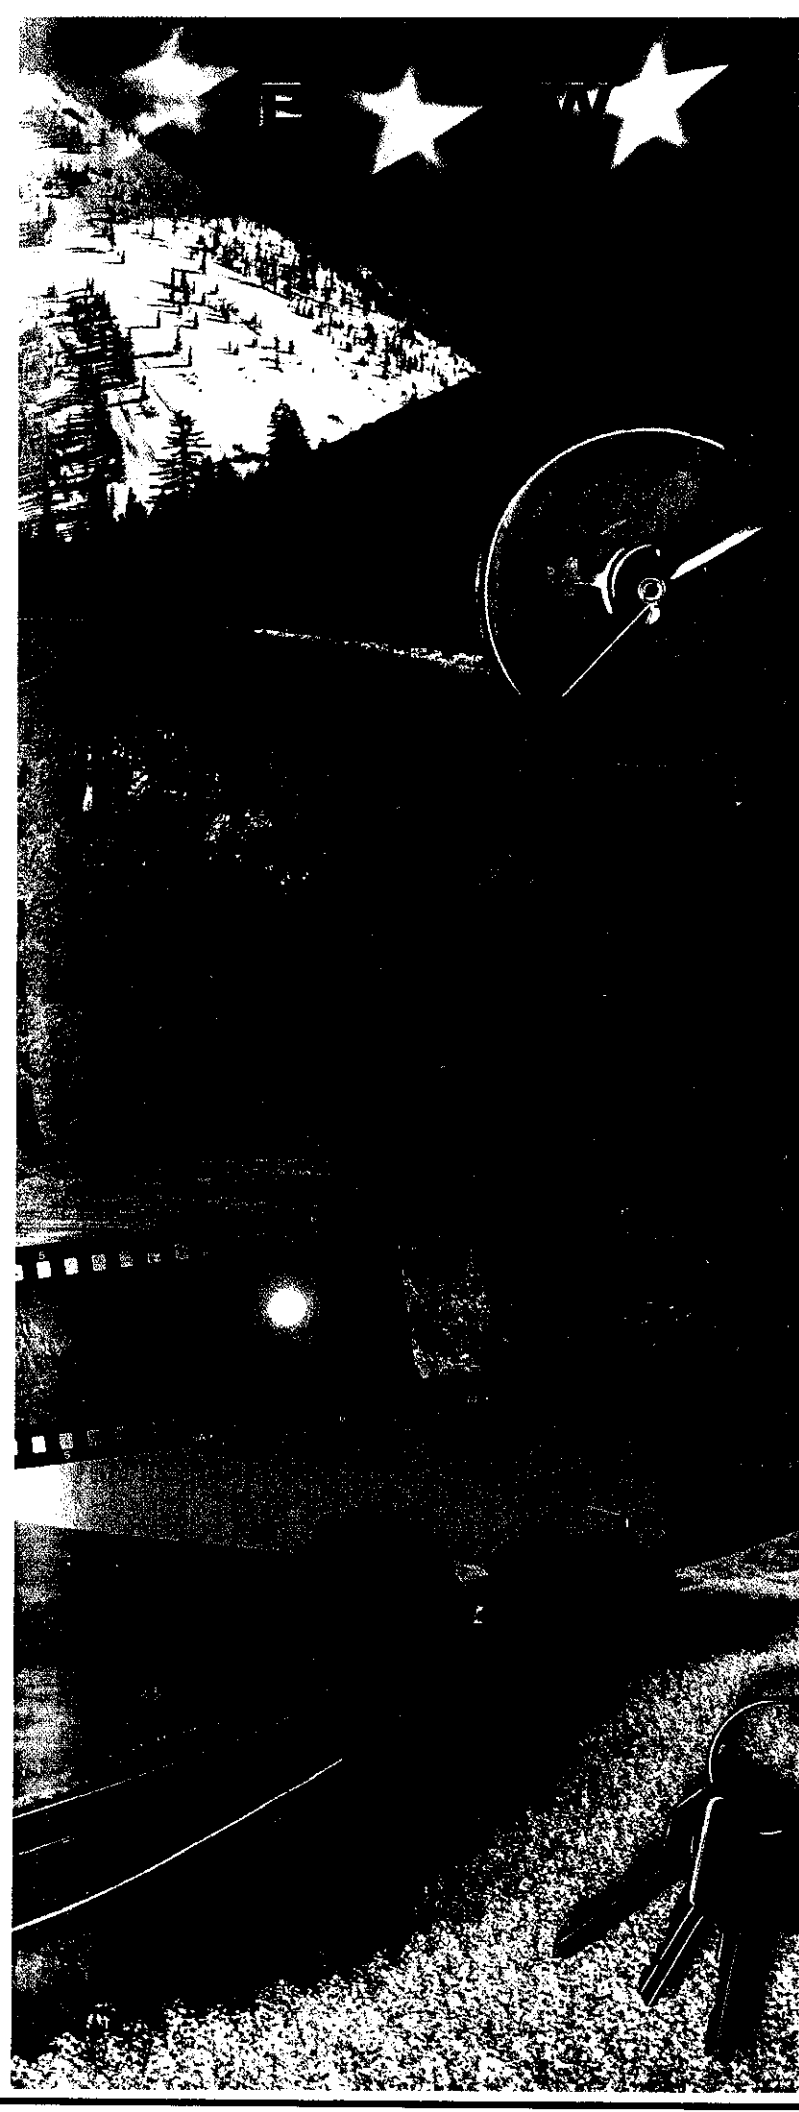

# *Owner's Guide*

*2004 Dutch Star*

DIESEL PUSHER MOTORHOME

**2004**



**NEWMAR QUALITY: A WAY OF LIFE**

***PRODUCT  
WARRANTY  
SERVICE  
SUMMARY***

Welcome to the exciting world of recreational vehicle traveling and the growing family of RV owners.

Congratulations on your purchase of a Newmar product. We sincerely thank you for choosing a Newmar RV. We hope you enjoy many miles of traveling. Your new vehicle was built with care using today's technology and old world craftsmanship. We, at Newmar, strive to build vehicles that are safe, dependable, and comfortable to provide years of carefree, pleasant traveling.


With your new RV purchase, Newmar provides a thirty-six (36) month limited warranty on all of its products, excluding the American Star. Please read the Limited Warranty and all other chassis and component warranties that apply to the equipment installed on your unit.

Carefully read both the instructions in the Newmar Owner's Guide and the booklets supplied by the chassis and component manufacturers for important operation, safety, and maintenance requirements/information. Your dealer should be consulted if you have any questions. If your dealer is unable to answer the questions to your satisfaction he will refer you to our staff for assistance. Our customers are extremely important to us and we will make every effort necessary to ensure your satisfaction.

The limited warranties issued by the chassis and component manufacturers require periodic service and maintenance. The owner's failure to provide this service and/or maintenance may result in the loss of warranty coverage. The owner should review the Newmar Corporation Limited Warranty and other manufacturer's limited warranties on all components applicable to this vehicle. Be sure to file the appropriate registration card with the component manufacturer as described in the individual instruction booklet to activate the warranties on the components in your Newmar RV. Again, thank you and welcome to our Newmar family.

**NEWMAR CORPORATION**

## NEWMAR CORPORATION WARRANTY SUMMARY

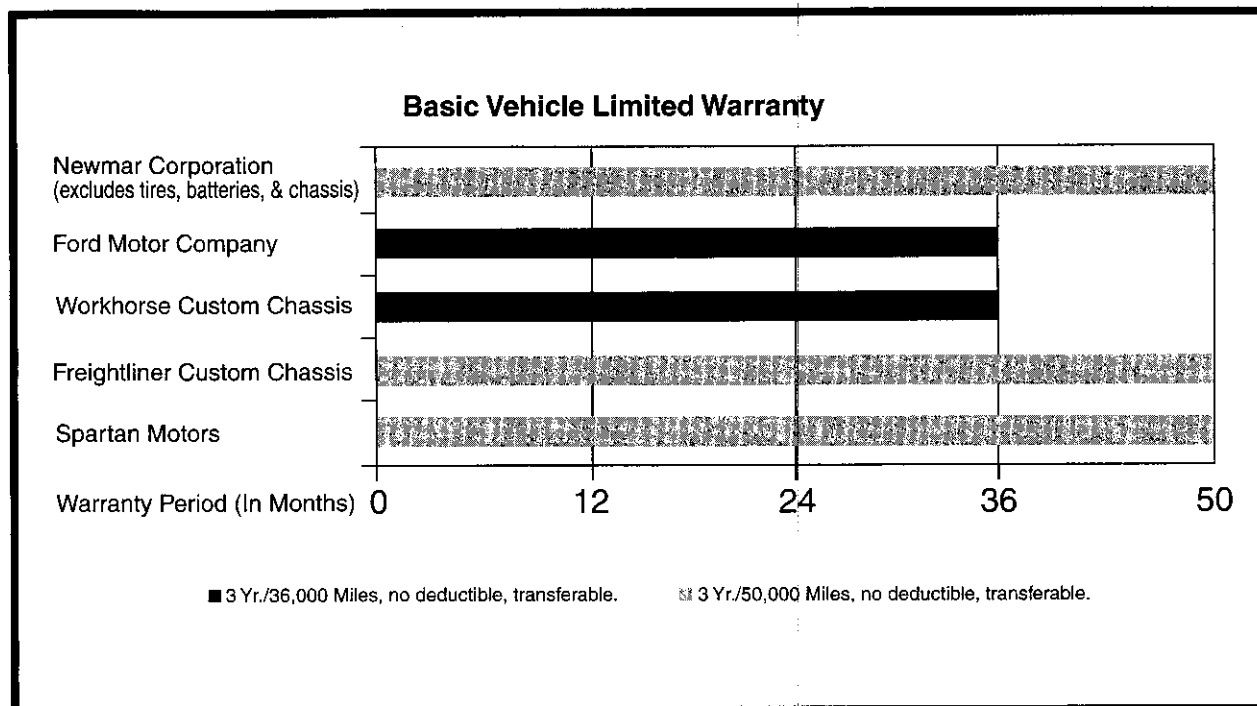

**NOTE:** The above is not a statement of Newmar Corporation's Expressed Limited Warranty or any chassis or component manufacturer's expressed warranty, but is provided as general information only. Please refer to the Newmar Expressed Limited Warranty and those provided by the chassis and component manufacturer.

### CUSTOMER ASSISTANCE:

<b>NEWMAR CORPORATION</b>	<b>1-800-731-8300</b>
<b>FORD MOTOR COMPANY</b>	<b>1-800-444-3311</b>
<b>FREIGHTLINER CUSTOM CHASSIS</b>	<b>1-800-FTL-HELP</b>
<b>SPARTAN MOTORS</b>	<b>1-800-543-4277</b>
<b>SPARTAN ROADSIDE COMPANION</b>	<b>1-888-890-1741</b>
<b>WORKHORSE CUSTOM CHASSIS</b>	<b>1-877-946-7731</b>

## ROUTINE MAINTENANCE

**IMPORTANT:** Always follow the chassis maintenance guidelines found in the chassis manufacturer owner's manual and always follow the appliance/component supplier manuals or owner's guides.

All routine maintenance is the responsibility of the owner and is not covered by the Newmar Limited Warranty. Use the maintenance record found in Chapter 15 of your Newmar Owner's Guide to record all performed maintenance as required. Please note that damage caused by improper or un-applied maintenance is not covered by the Newmar Limited Warranty. Use and conditions may dictate more frequent maintenance than suggested below.

Items supplied by other manufacturers may require specific individual maintenance not listed herein. Please refer to the manufacturers' suggested maintenance guidelines in the Owner's Information Packet.

**IMPORTANT:** Adjustments and alignments performed within the first three (3) months from date of original purchase are subject to warranty coverage. Thereafter, these items are considered routine maintenance.

### MONTHLY

- Check battery water level.

### EVERY 3 MONTHS

- Clean range hood exhaust fan filter and blades.
- Check gas lines for leaks with soap solution or leak detector.
- Test smoke alarm, carbon monoxide detector, and LP gas detector.
- Check operation of windows, latches, and hinges.
- Clean the roof ducted air conditioner filter(s).
- Clean and inspect all door and window seals, reseal where necessary.
- Inspect and reseal around the tub and shower area, where necessary.
- Lubricate the exterior door hinges and latches with a graphite (silicone) lubricant.
- Check, clean, and tighten battery cables and inspect batteries for proper fluid level.

### EVERY 6 MONTHS

- Inspect the slide out for proper seal. If realignment is necessary, please contact an Authorized Newmar Service Center.
- Inspect the exterior rubber slide out seals and apply a UV inhibitor, such as 303 Protectant.
- Rotate tires, as recommended by the tire manufacturer.
- Check all gas appliances for proper operation.
- Have the LP system inspected by a qualified technician.
- Lubricate the moveable parts on the entrance step.

### ANNUALLY

- Inspection of roof seams and joints should be performed by an Authorized Newmar Service Center. If resealing is necessary, it is the owner's responsibility and is not covered by the Newmar Limited Warranty.
- Sanitize the fresh water system.
- Wax and buff all gel-coat surfaces on the vehicle as described in Chapter 14 of your Newmar Owner's Guide.

## THE FOLLOWING IS A LIST OF COMPONENT PART SUPPLIERS AND THEIR PHONE NUMBERS:

COMPONENT	MANUFACTURER	
<b>ACCESSORIES</b>		
Back Up Monitor	Atlanta DTH	770-451-9777
	A. S. A. Inc.	574-266-1886
	C.T.D.	800-777-4856
	Total Vision Products	520-623-0790
Back Up Monitor (Panasonic)	Mito	888-433-6486
CB Radio (Cobra)	Tri Star Distributing	800-456-3340
Computer TripTek	River Park, Inc.	800-442-7717
Furniture (Upholstered)	Flexsteel Industries	563-556-7730
	Villa International	714-535-7272
Grill, Electric Tabletop	Meco	800-251-7558
Internet System (Trac-Net)	River Park, Inc.	800-442-7717
Navigation	Mito	888-433-6486
Navigation (DVD)	C.T.D.	800-777-4856
Roof Vent	FanTastic Vent Corp.	800-521-0298
	Ventline	574-848-4491
Security System	Nagy Fleet Net Inc.	574-262-4479
Stereo AM/FM, Cassette/CD, Wall Mount	Odyssey	800-877-0521
Stereo AM/FM, Cassette or CD (Visteon)	River Park, Inc.	800-442-7717
Stereo (Audiovox)	A. S. A. Inc.	574-266-1886
Stereo (Pioneer)	C.T.D.	800-777-4856
Stereo (Sony)	River Park, Inc.	800-442-7717
TV Antenna	The Winegard Co.	800-288-8094
Television (Magnavox)	Midwest Sales	574-287-3365
Television (RCA)	Tri Star Distributing	800-456-3340
Television (Sony)	River Park, Inc.	800-442-7717
Television (Zenith)	Odyssey	800-877-0521
Television (LCD Monitor) KADP	A. S. A. Inc.	574-266-1886
Satellite Dish	The Winegard Co.	800-288-8094
Satellite Dish (Datron)	A. S. A. Inc.	574-266-1886
Satellite Dish (KVH)	River Park, Inc.	800-442-7717
VCR (RCA)	Collins & Company	574-848-1118
VCR (Sony)	River Park, Inc.	800-442-7717
<b>AIR CONDITIONING</b>		
Dash Air	Evans Tempcon	800-354-7088
Roof Air	Dometic	800-544-4881
Basement Air	Suburban Mfg.	800-659-2138
<b>APPLIANCES</b>		
Dishwasher, 18" (Frigidaire)	Frank-lin Premiums	866-213-9397
Dishwasher, 24"	Midwest Sales	574-287-3365
Freezers	Norcold	800-543-1219
Ice Makers	U-Line	800-779-2547

## THE FOLLOWING IS A LIST OF COMPONENT PART SUPPLIERS AND THEIR PHONE NUMBERS:

COMPONENT	MANUFACTURER	
<b>APPLIANCES CONT.</b>		
Microwave (Dometic)	Dometic	800-544-4881
Microwave (GE)	Collins & Company	574-848-1118
Range	Atwood-Greenbrier	815-877-5700
Range	Magic Chef	515-792-7000
Refrigerator	Dometic	800-544-4881
Refrigerator	Norcold	800-543-1219
Water Heater	Atwood Mobile Prod.	815-877-5700
Water Heater	Suburban Mfg.	800-659-2138
Water Heater	Vehicle Systems	800-685-4298
Washer/Dryer, 1-piece	Splendide	800-736-4127
Washer/Dryer, 2-piece	Whirlpool	800-442-1111
<b>ELECTRICAL (TIRES AND BATTERIES SEPARATELY WARRANTED)</b>		
Batteries - 12Volt	Interstate	800-872-4100
Batteries - 6 Volt	Interstate	888-772-3600
Converter	IOTA	877-682-4682
Generators	Generac	800-747-1530
Generators	Onan	800-888-6626
Generators	Power Tech	800-760-0027
Inverters	Xantrex	800-446-6180
<b>EXTERIOR</b>		
Awning & Hardware	A & E	800-544-4881
	Carefree of Colorado	800-621-2617
	Girard	800-382-8442
Axle & Components	Dexter Axle	574-295-1900
Hitch (CA & DP)	Hidden Hitch	877-869-6787
Jacks (CA & DP)	H W H Corporation	800-494-3213
Jacks (FW & TT)	Atwood Mobile Prod.	815-877-5700
Rubber Suspension	Mor-Ryde, Inc.	574-293-1581
Steps, Electrical (KS DP)	Fleming (SCS)	800-275-7524
Steps, Electrical	Kwikee Products	800-736-9961
Steps, Manual	Hickory Springs Mfg.	501-646-6161
Steps, Manual	Elkhart Tool and Die	574-295-8500
Tires	Goodyear	800-227-1999
	RFD Components	574-295-3939
<b>HEATING</b>		
Furnaces	Atwood Mobile Prod.	815-877-5700
Furnaces	Suburban Mfg.	800-659-2138
Furnace, Aqua-Hot & Hydro-Hot	Vehicle Systems	800-685-4298

*Come & Visit the*

# *Newmar Kountry Klub*

*The Exclusive Klub for  
Newmar Owners*

Come and Relax in our Lounge,  
Have a Cup of Coffee,  
and Visit the Klub Merchandise Store.

The Kountry Klub Office is located in  
Building #2, next to the Corporate Office

Klub Hours are:  
Monday - Friday  
8:30 a.m. - 4:00 p.m.





**TO OUR VALUED CUSTOMERS**

*If, for any reason, you have a problem  
obtaining satisfactory and timely warranty service  
that may substantially impair the use, value or safety of  
your Newmar product, please call us on our toll free  
line at 800-731-8300 so that we may attempt  
to resolve your concerns.*

Please note that your Newmar Limited Warranty is activated only after Newmar has received a signed Warranty Registration Form from your selling dealer. If it has been more than 60 days since the purchase of your new coach and you have not received your Newmar Owner's Warranty Card, please contact your selling dealer or the Newmar Warranty Department at 800-731-8300.

All of the information contained in this brochure is believed to be accurate at the time of publication. However, it may be necessary to make revisions and Newmar reserves the right to make any such changes without notice or obligation. Please refer to the component information literature provided in the Owner's Information Packet for specific warranty details for the components applicable to your recreational vehicle.

**NEWMAR CORPORATION**  
355 N DELAWARE ST  
PO BOX 30  
NAPPANEE, IN 46550-0030  
[www.newmarcorp.com](http://www.newmarcorp.com)

REVISED 4/03

# NEWMAR CORPORATION OWNER'S GUIDE

## *Table of Contents*

Chapter 1	General Information
Chapter 2	Driving & Safety Precautions
Chapter 3	Air Conditioning & Heating
Chapter 4	Appliances & Accessories
Chapter 5	Cabinets & Furniture
Chapter 6	Structure Features
Chapter 7	Electrical Features
Chapter 8	Slide Out Features
Chapter 9	Exterior Features
Chapter 10	Interior Features
Chapter 11	Plumbing & Bath Features
Chapter 12	Construction Features
Chapter 13	Windows, Awnings, Vents & Doors
Chapter 14	Routine Maintenance
Chapter 15	Charts & Diagrams

Welcome to the exciting world of recreational vehicle traveling and the growing Newmar family.

Congratulations on your purchase of a Newmar product. We sincerely thank you for choosing Newmar as your recreational vehicle. We hope that you will enjoy many miles of traveling. Your new vehicle was built with care using today's technology and old world craftsmanship. We, at Newmar, strive to build vehicles that are safe, dependable, and comfortable to provide you with years of carefree, pleasant traveling.

With your new RV purchase, Newmar provides a 36-month limited warranty. Please read the Newmar Limited Warranty and all other component warranties that apply to the equipment installed on your unit.

Carefully read both the instructions in this Owner's Guide and the booklets supplied by the chassis and component manufacturers for important operation, safety, and maintenance requirements/information. Your dealer should be consulted should you have any questions. If your dealer is unable to answer the questions to your satisfaction he will refer you to our staff for assistance. Our customers are extremely important to us and we will make every effort necessary to ensure your satisfaction.

The limited warranties issued by the chassis and component manufacturers require periodic service and maintenance. The owner's failure to provide this service and/or maintenance may result in the loss of warranty coverage. Be sure to file the appropriate registration card with the component manufacturer as described with the individual instruction booklets to activate the warranties on the components within your Newmar RV. This Owner's Guide should be kept in your vehicle for quick reference. Take time to get acquainted with your unit and how it operates.

Again, thank you and welcome to the Newmar family.

*Newmar Corporation*

---

This guide, along with the Video Owner's Guide, has been provided by Newmar Corporation solely for the purpose of providing instructions about the operation and maintenance of this vehicle and its components. Nothing in this manual creates any warranty, either expressed or implied. The only warranty offered by Newmar Corporation is set forth in the written limited warranty that applies to this vehicle.

Instructions are included in this manual for operating some of the components that are standard on this vehicle. Instructions are also given for components that are options and may not appear on all vehicles. For more detailed information on components refer to the individual manufacturer's operating instructions contained in the Owner's Information Package.

The limited warranties issued by the chassis and component manufacturers require periodic service and maintenance. The owner's failure to provide this service and/or maintenance may result in the loss of warranty coverage. The owner should review the Newmar Corporation Limited Warranty and other manufacturers' limited warranties on all components applicable to this vehicle. To activate the warranties on the components within your Newmar recreational vehicle, be sure to file the appropriate registration card with the component manufacturer as described with the individual instruction booklet.

Newmar Corporation has compiled the most current information available at the time of publication. If the components in your unit vary significantly from what is described within this manual, then consult the instructions provided by the component manufacturer found in the Owner's Information Package.

Throughout this guide, reference is made to the following terms: Warning, Caution, and Important. These terms indicate important information that must be understood and followed. The definitions of these terms are:

#### WARNING

Emphasizes an area in which personal injury or even death could result from failure to follow instructions properly. Mechanical damage may also occur.

#### CAUTION

Failure to observe a caution can cause damage to the equipment or unit. Personal injury is unlikely.

#### IMPORTANT

Provides additional information to make a step easier or more clear.

# CHAPTER 1

## GENERAL INFORMATION

### *Table of Contents*

Delivery . . . . .	1 - 1
Major Equipment Manufacturers . . . . .	1 - 2
Limited Warranty . . . . .	1 - 3
Warranty Service . . . . .	1 - 3
Owner's Information Package . . . . .	1 - 3
Customer Relations . . . . .	1 - 3
Reporting Safety Defects . . . . .	1 - 3
Specification Label . . . . .	1 - 4
Recommended Service Centers . . . . .	1 - 5

# DELIVERY

Throughout the manufacturing process your vehicle has been inspected by our qualified technicians. However, our final inspection at the factory is not to be the last one. The pre-delivery inspection and systems check your dealer performs are the final inspections done to the unit prior to you receiving your new coach. Your dealer is also available to assist you in understanding the limited warranties and completing any necessary forms to activate the warranties for the various appliances and accessories installed in your unit.

## *Dealer Responsibilities*

1. A pre-delivery inspection and systems check. Thoroughly inspecting the vehicle and the operation of the factory installed components.
2. A customer walk-through. This is done to familiarize the customer with the vehicle, its systems and components, and their operation.
3. Delivery of the Owner's Information Package. This package contains the warranty cards and registrations for the vehicle and factory installed components that carry a separate warranty. The detailed operating and maintenance instructions on these components are also included in this package.
4. Assisting the customer in completing the component registration forms, at the customer's request. To avoid loss of warranty coverage, the dealer should review the limited warranty provisions with the customer stressing the importance of filing warranty cards and registrations to the component's manufacturers within the prescribed time limit.
5. Providing the customer with information regarding warranty and non-warranty work on the vehicle and its separately warranted components whether the customer is in or out of the area.

## *Customer Responsibilities*

The customer is responsible for regular and proper maintenance of the vehicle. Properly maintaining your vehicle will prevent conditions arising from neglect that are not covered by your Newmar limited warranty. The maintenance guidelines in this manual and any other applicable manual should be followed. It is your responsibility and obligation to return the vehicle to an authorized dealer for repairs and service.

To assist you in avoiding problems with your vehicle, we recommend you do the following:

- a. Read the warranty. Go over it thoroughly with your dealer.
- b. Inspect the vehicle. Do not accept delivery until you have gone through the unit with the dealer. Newmar has provided a check list to be used during retail delivery. Check each item on the list and make sure the dealer does the same. Do not sign this checklist until you have done this.  
**NOTE:** The sales literature versus actual specifics to the vehicle's measurements, weights, or quantities may vary.
- c. Ask questions about anything that you do not understand concerning your recreational vehicle.
- d. When taking delivery, set an appointment for adjustments. This appointment should be approximately two (2) weeks after you accept delivery.
- e. Responsible Use. Your vehicle is designed to be used for recreational or temporary living purposes. It is not designed to be used as a full-time residence or for commercial use. Commercial use means using as a business asset such as a mobile office or using the vehicle for lease/rental purposes.

## *Major Equipment Manufacturers*

A & E Awnings	800-544-4881
Atlanta DTH, Inc.	770-451-9777
Atwood Mobile Products	815-877-5700
A.S.A. Inc.	574-266-1886
Carefree of Colorado	800-621-2617
Collins & Company	574-848-1118
Dexter Axle	574-295-1900
Dometic, Duo Therm	800-544-4881
Elkhart Tool & Die	574-295-8500
Evans Tempcon	800-354-7088
FanTastic Vent Corp.	800-521-0298
Flexsteel Industries	563-556-7730
Ford Motor Company	800-444-3311
Freightliner Custom Chassis	800-FTL-HELP
Gekotek Electronics (Monitor Panel)	714-738-3551
Generac Generators	800-747-1530
Goodyear Tires	800-227-1999
HWH Corporation	800-494-3213
Hickory Springs Mfg.	501-646-6161
Hidden Hitch	877-869-6787
IOTA	877-682-4682
Interstate Batteries - 12 Volt	800-872-4100
Interstate Batteries - 6 Volt	888-772-3600
KVH Industries	401-847-3327
Kwikkee Products	800-736-9961
Magic Chef	515-792-7000
Midwest Sales & Service	574-287-3365
Mito	888-433-6486
Mor-Ryde, Inc.	574-293-1581
Nagy Fleet Net, Inc.	574-262-4479
Norcold	800-543-1219
Onan Generators	800-888-6626
Pioneer	800-777-4856
PowerTech Generators	800-760-0027
Putnam Hitch	517-369-2165
Quest Corp.	800-877-0521
RFD Components	574-295-3939
Scope Seating	574-295-6016
SeaLand Technology	800-321-9889
Sears	800-359-2000
Sony	800-222-7669
Spartan Motors	800-543-4277
Splendide Washer/Dryer	800-736-4127
Suburban Mfg.	800-659-2138
Thetford Toilet	800-521-3032
U-Line Ice Maker	800-779-2547
Villa International	714-535-7272
Vehicle Systems	800-685-4298
Ventline (Range Hood)	574-848-4491
Winegard Antenna Systems	800-288-8094

# RECREATIONAL VEHICLE LIMITED WARRANTY

The Newmar Corporation Limited Warranty was provided to you by your selling dealer prior to purchase. Please refer to this document when inquiring about the Newmar Warranty. To receive an additional copy, please write to: Newmar Corporation, Warranty Department, P.O. Box 30, Nappanee, IN 46550-0030.

## *Warranty Service Deadline*

Warranty service required needs to be completed during the term of the warranty. Service work scheduled or performed after the expiration of the Newmar three (3) year/50,000 mile warranty **WILL NOT** be covered.

## *Owner's Information Package*

Included in this package are valuable documents about your vehicle and its components and systems. The Newmar Owner's Guide does not cover every possible detail of the equipment, standard and/or optional, installed on or in your vehicle. Consulting the booklets and instruction manuals in this package will help you safely operate, maintain, and troubleshoot these items.

Read all of the information and understand the safety and operating instructions included in the Owner's Information Package. To assure full warranty coverage, it is essential that all maintenance instructions are followed.

## CUSTOMER RELATIONS

If you wish to schedule maintenance work, schedule service work, or order parts you should notify your local authorized Newmar Service Center to set up an appointment. If you are unsure of the location of the closest authorized Service Center, see the listing in this manual. You may also write to:

Newmar Corporation  
Warranty Department  
72185 C.R. 3  
P.O. Box 30  
Nappanee, IN 46550-0030

## REPORTING SAFETY DEFECTS

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety



If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Newmar.

To contact NHTSA, you may either call the Auto Safety Hotline toll free at 1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, DC 20590. You can also obtain other information about motor vehicle safety from the hotline.

# INFORMATION SHEET

Newmar has enclosed an Information Sheet for your convenience. This sheet contains important information about your coach. The sheet can be found in the black literature bag provided with your unit. Listed on this sheet is the six digit Newmar Serial Number. This number is needed whenever making an appointment for service or ordering parts through your Newmar Dealer or Service Center. Also listed is the Vehicle Identification Number (VIN). The VIN is the legal identification of the completed vehicle and is used by the state for vehicle registration. Both of these numbers are also listed on the Customer Care card Newmar issues upon receipt of registration.

Below is a sample of the Information Sheet.

1. The Newmar Serial Number
2. Vehicle Identification Number (VIN)
3. Year/Brand/Type/Floorplan
4. Manufacturer, Model and Serial Number of factory installed equipment.

③

THANK YOU FOR PURCHASING A QUALITY NEWMAR PRODUCT! FOR YOUR CONVIENCE, WE HAVE ENCLOSED A SERIAL NUMBER LIST OF IMPORTANT EQUIPMENT INSTALLED IN YOUR XXXX XX XX XXXX. THE SERIAL NUMBER FOR YOUR UNIT IS XXXXXX.

①

②

VIN: XXXXXXXXXXXXXXXX DECOR # XXX-XXX WORDCOLOR

CLIMATE SYSTEM		SERIAL #
FRONT A/C	59516 601	XXXXXX
REAR A/C	59516 601	XXXXXX
DASH A/C		
FRONT FURN.	SF20	XXXXXXXXXX
REAR FURN.		
AUX HEATER		

ENERGY MANAGEMENT SYSTEM	
INVERTER	
CONVERTER	
GENERATOR	

④

AUDIO/VIDEO/NAVIGATION	
FRONT TV	
REAR TV	
TV #3	
FRONT RADIO	
REAR RADIO	
RADIO #3	
VCR	
VCR #2	
CD PLAYER	
SURROUND	
DVD	
DVD - STEREO	
SATELLITE	
NAVIGATION	

APPLIANCES	
WASHER	
DRYER	
RANGE	
MICROWAVE	R1850 XXXXX
CB RADIO	
MONITOR	
ICE MAKER	
REFRIGERATOR	NDR1062 XXXXXXXXX
FREEZER	
WATER HEATER	SW1000E XXXXXXXXXX

LEVELING SYSTEM	
JACK PUMP	
JACK LF	
JACK RF	
JACK LR	

AWNING	
AWNING	

# RECOMMENDED SERVICE CENTERS

## ALABAMA

**MADISON RV CENTER**  
1707 JORDAN LANE N.W.  
HUNTSVILLE AL 35816  
PHONE (256) 837-3881 FAX (256) 830-4451

**MILLICAN RV AMERICA**  
6550 CR 490  
HANCEVILLE AL 35077  
PHONE (256) 775-8030 FAX (256) 775-8085

**MILLICAN RV AMERICA**  
36115 US HWY. 280  
SYLACAUGA AL 35150  
PHONE (256) 249-3773 FAX (256) 249-3958

## ALASKA

**A & M RV CENTER**  
2225 E. 5TH AVE.  
ANCHORAGE AK 99501  
PHONE (907) 279-5508 FAX (907) 272-4156

**KAREN'S RV SERVICE CENTER**  
1850 VIKING DRIVE  
ANCHORAGE AK 99501  
PHONE (907) 336-2055 FAX (907) 336-2054

## ARIZONA

**ROBERT CRIST RV**  
2025 E. MAIN STREET  
MESA AZ 85213  
PHONE (480) 834-9410 FAX (480) 834-8238

**STAR VALLEY RV**  
255248 E. HWY. 260  
PAYSON AZ 85541  
PHONE (928) 468-2363 FAX (928) 468-8073

**SUN CITY RV INC.**  
9045 NORTHWEST GRAND AVE.  
PEORIA AZ 85345  
PHONE (623) 979-8585 FAX (623) 979-7121

**WORLD WIDE RV**  
4660 E. MAIN STREET  
MESA AZ 85205  
PHONE (480) 832-5600 FAX (480) 832-5632

## ARKANSAS

**OUTDOOR LIVING CENTER**  
HWY. 7 SOUTH  
P.O. BOX 1081  
RUSSELLVILLE AR 72801  
PHONE (479) 968-7706 FAX (479) 968-4360

## CALIFORNIA

**ALPINE RECREATION SLS & SVC**  
19380 MONTEREY ROAD  
MORGAN HILL CA 95037  
PHONE (408) 779-4511 FAX (408) 779-0754

**DAVE ALTMANS RV**  
1201 BALDWIN PARK BLVD.  
BALDWIN PARK CA 9170  
PHONE (626) 960-1884 FAX (626) 962-6906

**DAVE ALTMANS RV**  
22020 RECREATION ROAD  
CARSON CA 90745  
PHONE (310) 518-6182 FAX (310) 513-0497

**DAVE ALTMANS RV**  
1313 RV CENTER DRIVE  
COLTON CA 92324  
PHONE (909) 422-0311 FAX (909) 422-0450

**HAPPY DAZE RV**  
1199 EL CAMINO AVE.  
SACRAMENTO CA 95815  
PHONE (916) 920-8255 FAX (916) 920-5503

**MANTECA TRAILER & CAMPER**  
1990 E. YOSEMITE AVE.  
MANTECA CA 95336  
PHONE (209) 239-1267 FAX (209) 239-4348

**NIEL'S MOTOR HOMES**  
8646 SEPULVEDA BLVD.  
NORTH HILLS CA 91343  
PHONE (818) 891-0786 FAX (818) 895-1189

**PAUL EVERT'S RV COUNTRY**  
3633 S. MAPLE  
FRESNO CA 93725  
PHONE (559) 486-1000 FAX (559) 237-3298

**TEMECULA VALLEY RV**  
28897 FRONT STREET  
TEMECULA CA 92590  
PHONE (909) 695-1018 FAX (909) 308-1935

## COLORADO

**ALPINE TRAVEL TRAILERS**  
2487 HIGHWAY 6 & 50  
GRAND JUNCTION CO 81505  
PHONE (970) 242-5898 FAX (970) 242-6882

**J D I. TRAILER SALES**  
2734 LAKE AVENUE  
PUEBLO CO 81004  
PHONE (719) 564-8056 FAX (719) 564-0306

**MOUNTAIN STATES RV**  
14300 E. COLFAX AVENUE  
AURORA CO 80011  
PHONE (303) 360-0252 FAX (303) 365-9297

## CONNECTICUT

**DAVE'S RV CENTER**  
2 INDUSTRIAL PLAZA ROAD  
DANBURY CT 06810  
PHONE (203) 730-1744 FAX (203) 730-1741

## DELAWARE

**PARKVIEW RV CENTER**  
5511 DUPONT PARKWAY  
SMYRNA DE 19977  
PHONE (302) 653-6619 FAX (302) 653-6631

**SLICERS CAMPING TRAILERS**  
773 S. DUPONT HWY.  
NEW CASTLE DE 19720  
PHONE (302) 836-4110 FAX (302) 836-4781

## FLORIDA

**DICK GORE'S RV WORLD**  
14590 DUVAL PLACE WEST  
JACKSONVILLE FL 32218  
PHONE (904) 741-5100 FAX (904) 741-4905

**FREIGHTLINER OF SO. FLORIDA**  
1699 N. US 1  
FORT PIERCE FL 34950  
PHONE (561) 466-9424 FAX (561) 466-5102

**HARBERTSON SWANSTON RV**  
17028 US HWY. 19 NORTH  
CLEARWATER FL 33764  
PHONE (727) 539-8714 FAX (727) 539-1714

**INDEPENDENCE RV**  
12705 W. COLONIAL DRIVE  
WINTER GARDEN FL 34787  
PHONE (407) 877-7878 FAX (407) 877-3806

**LAND YACHTS**  
1414 COMMERCE LANE  
P.O. BOX 1840  
JUPITER FL 33468  
PHONE (561) 745-0242 FAX (561) 745-1725

**LEISURE TYME RV**  
1490 HWY. 98 WEST  
MARY ESTHER FL 32569  
PHONE (850) 581-0880 FAX (850) 581-2300

**LEISURE TYME RV**  
6428 PENSACOLA BLVD.  
PENSACOLA FL 32505  
PHONE (850) 476-6848 FAX (850) 474-6392

**NORTH TRAIL RV CENTER**  
5270 ORANGE RIVER BLVD.  
FORT MYERS FL 33905  
PHONE (239) 693-8200 FAX (239) 693-9702  
WWW.NORTHTRAILRV.COM

**TRAVEL EASY SALES & SERVICE**  
4299 HWY. 441 SOUTH  
OKEECHOBEE FL 34974  
PHONE (863) 467-0400 FAX (863) 467-9396  
WWW.TRAVELEASYRV.COM

## GEORGIA

**DICK GORE'S RV WORLD INC.**  
250 LONGWOOD DRIVE  
RICHMOND HILL GA 31324  
PHONE (912) 756-6606 FAX (912) 756-6627  
WWW.DICKGORESrvWORLD.COM

## IDAHO

**BODILY RV INC.**  
4409 CHINDEN BLVD.  
GARDEN CITY ID 83714  
PHONE (208) 376-7029 FAX (208) 376-7204

## ILLINOIS

**COLLIER RV CENTER**  
7373 HARRISON AVE.  
ROCKFORD IL 61112  
PHONE (815) 332-3322 FAX (815) 332-8388

**EHRHARDT'S TRAILER SALES**  
776 W. OAKTON ST.  
DES PLAINES IL 60018  
PHONE (847) 437-3421 FAX (847) 437-3459

**LARRY'S TRAILER SALES**  
HWY. 148 NORTH  
ZEIGLER IL 62999  
PHONE (618) 596-6414 FAX (618) 596-6344

**R & S SALES & SERVICE**  
218 S. LAKE OF THE WOODS ROAD  
MAHOMET IL 61853  
PHONE (217) 586-2055 FAX (217) 586-2382  
WWW.RSRVSALES.COM

**S & S RV'S INC.**  
I-57 & ROUTE 185  
FARINA IL 62838  
PHONE (618) 245-3533 FAX (618) 245-6185

**TAYLOR BROWN**  
1400 LOCKE DRIVE  
BRADLEY IL 60915  
PHONE (815) 933-2251 FAX (815) 933-9710

## INDIANA

**ALL BRAND RV SERVICE**  
2717-B OAKLAND AVE.  
ELKHART IN 46517  
PHONE (800) 981-7604 FAX (574) 522-2251

**BASDEN'S AMERICAN RV CENTER**  
PO BOX 3641  
EVANSVILLE IN 47735  
PHONE (812) 867-5200 FAX (812) 867-4398

**DONS CAMPER SALES**  
U.S. 41 S. BOX 373  
BOSWELL IN 47921  
PHONE (765) 869-5009 FAX (765) 869-5009

**HART CITY RV SERVICE**  
2300 S. NAPPANEE STREET  
ELKHART IN 46517  
PHONE (574) 295-5793 FAX (574) 295-6190

**INDY RV CENTER**  
457 KNIGHT DR.  
GREENWOOD IN 46142  
PHONE (317) 881-0300 FAX (317) 881-0431

**TERRY'S RV SALES & SERVICE**  
2900 E. CR 350 NORTH  
MUNCIE IN 47303  
PHONE (765) 289-9704 FAX (765) 289-9737

**TOM STINNETT HOLIDAY RV. CTR.**  
520 MARRIOTT DRIVE  
CLARKSVILLE IN 47129  
PHONE (812) 282-7718 FAX (812) 285-7578

**WETNIGHT RV SALES & SERVICE**  
4401 US 41 NORTH  
TERRE HAUTE IN 47805  
PHONE (812) 466-3961 FAX (812) 466-6851

**IOWA**  
**AUTORAMA RV CENTER**  
2227 SE 14TH  
DES MOINES IA 50320  
PHONE (515) 282-0443 FAX (515) 282-1425

**CHEYENNE CAMPING CENTER**  
2000 EAST LECLAIRE ROAD  
ELDRIDGE IA 52748  
PHONE (563) 285-7878 FAX (563) 285-4455

**HEROLD TRAILER SALES**  
1806 W. 2ND AVE., HWY. 92 WEST  
INDIANOLA IA 50125  
PHONE (515) 961-7405 FAX (515) 961-3674

**WALKER TRAILER SALES INC.**  
HWY. 18 WEST, BOX 633  
NORA SPRINGS IA 50458  
PHONE (641) 749-2321 FAX (641) 749-2379

**KANSAS**  
**A & R**  
16685 ORCHARD LANE  
STILWELL KS 66085  
PHONE (913) 681-5446 FAX (913) 681-5446

**HARPER CAMPERLAND**  
1200 E. 10TH  
GREAT BEND KS 67530  
PHONE (620) 792-5170 FAX (620) 792-8466

**HARPER CAMPERLAND**  
117 W. 14TH  
HARPER KS 67058  
PHONE (620) 896-2862 FAX (620) 896-2858  
WWW.HARPERCAMPERLAND.COM

**JAYHAWK CAMPER SALES**  
24105 W. 43RD  
SHAWNEE KS 66226  
PHONE (913) 422-5677 FAX (913) 422-7147

**WILCOX HOMES & RV CENTER**  
835 NORTH EAST HWY. 24  
TOPEKA KS 66608  
PHONE (785) 357-5111 FAX (785) 232-1574

**KENTUCKY**  
**RECREATION USA**  
1675 NORTH BROADWAY  
LEXINGTON KY 40505  
PHONE (859) 233-1777 FAX (859) 231-9369

**SUMMIT RV SALES INC.**  
6917 US 60  
ASHLAND, KY 41102  
PHONE (606) 928-6795 FAX (606) 928-4102

**YOUNGBLOOD RV CENTER INC.**  
2132 STATE ROUTE 45 NORTH  
MAYFIELD KY 42066  
PHONE (270) 247-8591 FAX (270) 247-0604

**LOUISIANA**  
**DIXIE MOTORS INC.**  
321 N. MORRISON BLVD.  
HAMMOND LA 70403  
PHONE (225) 272-1111 FAX (225) 272-0942

**MAHONEY'S CAMP-R-LAND**  
1800 CYPRESS STREET  
WEST MONROE LA 71291  
PHONE (318) 388-2147 FAX (318) 388-2303

**MILLER RV**  
12912 FLORIDA BLVD.  
BATON ROUGE LA 70815  
PHONE (504) 275-2940 FAX (504) 275-6807

**SOUTHERN RV INC.**  
3625 INDUSTRIAL DRIVE  
BOSSIER CITY LA 71112  
PHONE (318) 746-2267 FAX (318) 746-2227

**MAINE**  
**MOUNTAIN ROAD RV**  
31 MOUNTAIN ROAD  
SABATTUS ME 04280  
PHONE (207) 375-4091 FAX (207) 375-4014

**MARYLAND**  
**BECKLEY'S CAMPING CENTER**  
11109 ANGLEBERGER ROAD  
THURMONT MD 21788  
PHONE (301) 898-3300 FAX (301) 898-1017

**MASSACHUSETTS**  
**BOB'S CAMPER & RV**  
2810 HANCOCK ROAD  
WILLIAMSTOWN MA 01267  
PHONE (413) 458-3093 FAX (413) 458-9837

**STEARNS RV SALES**  
71 MECHANIC ST.  
BELLINGHAM MA 02019  
PHONE (508) 966-1220 FAX (508) 966-3408

**MICHIGAN**  
**BEECH GROVE TRAILER SALES**  
51439 M 40 NORTH  
MARCELLUS MI 49067  
PHONE (616) 646-7845 FAX (616) 646-2012

**ERNIES RV SALES & SERVICE INC.**  
1066 STEPKE CT.  
TRAVERSE CITY MI 49684  
PHONE (231) 943-9111 FAX (231) 943-4441

**GENERAL RV CENTER**  
17277 RANCHO ROAD  
BROWNSTOWN TWP MI 48192  
PHONE (734) 284-5500 FAX (734) 284-5568

**GENERAL TRAILER SALES**  
24583 N. RIVER ROAD  
MT. CLEMENS MI 48043  
PHONE (586) 954-3600 FAX (586) 954-0182

**GENERAL TRAILER SALES**  
5300 HIGHLAND ROAD  
WATERFORD MI 48327  
PHONE (248) 674-0346 FAX (248) 674-3809

**GENERAL TRAILER SALES**  
48500 12 MILE ROAD  
WIXOM MI 48393  
PHONE (248) 349-0900 FAX (248) 349-7965

**HILLTOP RV SUPERSTORE**  
2905 N. LINCOLN ROAD  
ESCANABA MI 49829  
PHONE (906) 786-7986 FAX (906) 786-3421

**INTERNATIONAL RV WORLD INC.**  
2717 E. DELTA ROAD  
BAY CITY MI 48706  
PHONE (989) 667-9840 FAX (989) 667-9843

**KITSMILLER RV**  
1211 N. CEDAR  
MASON MI 48854  
PHONE (517) 694-7500 FAX (517) 694-3542

**MIDWAY MOTOR HOMES**  
5590 S. DIVISION AVE.  
GRAND RAPIDS MI 49548  
PHONE (616) 534-9641 FAX (616) 534-6869

**MODERN TRAILER SALES**  
7834 S. DIVISION AVE.  
GRAND RAPIDS MI 49548-2110  
PHONE (616) 281-3010 FAX (616) 281-3449

**RANCH RV SALES INC.**  
6825 HWY. M-68  
ALANSON MI 49706  
PHONE (231) 548-5443 FAX (231) 548-2202

**MINNESOTA**  
**STENZEL'S CAMPERS**  
4701 HWY. 169  
ELMORE MN 56027  
PHONE (641) 948-3204 FAX (641) 948-3205

**THERMO LEASING CORP.**  
8390 HWY. 10 NORTH WEST  
ANOKA MN 55303  
PHONE (763) 421-2505 FAX (763) 421-6076

**MISSISSIPPI**  
**AMERICAN RV CENTERS, INC.**  
8150 CRAFT ROAD  
OLIVE BRANCH MS 38654  
PHONE (662) 893-3040 FAX (662) 893-3044

**PAW PAW'S CAMPER CITY**  
5551 I-55 SOUTH  
JACKSON MS 39212  
PHONE (601) 376-0610 FAX (601) 376-0414

**RV REPAIR & SALES**  
4749 HWY. 80 WEST  
JACKSON MS 39209  
PHONE (601) 922-9425 FAX (601) 922-5153

**MISSOURI**  
**ALL SEASONS RV**  
2500 NW SOUTH OUTER ROAD  
BLUE SPRINGS MO 64015  
PHONE (816) 228-6200 FAX (816) 224-4600

**BEN'S RECREATIONAL VEHICLES**  
RR B BOX 167  
CANTON MO 63435  
PHONE (573) 288-3287 FAX (573) 288-3287

**BILL THOMAS CAMPER SALES**  
101 THOMAS RV WAY  
WENTZVILLE MO 63385  
PHONE (636) 327-5900 FAX (636) 327-6542

**CAPTOWN R V SALES**  
1 55 & AIRPORT ROAD  
CAPE GIRARDEAU MO 63702  
PHONE (573) 334-7152 FAX (573) 334-9059

**COACHLIGHT RV SALES**  
5327 S. GARRISON AVE.  
CARTHAGE MO 64836  
PHONE (417) 358-7444 FAX (417) 358-0856

**FRANK REED RV**  
HWY. 47 NORTH  
ST. CLAIR MO 63077  
PHONE (636) 583-2244 FAX (636) 583-2147

**K C TRAILER SALES**  
11520 S. 71 HWY.  
KANSAS CITY MO 64137  
PHONE (816) 761-1393 FAX (816) 761-7722

**MONTANA**  
**BOZEMAN MOTORS INC.**  
2900 N. 19TH AVE.  
BOZEMAN MT 59718  
PHONE (406) 587-1221 FAX (406) 586-1400

**BRETZ RV & MARINE**  
RESERVE STREET AT I-90  
4800 GRANT CREEK ROAD  
MISSOULA MT 59808  
PHONE (406) 541-4800 FAX (406) 541-4813

**NEBRASKA**  
**RICH & SONS CAMPER SALES**  
5112 S. ANTELOPE DRIVE  
GRAND ISLAND NE 68803  
PHONE (308) 384-2040 FAX (308) 384-2043

**NEVADA**  
**WHEELERS LAS VEGAS RV**  
13175 LAS VEGAS BLVD. SOUTH  
LAS VEGAS NV 89124  
PHONE (702) 896-9000 FAX (702) 896-4504

**NEW HAMPSHIRE**  
**C.H. DANA RV INC.**  
628 WOODSVILLE RD.  
MONROE NH 03771-3328  
PHONE (603) 638-2200 FAX (603) 638-2066

**CAMPERS INN OF KINGSTON**  
146 ROUTE 125  
KINGSTON NH 03848  
PHONE (603) 642-5555 FAX (603) 642-9931

**MOUNTAIN VALLEY RECREATION**  
410 MAIN STREET  
GORHAM NH 03581  
PHONE (603) 466-3868 FAX (603) 466-2416

**NEW JERSEY**  
**SCOTT MOTOR COACH SALES**  
1133 ROUTE 88  
LAKEWOOD NJ 08701  
PHONE (732) 370-1022 FAX (732) 905-0993

**NEW MEXICO**  
**AMERICAN HOLIDAY RV**  
9999 CENTRAL N.E.  
ALBUQUERQUE NM 87123  
PHONE (505) 299-6838 FAX (505) 296-0215

**AMERICAN RV & MARINE**  
11810 CENTRAL S.E.  
ALBUQUERQUE NM 87123  
PHONE (505) 293-1983 FAX (505) 293-6991

**ROCKY MOUNTAIN RV & MARINE**  
12700 CENTRAL SE  
ALBUQUERQUE NM 87123  
PHONE (505) 292-7800 FAX (505) 292-7993

**NEW YORK**  
**ALL AMERICAN RV/BARRETT**  
674 QUAKER ROAD  
QUEENSBURY NY 12804  
PHONE (518) 793-5212 FAX (518) 792-1988

**ALPIN HAUS SKI SHOP INC.**  
103 SITTERLY ROAD  
CLIFTON PARK NY 12065  
PHONE (518) 371-1289 FAX (518) 371-3001

**BALLARDS CAMPING CENTER**  
S - 5849 SOUTHWESTERN BLVD.  
HAMBURG NY 14075  
PHONE (716) 649-9654 FAX (716) 648-0340

**JOURNEYTIME TRAILERS INC.**  
940 MIDDLE COUNTRY ROAD  
SELDEN NY 11784  
PHONE (631) 698-0055 FAX (631) 736-6622

**SEVEN O'S**  
7917 DEVAUL ROAD  
KIRKVILLE NY 13082  
PHONE (315) 687-9342 FAX (315) 687-7992

**SKYWAY RV CENTER**  
ROUTE 52  
GREENFIELD PARK NY 12435  
PHONE (845) 647-3100 FAX (845) 647-5814

**WES TRAILER SALES**  
6166 ROUTE 25  
WADING RIVER NY 11792  
PHONE (631) 727-5852 FAX (631) 727-5396

**WILKINS RV INC.**  
1099 ALMOND ROAD  
HORNELL NY 14843  
PHONE (607) 324-1313 FAX (607) 324-1082

**WRATTEN TRAILER SALES**  
9209 ROUTE 11 SOUTH  
ADAMS NY 13605  
PHONE (315) 232-4535 FAX (315) 232-3445

**NORTH CAROLINA**  
**CAMPTOWN RV**  
12856 US HWY. 70 WEST  
CLAYTON NC 27520  
PHONE (919) 553-7277 FAX (919) 553-2716

**HOWARD RV CENTER**  
6811 MARKET STREET  
WILMINGTON NC 28405  
PHONE (910) 791-5371 FAX (910) 392-0672

**OLD TOWN CAMPER SALES**  
5109 NORTH CAUSEWAY DRIVE  
WINSTON - SALEM NC 27106  
PHONE (336) 924-9864 FAX (336) 922-1458

**TOM JOHNSON CAMPING CENTER**  
1885 US 70 WEST  
MARION NC 28752  
PHONE (828) 724-4105 FAX (828) 724-9057

**NORTH DAKOTA**  
**CAPITAL RV CENTER**  
1900 N. BISMARCK EXPY.  
BISMARCK ND 58501  
PHONE (701) 255-7878 FAX (701) 255-1678

**OHIO**  
**AMOS MOTOR & RV**  
109 S MAIN STREET  
BRADNER OH 43406  
PHONE (419) 288-2700 FAX (419) 288-3273

**ARBOGAST RV DEPOT**  
3540 SOUTH COUNTY ROAD 25A  
TROY OH 45373  
PHONE (937) 335-0068 FAX (937) 335-0471

**BEGGS MOTOR HOMES**  
11197 CLEVELAND AVE NORTH WEST  
P.O. BOX 545  
UNIONTOWN OH 44685  
PHONE (330) 499-9755 FAX (330) 499-5106  
WWW.BEGGSMOTORHOMES.COM

**BEGGS RV CENTER, LLC**  
6075 DRESSLER ROAD NW  
NORTH CANTON OH 44720  
PHONE (330) 494-9341 FAX (330) 494-9355

**COLERAIN RV**  
3491 STRUBLE ROAD  
CINCINNATI OH 45251  
PHONE (513) 923-3600 FAX (513) 245-5145

**FARBER MOTORS**  
5858 SCARBOROUGH BLVD.  
COLUMBUS OH 43232  
PHONE (614) 864-7878 FAX (614) 864-7899

**YONAKS INC.**  
46293 BELMONT CENTERVILLE ROAD  
BELMONT OH 43718  
PHONE (740) 686-2999 FAX (740) 686-2788

**OKLAHOMA**  
**DAVE'S CLAREMORE RV**  
24655 SOUTH HWY. 66  
CLAREMORE OK 74017  
PHONE (918) 341-0114 FAX (918) 341-8936

**LEE'S R.V. CITY**  
13111 N. BROADWAY EXT.  
EDMOND OK 73083-6250  
PHONE (405) 936-9300 FAX (405) 936-9323

**OREGON**  
**ALL SEASONS RV & MARINE**  
63195 JAMISON STREET  
BEND OR 97708  
PHONE (541) 382-5009 FAX (541) 382-8510

**CARRIER & SONS RV SERVICE**  
29525 AIRPORT ROAD  
EUGENE OR 97402  
PHONE (541) 461-1673 FAX (541) 461-1674

**EUGENE RECREATION SALES**  
1700 HWY. 99 NORTH  
EUGENE OR 97402  
PHONE (541) 688-4849 FAX (541) 688-1885

**LARRY'S RV INC.**  
2115 NE HWY. 20  
BEND OR 97701  
PHONE (541) 388-7552 FAX (541) 388-7526

**OLINGER TRAVEL HOMES**  
6503 ALEXANDER  
HILLSBORO OR 97123  
PHONE (503) 649-2141 FAX (503) 642-9579  
WWW.OLINGERTRAVELHOMES.COM

**OLINGER TRAVEL HOMES**  
9401 S. E. 82ND  
PORTLAND OR 97266  
PHONE (503) 771-2121 FAX (503) 771-4638  
WWW.OLINGERTRAVELHOMES.COM

**THE RV CORRAL**  
1890 HWY. 99 NORTH  
EUGENE OR 97402  
PHONE (541) 689-9204 FAX (541) 689-9415

**TRIPLE A RV CENTER INC.**  
938 CHEVY WAY  
MEDFORD OR 97504  
PHONE (541) 772-1938 FAX (541) 779-1460

**PENNSYLVANIA**  
**ANSLEY RV**  
1280 ROUTE 764  
DUNCANVILLE PA 16635  
PHONE (814) 695-9817 FAX (814) 695-9814

**COUNCIL CUP TRAILER SALES**  
ROUTE 239  
WAPWALLOPEN PA 18660  
PHONE (570) 379-3751 FAX (570) 379-2913

**HAROLD'S RV CENTER**  
7514 BETH BATH PIKE  
BATH PA 18014  
PHONE (610) 837-8880 FAX (610) 837-8177

**R D KENNEDY SALES & SERVICE**  
1394 OLD YORK ROAD  
DILLSBURG PA 17019  
PHONE (717) 432-9741 FAX (717) 432-1400

**ROLLING WHEELS RV**  
2314 LYCOMING CREEK ROAD  
WILLIAMSPORT PA 17701  
PHONE (570) 322-1894 FAX (570) 322-1902

**STOLTZFUS RVS INC.**  
RT. 272  
ADAMSTOWN PA 19501  
PHONE (717) 484-4344 FAX (717) 484-0270

**RHODE ISLAND**  
**ARLINGTON RV SUPER CENTER**  
966 QUAKER LANE  
EAST GREENWICH RI 02818  
PHONE (401) 884-7550 FAX (401) 885-4566

**SOUTH CAROLINA**  
**JOHN'S RV SALES & SERVICE**  
242 GLASSMASTER ROAD  
LEXINGTON SC 29072  
PHONE (803) 359-2957 FAX (803) 359-9121

**TONY'S RV PARTS & SERVICE INC**  
130 POND BRANCH RD  
LEXINGTON SC 29073  
PHONE (803) 894-4868 FAX (803) 894-5385

**SOUTH DAKOTA**  
**SCHAAP'S TRAVELAND**  
3100 W. RUSSELL  
SIOUX FALLS SD 57107  
PHONE (605) 332-6241 FAX (605) 332-5422

**TENNESSEE**  
**AMERICAN RV CENTERS**  
4050 N. THOMAS  
MEMPHIS TN 38127  
PHONE (901) 353-1999 FAX (901) 353-1888

**SHADRACK WATERSPORTS INC.**  
2537 VOLUNTEER PARKWAY  
BRISTOL TN 37620  
PHONE (423) 652-0120 FAX (423) 652-0267

**TEXAS**  
**AMERICAN RV & MARINE**  
8805 NORTH DESERT BLVD.  
ANTHONY TX 79821  
PHONE (915) 298-5400 FAX (915) 298-7993

**CAMPER COACHES**  
1701 SOUTH LOOP 289  
LUBBOCK TX 79423  
PHONE (806) 748-7274 FAX (806) 748-7277

**EAST TEXAS RV SALES**  
P.O. BOX 250  
KIRBYVILLE TX 75956  
PHONE (409) 423-4032 FAX (409) 423-5824

**LONGVIEW RV REPAIR**  
717 E. LOOP 281  
LONGVIEW TX 75605  
PHONE (903) 758-5931 FAX (903) 758-5940

**PROFESSIONAL SALES**  
1809 JOHN MCCAIN ROAD  
COLLEYVILLE TX 76034  
PHONE (817) 488-9542 FAX (817) 488-1523

**RON HOOVER CO.**  
29277 I.H. 10 WEST  
BOERNE TX 78006  
PHONE (830) 755-2252 FAX (830) 755-8644

**RON HOOVER CO.**  
5029 COLUMBIA STREET  
CORPUS CHRISTI TX 78416  
PHONE (361) 854-5383 FAX (361) 851-9578

**RON HOOVER CO.**  
101 EXPRESSWAY 83  
DONNA TX 78537  
PHONE (956) 464-7826 FAX (956) 464-7829

**RON HOOVER CO.**  
16465 KATY FREEWAY  
HOUSTON TX 77094  
PHONE (281) 829-1560 FAX (281) 829-9562

**RON HOOVER CO.**  
1510 W. MARKET STREET  
ROCKPORT TX 78382  
PHONE (361) 729-9695 FAX (361) 729-9698

**VOGT MOTOR HOMES**  
5624 AIRPORT FREEWAY  
FORT WORTH TX 76117  
PHONE (817) 831-4222 FAX (817) 838-5574

**UTAH**  
**BLAINE JENSEN & SONS RV CTRS.**  
780 N. 900 WEST  
KAYSVILLE UT 84037  
PHONE (801) 544-4298 FAX (801) 544-0513

**VERMONT**  
**VERMONT COUNTRY CAMPER SALES**  
1498 US ROUTE 2  
E. MONTPELIER VT 05651  
PHONE (802) 223-6417 FAX (802) 223-3561

**VIRGINIA**  
**CHEEK & SHOCKLEY RV'S INC.**  
2600 MECHANICSVILLE PIKE  
RICHMOND VA 23223  
PHONE (804) 649-7508 FAX (804) 649-0052

**KOOGLER SALES & SERVICE**  
2247 JEFFERSON HWY.  
FISHERSVILLE VA 22939  
PHONE (540) 942-5556 FAX (540) 943-0853

**WASHINGTON**  
**CHIEF'S RV CENTER**  
1120 N. 28TH AVE.  
PASCO WA 99302  
PHONE (509) 547-1198 FAX (509) 547-4399

**MILESTONE RV CENTER**  
6708 E. APPLEWAY BLVD.  
SPOKANE WA 99212  
PHONE (509) 924-6446 FAX (509) 891-4131

**WATT'S RV CENTER**  
22401 88TH AVE.  
KENT WA 98031  
PHONE (253) 854-7026 FAX (253) 854-1773

**WESTERN MOTOR COACH**  
19303 HWY. 99  
LYNNWOOD WA 98036  
PHONE (425) 774-1414 FAX (425) 774-0797

**WEST VIRGINIA**  
**DOUGLAS SPORTING GOODS CO.**  
128 BRICK STREET  
PRINCETON WV 24740  
PHONE (304) 425-8144 FAX (304) 425-6944

**TRAILER CITY INC.**  
2045 FAIRMONT AVE.  
FAIRMONT WV 26554  
PHONE (304) 366-7104 FAX (304) 363-9345

**WISCONSIN**  
**A O K RV SALES**  
5723 FREILAG DRJVE  
MENOMONIE WI 54751  
PHONE (715) 235-0641 FAX (715) 235-1230

**FINNEGANS RV**  
205 PARK AVE.  
REJOIT WI 53511

**HORN'S SALES & SERVICE**  
8120 S. FRONTAGE ROAD  
SHEBOYGAN WI 53081  
PHONE (920) 564-2381 FAX (920) 564-2385

**WYOMING**  
**EASTSIDE MOTORS & RV'S INC.**  
1200 E. SECOND ST.  
GILLETTE WY 82717  
PHONE (307) 686-1435 FAX (307) 682-1435

**JOLLEY ROGERS RV**  
6102 E. HWY. 30  
CHEYENNE WY 82001  
PHONE (307) 634-8457 FAX (307) 432-9796

**ALBERTA**  
**MAJESTIC RV WORLD**  
2777 SUNRIDGE BLVD. NORTH EAST  
CALGARY AB T1Y 3C2  
PHONE (403) 291-1203 FAX (403) 291-9561

**VELLNER LEISURE PRODUCTS**  
1890 49 AVENUE  
RED DEER AB T4R 2N7  
PHONE (403) 343-1464 FAX (403) 340-8135

**BRITISH COLUMBIA**  
**MIDTOWN RV LTD.**  
310 INDUSTRIAL AVE. WEST  
PENTICTON BC V2A 9R3  
PHONE (250) 492-5705 FAX (250) 492-0430

**TRAVELAND RV SUPERCENTER**  
20529 LANGLEY BY PASS  
LANGLEY BC V3A 5E8  
PHONE (604) 530-8141 FAX (604) 530-9576

**TRIANGLE RV CENTRE LTD.**  
10299 MC DONALD PARK ROAD  
SIDNEY BC V8L 5X7  
PHONE (250) 656-1122 FAX (250) 656-2161

**MANITOBA**  
**WALT'S TRAILER SALES LTD.**  
5195 PORTAGE AVE.  
HEADINGLY MB R4H 1E1  
PHONE (204) 837-8388 FAX (204) 831-8674

**NEW FOUNDLAND**  
**GARCIN'S AUTO BODY LTD.**  
11 & 13 WEST END INDUSTRIAL PARK  
PASADENA NF A0L 1K0  
PHONE (709) 686-5121 FAX (709) 686-5166

**NOVA SCOTIA**  
**CENTRAL RV**  
535 HWY. 2  
ELMSDALE NS B2S 1A4  
PHONE (902) 883-0288 FAX (902) 883-0289

**ONTARIO**  
**RV WAREHOUSE**  
65 REIVE BLVD.  
COOKSTOWN ON L0L 1L0  
PHONE (705) 458-4774 FAX (705) 458-4446

**WILLIAM PATTERSON RV SALES**  
28359 PIONEER LINE  
R.R. 1  
DUTTON ON N0L 1J0  
PHONE (519) 762-2125 FAX (519) 762-3386

**QUEBEC**  
**MOTORISES LE BLANC INC.**  
1950 DES LAURENTIDES BLVD.  
VIMONT LAVAL PQ H7M 2Y2  
PHONE (450) 663-7941 FAX (450) 663-2213

**SASKATCHEWAN**  
**D J'S RV CENTRE LTD.**  
THATCHER DRIVE EAST & 1 HWY.  
MOOSE JAW SK S6H 4N9  
PHONE (306) 694-6048 FAX (306) 694-1771

# CHAPTER 2

## DRIVING & SAFETY PRECAUTIONS

### *Table of Contents*

Safety Precautions . . . . .	2 - 1
General Warning . . . . .	2 - 1
Before Starting Out . . . . .	2 - 2
Driving . . . . .	2 - 2
LP Gas & Fuel . . . . .	2 - 3
LP Gas System . . . . .	2 - 3
LP Regulator . . . . .	2 - 4
LP Distribution Lines . . . . .	2 - 4
Fire Safety . . . . .	2 - 5
Fire Extinguisher . . . . .	2 - 5
Smoke Detector . . . . .	2 - 6
Emergency Exit Window . . . . .	2 - 6
Weight Information . . . . .	2 - 6
Weighing the Unit . . . . .	2 - 7
Campsite Parking . . . . .	2 - 9
Car Towing Hitch . . . . .	2 - 9

# SAFETY PRECAUTIONS

## WARNING

Prior to towing your vehicle, be sure you have read this entire owner's guide and that you understand your vehicle's equipment completely and how to use the equipment safely.

Read and understand all of the instructions and precautions in this owner's guide and the chassis manufacturer owner's manual before operating your new motorhome. Listed below are some safety precautions that must be adhered to while your motorhome is in motion. These precautions, as well as others that involve possible damage to equipment, are also listed in the appropriate areas in this manual.

## *General Warning*

## WARNING

Portable fuel-burning equipment, including wood and charcoal grills and stoves, shall not be used inside the recreational vehicle. The use of this equipment inside the recreational vehicle may cause fires or asphyxiation.

- Seats equipped with seat belts are the only ones to be used while the vehicle is in motion.
- While the vehicle is in motion, all seats should be locked in the forward facing position.
- Passengers should never be allowed to stand or kneel on seats in a moving vehicle.
- All passengers must have seat belts fastened in a low and snug position so that the force exerted by the belt in a collision will be spread across the hip area. Pregnant women should wear the lap-shoulder belt, with the lap belt portion worn low and snug.
- The fire extinguisher should be inspected monthly for proper charge and operating condition. The smoke alarm should also be tested on a regular basis. The label on the detector should be removed when preparing the unit for the first trip. In addition to the recommended inspection, these should also be checked prior to a vacation or extended trip.
- Sleeping facilities are not to be used while the vehicle is in motion.
- Become familiar with the operation of the escape window, but use this window strictly as an emergency exit.

## *Before Starting Out*

The following is a brief list of procedures that will aid in your driving safety and extend your equipment's life.

- Windows, mirrors, and light lenses are to be clean and unobstructed.
- Tires should be checked for proper cold inflation pressure.
- Wheel lug nuts should be checked for proper tightness.
- Fluid levels, including engine oil, transmission fluid, coolant, power steering fluid, brake fluid, and windshield washer solvent, should be checked and filled if necessary.
- Disconnect the unit and store the sewer and water supply hoses as well as shoreline power cords.
- Secure all cargo in the storage compartments in the event of a sudden stop.
- Verify that the step has retracted prior to engine ignition.

## *Driving*

There are various adjustments that need to be made prior to starting and moving the vehicle.

- Among them are the driver's seat, the tilt steering, and the exterior rear view mirrors.
- The dashboard may contain several gauges and controls you have not previously used. Become familiar with all of these devices and their operation before starting out.
- The cruise control is not to be operated on icy roads, extremely wet roads, winding roads, heavy traffic, or in any other traffic situation where a constant speed cannot be maintained.
- While driving on slippery surfaces, use care when accelerating or decelerating. Skidding and loss of vehicle control may be the result of abrupt changes in speed.
- Driving through water deep enough to wet the brakes may affect the stopping distance or cause the vehicle to pull to one side. If you have driven through deep water, check the brake operation in a safe area to be sure they have not been affected. Never operate a vehicle if a difference in braking efficiency is noticeable.
- Extreme terrain and adverse weather may affect the handling and/or performance of your vehicle. Please refer to your chassis manual for related information.

## *Notes*

---

---

---

---

---



## *LP Gas & Fuel*

### WARNING

LP gas containers, gasoline or other flammable liquids shall not be placed or stored inside the vehicle because fire or explosion may result. LP gas containers are equipped with safety valves that relieve excessive pressure by discharging gas into the atmosphere.

- While refilling the fuel or LP tank, the engine must be off, all pilot lights must be extinguished, and appliances turned off. Smoking is also prohibited at this time.
- Exhaust gases contain carbon monoxide (an odorless, colorless, and poisonous gas). These gases are produced by burned gasoline, diesel, or LP gas. Items such as the range, furnace, water heater, refrigerator, chassis engine, or generator engine can produce these gases. These fumes should not be inhaled. Inhaling carbon monoxide may produce headaches, dizziness, nausea, or even death.
- An open flame is never to be used to test for LP gas leaks.
- All protective covers and caps must be replaced after filling the LP system.
- Once the valve is closed, securely latch the LP door.
- LP gas and natural gas are not interchangeable. Never connect natural gas to the LP gas system.
- The use of equipment such as wood and charcoal grills and stoves inside this recreational vehicle may cause fires or asphyxiation.

## LP GAS SYSTEM

### *General Information*

A warning label has been placed near the LP gas container. This label reads:

### WARNING

DO NOT FILL CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY.

Overfilling the LP gas container can result in uncontrolled gas flow, which can cause fire or explosion. A properly filled container will contain approximately 80 percent of its volume as liquid LP gas.

The LP gas system components in your unit have been approved for use in camping vehicles by a nationally recognized testing laboratory. LP gas is a clean-burning dependable fuel when properly handled. The LP gas tank mounted on your unit contains liquid propane gas under high pressure. The liquid gas vaporizes as the fuel is used and passes through the tank valve

to a regulator that automatically reduces the pressure. The low-pressure gas is then distributed to the appliances through the pipe manifold system. Appliance lighting problems are commonly caused by an improperly adjusted gas regulator. Never attempt to reset the regulator yourself. Have an authorized service technician make any necessary adjustments. We recommend that you have the LP gas system checked by an authorized service technician at least once a year and after every extended trip. Although the manufacturer and dealer carefully test for leakage, travel vibrations could loosen fittings. Leaks can be easily found by applying leak detector solution at the connections. If leak detector solution is not available, a soapy water solution made with dish soap can be used. Tightening the fitting usually stops any leaks. If this does not work, shut off the main gas valve at the tank and immediately consult an authorized service technician for repairs. If a leak is suspected, the identifying odor smells similar to rotten eggs (sulfur). Never test for a leak by lighting a match or having an open flame where you suspect leaking gas.

#### WARNING

Shut off the main gas valve at the tank when the camping vehicle is not in use. Also, shut off the valve when refueling to avoid potential danger from pilot lights igniting fuel fumes. Some appliances, such as the refrigerator, water heater, and furnace, have DSI (direct spark ignition) boards, so it is important that you turn the appliances off when the LP gas is off. The ignition in the appliances will continue to spark even if there is no LP gas available.

## *LP Regulator*

The regulator acts as the heart for the LP gas system. The LP gas in the tank is under high pressure. The regulator reduces the pressure of this gas so that it is safe to use with the various appliances in your unit. If corrosion is noticed, contact a qualified LP gas service technician. Do not adjust the regulator. It is factory preset. Adjustments are to be made by a qualified LP service technician using specialized equipment.

LP gas regulators must always be installed with the diaphragm vent facing downward. Regulators that are not in compartments have been equipped with a protective cover. Make sure that the regulator vent faces downward and that the cover is kept in place to minimize the vent blockage that could result in excessive gas pressure causing fire or explosion.

## *LP Distribution Lines*

The primary manifold is a black steel pipe running the length of your unit. Most secondary lines leading to gas appliances are made of copper tubing with flare fittings. If any of the gas lines rupture, do not attempt to splice them. Always run a new line. We recommend gas distribution work be performed by an authorized service technician. The main valve at the LP tank must be closed when removing or servicing any gas appliance. This will prevent dangerous gas leakage that could result in an explosion and possibly serious injury. If a leak is suspected, have the systems inspected and repaired by a qualified service technician.

## *Precautions & Recommendations*

- Inspect the LP fill valve for foreign materials before refueling.
- Shut the pilot lights off prior to refueling LP gas tanks.
- Never check for gas leaks with an open flame (match, etc.).
- Gas lines should be visually inspected periodically.
- Have the gas system inspected yearly and before and after extended trips.
- The gas system should be inspected and repaired by qualified technicians only.

### WARNING

The LP system in your recreational vehicle is designed for liquefied petroleum gas only. Never attempt to connect natural gas or butane gas in this system.

## FIRE SAFETY

The possibility of fire exists in all areas of life, and the recreational life-style is no exception. Recreational vehicles are complex machines. They are made up of many materials, some of which are flammable. Like most hazards, the possibility of fire can be minimized, if not totally eliminated. This is done by recognizing the danger and practicing common sense safety and maintenance habits. For safety reasons, your unit is furnished with both a fire extinguisher and a smoke alarm.

### *Fire Extinguisher*

The fire extinguisher is rated for Class B (grease, gasoline, diesel fuel, flammable liquids) and Class C (electrical) fires. These are the most common types of fires in vehicles. Read the operator's manual and the instructions on the fire extinguisher. Be sure to know how and when to use the extinguisher and where it is located.

Fire extinguishers are mechanical, pressurized devices. Care must be exercised when they are handled. They must be maintained as the operator's manual instructs for proper and safe operation. The extinguisher should be inspected at least once a month. More frequent inspections may be required if the extinguisher is exposed to the weather or to possible tampering. Do not test the extinguisher by partially discharging. Doing this will cause a loss of pressure.

If a fire occurs in the vehicle, evacuate the vehicle as quickly and as safely as possible. Consider the cause and the severity of the fire and the risk involved before trying to extinguish it. If the fire is major or fuel fed, move away from and stand clear of the vehicle and wait for emergency assistance to arrive.

## Smoke Detector

The battery powered smoke detector is mounted on the ceiling in the living area of the unit. Read the operating instructions for details on the testing and care for this important safety device. Test the smoke detector after the unit has been in storage, before each trip, and at least once a week during use. The detector should never be disabled because of nuisance or false alarm from cooking smoke or a dusty furnace. Ventilate the unit with fresh air and the alarm will shut off. Never disconnect or remove the battery from the smoke alarm. The battery should be replaced once a year or when the low battery signal sounds.

## Emergency Exit Window

In the bedroom of the unit, there is an emergency exit (egress) window. This window is designed to be used as an additional exit in emergency situations. It can be easily identified by the red color of the handle and the red "EXIT" label. To open the egress window, lift the handle and push outward on the window. The window can be closed by pulling the window closed and lowering the handle to the down or locked position.

## WEIGHT INFORMATION

Below is a sample of a weight information label which may appear in your unit.

MOTORHOME WEIGHT INFORMATION	
Newmar Serial Number	XXXXXX
VIN #	XXXXXXXXXXXXXXXXXXXX
GVWR (Gross Vehicle Weight Rating) is the maximum permissible weight of this fully loaded motorhome.	
UVW (Unloaded Vehicle Weight) is the weight of this motorhome as built at the factory with full fuel, engine oil, and coolants.	
SCWR (Sleeping Capacity Weight Rating) is the manufacturer's designated number of sleeping positions multiplied by 154 pounds (70 kilograms).	
CCC (Cargo Carrying Capacity) is equal to GVWR minus each of the following: UVW, full fresh (potable) water weight (including water heater), full LP-Gas weight and SCWR.	
<b>CARGO CARRYING CAPACITY (CCC) COMPUTATION</b>	
	<u>pounds (kilograms)</u>
GVWR.....	XXXXX (XXXX)
minus UVW.....	XXXXX (XXXX)
minus fresh water of 85 gallons @ 8.3 lb/gal	xxx (xxx)
minus LP-Gas weight of 32 gallons @ 4.2 lb/gal	xxx (xx)
minus SCWR of 2 persons @ 154 lb / person	xxx (xxx)
CCC for this motorhome*.....	xxx (xx)
*Dealer installed equipment and towed vehicle tongue weight will reduce CCC	
WARNING: CONSULT OWNER MANUAL(S) FOR SPECIFIC WEIGHING INSTRUCTIONS AND TOWING GUIDELINES INCLUDING AUXILIARY BRAKE REQUIREMENTS FOR ANY TOWED TRAILER OR TOWED VEHICLE.	

## *Weighing the Unit*

The following definitions are given to help in communications of issues of weight and your unit.

- GAWR: Gross Axle Weight Rating is the maximum permissible weight for an axle. This takes into consideration the weakest link in the tire, wheel, brakes, hubs, axle, springs, and attaching parts. For example, if the axle is rated at 15,000 pounds and the tires are rated at 3,415 pounds each as a dual, the maximum GAWR would be 13,660 pounds with four tires.
- GCWR: Gross Combination Weight Rating is the value specified by the manufacturer of the vehicle as the maximum allowable loaded weight of this motorhome and any towed trailer or towed vehicle.
- GVWR: Gross Vehicle Weight Rating is the maximum permissible weight of this fully loaded motorhome. The GVWR is equal to or greater than the sum of the Unloaded Vehicle Weight plus the Cargo Carrying Capacity.
- UVW: Unloaded Vehicle Weight is the weight of this motorhome as built at the factory with full fuel, engine oil, and coolants. The UVW does not include cargo, fresh water, LP gas, or dealer installed accessories.
- CCC: Cargo Carrying Capacity is equal to GVWR minus each of the following: UVW, full fresh (potable) water weight (including water heater), full LP-Gas weight and SCWR.
- GVW: Gross Vehicle Weight is the weight of the unit with all items and supplies that are loaded into the unit at any point in time.
- SCWR: Sleeping Capacity Weight Rating is the manufacturer's designated number of sleeping positions multiplied by 154 pounds (70 kilograms).



To assure the accuracy of your weights be sure the unit is always level during weighing.

The unit has been built to comply with the component suppliers recommended limits and give you a realistic CCC. When loading the unit, distribute the items so that not all of the weight is added to one area of the unit. If you have questions as to what the weight of the unit is after it has been loaded, take the unit to a drive-on scale or use individual wheel scales and verify that the weights are within the limits of those specified for the unit. When weighing the unit follow these instructions. Failure to follow these instructions may give an erroneous weight reading.

**NOTE:** The sales literature may give approximates or standards. Each individual unit may weigh differently based on the factory and/or dealer options added.


## *Notes*

---

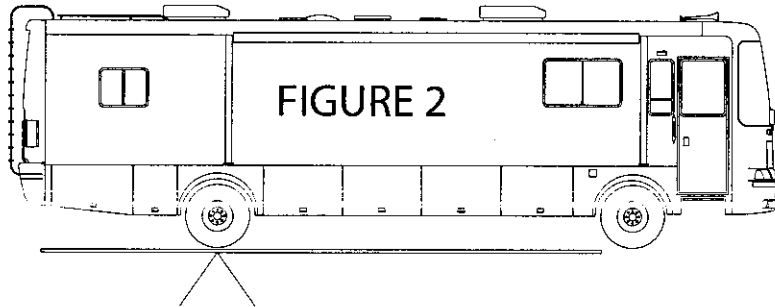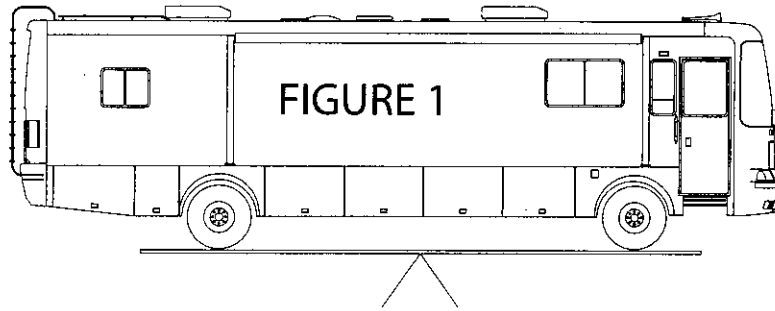

1. Pull the unit onto the scales shown in Fig. 1. This is the total weight of the unit. To do this, pull the unit onto the scales so that all of the wheels are on the scale. Record the weight. This is the GVW and should not exceed the GVWR supplied by Newmar for the unit.
2. Move the unit so that the front wheels are off the scales as shown in Fig. 2. Record the weight. This is the total weight of the unit except for the front axle. This weight should not exceed the total rating of the axles remaining on the scales. The front axle weight is determined by subtracting this weight from the GVW that was obtained in Step One (1). This amount should not exceed the listed front axle weight rating.

The recommended procedure to weigh a motorhome accurately is on individual corner scales. Since these are not always available, below is a diagram of how to weigh a motorhome on a typical truck scale. **Note:** Since only one corner can be weighed at a time, the remaining three corners need to be as close to the scale as possible without being on the scale and the unit needs to be as level as possible. Remember, wind and rain can cause inaccuracies of weights.

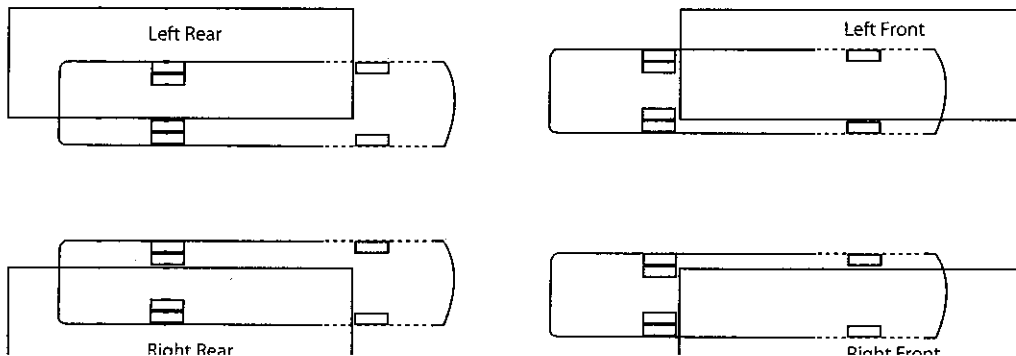

## *Campsite Parking*

If the campground does not have drive-through sites, it is recommended to stop near the site and inspect it for slopes or uneven areas. Back into the site carefully. Watch for low-hanging limbs, posts, large rocks, or other obstacles. Back the unit in so the site is on the driver's left, if possible. This will enable the driver to watch the rear of the unit. Back up slowly using the side mirrors as a guide or with the assistance of another person outside guiding the parking procedure.

Place the vehicle in park and turn off the ignition. If parked on a steep incline, pre-level the coach by driving the appropriate wheels onto blocks. Finish the leveling process by using the leveling jack system to level and stabilize the unit. Connect the 120 volt shore power to the unit. Open the LP gas valves at the LP tanks. Connect the fresh water supply and sanitize the water systems, if necessary. Connect the waste drain hose to the sewer hook-up. Start the refrigerator, water heater, and furnace, if needed. Light the oven pilot light, if applicable. Remember that the refrigerator will not operate efficiently if the unit is unlevel.

### CAUTION

Do not lift the wheels of the unit off the ground at any time during this process. The unit can roll forward or backward when the weight of the unit is on the jacks.

## *Car Towing Hitch*

The motorhome is equipped with a class three, 5,000 pound hitch and wire connector. Two extra 14 gauge wires are also included for your use. Your unit is designed for use as a recreational vehicle and is intended for towing light loads. The instructions for towing are listed in the chassis manufacturer owner's manual provided with your unit. The total weight of the motorhome and any vehicle towed by it must not exceed the GCWR. When weighing the motorhome, be sure to take passenger locations into consideration. The towed vehicles must have adequate active brakes. All towed vehicles of 1,500 pounds or more shall be independently braked. Please contact your state Department of Transportation or your local Newmar dealer for your state requirements. The wire connector installed is the standard seven-pin connector. Chapter 7 of this guide will have more information regarding this connector.

## *Notes*

---

---

---

---

---

# CHAPTER 3

## AIR CONDITIONING & HEATING

### *Table of Contents*

Air Conditioning . . . . .	3 - 1
Furnace . . . . .	3 - 2
LP Tank . . . . .	3 - 3
LP Tank Filling . . . . .	3 - 3
LP Regulator . . . . .	3 - 4
LP Leak Detector . . . . .	3 - 4



# AIR CONDITIONERS

The air conditioners installed on your coach will operate only when the unit is supplied with 120 volt AC power from the power cord or the generator. The air conditioners circuit breaker must be in the ON position to work.

To assist the air conditioners in cooling the coach, park in the shade and keep the drapes or blinds closed. Set the thermostat to the desired temperature.

Air conditioners can use a large portion of the available electric power. RV parks may experience low voltage on days with high heat or humidity. This is commonly referred to as a "brown out." A "brown out" may trip the air conditioners circuit breaker. The circuit breaker protects your air conditioner from damage and is necessary during low voltage conditions. The tripped breaker is not a fault in your electrical system.

The cool air from the air conditioners is ducted throughout the coach through ceiling air ducts. Below is the thermostat that controls the air conditioners. It also controls the furnace. Simply select the desired temperature. The blower will cycle automatically, or you may choose low, medium, or high fan settings.

Remember, both air conditioners must be in the same mode. Please consult the air conditioners manufacturer's owner's manual for further assistance.

**Step One:** Move power switch to ON.


**Step Two:** Press MODE to select function. (COOL\*, FURNACE, etc.)

**Step Three:** Press FAN to select high, med., or low speed.

**Step Four:** Press UP or DOWN to select temperature.

**Step Five:** If operating more than one zone, press ZONE and repeat steps 2-4 for each additional zone.

\*Expect a 2-minute delay for compressor to start.

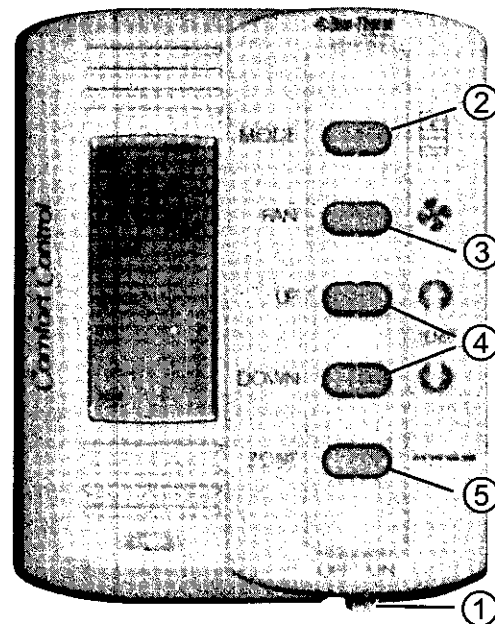

**Shutdown:** If you turn the Comfort Control off or if there is a power interruption for any reason, the system will resume operation on the last settings when power returns.

# FURNACE

## WARNING

Never attempt to modify this furnace. Fire, explosion, asphyxiation, or carbon monoxide poisoning may occur. If the furnace malfunctions, consult a trained service technician.

The furnace installed in your unit is a forced-air furnace fueled by LP gas. The furnace is controlled by the air conditioners wall thermostat. This thermostat controls both the heating and cooling of the coach.

The heat is supplied to the unit through ducts in the floor. The furnace will not operate properly if the air flow at the floor registers, or the air return to the furnace, is blocked by personal or storage items. Storage under the cabinets should be done carefully to prevent crushing or damaging the furnace ducting or blocking of the cold air return.

Smoke and fumes may be created as a result of the residual burn off of the manufacturing compounds that are sometimes present the first time the furnace is used. This is normal. To minimize the smoke and fumes, the initial lighting of the furnace should be done with the windows and doors open. Continue until the residue is completely burned off.

To operate, set the thermostat to the desired temperature setting and turn the thermostat to the on position. Allow 60 seconds for the furnace to begin operating. To shut down the furnace, turn the thermostat to the off position. After the furnace has been turned off, the fan will run for approximately 60 seconds to cool down.

For your safety, do not use gasoline or other flammable liquids in the vicinity of the furnace or any other appliance. Clean the complete furnace and air tube passageways periodically to remove dust, lint, etc. Check the gas system for leaks at least once a year. Check and clean the blower wheel annually.

On the exterior of the coach you will find a furnace cover. There are no owner serviceable parts on the furnace. This cover should be removed by authorized service technicians only.

## WARNING

Use caution when washing the exterior of your vehicle. Water should not be sprayed directly into the furnace vent. If water is forced beyond the rain baffles into the furnace vent, rusting of the furnace could occur. This could also cause improper combustion.

The furnace should be thoroughly cleaned before the start of each heating season. Any debris in the system may restrict air flow for combustion, bind the combustion air impeller, or prevent the blower motor from running properly. Also, check the burner pilot orifices for debris. Lint accumulations may cause the blower to become unbalanced, vibrate, restrict the ability of the blower to move air. If lint is blown into the heat exchanger, it may cause odors or create a fire hazard. Contact an authorized service technician for annual cleaning. Consult the manufacturer's operating instructions in your Owner's Information Package for further

### WARNING

Portable fuel burning appliances are not safe for heating inside the recreational vehicle. Asphyxiation or carbon monoxide poisoning can occur.

## LP TANK

This unit is equipped with an ASME (American Society of Mechanical Engineers) approved LP tank. This tank is controlled with an automatic pressure regulator. The LP tank contains liquid petroleum gas under high pressure. As the fuel is used, the liquid gas vaporizes and passes through the tank valve to a regulator that automatically reduces the pressure. The low-pressure gas is then distributed to the appliances throughout the pipe manifold system. Improperly adjusted regulators are the major cause of appliance lighting problems. Never attempt to reset the regulator. This is to be done by a qualified service technician. While in high altitudes or extreme cold weather a gas shortage may be experienced. Running one appliance at a time can help adjust to this problem.

It is recommended to have the LP system inspected by an authorized service technician at least once a year and after every extended trip. This system is tested by both the manufacturer and the dealer. Leaks can be caused by travel vibrations; therefore routine inspections are recommended.

The primary gas supply manifold is a black steel pipe running the length of the unit. Most secondary lines leading to the gas appliances are made of copper tubing with flare fittings. If any of these lines rupture, do not attempt to splice them. Always have a new line run. Gas distribution work must be performed by an authorized service technician. When removing or servicing any gas appliance, close the main gas valve at the LP tank. This will prevent dangerous gas leakage that could result in an explosion and possible serious injury. If a gas leak is suspected, have the system inspected and repaired by a qualified service technician as soon as possible.

### WARNING


The main gas valve must be shut when the vehicle is not in use. Shut the valve off when refueling to avoid potential danger from pilot lights igniting fuel fumes. Gas valves on appliances with direct spark ignition (DSI) should also be in the off position. Do not store LP, gasoline, diesel, or other flammable liquids inside the vehicle. Fire or an explosion could be the result of ignoring this warning.

## *LP Tank Filling*

Do not fill the tank to more than 80 percent of capacity. The unit must be level when filling the LP tank. If unlevel, overfilling may occur. Fire or explosion may be the result of uncontrolled gas flow from an overfilled tank.

## *LP Regulator*

The regulator is the heart of the LP system. The regulator reduces the pressure of the gas so it is safe to use with various appliances. Regulators are equipped with a vent. In the event excess pressure builds up in the body of the regulator, a relief mechanism vents it to the atmosphere. It will vent until the pressure returns to the normal range. The vent must be kept clean and clear of obstructions or corrosion. A clogged vent could cause the failure of components. Contact a qualified LP technician if corrosion or obstruction is noticed.

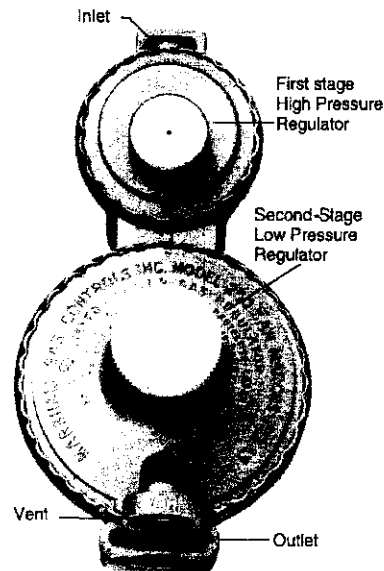

The presence of moisture in LP fuel causes the regulators to freeze. The moisture will pass through the cylinder valve and into the regulator where freezing occurs. To help prevent the regulator from freezing, always keep the tank control valve closed when not in use, even when the tank is empty, to prevent moisture from collecting on the inside.

If moisture becomes a problem, consult an authorized LP service center for assistance.

The regulator must always be installed with the diaphragm vent facing downward. Please refer to Chapter 2 of this manual for further LP gas safety information.

## *LP Leak Detector*

### WARNING

Never check gas lines for leaks with an open flame. Do not check for leaks using ammoniated or chlorinated household type detergents. These detergents can cause cracks to form on the metal tubing and brass fittings. Take the unit to a qualified LP gas service technician to find and repair the leak. Keep the tank valve closed and all of the appliances turned off when the unit is stored. If any of the LP gas valves do not close leak-tight by hand, consult a service technician.

Liquid Propane (LP) gas is heavier than air and will settle to the lowest point of the room, which is generally on the floor of your coach. Because of this, the LP detector installed in your coach is located near the floor. The detector is also sensitive to other fumes, such as hair spray, which contain butane as the propellant. Butane, like propane, is heavier than air and will settle to the floor level where it may be detected. When this occurs, press the reset button to stop the alert sound for 60 seconds.



# CHAPTER 4

## APPLIANCES & ACCESSORIES

### *Table of Contents*

Refrigerator . . . . .	4 - 1
Microwave . . . . .	4 - 2
Range Hood . . . . .	4 - 2
Range . . . . .	4 - 2
Television Antenna . . . . .	4 - 4
Television . . . . .	4 - 4
Video Cassette Recorder . . . . .	4 - 5
Video Control Center . . . . .	4 - 5
Cable & Telephone Jack . . . . .	4 - 6
Stereo . . . . .	4 - 6
Water Heater . . . . .	4 - 6
Water Heater Storage . . . . .	4 - 7
Pressure Relief Valve . . . . .	4 - 7
CB Radio . . . . .	4 - 8
Rear View Monitor System . . . . .	4 - 8
Air Horns . . . . .	4 - 8
Freezer . . . . .	4 - 8
Icemaker . . . . .	4 - 9
Washer & Dryer . . . . .	4 - 9
Carbon Monoxide Detector . . . . .	4 - 9

# MAJOR APPLIANCES


## Refrigerator

Before starting the refrigerator, verify that the main LP gas valve is in the on position. The refrigerator is equipped with a semi-automatic energy selector (AES) control system. It can be set to select either 120 volt or LP gas operation, automatically, if desired.

### WARNING

Most LP gas appliances used in recreational vehicles are vented to the outside of the vehicle. When parked close to a gasoline pump it is possible that the gasoline fumes could enter this type of appliance and ignite the burner flame causing a fire or explosion. Use caution when refueling.

A 12 volt power supply must be available for the electronic control panel to function. The shore line must be plugged in, or the optional generator running, to operate in the 120 volt mode. The main LP gas valve must be open for operation in the LP mode. To start the refrigerator, press the main power ON/OFF button to the ON position.

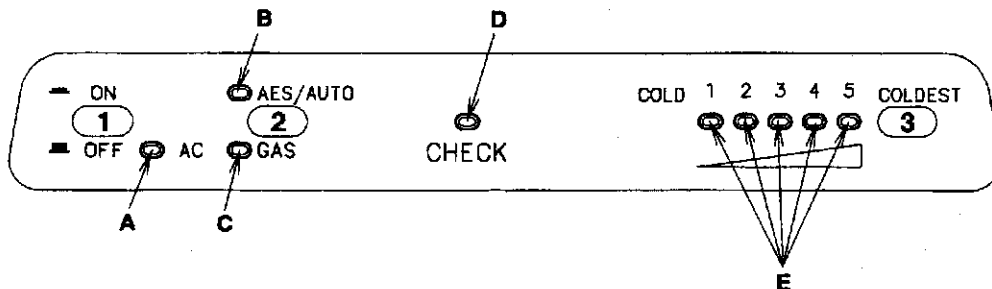

#### LEGEND 2-WAY AES Model

1. Main Power Button ON/OFF
2. AES/AUTO/GAS Mode Selector Button
3. Temperature Selector Button

- A. AC Mode Indicator Lamp
- B. AES/AUTO Mode Indicator Lamp
- C. GAS Mode Indicator Lamp
- D. CHECK Indicator Lamp
- E. Temperature Indicator Lamps

To use the 2-way Auto Mode, push the AUTO/GAS mode selector into the ON position. If 120 volt is available, the AC mode indicator light will be illuminated designating AC operation. If 120 volt is not available, the gas mode indicator light will be illuminated. The control system will automatically switch to gas operation. To operate on gas only, push the AUTO/GAS mode selector until the gas indicator light has lit. After 45 seconds the burner should be ignited and operating normally. The initial start up may take longer than 45 seconds in order to allow the air to be purged from the gas line. If the gas does not ignite within 45 seconds, the check indicator light will illuminate and the gas mode light will go off. If the check indicator light illuminates and the gas mode indicator light is off, then the controls have failed to ignite the burner in the gas mode. When the check indicator light is on, press the main power ON/OFF button to the off position to reset. Do not continue to reset the gas operation if the check indicator light continues to illuminate after several tries.

The thermostat on the refrigerator controls the gas and electric operation. This eliminates the

temperature selector button until the light at the desired setting is illuminated. After the initial start up, the thermostat should be moved from the coldest setting to the desired setting, which is usually mid-range.

An optional feature on the refrigerator may be the installation of the automatic icemaker in the freezer compartment. Depending on the floorplan of your unit, additional refrigerator options may include a four door refrigerator, a 10 cubic foot refrigerator, or a side-by-side refrigerator. For detailed operating instructions, please consult the manufacturer Owner's Manual in the Owner's Information Package.

## *Microwave*

A microwave may be installed in your coach as part of the standard equipment package. In place of the standard microwave, a 30" convection microwave may be optioned. All microwaves operate on 120-volt electricity. The microwave's control panel is the touch pad type. Simply enter the temperature, mode, and cooking time desired. The microwave is plugged into the electrical outlet through a surge protector. This will help protect the microwave in case of an electrical surge. For instructions on how to operate any of the special features on the microwave oven, please refer to the microwave owner's manual in your Owner's Information Package.

## *Range Hood*

A range hood may be incorporated into the microwave. The microwave's control panel operates the range hood functions. This range hood has both a fan and a light for your convenience. The fan has two speeds which are low and high. Simply select the desired setting from the microwave's control panel. For further detailed information on the hood operation, refer to the microwave Owner's Manual.

## *Range*

Your unit may be equipped with a three-burner recessed range with a glass oven door and piezzo ignition. There is no pilot light for the range. There are different models used in the Newmar product line with different types of controls. To light the burners on some models, turn the control knob to turn the gas on. Wait a couple of seconds, then push the red spark button until a flame appears. On other models turn the spark control knob until a flame appears. All burner controls operate counter clockwise and have to be pushed inward in order to turn. On units with an oven, the oven control must also be pressed inward before turning. To light the oven, push in the oven control knob and rotate counter clockwise to the PILOT ON position. Light the oven pilot light located at the back left-hand side of the oven burner. The oven pilot may be slow in lighting due to initial air in the gas line. The oven pilot has been factory adjusted. No further adjustments are necessary. To extinguish the oven pilot, push in the oven control knob and





Your range may be equipped with a bifold range cover that matches your countertop material. This cover helps to protect the burners when they are not in use. Before cooking on the range top, the cover must be in the full upright and folded position, preventing the cover from falling on the range top during cooking. Never close the cover while the burners are in use and do not use the cover as a griddle. Never use the range while the RV is moving and remember to close the bi-fold cover when the range top is not in use.

For further instructions, please refer to the oven manufacturer owner's manual in your Owner's Information Package.

The following warning label has been placed in the cooking area to remind the user to provide an adequate supply of fresh air for combustion:

<p><b>WARNING</b></p> <p>It is not safe to use cooking appliances for comfort heating. Cooking appliances need fresh air for safe operation. Before operation:</p> <ol style="list-style-type: none"><li>1. Open overhead vent or turn on an exhaust fan.</li><li>2. Open a window.</li></ol>
---

Unlike homes, the amount of oxygen supply is limited due to the size of the recreational vehicle. Proper ventilation when using the cooking appliance(s) will avoid dangers of asphyxiation. It is especially important that cooking appliances not be used for comfort heating as the danger of asphyxiation is greater when the appliance is used for long periods of time.

The following label has been placed in the vehicle near the range area:

### *If You Smell Gas:*

1. Extinguish any open flames, pilot lights, and all smoking materials.
2. Do not touch electrical switches.
3. Shut off the gas supply at the tank valve(s) or gas supply connection.
4. Open doors and other ventilating openings.
5. Leave the area until the odor clears.
6. Have the gas system checked and leakage source corrected before using again.

### *Notes*

---

---

---

---

---


# TELEVISION OPERATION

## *Television Antenna*

A TV antenna with a power booster is installed in your coach and is designed for reception of all color and black-and-white channels. If the reception is poor, you should verify that the power switch is in the "ON" position and that all of the connectors are tight. If poor reception still occurs, consult your authorized dealer.

To raise the antenna into the operating position, turn the elevating crank (clockwise) in the "UP" direction, about 13 turns, or until some resistance to turning is noticed. On the power booster, turn the switch to "ON" in order to amplify the signal being received. Once in the "UP" position, rotate the antenna to receive the best picture. This is done by pulling down on the directional handle with both hands until it disengages from the ceiling plate and then rotating it until reception has improved. The antenna must be lowered before moving the vehicle. To lower, rotate the directional handle until the pointer is aligned with the pointer on the ceiling plate. Turn the elevating crank (counter-clockwise) in the "DOWN" direction, about 13 turns, or until some resistance to turning is noticed. The antenna is now locked and in the travel position. Your unit may be equipped with one exterior antenna jack and two interior antenna jacks.


RAISING ANTENNA TO OPERATING POSITION

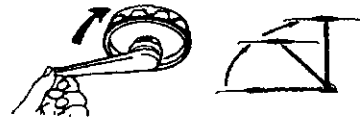

ROTATING ANTENNA FOR BEST PICTURE



LOWERING ANTENNA TO TRAVEL POSITION

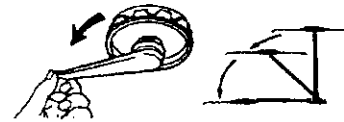

### CAUTION

Under no circumstances should you lower the antenna in any position except the travel position.

## *Television*

The coach is cable ready, and as standard equipment may have a 24" flat screen color television in the front dash overhead and a 20" flat screen color television in the bedroom. The televisions are powered by 120 volt electricity. Your coach must be plugged into shore power, or the generator running, in order for the television to work. If your coach is equipped with the optional 400 watt inverter, it will invert the 12 volt power from the coach batteries into 120 volt power for some basic appliances. For more information on this, see Chapter 7 of this manual. The television operation is similar to most televisions used in the home. The main unit has the basic ON/OFF, VOL(ume) UP and DOWN, CH(annel) UP and DOWN, and Menu UP and DOWN. The remote control has these in addition to many other function keys. Your unit may also be pre-wired for a satellite system. Your unit may be equipped with one interior television jack and an exterior television jack located on the



information. As an option, an external entertainment center that includes a flat screen television and an AM/FM compact disc player and radio may be added.

## Video Cassette Recorder

A video cassette recorder (VCR) may be installed on this coach. If installed, it would be in the living room entertainment center. The controls are on the face of the VCR and on the remote control. For more detailed information regarding the VCR functions consult the VCR Operator's Manual in the Owner's Package. The video switch described below will assist you in directing the VCR signal to the television of your choice.

## Video Control Center

Installed in your vehicle as part of the standard equipment is the Audio Video Control Center (AVCC). The AVCC will direct the signal to one or two televisions and one VCR. Simply push a button to select what is viewed and where. To control what is being viewed on the front television use the selections for "TV 1." To control what is being viewed on the bedroom (and outside television, if desired) use the selections for "TV 2." Each television is capable of viewing different programming at the same time. For example, by selecting "ANT" for "TV 1" you are able to watch your favorite network broadcast on the front television, while a movie from the VCR is being watched in the bedroom or outside, after selecting the "VCR" button for "TV 2." This control center is capable of receiving three sources of input. They are "FROM ANTENNA," "FROM VCR," and "FROM AUX." The "FROM AUX" selection is used for cable input. It will also accommodate video game systems or a satellite dish.

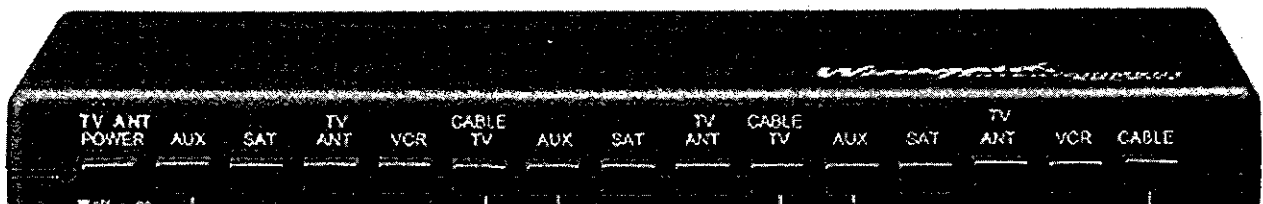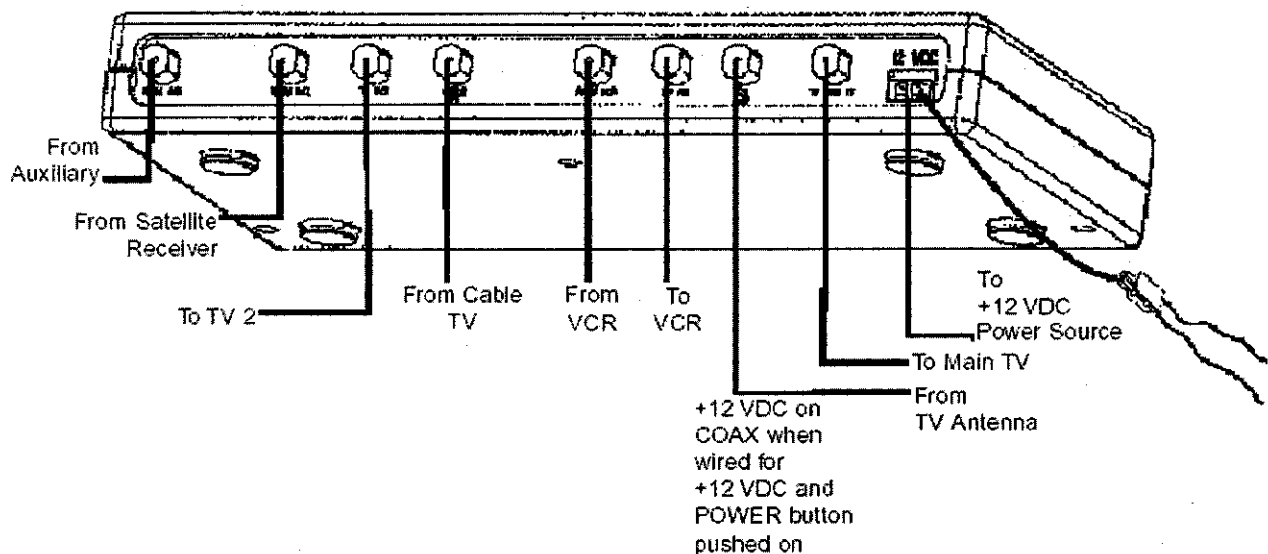

## *Cable & Telephone Jack*

An exterior cable jack and receptacle may be features on this coach. If installed, these may be located in an outside storage compartment. Another feature on this coach is the telephone hook up. This would allow the user to connect the coach to a telephone cable, if the park is so equipped. This feature includes the connector for the incoming telephone line and two telephone jacks inside the coach. As an option, an extra interior telephone jack may be added.

## *Stereo*

The standard dash stereo installed in your coach is an AM/FM stereo with a compact disc player. The operation of this stereo is similar to that of many car stereos. The stereo operates on 12 volt electricity from the coach batteries. First press the MODE button to select the desired band you wish to listen to. Your choices should be FM1, FM2, or AM. Next, press the SEEK/AMS control up or down to tune in the station that you wish to listen to. There may be speakers located throughout the coach for your listening pleasure. As an option, a surround sound system may be installed. If installed, this feature would consist of a VCR, five-disc DVD/CD player, and a subwoofer.

If you wish to listen to a CD, insert the CD and playback will start automatically. For further information on the different operation features of the stereo or CD player, consult the manufacturer owner's manual in the Owner's Information Package.

**Note:** If you have a Sony dash radio installed in your unit it is important to know how to properly turn off the LED display to prevent premature failure. To turn off the LED display, press the OFF button and hold it down for at least two seconds. If the OFF button is pressed and released immediately, the backlighting and advertising routines will continue as long as the radio has power connected. This may result in premature failure of the radio display.

## WATER HEATER

### WARNING

Do not light the water heater until it is filled with water. There is a switch on the exterior of the water heater labeled "Electric." This switch must be in the "ON" position for the water heater to work in the electric mode.

Before lighting the water heater, fill the fresh water system. Purge any air from the water heater by opening all hot water faucets until water flows steadily from each one. The water heater installed in this coach may be a ten gallon gas/electric model with direct spark ignition. Optional is the ten gallon model with a direct spark ignition and engine assist feature. The water heater operates on both LP gas and 120 volt electricity.

It is important to read all of the safety information provided in the water heater manufacturer Operation Manual in the Owner's Information Package. The following instructions are for the standard water heater with direct spark ignition (DSI). This appliance does not have a pilot light. It is equipped with an ignition device that automatically lights the burner. Do not try to light the burner by hand. Before lighting smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor. Consult the Operation Manual for further instructions if a gas leak is noticed. The gas valve is fully automatic, no adjustments are necessary. Read the safety information provided in the Operation Manual before lighting the appliance. Turn off all of the electrical power to the water heater. Turn the gas supply to the "OFF" position. Wait five minutes for the gas to clear the area. If you smell gas, STOP! Following the safety instructions in the Operations Manual. If gas odor is not noticed, then turn the gas supply to the "ON" position. Turn on the electrical supply to the water heater. Inside the coach there is a switch marked "WATER HEATER". Turn the switch to the "ON" position. There will be a 15 second purge before the unit will spark. If the burner does not light on the first try, there will automatically be 2 more tries for ignition before it will lock out. Each ignition cycle will have a 15 second purge. If lock out occurs before the main burner lights, turn the switch to "OFF", wait five seconds, and turn the switch to "ON" again. This will re-start the ignition cycle. The initial start-up of the water heater may require several ignition cycles before all of the air is purged from the gas lines.

#### WARNING

Do not store any combustible materials or liquids near or adjacent to the water heater.

### *Water Heater Storage*

When storing your coach for the winter months, the water heater must be drained to prevent damage from freezing. The first step is to turn off all electrical power and LP gas going to the water heater. The water pump must also be turned off. Open both the hot and cold water faucets to drain the lines. Open the drain on the water heater. Drain the entire water system. When preparing the coach for use after it has been stored, make certain the water system, including the water heater, has been filled before re-lighting the water heater. Failure to fill the water heater before lighting may damage the water heater and void the warranty.

### *Pressure Relief Valve*

The temperature and pressure relief valve is located on the exterior of the water heater. It is designed to open if the temperature of the water within the heater reaches 210° F, or if the water pressure in the heater reaches 150 pounds. Recreational vehicle water systems are closed systems, and during the water heating cycle the pressure build-up in the water system may reach 150 pounds. When this pressure is reached, the pressure relief valve will open and water will drip from the valve. This dripping will continue until the pressure is reduced to below 150 pounds, and the valve closes. This condition is normal and does not indicate a

## WARNING

Do not plug the relief valve under any circumstances.

### *CB Radio (Optional)*

This coach has a citizens band (CB) antenna installed as part of the standard equipment package, but the CB radio is an option. This radio can be used to communicate with other travelers on the road. The model installed is a remote type. The hand-held microphone/speaker contains the power, volume, and channel controls. Simply turn on using the power/volume control. Then select the channel you wish to monitor. Press the "Push-to-Talk-Switch" to transmit and release to receive. For more information regarding the operation of this CB radio, please consult the radio manufacturer's Owner's Manual.



### *Rear View Monitor System*

Installed as a standard feature, the rear view monitor system assists the driver in the backing and parking of the vehicle. This system consists of a camera mounted on the rear cap and a monitor located on the dash. With the MODE switch in the "MANU" position, the monitor will be on when the ignition is turned on. With the MODE Switch in the "AUTO" position, the monitor will display the picture from the camera when the vehicle transmission is placed in reverse (R). For detailed instructions on this and all procedures regarding the monitor system, refer to the monitor Operating Instructions in the Owner's Information Package supplied with this coach.

### *Air Horns*

Air horns may have been installed on this coach as a standard feature. These air horns are in addition to the horn installed on the chassis. A switch located on the dash allows you to choose either the chassis horn or the air horn. To operate either horn, press the center of the steering wheel.

### *Freezer (Optional)*

The installation of a 100 pound freezer in an exterior storage compartment is an optional feature on this coach. This freezer operates on 12 volt and 120 volt electrical power. The freezer is on slides to move easily in for storage while traveling or out for pre-travel packing or campsite unloading. For detailed instructions on the operation and maintenance of this freezer, please consult the freezer manufacturer owner's manual in the Owner's Information Package provided with this coach.

## *Icemaker (Optional)*

Depending on the floorplan of your unit, an icemaker may be an option. The icemaker operates on 120 volt electricity. For detailed information, consult the icemaker manufacturer owner's manual in the Owner's Information Package provided with your new coach.

## *Washer/Dryer (Optional)*

The plumbing and other preparations for the installation of a compact one piece washer and dryer are standard features on this coach. To have the washer and dryer factory installed is an option. The washers and dryers used by Newmar function as those in a home, operating on 120 volt electricity. For more detailed information on the operating instructions, read the appliance owner's manual in the Owner's Information Package.

### CAUTION

The gray tank valve must be in the "open" position when operating the washing machine.

## *Carbon Monoxide Detector*

Carbon monoxide is a colorless, tasteless, odorless gas. It is a by-product of the burning of fossil fuels (gasoline, LP gas, diesel fuel, etc.). The chassis and generator engines, furnaces, water heater, LP gas refrigerator, and range produce carbon monoxide constantly while they are operating. Carbon monoxide is **DEADLY**. Please read and understand the following precautions to protect yourself and others from the effects of carbon monoxide poisoning.

### WARNING

Exhaust gases are deadly. Do not block the tailpipes or exhaust ports. Do not situate the vehicle in a place where the exhaust gases have any possibility of accumulating either outside, underneath, or inside your vehicle or any nearby vehicles. Outside air movements can carry exhaust gases inside the vehicle through windows or other openings remote from the exhaust outlet. Operate engines, carbon monoxide-producing systems, or components only when safe dispersion of exhaust gases can be assured. Monitor outside conditions to be sure that exhaust continues to be dispersed safely.

If you, or anyone else, experience any carbon monoxide symptoms (dizziness, nausea, vomiting, muscular twitching, throbbing in the temples, inability to think coherently, weakness and sleepiness, or intense headaches) exit the coach immediately. Seek medical attention if symptoms persist. Shut down the unit and do not operate it until it has been thoroughly inspected and repaired.





# CHAPTER 5

## CABINETS & FURNITURE

### *Table of Contents*

Cabinets .....	5 - 1
Furniture .....	5 - 1
Living Room Area .....	5 - 1
Bedroom Area .....	5 - 2

# CABINETS


The cabinets in this unit are constructed on site at the Newmar production facility. Oak hardwood raised panel cabinet doors are standard throughout the unit. Brass door and drawer handles give the interior an added touch of class. Decor options are arnold cherry and maple cream. An additional option would be hardwood cabinets available in oak, washington cherry, and summer maple.

Storage is an important factor to all RV owners. Keeping this in mind, the cabinetry is structured to provide as much storage as possible. Your unit may include features such as adjustable pull out pantry boxes in the kitchen or the silverware drawer may have a molded silverware divider tray for added storage. In the bedroom, the bed platform lifts to provide an additional, convenient storage area. A strap is provided to help raise the bed. Once the bed platform is lifted, it is held open by pressurized struts to allow hands-free access.

A countertop with a color coordinated edge is installed in the kitchen. To clean, wipe with a damp cloth and for "dried on" spots or rings, wipe with a damp cloth and a mild liquid soap. Strong chemicals and solvents may damage the surface and should be wiped up immediately, then rinse the surface with water.

Avoid cutting directly on the countertop surface, avoid excessive heat, and keep harmful chemicals away to avoid countertop surface damage.

On most floor plans, the "drawer" directly in front of the kitchen and lavatory sink does not pull out, but rather flips down. This provides a storage tray for dish cloths, scouring pads, washcloths, etc.

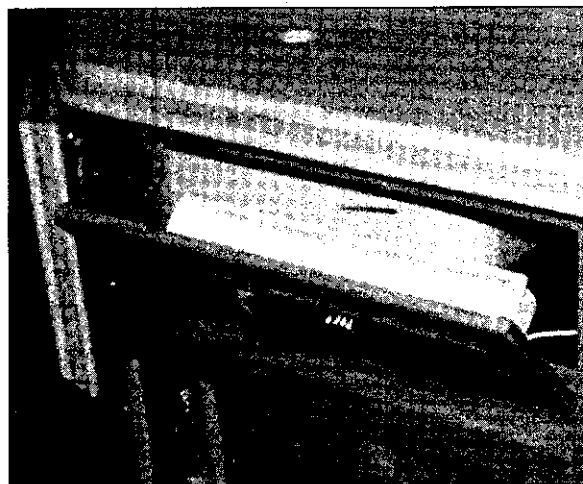

Metal drawer guides may be equipped on all of the drawers in your unit. These guides provide a smooth opening and closing of the drawers. To open a drawer, lift up slightly and pull open. The way this mechanism works will prevent the drawers from unintended opening while traveling.

All of the cabinetry can be easily cleaned with any commercial furniture cleaner or polish. As with any wood product, do not saturate these cabinets with water or any other liquid. Be sure to wipe up spills as they occur to avoid staining.

# FURNITURE

## *Living Room/Kitchen Area*

to add more room to your table top when desired. Two fixed chairs and two folding chairs accompany this table. The chair seats and backs are designed with a coordinating upholstery fabric to match your decor.

Depending on the floorplan of your unit, a built-in dinette booth may be an option. The dinette provides added storage under the seat area of the booth, along with an extra sleeping area. The sleeping area is made by lowering the table top and arranging the cushions. A combination desk/dinette table is also an optional feature in the kitchen area, depending on the floorplan of your unit.

In the living room you will find a sofa. Depending on the floorplan of your unit and the other furniture in your living area, a Hide-A-Bed or a Magic Bed sofa are optional. Whatever sofa you choose it is upholstered in decor matching fabric. If you have any questions, contact the sofa manufacturer.

In the living room, you may also find a swivel/rocker recliner. Many other furniture options are available such as a free standing leather/vinyl recliner, a leather/vinyl push back recliner with an ottoman, a leather/vinyl swivel rocker recliner, a leather/vinyl l-lounge, or a folding coffee table.

In this unit, the front seats may be leather/vinyl and feature six-way power, lumbar support, and a passenger footrest. The seats also have an electric powered base that will move the chairs forward and backward, as well as up, down, forward and reverse tilt. The seats also have a three point seat belt and swivel and recline features. When the unit is not in motion, they can be swiveled to face the living room of the unit. To turn the chairs, first extend the slide out room. Then move the chairs backwards all of the way to provide enough clearance for the steering wheel. Once this is done, the chairs will swivel without interference. The control switch is located on the left-hand side in front of the power base controls. Pushing the switch forward will inflate the support while pushing back will deflate it. An oversized passenger seat equipped with a power footrest may be optioned in.

## *Bedroom Area*

A decor coordinating quilted bedspread with a reverse sham and an accent pillow may be included as part of this unit's standard bedroom package. For best results, it is recommended that the bedspread be DRY CLEANED ONLY. As an option, a pillow top mattress or a king size mattress may be installed in lieu of the standard mattress, depending on the floorplan of your coach.

For your convenience, manual lights have been added in the closets and wardrobes.

## *Notes*

---

---

---

# CHAPTER 6

## STRUCTURE FEATURES

### *Table of Contents*

Chassis Features . . . . .	6 - 1
Alignment . . . . .	6 - 1



# CHAPTER 7

## ELECTRICAL FEATURES

### *Table of Contents*

General Information . . . . .	7 - 1
Breaker Boxes . . . . .	7 - 1
Electrical Diagrams . . . . .	7 - 1
Batteries . . . . .	7 - 2
Battery Boost Switch . . . . .	7 - 2
Battery Inspection & Care . . . . .	7 - 2
Battery Disconnect Panel . . . . .	7 - 3
12 Volt Receptacles . . . . .	7 - 4
120 Volt Receptacles . . . . .	7 - 4
GFCI Receptacles . . . . .	7 - 4
ICC Flasher . . . . .	7 - 4
Inverter/Converter . . . . .	7 - 5
Generator . . . . .	7 - 5
Automatic Transfer Switch . . . . .	7 - 5
Wiring Connector . . . . .	7 - 6

# ELECTRICAL SYSTEMS

## *General Information*

There are two electrical systems in your coach. They are the 12 volt DC system and the 120 volt AC system. Most standard appliances require 120 volt electricity while the majority of the lighting used in recreation vehicles is powered by 12 volt electricity. The power for the 12 volt system is supplied by the coach batteries, which are charged by two 45 amp power converters. The power for the 120 volt systems is supplied by the power cord when the unit is connected to an outside power source or by the generator. If installed, the optional inverter can also supply 120 volt power. It will transform 12 volt electricity from the batteries into 120 volt power for basic appliances.

### CAUTION

Failure to turn off the 120 volt appliances when starting or stopping the generator may damage the transfer switch and/or electrical appliances.

To connect the unit to 120 volt shore power, first make sure all of the breakers are in the off position. This is done to avoid a power surge. Unwind the power cord from the electrical compartment. The standard electrical service in this unit is 50 amps with a flexible cord. Check to make sure the pins in the outlet are oriented correctly, that they match the power cable, and that they are in good condition. If there is a circuit breaker switch at the plug, it should be turned OFF before making the connection. Insert the plug completely into the outlet and turn the circuit breaker on. Close and lock the electrical compartment door to keep the contents clean, dry, and secure. Close the cover on the power box, if equipped, to avoid an unintended disconnection and to keep contents clean. Switch the main breaker to the ON position. The 120 volt system will energize all 120 volt circuits and outlets when the main breaker is turned on.

## *Breaker Boxes*

The 120 volt and 12 volt breaker boxes are generally located in the overhead cabinet on the rear bedroom wall. Circuit breakers and fuses are installed to protect the electrical system from overloading. Do not attempt to change the circuitry or add appliances yourself. Please consult an authorized Newmar Service Center.

## *Electrical Diagrams*

In Chapter 15, you will find electrical diagrams. Please note that some circuits may not apply to certain units depending on the brand and type.

## *Batteries*

The chassis batteries on your motorhome are installed and warranted by the chassis manufacturer. The four 6 volt coach (or house) batteries on your motorhome are installed by Newmar Corporation, but warranted by the battery manufacturer. These batteries are used to operate the 12 volt items that are not a direct part of the chassis. They are located on a pull out tray in an outside compartment.

### CAUTION

Do not use the motorhome with the coach batteries disconnected.

The coach and chassis batteries are recharged by the vehicle's electrical system whenever the engine is running. A decline in the coach battery voltage may be noticed while the chassis batteries are being charged. The converter will automatically charge the coach batteries when the unit is connected to a 120 volt outside power source. The chassis batteries are isolated from the coach batteries. This prevents the chassis batteries from being drained by the interior 12 volt equipment, allowing ample voltage for engine ignition.

## *Battery Boost Switch*

The battery boost switch is located on the dash. This switch briefly connects the coach batteries to the chassis batteries. This allows the chassis batteries to borrow power from the coach batteries to assist in starting the engine. If the chassis batteries cannot turn the engine over in the normal mode, hold down the battery boost switch and attempt ignition. By using the battery boost switch while trying to start the chassis engine, a jump start situation is created between the coach and chassis batteries. If the battery boost switch is required to start the engine on a regular basis, ask your dealer to check the chassis batteries and charging system.

## *Battery Inspection & Care*

### WARNING

Remove rings, metal watch bands, and other metal jewelry before working around batteries. Use caution when using metal tools. If a tool contacts a battery terminal or metal connected to it, a short circuit could occur which could cause personal injury, explosion or fire.

### CAUTION

Disconnect the 120 volt electrical power cord and the negative terminal from the coach batteries before working on the electrical system.

Remember that when batteries are not used for an extended period of time, they may lose their charge. Periodic charging of the batteries during storage of the unit will increase the life



cover and case. Check the vent plugs and replace them if they are cracked or broken. Keep the battery clean. Accumulations of acid film and dirt may permit current flow between the terminals, which could drain the battery.

To clean, wash the batteries with a diluted solution of baking soda and water to neutralize any acid present. Rinse thoroughly with clean water. Foaming around the terminals or on top of the battery is a sign that acid is being neutralized. Avoid getting the baking soda solution in the battery. Secure all vent caps. Dry the battery cables and terminals to prevent corrosion. Do not use grease on the bare metal inside the cable terminals. Grease can act as an insulator, and electricity will not flow through it. A plastic ignition spray will protect the terminals after they have been cleaned.


#### WARNING

Do not allow the battery fluid to contact your skin, eyes, fabric, or painted surfaces. The fluid could cause serious personal injury or property damage. Wear eye protection when working with any battery.

The batteries should be removed and stored in a warm place when not using your motorhome for an extended period of time. Mark the cables, positive and negative, for easy identification. Batteries are not to be stored on concrete floors. The batteries require periodic charging during storage. If the motorhome is to be stored for a long period of time, it is recommended that all of the batteries inside the unit be removed from clocks, radios, smoke alarms, etc. This will prevent unnecessary drain and corrosion of the batteries. The coach batteries are 6 volt RV/Marine deep cycle batteries. This type of battery consumes water and must be filled periodically. **Please be sure to check the battery water level on a regular basis.** Consult the owner's manual supplied by the battery manufacturer. This can be found in the Owner Information Package received with this unit.

### *Battery Disconnect Panel*

The battery disconnect panel for house batteries is located above or near the entrance door. There are two switches on the panel. The top switch is used to measure the battery voltage. The lower switch is used to disconnect the battery when the unit is stored for any period of time. Pressing downward disconnects the coach batteries, not the chassis batteries. This is done to prevent the coach batteries from being drained during storage. It disconnects all of the 12 volt circuitry from the batteries, with the exception of the LP detector. When taking the unit out of storage, press upward to re-connect the batteries. This will make the 12 volt system ready for use.

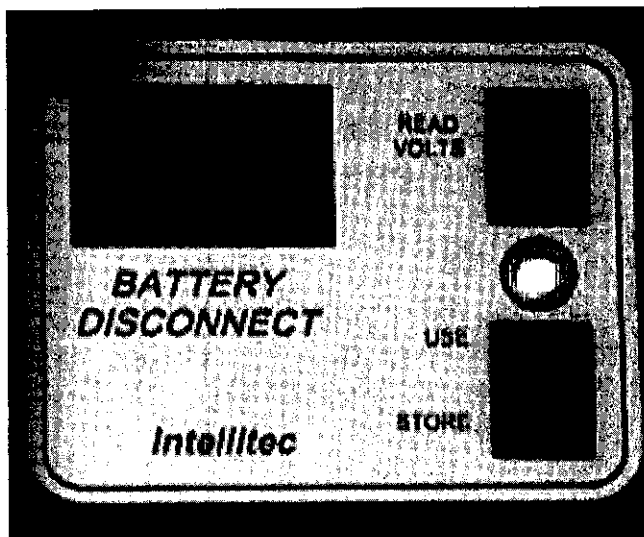

Depending on the chassis of the coach, diesel pusher motorhomes may be equipped with a second disconnect switch strictly for the chassis batteries. If equipped, this "Master Kill Switch" may be located in the rear engine compartment. This switch disconnects all power to the coach so that it cannot be started. It is used to prevent accidental ignition when the engine is being serviced.

## *12 Volt Receptacles*

Your unit may be equipped with two 12 volt receptacles conveniently located in the dash area. These 12 volt receptacles can be used for items such as cellular phones or personal computers. As an option, an extra 12 volt interior receptacle may be added to your coach.

## *120 Volt Receptacles*

For your convenience, there are 120 volt receptacles located throughout the interior of the unit. As an option, an extra receptacle may be added. These receptacles require three-pin plugs that provide proper grounding to protect you from electrical shock. Do not use an adapter, cheater, or extension cord that breaks the continuity of the ground circuit to the ground pin. Never remove the ground pin from a plug in order to connect it to a two-pronged ungrounded outlet. Never operate the camping vehicle with an electrical short. An electrical short may cause the exterior of the unit to shock you when touched. If you feel even the slightest shock, disconnect the unit from the 120 volt power source. It is usually a break in the grounding circuit. The grounding circuit must be continuous from the frame to the distribution panel, to the power cord, and to the earth ground.

## *Ground Fault Circuit Interrupt Receptacles*

The 120 volt electrical outlets in the kitchen and bath area are ground fault circuit interrupt (GFCI) protected receptacles. The electrical outlets located in the slide out are wired through the kitchen GFCI. The exterior electrical outlets are wired through the bathroom GFCI. If an item plugged into a slide out or outside receptacle is not working, check for a tripped GFCI in the kitchen or bathroom. These outlets protect the user from ground faults between a hot wire and ground. The GFCI will not reduce the shock hazard if the short is between a neutral and hot wire, or two hot load wires.


The GFCI should be tested at least once a month. The 120 volt electrical system must be on in order to test the GFCI. The reset button needs to be pushed in all of the way before starting the test. Push the test button. This will cause the reset button to pop out which means that the protected circuits have been disconnected. Push the reset button back in until a click is heard. This will reactivate the protected circuit. If the GFCI is working properly the reset button will remain in the "IN" position.

## *ICC Flasher*

On the dash you may have a switch labeled "ICC Flasher." This switch is a momentary type of switch. This means it is only active while the switch is being pressed. It enables the driver to communicate with other traffic by flashing the clearance and side lights of the coach. If the lights are on, it will turn them off. If the lights are off, it will turn them on.

## *Inverter/Converter (Optional)*

When 120 volt power is not available, either from the power cord or the generator, the optional inverter/converter may be used, if installed. The control panel for the inverter is located above or near the entrance door. Once turned on, the inverter transforms 12 volt power to 120 volt power for the operation of lights, appliances, televisions, etc. The 120 volt power that is generated from the inverter is routed to the electrical sub-panel located next to the main breaker box in cabinet above the bed.

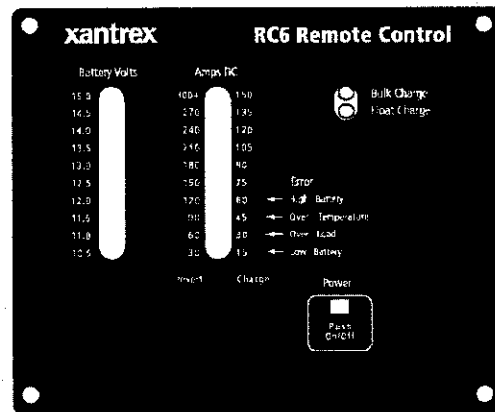

The breakers in the sub-panel are labeled to explain where the 120 volt power is routed. It generally supplies power to the microwave, kitchen, bath, and selected receptacles. The inverter is equipped with an automatic transfer switch. This allows automatic switching from inverter to converter. When you are connected to an outside power source or running the generator, the converter (in the inverter) will automatically switch on to charge the 12 volt batteries. For more detailed information consult the manufacturer Owner's Manual located in the Owner Information Package.

## *Generator*

The generator is located in a compartment in front of the motorhome. It is mounted on slides for easy access. The slides for the generator must be unlocked before free movement is allowed. Prior to starting or stopping the generator, make sure all of the 120 volt appliances are turned off. After the generator has started, wait until the transfer switch has connected before turning on any of the appliances. The generator can be started from either the remote start switch located on the dash or directly at the generator itself. The hour meter installed on the generator calculates the number of running hours of the generator motor. This is used for maintenance schedules.

### CAUTION

Failure to turn off the 120 volt appliances when starting or stopping the generator may damage the transfer switch and/or electrical appliances.

Consult the manufacturer owner's manual for detailed operating instructions.

## *Automatic Transfer Switch*

Your unit may be equipped with an automatic transfer switch. When the generator is turned on, this switch automatically transfers from shore power to generator power. There will be a slight delay between the start of the generator and the electrical connection. This delay


load. When the unit is plugged into the outside power source, a click will be heard in the transfer switch box. The sound is normal and indicates that the unit is changing over to the outside power source.

## Wiring Connector

Standard on your motorhome is a class five, 10,000 pound car towing hitch. This allows the consumer the capability of towing their passenger car while traveling. Also installed with the hitch is the wiring pigtail to connect tail lights, brake lights, turn lights, etc. of the towed vehicle with that of the motorhome. The pigtail used is the standard seven-pin connector. The color scheme for the pigtail is as follows:

Stop & Left Turn Signal . . . . .Red	Stop & Right Turn Signal . . . .Brown	Ground . . . . .White
Clearance & Tail Lights . . . . .Green	Brakes . . . . .Blue	
Aux. Tow Connector Prep . . . .Black	Back-up Lights . . . . .Yellow	

Below is the diagram of the tow plug. This view is looking into the tow vehicle receptacle. As stated above, this is a standard seven-pin pigtail.

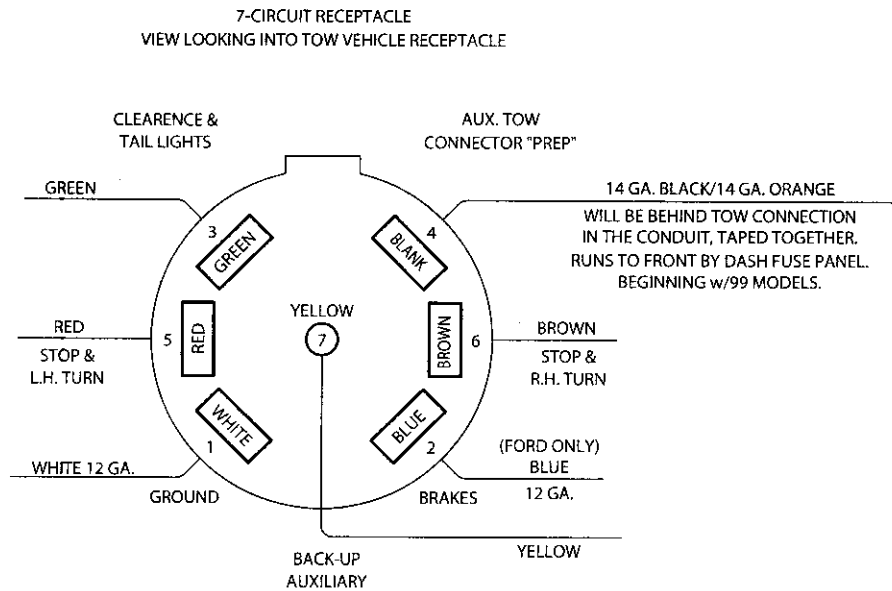

## Spotlight (Optional)

The optional spotlight may be installed on the roof of this unit and is controlled by the toggle switch on the dash. The light can be turned on or off and can be moved in various directions.

## Notes

---



---

# CHAPTER 8

## SLIDE OUT FEATURES

### *Table of Contents*

General Instructions .....	8 - 1
Extending .....	8 - 2
Retracting .....	8 - 2
Manual Operation .....	8 - 2
Operating Precautions .....	8 - 3

## WARNING

READ THE FOLLOWING SLIDE OUT ROOM INSTRUCTIONS BEFORE ACTIVATING THE SWITCH.

## CAUTION

It is recommended that the leveling jacks be extended and the unit level before operating the slide out. Note: This slide out can be operated without utilizing the leveling system, but is recommended to have the unit as level as possible.

# GENERAL INSTRUCTIONS



## IMPORTANT

The slide out room should be inspected for alignment every six (6) months. If alignment is necessary, have the room adjusted.

1. The slide out room can be stopped at any time by activating the slide out switch. The room will reverse directions each time the switch is activated.
2. If the slide out room stops before reaching the full "OUT" or "IN" position, the slide out controller may need adjustment.
3. To adjust the slide out controller, turn the adjustment screw clockwise to increase the power and counter-clockwise to decrease the power.

## CAUTION


Move the adjustment screw in small increments. Try moving the slide out room again. Use caution. There is a potential for component or structural damage if the screw is adjusted too high.

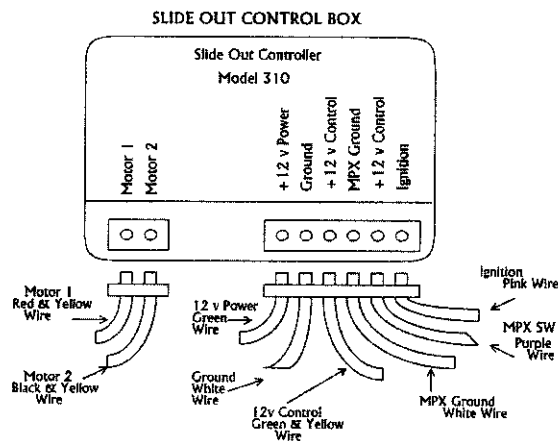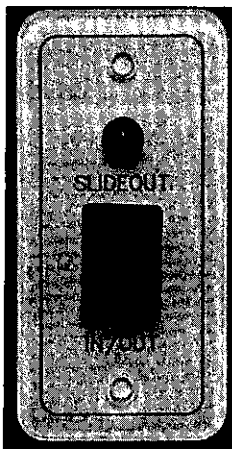

## IMPORTANT

## *Extending the Slide Out Room*

1. The windows on the end of the slide out room must be closed before moving the room in either direction.
2. Before extending or retracting the room, look for and remove any obstructions.
3. Move the driver's chair forward before moving the slide out room in either direction.
4. Disengage the lock arms by pulling down on the center of the arm using the lock arm release tool, as required.
5. Activate the slide out switch. Once fully extended, the room will automatically stop. The indicator light will be lit while the room is traveling.

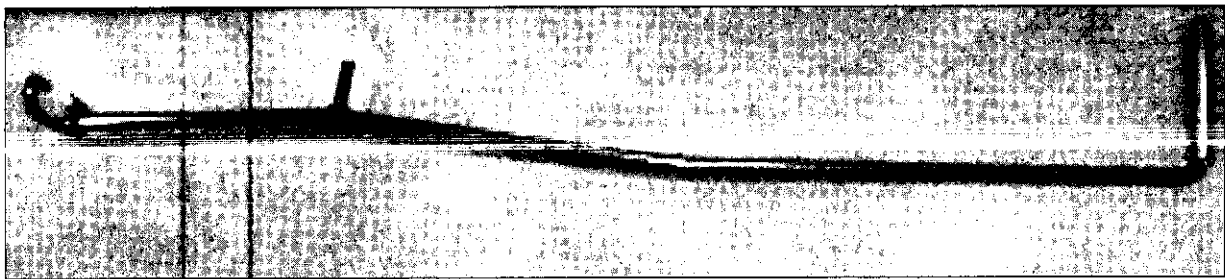

## *Retracting the Slide Out Room*


1. Activate the slide out switch. When fully retracted, the room will automatically stop. The indicator light will be lit while the room is traveling.
2. Before moving the coach, engage the lock arms by pushing the arm up into the locked position using the lock arm tool, as required.

## *Manual Extension and Retraction*

### SHAFT END-MOUNTED MOTORS

If the motor is mounted on the ends of the slide out shaft, use the following directions:



1. Access must be gained to the TRANS-TORQUE bushing coupling at the end of the slide out gear motor.
2. Using a  $\frac{1}{2}$ " drive –  $1\frac{1}{2}$ " open end wrench and a  $\frac{1}{2}$ " drive ratchet wrench, loosen the  $1\frac{1}{2}$ " nut. This will require approximately  $1\frac{1}{2}$  turns. The nut is a standard right hand thread. After the initial release, the nut will turn for a partial turn, then will release again as you turn the wrench. This second release is required to loosen the TRANS-TORQUE bushing from the shaft.

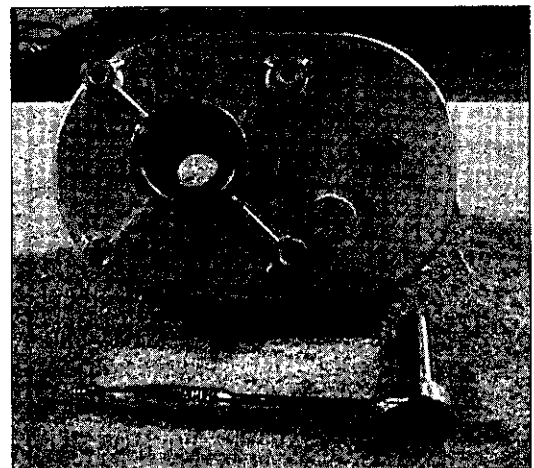

## SHAFT CENTER-MOUNTED MOTORS

If the unit is equipped with the K-900 slide out motor which is mounted near the center of the slide out room, use the following directions:

1. Access must be gained to the slide out motor located in the center of the slide out room.
2. The manual extension or retraction requires only a  $\frac{5}{8}$ " socket and ratchet wrench. By placing the socket on the  $\frac{5}{8}$ " hex nut located on the gear box of the K-900 motor, the slide out can be moved in either direction by turning the hex nut.
3. If the slide out does not move by using the hex nut, the room can also be extended or retracted by using the procedure described for the SHAFT END-MOUNTED MOTORS. If the room is moved using this method, the correct torque on the  $1\frac{1}{2}$ " TRANS-TORQUE nut is 125 foot pounds MAXIMUM.

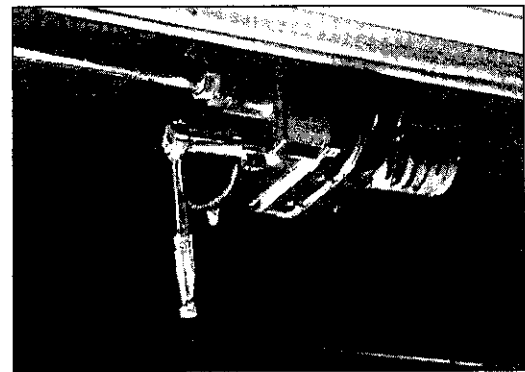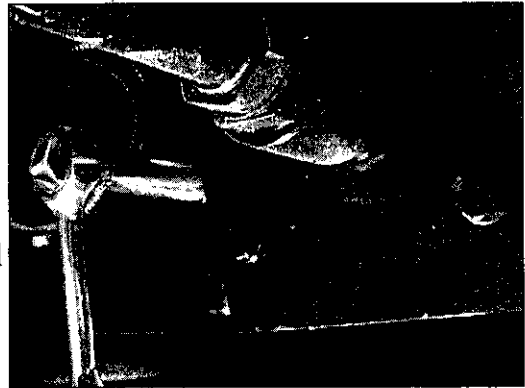

Slide outs with either the center or end mounted motors can be moved by pushing the room the full length of its travel in either direction. This method will require the assistance of at least two people.

### IMPORTANT

The TRANS-TORQUE bushing must be re-tightened to re-couple the slide out gear motor before moving the coach. This will hold the slide out room in place. The correct torque on the  $1\frac{1}{2}$ " TRANS-TORQUE bushing is 110 foot pounds maximum. The correct torque on the  $1\frac{1}{2}$ " TRANS-TORQUE bushing of the K-900 motor (center shaft motor) is 125 foot pounds maximum.

## *Operating Precautions*

Before extending the slide out, make sure that the unit is level.

### WARNING

Before extending the slide out, make certain that there is a minimum of five (5) feet of clear space on the slide out side of the unit. Prior to extending the room, be sure to unlock the slide out locking arms.

Make sure there are no obstructions either inside or outside the unit that may interfere with the slide out extension. Tree branches, bushes or telephone poles can cause extensive damage to the exterior of the unit.



# CHAPTER 9

## EXTERIOR FEATURES

### *Table of Contents*

Hitch . . . . .	9 - 1
Exterior Sides . . . . .	9 - 1
Security Lights . . . . .	9 - 1
Roof . . . . .	9 - 1
Hydraulic Leveling Jacks . . . . .	9 - 1
Jacks with Touch Control . . . . .	9 - 2
Electric Steps . . . . .	9 - 3
Mirrors . . . . .	9 - 4

# EXTERIOR FEATURES

## *Hitch*

On the rear of this unit you will find a class five, 10,000 pound car towing hitch. This is installed for towing passenger cars to be used when the vehicle is parked. The wire connector installed with this hitch is a standard seven-pin connector. For more information on the connector, please see Chapter 7 of this guide.

## *Exterior Sides*

The sides of this unit are constructed of gel-coated fiberglass. To add to this feature, the end caps are also gel-coated fiberglass. Clean the fiberglass material with a mild cleanser and warm water. Use only soft cloths. Using stiff bristle brushes may cause scratches in the fiberglass surface. Please note, Newmar is **NOT** responsible for weathering/oxidation of gel-coated surfaces.

Lighted storage compartments are located on the exterior sides of your unit. These compartments provide additional space for your belongings while you are traveling.

## *Security Lights*

Standard on this unit are exterior security lights. One is installed on each side of the coach. These lights help to light the side of the unit for added protection. As an option, you may have two lights installed on each side of your unit if you desire.

## *Roof*

This unit is manufactured with a 7mm decking material. Proper care and routine maintenance of your roof is necessary for trouble-free performance. See chapter 14 for cleaning instructions. A ladder is installed on your coach to assist you in gaining access to the roof for routine inspections and maintenance.

## *Hydraulic Leveling Jacks*

### WARNING

If the vehicle is equipped with a slide out, it is recommended that the leveling and stabilizing procedure is complete before operating any room extension. Note: The slide out can be operated without utilizing the leveling system, but it is recommended to have the unit as level as possible.

This unit may be equipped with hydraulic leveling jacks. The jacks work in pairs: front, right side, left side, and rear. Before extending, the engine must be off, the ignition switch must be in the "ACC" position, and the transmission must be in park. The parking brake needs to be set and the tires blocked securely.

## CAUTION


Do not lift the wheels off the ground when leveling. The unit can roll forward or backward when supported only by the jacks.

## IMPORTANT

If the hand/auto park brake is not set, the "NOT IN PARK/BRAKE" light will come on when the "ON" button is pushed. The panel will turn on, but the system will not operate.

## *Touch Manual Control Pad*

To extend, press the "ON" button on the HWH control panel. The "POWER ON" light will illuminate. Place pads under the jacks, if necessary, at this time. A lit yellow "LEVEL" light indicates that the end, side, or corner is low. Push an "EXTEND" (up arrow) button to extend the jack pairs according to the lit yellow lights. Always level the vehicle from side to side before leveling the vehicle from front to rear. Two yellow "LEVEL" lights can be on at one time. Extend the jack pair accordingly until all yellow lights are out. If the ground is too uneven, the jacks may not have enough stroke to level the vehicle. The vehicle may have to be moved. After the vehicle is level, the jacks not used for leveling may be extended until they touch the ground. This provides additional stability against wind and activity in the vehicle. Do this by pushing the front and/or rear "EXTEND" buttons as needed to extend any remaining jacks. Do not use the right or left "EXTEND" button. Push the "OFF" button on the touch panel. Turn the ignition switch off.

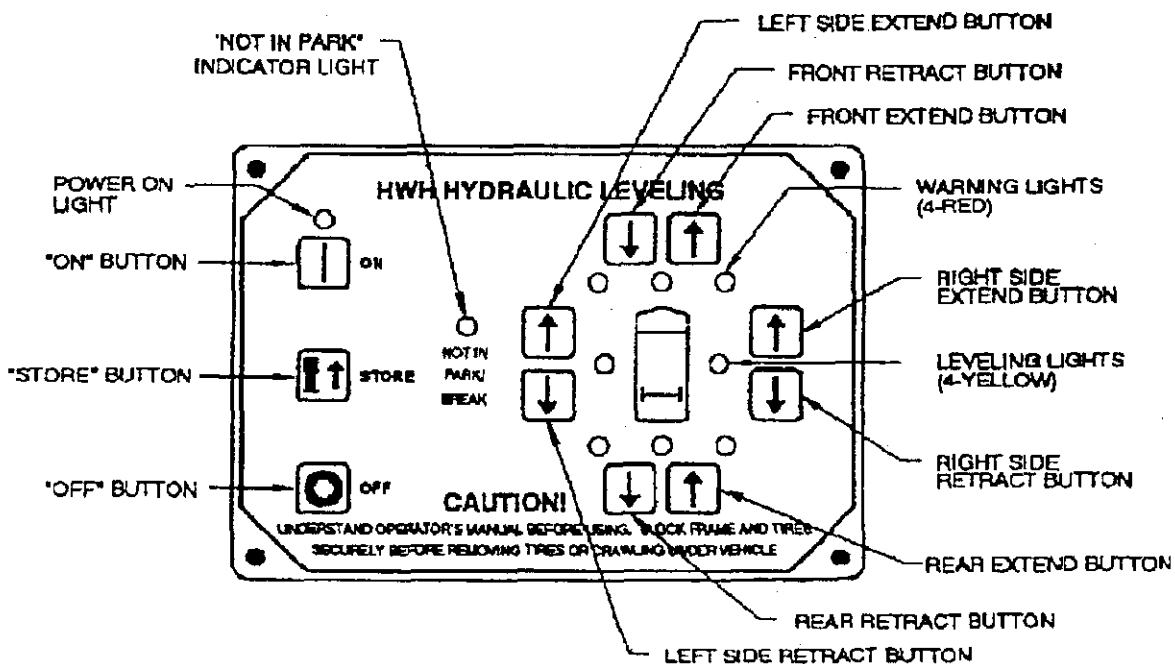

## IMPORTANT

The leveling system should be cycled once a month or whenever the vehicle is used to keep the system in operating condition.

To retract the jacks, turn the ignition switch "ON" and press the "ON" button on the control panel one time. The "ON" indicator light will glow steady. Press the "STORE" button. As each jack retracts, its red "WARNING" light will go out. The vehicle can be moved as soon as the red "WARNING" lights are out, provided the jacks are in the STORE/TRAVEL position. The system will automatically shut down approximately two minutes after the four individual red "WARNING" lights are out. Refer to the HWH Owner's Manual for more instructions.

## *Electric Steps*

This unit may be equipped with electric double entrance door steps. If so, the switch to operate these steps may be located in an overhead cabinet above the entrance door. When the power switch for the steps is in the on position, simply open the door and the steps will open. Detailed operation for the electrical entrance door steps is as follows:

1. Turn the step power switch on.
2. Close the door. The step should retract and lock into the up position.
3. Open the door. The step should extend and lock into the down position.
4. Turn the step power switch off. The step should remain in the extended position when the door is closed. Turning off the power with the step retracted will hold the step in a retracted position as well.
5. With the step extended, turn the step power switch off and close the entrance door. Turn the vehicle ignition on. The ignition override system will go into effect, and the step will automatically retract.

## CAUTION

If the vehicle is driven with the step in the extended position, there is the possibility of causing major damage to both the step and the vehicle.

6. Turn the vehicle ignition off and open the door. The step will extend and lock in the down position.

## CAUTION

If the door is opened and closed without allowing the step to fully extend and lock in the 'DOWN' position, the step will retract and lock in the 'UP' position. When the door is reopened, the step will not extend. The power switch must be turned on for the step to extend.

7. This feature is only operative the first time that door is opened after the vehicle ignition is turned off. When the ignition is on, the step will always activate with the door movement, regardless of the step power switch position.

# MIRRORS

This vehicle is equipped with convex remote controlled defrosting exterior rear view mirrors. Always adjust the mirrors for maximum rear visibility prior to driving. Make sure the seat is positioned for proper vehicle control.

These mirrors are adjusted by using the multiple directional switch located on the driver's door. Select the mirror to be adjusted by pointing the arrow in the direction of that mirror. Move the control in the direction of movement desired to obtain the best view. The adjustment control moves the top half of both mirrors. The bottom half of the mirror is convex and is adjusted manually. These mirrors also contain heating elements to defog or de-ice the mirror glass during cold weather operation. The ON/OFF switch for this feature is located by the adjustment control.

The convex exterior chrome mirrors with remote control and defrost are optional on this unit.

## IMPORTANT

Objects viewed in convex mirrors appear smaller and farther away than they actually are.



## Notes

---

---

---

---

---

# CHAPTER 10

## INTERIOR FEATURES

### *Table of Contents*

Bedspread . . . . .	10 - 1
Flooring . . . . .	10 - 1
Ceiling . . . . .	10 - 1
Window Treatment . . . . .	10 - 1

# INTERIOR FEATURES

## *Bedsread*

A decor matching quilted bedsread with a reverse sham and an accent pillow are part of the standard package for this unit. The recommended cleaning instructions for this spread are Dry Clean Only. The materials that make up the spread may have been treated, and dry cleaning will preserve this treatment.

## *Flooring*

The floor covering throughout the living room and bedroom of the unit is nylon tufted cut loop carpeting. In the Owner's Information Package you will find literature supplied by the carpet manufacturer. This information will be helpful in maintaining and extending the life of the carpet. Please refer to this information for the carpet care and cleaning instructions. The flooring throughout the kitchen and bath area is simulated plank. Ceramic floor tile or 12" marble-like tiles are optional throughout these areas. For everyday cleaning, simply vacuum to remove loose dirt and debris. Mop occasionally, using a minimal amount of water. For more thorough cleaning, mop with a mixture of soap-free household cleaner and water (vinegar and ammonia both work well). Be careful not to saturate the floor with water; this could damage the flooring. Abrasive cleansers and scouring pads can scratch and damage the surface also.

## *Ceiling*

The ceiling in this unit is covered with a padded vinyl ceiling headliner. The recommended cleaning instructions is to use a soft cloth and a mild detergent.

## *Window Treatment*

The window treatment throughout this unit, except in the kitchen, is pleated day/night window shades and lambrequins. These shades have two sections. The first section visible when closing the shade is the "DAY" section. This material is translucent. Sunlight passes easily through the material into the unit. The second visible section is the "NIGHT" section. This material is a heavier, more opaque material. Very little to no light passes through it. It is generally used in the evening or when more privacy is desired. If any curtains are installed in this unit, cleaning instructions are DRY CLEAN ONLY. Water-based products are not recommended for cleaning fabrics. Water-based products may cause excessive shrinkage or fading. The kitchen window is equipped with a mini-blind.

## *Notes*

---

---

# CHAPTER 11

## PLUMBING & BATH FEATURES

### *Table of Contents*

Kitchen Sink . . . . .	11 - 1
Bath Sink, Shower & Accessories . . . . .	11 - 1
Monitor Panel . . . . .	11 - 1
Monitor Panel Calibration . . . . .	11 - 1
Water Pump . . . . .	11 - 2
City Water Hook-Up . . . . .	11 - 3
Fresh Water Tank Fill . . . . .	11 - 3
Sanitizing . . . . .	11 - 4
Drink Dispenser with Water Filter . . . . .	11 - 5
Water Heater By-Pass . . . . .	11 - 5
Fresh Water Lines . . . . .	11 - 5
Waste Water System . . . . .	11 - 6
Toilet . . . . .	11 - 6
P-Traps . . . . .	11 - 6
Black Water Holding Tank . . . . .	11 - 7
Gray Water Holding Tank . . . . .	11 - 7
Waste Water Disposal . . . . .	11 - 7
Camping with Sewer Hook-Up . . . . .	11 - 8
No Fuss Flush . . . . .	11 - 9



# FRESH WATER SYSTEM

## *Kitchen Sink*

The kitchen sink installed in your unit may be an acrylic, double-bowl sink equipped with two sink covers to provide additional counter space when the sink is not in use. Cleaning care consists of washing with mild detergents and a soft cloth. Avoid using "S.O.S." type cleaning pads because they may scratch the surface. The faucet in the kitchen may be a single-handle faucet with a pullout spout.

## *Bath Sink, Shower & Accessories*

The sink in the bathroom may be a porcelain sink. Use care when cleaning to prevent from scratching the surface. The bathroom accessories include two towel bars and a tissue holder. The faucet in the bathroom consists of a metal body with a brass finish. The shower installed is a combination fiberglass tub/shower with a glass shower door. The white tub faucet with shower head, hose and bracket coordinate with the sink faucet. An optional assist handle may be installed in the tub/shower.

## *Monitor Panel*

The monitor panel allows you to check the approximate levels in the fresh, gray, and black water holding tanks, as well as the battery condition. The monitor panel is generally located above or near the entrance door. Simply press the button of the item to check its status. The empty indicator light will always light when the button is pressed. If the tank is full, all of the lights will be on. Lights are sequential and indicate the level in approximately  $\frac{1}{4}$  tank increments. For example: If the tank selected is approximately  $\frac{1}{2}$ -full, then the indicator lights E,  $\frac{1}{4}$ , and  $\frac{1}{2}$  will be lit. On the right hand side of the monitor panel is the water pump switch. This switch controls the power going to the water pump, turning it either on or off.

## *Monitor Panel Calibration*

The monitor panel comes to you factory calibrated for accuracy and should not need to be adjusted. In the event that the system does not read accurately, then re-calibration may be necessary. The procedure for re-calibration is simple: First, fill the tank to be re-calibrated. Second, using the adjustment tool enclosed in the Owner's Package (or any small flat-bladed screw driver), simultaneously push the button for that tank and rotate the adjustment screw located above the button and behind the face plate counter-clockwise until some of the lights turn off in sequence. Then slowly rotate the adjustment screw clockwise until the full light is completely on. Repeat this procedure as necessary for the remaining tanks. The system is now calibrated properly.

## *Water Pump*

The water pump is self-priming and totally automatic, operating on demand whenever water is required. The water pump is used to pressurize the fresh water system when the unit is not connected to city water. The switches to this pump may be located in the bathroom above the entrance door and in the water works compartment. To start the pump follow these instructions:

1. Fill or partially fill the fresh water supply tank.
2. Open the kitchen and bathroom faucets.
3. Turn the water pump switch on and allow the water to fill the water line and the hot water heater.
4. Close each faucet after it delivers a steady stream of water (close the cold water first). Leave the hot water faucets on until they also deliver a steady stream of water. This will ensure that the water heater is filled with water.
5. The water pump should stop running once all faucets are closed.
6. The pump is now ready for automatic operation. The pump will run when a faucet is opened and stop when a faucet is closed.
7. Never allow the pump to run for long periods of time without water in the supply tank. Pump damage or blown fuses may result.


If water doesn't flow when a faucet is turned on while using the demand system, use the following trouble shooting chart:

SITUATION	SOLUTION
Pump running - no water	<ol style="list-style-type: none"><li>1. Fill tank</li><li>2. Clear the water line to the pump</li></ol>
Pump doesn't run	<ol style="list-style-type: none"><li>1. Check the pump switch</li><li>2. Check the 12 volt fuses</li><li>3. Check the electrical connections</li><li>4. Check the battery</li></ol>

All of the water should be drained from the fresh water system when the unit is not in use for more than one week. For more detailed information regarding the water pump, refer to the water pump manufacturer's brochure in your Owner's Information Package.

## *City Water Hook-Up*

When connecting your unit to city water, be certain to use a water hose manufactured and labeled for potable water. This will ensure that the hose will not alter the taste of the water. To hook the city water supply to the unit, connect one end of the hose to the city water supply. This will usually be a faucet or valve similar to your garden hose valve at home.

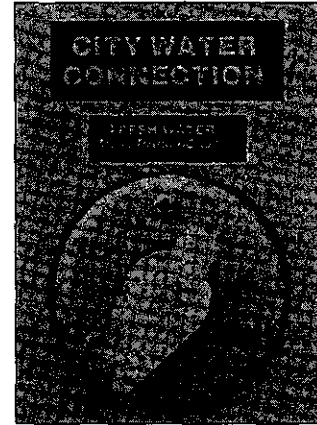

Turn the city water supply on for a few seconds in order to clear the line. Once the hose has been flushed, turn the supply off. Connect the other end of the hose to the city water connections. Turn on the water supply and open all of the faucets to clear the air from the lines in the unit. Once air pockets have been purged from the water lines and water flows freely, close all of the faucets. The city water supply is under pressure, therefore the water pump is not necessary when connected to city water. Once the city water fill valve is opened, water is supplied to the fresh water system including the hot water heater, faucets, and stool. To disconnect from the city water supply, close the valve and remove the hose from the city water supply. Disconnect the hose from the city water connection and store the hose in the water compartment.

## *Fresh Water Tank Fill*

The fresh water tank is filled from the city water hook-up. The valve located in the service compartment near the water hook-up determines whether the city water is going through the water system or into the fresh water tank. An additional way to fill the fresh water tank is with the winterizing intake hose placed in a bucket of water (See Chapter 14). Since there is not an automatic shut-off for the fresh water tank fill, check the level from the monitor panel while filling the unit. The excess water will be vented from an overflow vent pipe onto the ground when the tank capacity has been reached. This pipe is installed in the fresh water tank to prevent tank rupture from overfilling. All of the water should be drained from the fresh water system when the unit is not in use for more than one week. Whenever possible, drain the fresh water tank before traveling. Water in the tank will reduce the carrying capacity of the unit.


# SANITIZING

To assure complete disinfecting of your fresh water system, it is recommended that the following procedure be followed on a new system, on one that has not been used for a length of time, or one that may have become contaminated. This procedure is also recommended before long periods of storage, such as over the winter months:

1. Drain the fresh water tank by opening the drain valves. There is one valve per water tank. All of the faucets should be in the closed or off position.
2. Prepare a chlorine solution using one gallon of water and  $\frac{1}{4}$  cup of chlorine bleach (5% sodium hypo-chlorite solution). Prepare enough of the chlorine solution to administer one gallon of solution for every 15 gallons of tank capacity. For sanitizing this unit, prepare  $4\frac{1}{2}$  gallons of the chlorine solution. This mixture puts a 50 PPM (parts per million) residual chlorine concentration in the water system that will act as a quick kill dosage for harmful bacteria, viruses and slime forming organisms. Concentrations higher than 50 PPM may damage the water lines and/or tank.
3. Once the fresh water tank is empty, close the drain valves on the water tank.
4. Pump the chlorine solution into the tank. This is done by placing the winterizing hose into the chlorine solution. Close the valve from the fresh water tank to the pump and open the valve from the solution to the pump. Turn the tank fill valve from city water to tank fill. Turn on the water pump until all of the solution is pumped into the fresh water tank.
5. Turn off the water pump. Close the valve to the solution. Open the valve from the tank to the water pump. Fill the water tank with the city water tank fill (or by using the same method as was used to put the sanitizing solution into the tank). Remove the water filter (from the drink dispenser faucet, if installed) and install the by-pass pipe to allow the sanitizing solution access to the faucet. Open each faucet in turn including the kitchen faucet, bath faucet, inside and outside shower, turning on both the hot and cold, and flushing the stool until all of the air has been purged from the pipes and the water runs freely. The entire system will then be filled with the sanitizing solution.
6. Allow the 50 PPM disinfecting solution to stand in the system at least four hours.
7. Drain the system and flush with fresh water. The water system needs to be flushed with clean water repeatedly, if necessary, until there is no chlorine taste or smell left in the system. To remove any excessive chlorine taste or odor that might remain, prepare a solution of one quart vinegar to five gallons of water. Allow this solution to agitate in the tank for several days by vehicle motion. Drain the solution and refill the tank with clean water.

## *Drink Dispenser with Water Filter (Optional)*

If this unit is equipped with a water filter, it must be removed before disinfecting the fresh water system. First remove the water filter, and then install the by-pass pipe to allow the sanitizing solution access to the drink dispenser faucet. The water filter is located under the kitchen sink. The filter will remove chlorine, dirt, and other matter. It will also eliminate most phenol (or similar) odors and tastes while delivering sparkling, taste free water for drinking and cooking. The filter is connected only to the cold water line that is attached to the drink faucet. The filter is not guaranteed to remove the tastes and odors of iron and sulfur. To remove these tastes you will need to chlorinate the water. Replacement filters are available that will filter iron and sulfur. Ask your dealer or RV supply center about acquiring an iron and sulfur filter. If you are traveling in an area where the water has a high iron and sulfur content, then add 1 tablespoon of chlorine bleach to every 10 gallons of water in your tank. This will precipitate the iron or sulfur so that the filter can remove it. If you are at a site where the unit is hooked up to city water, you will not be able to chlorinate the system because the water flows straight to your faucets and not through the fresh water tank. Filters should be changed every 6 - 12 months depending on the quality and quantity of water that is used in your unit.

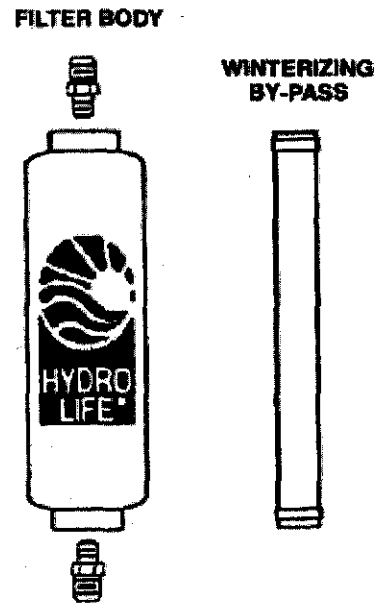

## *Water Heater By-Pass System*

The water heater by-pass valve is located in an outside compartment near the water heater. By closing the water heater supply valve and opening the by-pass valve you can divert water away from the water heater. This is done when winterizing your unit. Using the by-pass will keep antifreeze out of the water heater when winterizing the system. Draining the water heater during winterizing is a MUST.

## *Fresh Water Lines*

Vibration and flexing during traveling can cause pipes and fittings to work loose. Check all of the plumbing connections for leaks on a yearly basis. If the water pump runs when all faucets are turned off, check for a leak. Be sure the drain valves are closed. Connections at the kitchen and bathroom faucets normally seal with hand tightening and a half turn with a wrench. If a fitting leak persists, disconnect it completely and check for mineral deposits or foreign material on the sealing surfaces. Clean the surfaces thoroughly and reinstall the fitting. Take the coach to an authorized service center for repairs if the system continues to leak. Follow the winterizing instructions given in Chapter 14 to reduce the risk of leaks caused by cracks from freezing pipes. Freezing damage can be extensive and expensive.

# WASTE WATER SYSTEM

## *General Information*

The waste drainage system was designed to provide adequate and safe storage and/or disposal of waste materials. All of the materials used in the making of this system are tested by a nationally recognized testing laboratory. The drainage system uses plastic piping and fittings connected to the sinks, toilet, and holding tanks. This provides for their drainage to an outside termination. The unit should be reasonably level for best operation of the system. There are two separate waste systems. The gray water system is for waste water from the sinks and shower. The black water system is generally for sewage waste from the stool. Each tank has its own control valve, and both tanks drain through the sewer drain hose.

## *Toilet*

The standard toilet in your unit is a china stool. The toilet operates with water from either the fresh water tank with the water pump on or the city water supply. Before using the stool, add water to the bottom of the tank. Refer to the "BLACK WATER TANK" instructions in this chapter. The stool flushes waste directly into the black water holding tank. The stool uses high velocity water injection to produce a swirl effect in the bowl. The greatest problem that causes stool solids to build up in the holding tank is lack of liquids. When using your stool, it is wise to fill the stool 3/4 full of water. This will help to wash the solids away from directly below the stool and to ensure complete dumping of the holding tank. To add water to the stool bowl, lift or raise the flush lever until the desired water level is reached. To flush the stool, push down on the lever until the water swirls. A small amount of water should remain in the bowl.

The stool should be cleaned regularly for maximum sanitation and operational efficiency. Clean the toilet bowl with a mild bathroom cleaner. **DO NOT USE CHLORINE OR CAUSTIC CHEMICALS, SUCH AS LAUNDRY BLEACH OR DRAIN OPENING TYPES, AS THEY WILL DAMAGE THE SEALS IN THE TOILET AND DUMP VALVES.**

Refer to the toilet manufacturer's owner's manual in your Owner's Package for complete instructions and a troubleshooting guide.

## *P-Traps*

Each of the sink drains, the shower drain, and the washing machine drain (if equipped) has a water trap (P-Trap) to prevent holding tank odors from entering the coach. These traps must have water in them in order to trap the odors. While traveling, the water may splash out of the sink and shower drains. While stored, the water may evaporate allowing an odor to enter the coach. If this occurs, run water from the faucet into the drain, allowing water to fill the trap.

## *Black Water Holding Tank*

The black water, or sewage, holding tank is located directly beneath the toilet. Before using the stool, you will need to treat the tank with water that is mixed with an odor controlling chemical. These chemicals are readily available at any RV supply store. Be careful not to spill the chemical on your hands, clothing, or the carpet because it may cause a permanent stain. Pull the toilet levers forward to allow the chemical to mix with the toilet water. Continue pulling the toilet levers until at least one inch of solution is directly under the toilet. Release the levers, and the waste tank is ready for use.

### CAUTION

Use only approved RV odor controlling chemicals in the holding tanks. Products containing ammonia and petroleum will damage the ABS plastic holding tanks and seals.

## *Gray Water Holding Tank*

The gray water holding tank is located in the underbelly of the unit. It is primarily used for the drainage from the kitchen and bath sinks and the shower.

## *Waste Water Disposal*

Both of the holding tanks terminate in a valve arrangement that permits draining each tank separately or together. It is recommended to drain the black water tank before the gray water tank. This will allow the water from the gray tank to wash the black water residue from the drain lines and hose. The valves that open to release the water are called gate valves. The blade that closed the opening in the sewer drain pipes is connected to the T-handle to release the contents of the tank(s) when pulled. The sewer line must be securely capped during self-containment use to prevent leakage of waste material onto the ground or pavement. Do not pull the holding tank gate valve open when the protective cap is installed on the pipe. Always drain the tank into an acceptable sewer inlet or dump station.

### WARNING

Holding tanks are an enclosed sewer system and must be drained into an approved dump station. Both black and gray water holding tanks must be drained and rinsed thoroughly on a regular basis in order to prevent the accumulation of harmful or toxic materials.

Whenever possible, drain the holding tanks prior to traveling. The carrying capacity of your unit will be reduced if water is left in the black or gray tanks.

The holding tanks should only be drained when they are at least  $\frac{3}{4}$  full. Doing this will provide sufficient water to allow the complete flushing of waste materials in the drain lines and hose. If the tanks are not  $\frac{3}{4}$  full, add enough water to allow for sufficient flushing.

To empty the waste water tanks, connect the adapter to the drain hose. Use the adapter supplied with your unit. If the adapter is lost or broken, one can be purchased from any RV supply store. Once you have placed the adapter on the drain hose, it can remain there for the life of the hose. One end of the hose threads up through the hole in the bottom of the service compartment, and the other end of the hose feeds into the sewer at the dump station. Unscrew the cap off the drain. Connect the hose with the adapter in place to the drain fitting. Open the gate valve all the way by pulling on the T-handle. The tank will start to drain as soon as the T-handle is pulled. After you have drained the black water tank, immediately drain the gray water tank. Doing this helps to flush the black water from the sewage hose.

When both of the tanks are empty, flush them with a fresh water rinse before you close the valves. The gray tanks are easily flushed by pouring a couple of gallons of water into a sink drain. The drain outlet is engineered for quick release of the drain hose adapter. Always close the gate valves and secure the end cap to prevent leakage while in transit. After draining the black water tank, it is recommended to add a holding tank deodorant (such as Thetford Aqua-Kem) to help control the odor and break down the solids. Follow the instructions given on the holding tank deodorant package.

When using dump stations for draining the holding tanks, keep other travelers in mind. Practice good housekeeping. Leave the dump stations in good order. Above all, do not pollute.

## *Camping with Sewer Hook-Up*

When camping at parks with sewer hook-up, it is important to keep the black water holding tank gate valve closed at all times, except when dumping. The gray tank can be kept open while hooked to a sewer connection but again, the black water tank must be kept closed. This is done so that an ample supply of liquid remains in the tank to provide a smooth flow through the gate and drain valve when dumping. Sufficient liquid in the tank causes a swirling action that should take any accumulated solid wastes with it. Accumulation of solid wastes in the black water tank can be avoided by keeping the gate valve closed when connected to the sewer hook-up. If the valve is left open, solid wastes may accumulate in the tank. This may eventually result in costly repairs.

### CAUTION

The gray tank valve must be in the open position when operating the optional washing machine.



## *No Fuss Flush*

This unit may be equipped with a flushing system for the holding tanks. When draining your sewer tank, attach a water hose to the sewer spray hookup. After the tank is drained, leave the gate valve open and open the water valve to allow water to spray inside the sewage tank. This will clean the inside of the tank of any debris that may be left inside the tank. After this is done, disconnect the freshwater hose and close the gate valve. When unsure if any solids are still left inside the tank, fill the sewage tank with approximately ten gallons of water through the stool. As you travel the agitation of the water should help liquefy any solids left in the tank. You can dump the sewage tank again at your next destination.

### CAUTION

Do not use the same hose for the No Fuss Flush that is used for filling the fresh water tank.

## *Exterior Shower*

A feature on your coach may be the exterior shower. If installed, the exterior shower would be located on the off door-side of the coach. The exterior shower feature allows you to do such things as rinse off sand or grass, muddy shoes, or bathe your pet outside of your unit. The faucet operates just as it would in your kitchen or bathroom.

## *Notes*

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

# CHAPTER 12

## CONSTRUCTION FEATURES

### *Table of Contents*



Construction Features . . . . .	12 - 1
---------------------------------	--------

# CONSTRUCTION FEATURES

The floor decking is constructed of durable  $1\frac{9}{32}$ " structure wood. The fiberglass insulation in the floor and sidewall is rated at R7, while the roof is rated R11.

On this model, each sidewall is constructed for strength and is well insulated for comfort. Welded for added strength, the extruded aluminum sidewalls and roof are built with 16" on center framing to provide a strong and durable construction. The inside consists of  $\frac{5}{8}$ " beaded foam that is laminated to kraft paper and covered by the interior paneling. A blanket of rolled insulation is added to the sidewalls, roof, and slide out to provide a greater efficiency and consistency of climate control. This will assist the furnace in the winter by keeping the warm in and the cold out. In the summer months, it will assist the air conditioning by keeping the cool air in and the hot air out.

Below are examples of the framing and insulation similar to that in your unit.

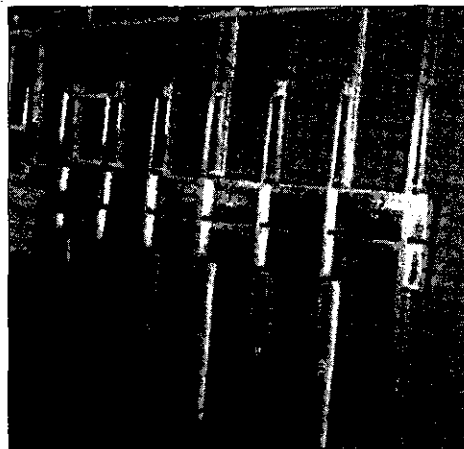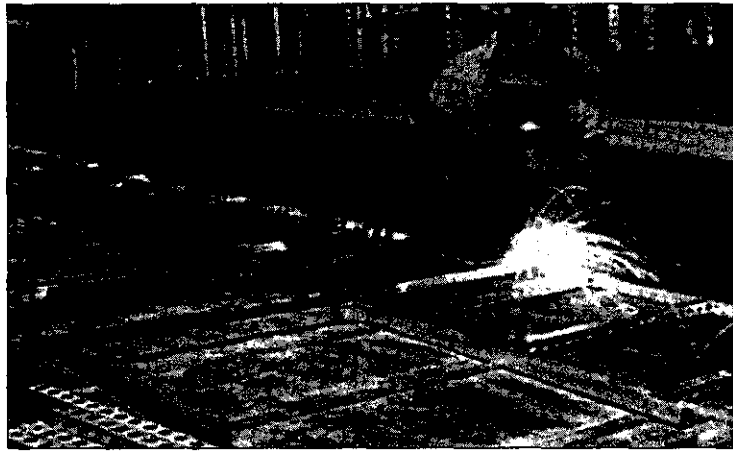

# CHAPTER 13


## WINDOWS, AWNINGS, VENTS & DOORS

### *Table of Contents*

Windows . . . . .	13 - 1
Awnings . . . . .	13 - 2
Window Awnings . . . . .	13 - 3
Vents . . . . .	13 - 4
Doors . . . . .	13 - 4


# WINDOWS

The windows installed in this unit may be the radius torque style double pane tinted safety glass. These windows are also referred to as jalousie windows. They open with the simple turn of a crank. A power window is available on the driver's side as an option.

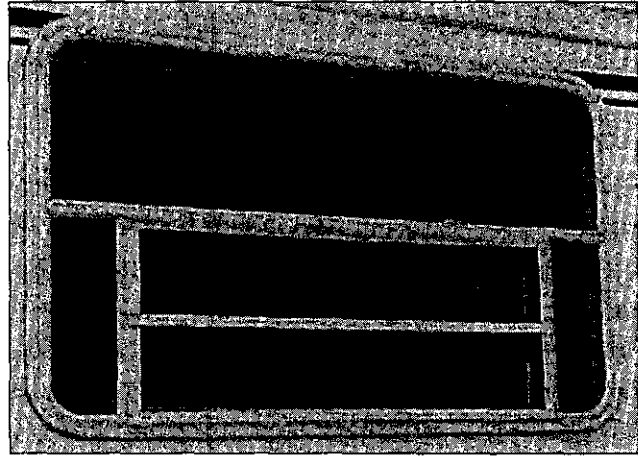

Sun shades may be standard on the driver and passenger side windows.

In the bedroom of the unit, one window will be marked "EXIT." This window is an emergency escape, or egress, window. To open in case of an emergency, lift the red handles at the bottom of the window and push out.

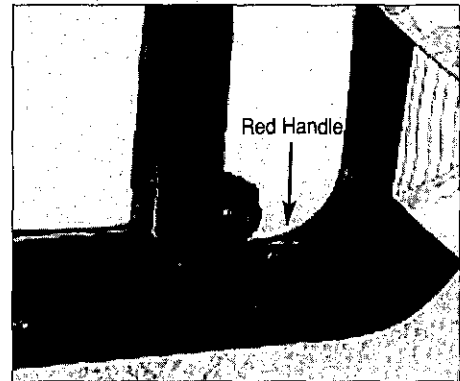

## *Notes*

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

# AWNINGS

## *Side Awning (Optional)*

The side awning is an available option on this unit. To operate, follow these instructions:

### EXTENDING

1. Loosen the black adjustment lock knob behind each main arm. Flip the travel lock latches up.
2. Using the provided pull rod, reach up and pull the locking lever forward to release the awning.
3. Hook the rod into the loop of the pull strap and pull the awning all the way out.
4. Slide one rafter arm up until it snaps into place. Push down on the main arm to remove slack from the fabric, and tighten the black adjustment knob. Repeat on other side.
5. Slide the pull strap to the right end of the roller and wrap it around the main arm.
6. Pull up on the lift handle and raise the arm assembly to the desired height. Swing the handle in and allow the lock button to snap into one of the holes. Repeat on the other side.
7. Press the release lever at the bottom end of one main arm, pull the arm assembly outward to a vertical position, and readjust height. Repeat on the other side. Drive provided stakes through holes of each patio foot into the ground.
8. During rain, lower one end to allow water to flow off.

#### CAUTION

Whenever heavy or prolonged rain or wind is anticipated, or you will leave the awning unattended, it is best to close the awning. Damage as a result of weather is not covered by warranty.

### RETRACTING

1. Pull the stakes from the ground, swing the arm toward the vehicle, and snap the patio foot into the bracket. Repeat on the other side.
2. Raise the lift handle to release the lock button. Lower the main arm to the stop plug. Swing the handle in to engage the lock button in a hole. Repeat on other side.
3. Loosen black adjustment knob, lift slider catch, and slide the rafter arm down to the bottom of the main arm. Leave the black adjustment knob loose. Repeat on other side.
4. Grasp the pull strap and pull toward you. Flip the locking lever to the ROLL UP position. Hold the awning in the down position until you are ready to roll up the awning.

#### CAUTION

The awning will try to roll up as soon as the locking lever is flipped to the "ROLL UP" position.

5. Slide the pull strap to the center and using it to control speed, allow the awning to return to the side of the vehicle. Allow the strap to wind diagonally to prevent a bulge in the fabric.
6. Tighten the black adjustment knob and flip the travel lock latch down. Repeat on other side. The awning is now ready for travel.

## Window Awning (Optional)

Also optional on this unit are the matching window awnings. To operate, follow these instructions.

### EXTENDING

1. Grasp the loop on the pull strap and pull down to extend the awning. Then hook the loop onto the window strap hanger.


### RETRACTING

1. Remove loop on the pull strap from the window strap hanger.

#### CAUTION

Do not release the strap as the window awning is under tension and may snap back against the vehicle.

2. Slowly allow the awning to roll back to the closed position by feeding the pull strap upwards and diagonally. This prevents the strap from building up and creating a bulge in the fabric.
3. The window awning is now ready for travel with no further locking required.

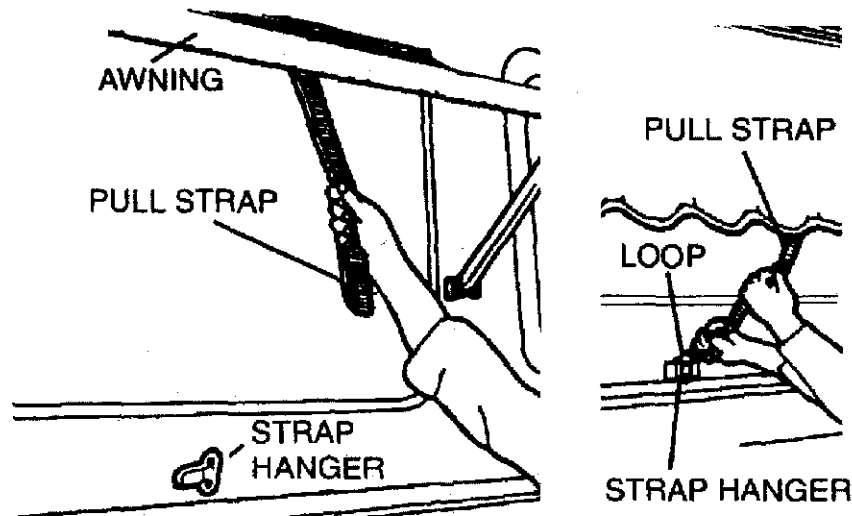

## Vents


A 12 volt vent may be installed in the kitchen. This vent is equipped with a rain sensor on the roof hood. Anytime the vent is open and it senses rain, it will automatically close. The vent is controlled by the wall thermostat. Once powered "ON" and the desired temperature is selected, the vent will run until the temperature is reached. When the temperature is reached, the vent will automatically shut off.

Do not leave the fan in active mode while the unit is in storage or unattended for long periods of time. High winds or other unusual conditions or obstructions may prevent the vent from closing resulting in leakage, which could cause serious damage.



The vent installed in the bathroom is also powered by 12 volt electricity. This vent is controlled by the ON/OFF switch located on the wall. A vent similar to the one installed in the kitchen is optional.

In the bath area a skylight may also be installed. If installed, this is located above the tub/shower.

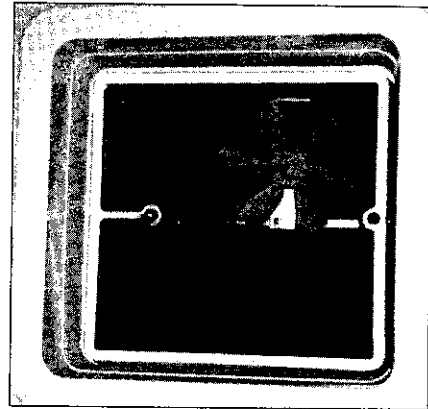

## Doors

The front entrance door is a radius door equipped with a dead bolt lock for added security and a power flush stepwell cover. When the door is opened fully, the door hinge will automatically hold the door open. To close the door from the open position, either the inside or outside handle must be released for the door to move. For your safety, a lighted, acrylic assist handle has been installed at the entrance door of the unit.

## Notes

---

---

---

---

---



# CHAPTER 14

## ROUTINE MAINTENANCE

### *Table of Contents*

Washing .....	14 - 1
Waxing .....	14 - 1
Seals .....	14 - 2
Proper Sealants .....	14 - 2
Striping & Decals .....	14 - 2
Simulator Care .....	14 - 3
Rubber Roof Care & Maintenance .....	14 - 3
Battery Inspection & Care .....	14 - 4
Interior Care .....	14 - 5
Carpet .....	14 - 5
Fabrics .....	14 - 6
Walls & Ceiling .....	14 - 6
Dash .....	14 - 6
Woodwork .....	14 - 7
Counter Tops .....	14 - 7
Accessories .....	14 - 7
Detectors .....	14 - 7
Condensation .....	14 - 7
Routine Maintenance .....	14 - 8
Winterizing .....	14 - 9

# EXTERIOR CARE

## IMPORTANT

Damage caused by improper or unapplied maintenance is not covered by your Newmar Limited Warranty.

## *Washing*

The exterior of your new recreational vehicle is made of pre-finished aluminum and fiberglass. Frequent washings and thorough cleanings are required to prevent damage to the vehicle finish after exposure due to damaging salts, calcium chloride, road tar, tree sap, insects and other foreign material. Damage caused by exposure to these items is not covered by your warranty agreement. Never wash the vehicle in direct sunlight, while the vehicle is hot or with hot water. Build up of mud and dirt under the body can cause damaging rust on steel parts. Corrosive materials, such as those used for ice and snow removal and dust control, also accumulate on the underside of the vehicle. These materials should be removed by flushing the underbelly regularly with water, especially areas where mud and other foreign materials collect. The chance of corrosion can be minimized by frequent washings of the vehicle. When washing the vehicle, make certain that the undercarriage and the wheel wells are cleaned, as well as the exterior of the coach. Do not use strong soaps or detergents for washing the vehicle. Always use a mild soap in warm water, a commercially prepared product for automotive finishes or your local car wash. Be careful when using a pressure-type washer to avoid loosening any exterior decals or sealants, etc. After washing, carefully inspect the caulking around window frames and vents and any other joints that may have separated. Recaulking, if necessary, is relatively simple, and is considered routine maintenance which is the responsibility of the owner.

## IMPORTANT

Never use a strong solvent, such as lacquer thinner or harsh abrasives, on any of the exterior painted surfaces.

## *Waxing*

The exterior finish will require a routine waxing. When water will not bead and roll off a freshly washed vehicle, a new coat of wax is needed. Wax not only improves the appearance of the vehicle, but it also protects the finish against oxidation and corrosive materials. The recommended type of wax is one that is compatible with painted or gel-coated fiberglass finishes, and contains a UV (ultra-violet) inhibitor. Buffing with a polishing compound will improve a dull or discolored finish.

## IMPORTANT

When using a polishing compound that does not contain a wax preservative, reapplying a coat of hard wax after polishing is recommended.

## Seals

The seals around doors, windows, vents, slide out trim and external seams should be checked at least twice a year. In addition, the roof seams should be inspected twice a year for cracking or peeling. If deterioration is noted during a routine maintenance inspection, reseal the seams or seals with an approved sealant to prevent leaks. Your dealer can perform the resealing inspections and work for you. It is recommended that a Newmar Authorized Service Center perform these inspections, and reseal when necessary.

## Proper Sealants for Application

Plas-T-Cote	.....	Metal or fiberglass roof
Surebond #SB-140	.....	Rubber laminated to metal roof and <u>ALL SKYLIGHTS</u>
Carlisle #502-LSW Self Leveling Sealant	.....	Rubber roof over wood base
Silicone Sealant	.....	To cover butyl and other sealants; not to be used as the main sealant
Parbond	.....	To seal across tops of windows, etc. on exterior where silicone is not used

## Striping & Decals

The striping and decals on your vehicle require little maintenance. Treat these as you would any painted surface on your vehicle. Wash them with mild soap and warm water, or any retail car soap. Never wash the vehicle in direct sunlight, while the vehicle is hot or with hot water. Rinse thoroughly to prevent soap residue accumulation. Use caution with high pressure wash nozzles. Keep them at least 18 inches from the edge of the decals. High pressure water may cause the decals to loosen and peel. Test small sections of decals when using any type of cleaning solution.

### IMPORTANT

Do not use solvents such as acetone, MEK, toluene, etc. on the decals. Any solvent including alcohol may soften or smear colors. Do not use lacquer thinner or paint on decals. Do not overcoat the decals with clear paint. Do not allow gasoline or other fuels to drip or stay on the decals for any length of time. If this occurs, immediately flush the area with water.

## *Simulator Care*

The care and maintenance of your stainless steel wheel product is simple and requires no special material or products. All products are constructed of highly polished 304L stainless steel. Timely care and cleaning will keep them looking great for many years. We suggest the following care:

1. Clean your wheel cover/liner on a regular basis to keep road dirt from building up.
  - A. Rinse with clean water to remove loose dust and dirt.
  - B. Clean with a mild soap and water solution. (Any non-abrasive household detergent works fine.) Apply with cloth, sponge, or soft bristled brush. Use solution liberally to avoid surface scratching due to trapped dirt on the applicator.

### IMPORTANT

Do not use harsh detergents, acids, or abrasives which may scratch or dull the surface. The applicator cloth, sponge, or soft bristled brush should be non-metallic and non-abrasive.

- C. Rinse thoroughly with clean water to remove excess soap and dirt.
  - D. Repeat above steps as required.
  - E. If stubborn stains persist, such as road tar, brake dust, oil, etc., use only a product compatible with stainless steel. An over-the-counter window cleaner (like Windex) will often remove foreign material. If a harsher cleaner is needed, we recommend "NEVR-DULL," available at many general hardware or automotive stores.
2. Surface rust: From time to time, surface "spin out" rust may appear on the stainless steel. Normally the "spin out" rust comes from the wheel, lug nuts, locator pins, etc. In many cases, regular normal cleaning of your decorative wheel product, as indicated above, will remove any surface rust. If, however, a stubborn rust spot remains, utilize "NEVR-DULL" (a wadding polish), applying constant pressure to remove any surface blemish. You may have to repeat this process on hard to remove spots. After cleaning with "NEVR-DULL," you may want to re-shine your wheel products using Windex or a similar product.
3. Petroleum based tire conditioners: While the use of these products (Armor-All, Son-of-a-Gun, etc.) may improve the appearance of your tires, these types of products will form a film on your stainless steel wheel cover product. To remove, use a mild cleanser, like Windex, to restore the shine.

### IMPORTANT

Remember to periodically check the tightness of your wheel cover product.

## *Rubber Roof Care & Maintenance*

Proper care and maintenance of your recreational vehicle, including your rubber roof, is important for trouble-free performance. Normal maintenance is simple and easy, and does not require special materials.

Keep the roof clean. Clean the roof at least four (4) times annually. For normal cleaning:

1. Use RC100 Dicor Synthetic Roof & General Purpose cleaner or a mild laundry detergent.  
**CAUTION:** Do not use general purpose cleaners or conditioners containing petroleum solvents, harsh abrasives or citric-based cleaners. You may cause irreparable damage to your roof.
2. Rinse the complete roof with clean water to remove any loose dirt or debris.
3. Using a medium bristle brush, along with your selected cleaner mixed with water, scrub the entire roof. Rinse thoroughly with clean water to avoid residue build up on the roof or sidewalls of the vehicle.
4. For more difficult stains, you may use cleaning materials mentioned above in a more concentrated mixture. For stubborn stains, use of a cloth dampened with household bleach. Household bleach can be used (fully concentrated) and allowed to soak in stubborn stain areas, then scrubbed with a medium bristle brush or rag. Rinse thoroughly.  
**DO NOT** pour the bleach on the roof and allow it to run down the sides of the vehicle. Concentrated bleach may damage the graphics.

**WARNING**

Use caution when working on top of your vehicle. The wet roof membrane may be extremely slippery.

## *Battery Inspection & Care*

**WARNING**

Remove rings, metal watch bands, and other metal jewelry before working around batteries. Use caution when using metal tools. If a tool contacts a battery terminal or metal connected to it, a short circuit could occur which could cause personal injury, explosion or fire.

**CAUTION**

Disconnect the 120 volt electrical power cord and the negative terminal from the coach batteries before working on the electrical system.

Remember that when batteries are not used for an extended period of time, they may lose their charge. Periodic charging of the batteries during storage of the unit will increase the life of the battery. Check the external condition of the battery periodically. Look for cracks in the cover and case. Check the vent plugs and replace them if they are cracked or broken. Keep the battery clean. Accumulations of acid film and dirt may permit current flow between the terminals, which could drain the battery.

To clean, wash the batteries with a diluted solution of baking soda and water to neutralize any acid present. Rinse thoroughly with clean water. Foaming around the terminals or on top of the battery is a sign that acid is being neutralized. Avoid getting the baking soda solution in the battery. Secure all vent caps. Dry the battery cables and terminals to prevent

corrosion. Do not use grease on the bare metal inside the cable terminals. Grease can act as an insulator, and electricity will not flow through it. A plastic ignition spray will protect the terminals after they have been cleaned.

#### WARNING

Do not allow the battery fluid to contact your skin, eyes, fabric, or painted surfaces. The fluid could cause serious personal injury or property damage. Wear eye protection when working with any battery.

The batteries should be removed and stored in a warm place when not using your motorhome for an extended period of time. Mark the cables, positive and negative, for easy identification. Batteries are not to be stored on concrete floors. The batteries require periodic charging during storage. If the motorhome is to be stored for a long period of time, it is recommended that all of the batteries inside the unit be removed from clocks, radios, smoke alarms, etc. This will prevent unnecessary drain and corrosion of the batteries. The coach batteries are 6 volt RV/Marine deep cycle batteries. This type of battery consumes water and must be filled periodically. **Please be sure to check the battery water level on a regular basis.** Consult the owner's manual supplied by the battery manufacturer.

## INTERIOR CARE

#### WARNING

Urea-formaldehyde is used in the productions of particle board, hardwood plywood, and most paneling. Urea-formaldehyde resin may release formaldehyde vapors into the air, which may cause headaches, and in some people, eye, nose and throat irritation. Formaldehyde may intensify some allergies or upper respiratory problems like asthma. Proper ventilation should reduce the risk of such problems.

#### IMPORTANT

The fading of upholstery, carpet and other interior fabrics is generally caused by excessive sunlight. The drapes, blinds or shades should be kept closed when the vehicle is parked for an extended period of time to minimize the fading. Normal deterioration of appearance items due to wear and/or exposure is not covered by the Newmar Limited Warranty.

### *Carpet*

A weekly routine of vacuuming the carpet and fabrics throughout the vehicle is recommended. Doing this will prevent an accumulation of dirt that can detract from the materials appearance and shorten its life. Remember to empty or replace vacuum bags before they become half full. In carpet areas that receive the most sunlight, close the curtains frequently to prevent fading. And act quickly when anything is spilled or dropped on the carpet.

Included in the Owner's Information Package is the carpet manufacturer's Carpet Care Guide. The Carpet Care Guide lists detailed information on cleaning soiled areas and removing stains from the carpet installed in the unit.

## *Fabrics*

The fabrics used in this motorhome for the bedspread, draperies, headboard and valances contain fire-retardant additives that may be damaged by use of improper cleaning products. Cleaning instructions for these items are DRY CLEAN ONLY. **Water-based products are not recommended for cleaning the fabrics in your new unit.** Most water-based household cleaning products are not formulated for use on these fabrics and may cause excessive shrinkage or fading. For best results, the fabrics in this unit should be cleaned by a professional carpet and upholstery cleaner.

Spills, spots or stains should be treated as soon as possible to avoid permanent damage. If a spill occurs, blot the fluid with a dry towel. Do not rub the spill. Rubbing may cause the liquid to "set" in the fabric. When attempting to clean a spot or stain, always start from the outside and work inward to avoid spreading it further. Some stains or soils are extremely difficult or impossible to be removed completely. These should receive immediate, professional attention. Spills, spots, stains or soils are the responsibility of the owner, and are not covered by the Newmar Limited Warranty.

### WARNING

When cleaning the upholstery and fabric in the unit, do not use lacquer thinner, nail polish remover, laundry soaps or bleach. Never use carbon tetrachloride or gasoline for cleaning purposes. These items may cause damage to the materials being cleaned, and most are highly flammable.

## *Walls & Ceiling*

The wall and ceiling coverings should be cleaned periodically to maintain a new appearance. Use a non-abrasive cleaner with a soft cloth on the walls. Do not use solvents of any kind. Solvents may damage the surface.

## *Dash*

In order to keep the dash in like-new condition, follow these guidelines:

### DO—

- Dust and clean the dash with a soft, damp cloth, or chamois, wiping the surface gently.
- Use a mild detergent and lukewarm water.
- Dry the surface, after washing and rinsing, by blotting with a damp cloth or chamois.

### DO NOT—

- Use harsh chemicals that may damage the dash.
- Use cloths containing grit or abrasive particles or kitchen scouring compounds to clean or dust the dash.
- Subject the dash to hard, direct blows.
- Use boiling water, strong solvents or other materials listed below to clean the dash, as they will soften the plastic.

## *Woodwork*

The wood cabinetry should be cared for with furniture polish to sustain the natural beauty and luster of the wood. This will also keep your cabinetry looking new, and prevent the wood from drying. The simulated plank flooring should be protected from dents, scratches and nicks by installing protective pads on the bottom of chairs and tables. Use of area rugs and floor mats by the entrance door is recommended to trap dirt. To clean the flooring, begin by vacuuming the floor to remove loose dust and dirt. Then, damp mop the floor with one ounce of Wilsonart Flooring Cleaner diluted in one gallon of clean, warm water (or use a non-abrasive, soap-free cleaner). The mop should be damp, not dripping. Do not use soap-based cleaners, scouring powders, steel wool, abrasive cleaners, wax or polish on the floor. To remove stubborn spots like shoe polish, oil, tar, markers, scuffs, etc., use a household solvent, acetone or nail polish remover, then wipe with a damp cloth. To remove chocolate, grease, juice or wine, use warm water and a non-abrasive cleaner. To remove candle wax or chewing gum, carefully scrape off when the material has hardened. For further tips, please see the manufacturer's information sheet in your Owner's Information Packet.

## *Counter Tops*

To properly care for the countertop in your new unit, always use a heat pad or trivet to protect the surface from hot objects that may mar or damage the surface. Also avoid cutting directly on the surface and avoid using harsh chemicals on the counter top. Wipe the counter top with a damp cloth to remove water spots. For most dirt and stains, wipe with a damp cloth and use soapy water or ammonia-based cleaners.

## *Accessories*

The brass light fixtures, bath accessories and faucets can be cleaned by wiping with a soft, damp cloth. Washing with warm water will remove dry water spots. Do not use cleaners that contain harsh or abrasive chemicals. Alcohol or similar solvents should never be used.

## *Detectors*

The CO and LP detectors (if equipped) are self-contained and DO NOT require any maintenance other than normal cleaning and dusting. The smoke detector installed in this coach is 9 volt battery operated. The battery needs to be tested periodically and replaced when necessary. When cleaning the case on any of the detectors, use a damp cloth or paper towel. Do not spray cleaners or wax directly into the case as it may cause false alarms.

## *Condensation*

### IMPORTANT

Since surface condensation within the coach cannot be controlled by the manufacturer, damage caused by condensation is not covered by your Newmar Limited Warranty.



Damage may occur to your unit if excessive condensation exists. Accumulation of condensation on surfaces within your unit occurs when warm, moist air contacts a cool surface. It is most evident on the inside of windows. This problem can be controlled by:

1. Slightly opening a window or roof vent to allow the moisture to escape from the unit.
  2. A small dehumidifier is also very effective in removing moisture from the air.
- Condensation levels are highest during times when a person is cooking or taking a shower in the unit, but these are not the only times condensation is present.
  - Condensation can migrate through ceiling panels and saturate the fiberglass insulation in your ceiling cavity. This condition often causes the occupants to believe the recreational vehicle has a roof leak. Walls and ceiling panels may also become wet when the moisture accumulates on these surfaces.
  - Newmar Corporation does not recommend the use of any catalytic heaters.

## ROUTINE MAINTENANCE

### IMPORTANT

Always follow the chassis maintenance guidelines found in the chassis manufacturer owner's manual.

All routine maintenance is the responsibility of the owner and is not covered by the Newmar Limited Warranty. Use the maintenance record found in Chapter 15 to record all performed maintenance as required. Please note that damage caused by improper or unapplied maintenance is not covered by the Newmar Limited Warranty.

Items supplied by other manufacturers may require specific individual maintenance not listed herein. Please refer to the manufacturers' suggested maintenance guidelines in the Owner's Information Packet.

### IMPORTANT

Cosmetic adjustments and alignments must be performed within the first three (3) months from date of original purchase for warranty consideration. Thereafter, these items are considered routine maintenance.

### *Monthly*

- Check battery water level.

### *Every Three (3) Months*

- Clean range hood exhaust fan filter and blades.
- Check gas lines for leaks with soap solution or leak detector.
- Test smoke alarm, carbon monoxide detector and LP gas detector.

- Check operation of windows, latches and hinges.
- Clean the roof ducted air conditioner filter(s).
- Clean and inspect all door and window seals; reseal where necessary.
- Inspect and reseal around the tub and shower area where necessary.
- Lubricate the exterior door hinges and latches with a graphite (silicone) lubricant.
- Check, clean and tighten battery cables, and inspect batteries for proper fluid level.

## *Every Six (6) Months*

- Inspect the slide out for proper seal. If realignment is necessary, please contact an Authorized Newmar Service Center.
- Inspect the exterior rubber slide out seals and apply a UV inhibitor, such as 303 Protectant.
- Rotate tires as recommended by the tire manufacturer.
- Check all gas appliances for proper operation.
- Have the LP system inspected by a qualified technician.
- Lubricate the moveable parts on the entrance step.


## *Annually*

- Inspection of roof seams and joints should be performed by an Authorized Newmar Service Center. If resealing is necessary, it is the owner's responsibility and is not covered by the Newmar Limited Warranty.
- Sanitize the fresh water system.
- Wax and buff all gel-coat surfaces on the vehicle as described previously in this chapter.

## *Winterizing*

To store your unit for the winter months, it is necessary to winterize the water system to help prevent freezing. To do this, follow these instructions:

1. The water heater must remain off during this process. Shut off the water pump and make sure the water supply valves are closed.
2. To drain the fresh water tank, open the drain valves.
3. Open the low point drain valves. There is one drain valve for each water line, one cold and one hot. This is done to drain all of the water out of the system.
4. After the water heater has cooled off, remove the drain plug to drain the water from the water heater. In the exterior compartment beside the water heater there are two water heater shut off valves and a by-pass valve. The shut off valves must be closed and the by-pass valve must be open, prior to winterizing to prevent the antifreeze solution from entering the water heater.

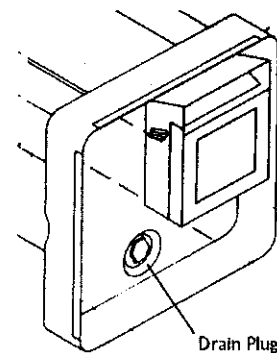

5. Close the low point drains to prevent the antifreeze from draining through the lines onto the ground.
6. Remove the water filter. See Chapter 11 for more information.
7. Close the water supply valve that flows from the pump to the tank.
8. Use only non-toxic antifreeze that has been approved for use in drinking/potable water systems. Place the in-take hose into the antifreeze supply. Open the antifreeze valve to allow the solution to flow freely. Once the water pump is turned on, proceed to the kitchen faucet, bath faucet, inside and outside shower, turning on the hot and cold, and flushing the stool until the antifreeze solution flows freely. If the unit is equipped with a washer, be certain to purge the air from it also. This forces the antifreeze through all of the water lines and faucets. It also allows the antifreeze solution to enter the drain lines and prevent the P-traps from freezing. Check the antifreeze solution from time to time to make sure there is an adequate supply.
9. Close the antifreeze valve when the winterizing process is complete. Store the in-take hose, and turn the water pump off.
10. Open the water supply valve that flows from the pump to the tank to help prevent freezing on that water line.
11. To de-winterize your unit, open both of the low point drains to allow the antifreeze solution to drain from the water system. Next, close the low point drains and connect your unit to city water. Put water in the fresh water tank and pump at least one gallon through the water pump in order to remove the antifreeze from the water pump. Keep the water heater supply valve closed and the water heater bypass valves open. The supply valve for the fresh water tank from the pump must remain closed. As in winterizing, open the kitchen faucet, bath faucet, inside and outside shower, turning on both the hot and the cold, and flushing the stool until the antifreeze solution is flushed out of the system and the water flows clear. Once the system has been flushed, open the water heater supply valve and close the water heater bypass valve. Open the fresh water tank supply valve from the pump and the ice maker valve. Reinstall the water filter. Be sure to close the fresh water tank drain valves to allow the tank to fill.

**NOTE:** Remember, if your unit has the exterior shower installed you must winterize this system as well.

## *Cold Weather Use*

Although great care has been taken to build a well-insulated unit, recreational vehicles are not intended for extended use in subfreezing weather without special precautions.

When the temperature drops below freezing, the furnace must be turned on to keep the unit warm. Continued use in cold weather will require the unit to be winterized.

# CHAPTER 15

## CHARTS & DIAGRAMS

### *Table of Contents*

Model Numbers . . . . .	15 - 1
Maintenance Record . . . . .	15 - 2
Fuel & Mileage Log . . . . .	15 - 5
Interior Fuse Panel . . . . .	15 - 7
12 Volt Distribution Panel . . . . .	15 - 8
Wiring Color Scheme . . . . .	15 - 9
Typical Coach Wiring Diagram . . . . .	15 - 12
Typical 120 VAC Installation	
w/Inverter . . . . .	15 - 13
w/400 Watt Inverter . . . . .	15 - 14
without Inverter . . . . .	15 - 15
Video Cable w/Surround Sound . . . . .	15 - 16
Water Works Supply Control Panel . . . . .	15 - 17
Typical Fresh Water Diagram . . . . .	15 - 18
Typical Drain Line Diagram . . . . .	15 - 19
Typical LP Gas Diagram . . . . .	15 - 20
Slide Out Mechanism . . . . .	15 - 21
Freightliner Front Fuse Panel . . . . .	15 - 22
Freightliner Rear Fuse Panel . . . . .	15 - 23
Spartan Front Fuse Panel w/VIP . . . . .	15 - 24
Spartan Rear Fuse Panel . . . . .	15 - 25
Rear Electrical Center . . . . .	15 - 26
Newmar Dash Fuse Panel . . . . .	15 - 27
Customer Information Update Form . . . . .	15 - 29

## Important Information About Your Dutch Star Diesel Pusher Motorhome

Coach :      Year – 2004      Model - \_\_\_\_\_      Serial # 6 \_\_\_\_\_

APPLIANCE	BRAND	MODEL NUMBER	SERIAL NUMBER
Refrigerator			
Water Heater			
Range			
Microwave			
Furnace, front			
Furnace, rear			
Aux. Heater			
Air Conditioner, front			
Air Conditioner, rear			
Air Conditioner, dash			
Range			
Microwave			
Washer			
Dryer			
Converter			
Inverter			
Television, front			
Television, rear			
Television, exterior			
VCR, front			
VCR, rear			
DVD			
Radio, front			
Radio, rear			
Radio, exterior			
CD Player			
Surround Sound			
DVD / Stereo			
Ice Maker			
Freezer			
Satellite			
Navigation			
Rear View Monitor			
Rear View Camera			
CB Radio			
Generator			

# MAINTENANCE RECORD

DATE	MILES	DESCRIPTION OF SERVICE WORK PERFORMED	SERVICE PERFORMED BY	COST	

# MAINTENANCE RECORD

DATE	MILES	DESCRIPTION OF SERVICE WORK PERFORMED	SERVICE PERFORMED BY	COST	



# MAINTENANCE RECORD

DATE	MILES	DESCRIPTION OF SERVICE WORK PERFORMED	SERVICE PERFORMED BY	COST	



# FUEL, OIL & MPG RECORD


DATE	ODOMETER MILEAGE	FUEL GALS.	OIL QTS.	AVE. MPG	COST	

DATE	ODOMETER MILEAGE	FUEL GALS.	OIL QTS.	AVE. MPG	COST	


# FUEL, OIL & MPG RECORD

DATE	ODOMETER MILEAGE	FUEL GALS.	OIL QTS.	AVE. MPG	COST	


DATE	ODOMETER MILEAGE	FUEL GALS.	OIL QTS.	AVE. MPG	COST	

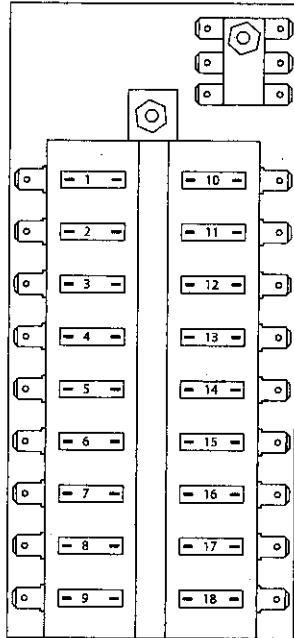

FUSE #	RATING (AMPS)	DESCRIPTION
1	20	TV/STEREO
2	20	KITCHEN LIGHTS
3	20	BEDROOM LIGHTS
4	20	SECURITY LIGHTS
5	20	WRAP LIGHTS
6	20	SLIDE-OUT LIGHTS
7	1	C.O. / LP DETECTORS
8	5	REFRIGERATOR
9	7.5	AWNING
10	20	FURNACE
11	20	LIVING ROOM/ENTRY LIGHTS
12	20	BATHROOM LIGHTS/FAN
13	10	MONITOR PANEL/ WATER PUMP
14	20	SLIDE-OUT MOTORS
15	7.5	FANTASTIC VENT/ WATER HEATER
16	7.5	AIR CONDITIONER CONTROLS
17	20	SATELLITE
18	7.5	CEILING FAN

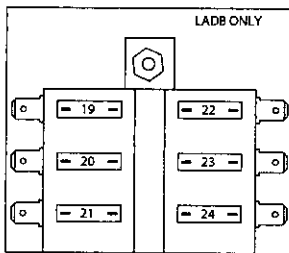


FUSE #	RATING (AMPS)	DESCRIPTION
19	20	LIVING ROOM LTS
20	20	KITCHEN LTS
21		
22	20	SOFA
23	20	SLIDE-OUT LTS
24	7.5	ENERGY MANAGEMENT

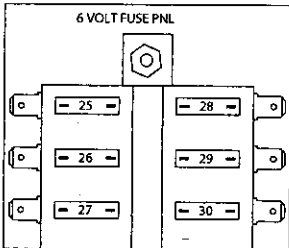

FUSE #	RATING (AMPS)	DESCRIPTION
25	20	LIVING ROOM LTS
26	20	KITCHEN LTS
27	20	BEDROOM LTS
28	20	LIVING ROOM LTS
29	20	KITCHEN LTS
30	20	BEDROOM LTS

# INTERIOR FUSE PANEL

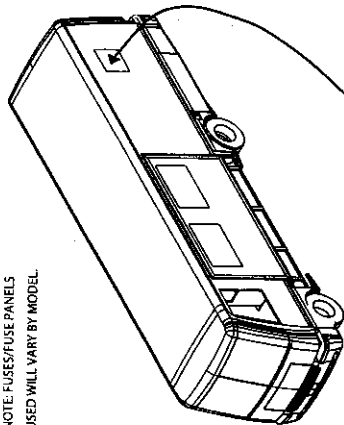

NOTE: FUSES/FUSE PANELS USED WILL VARY BY MODEL

LOCATED IN BEDROOM

FUSE #	RATING (AMPS)	DESCRIPTION
1	20	TV/STEREO
2	20	KITCHEN LIGHTS
3	20	BEDROOM LIGHTS
4	20	SECURITY LIGHTS
5	20	WRAP LIGHTS
6	20	SLIDE-OUT LIGHTS
7	1	C.O. / LP DETECTORS
8	5	REFRIGERATOR
9	7.5	AWNING
10	20	FURNACE
11	20	LIVING ROOM/ENTRY LIGHTS
12	20	BATHROOM LIGHTS/FAN
13	10	MONITOR PANEL/ WATER PUMP
14	20	SLIDE-OUT MOTORS
15	7.5	FANTASTIC VENT/ WATER HEATER
16	7.5	AIR CONDITIONER CONTROLS
17	20	SATELLITE
18	7.5	CEILING FAN
19	20	LIVING ROOM LTS
20	20	KITCHEN LTS
21		
22	20	SOFA
23	20	SLIDE-OUT LTS
24	7.5	ENERGY MANAGEMENT
25	20	LIVING ROOM LTS
26	20	KITCHEN LTS
27	20	BEDROOM LTS
28	20	LIVING ROOM LTS
29	20	KITCHEN LTS
30	20	BEDROOM LTS

LADB ONLY

19	20	LIVING ROOM LTS
20	20	KITCHEN LTS
21		
22	20	SOFA
23	20	SLIDE-OUT LTS
24	7.5	ENERGY MANAGEMENT


6 VOLT FUSE PNL (LADB, KADP, EXDP ONLY)

25	20	LIVING ROOM LTS
26	20	KITCHEN LTS
27	20	BEDROOM LTS
28	20	LIVING ROOM LTS
29	20	KITCHEN LTS
30	20	BEDROOM LTS

# 12 VOLT DISTRIBUTION PANEL

**HOT FEED LINES FROM BATTERIES  
AND CONVERTER, WITH  
OVERCURRENT PROTECTION**

**GROUND TO CHASSIS,  
CONVERTER AND BATTERIES  
MINIMUM SIZE #8**

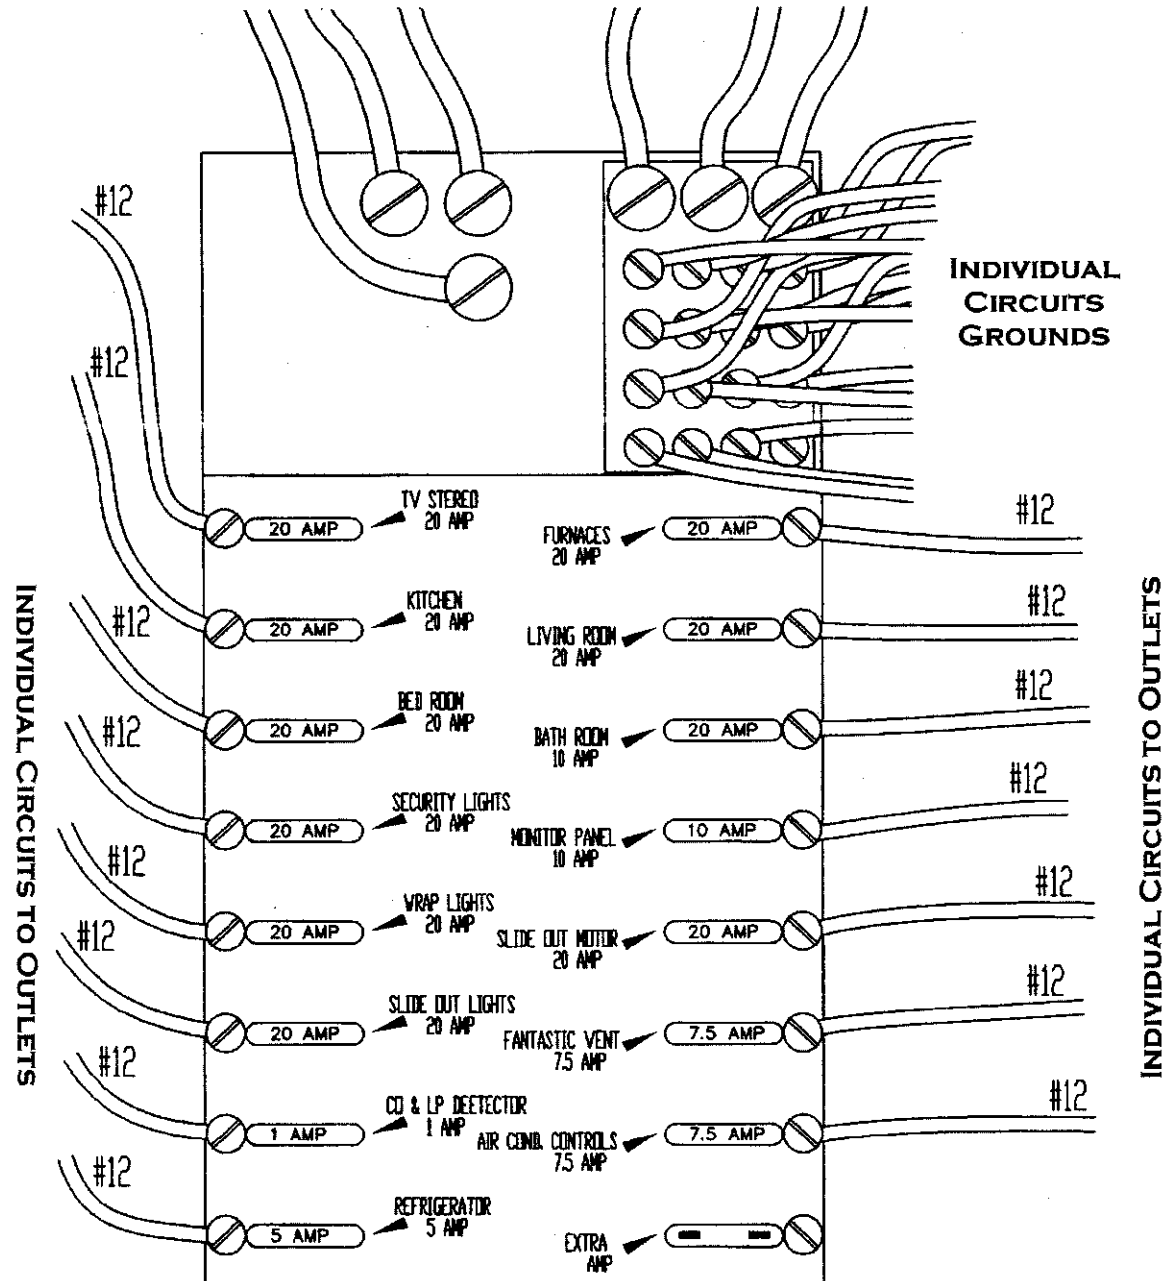

**WIRE OVER CURRENT PROTECTION IS PER THIS CHART**

WIRE SIZE	AMPACITY	WIRE SIZE	AMPACITY
# 6	55	# 8	40
# 10	30	# 12	20
# 14	15	# 16	8
# 18	6		

# WIRING COLOR SCHEME

## 16 GAUGE

Grounds .....	White
Back-up Lights .....	Yellow
Ignition to Power Step .....	Pink
Clearance & Running Lights .....	Green
Right Turn Lights .....	Brown
Left Turn Lights .....	Red
Ignition to Slide Out Motor .....	Pink w/Green
Class A Blower Fan (in holding tank area) .....	Orange
Slide Out Switch .....	Purple
Courtesy Lights (hot to switch) .....	Grey
Courtesy Lights (switched) .....	Grey w/White
Detectors, CO & LP .....	Red w/Black
Rear Center Brake Light .....	Blue
LP Fuel Gauge .....	Red w/Yellow
Air Conditioner Controls .....	Pink w/Black
Monoplex Water Pump Switch .....	Yellow w/Black
Vent Thermostats .....	Black
	Red w/White*
Water Heater DSI Switch Harness	Green w/White*
	Blue w/White*
	Red w/White*
Onan Generator	Green w/White*
	Blue w/White*
	Brown*
	Blue*
Powertech Generator	Gray*
	Yellow*
	White*

\* - multiple applications for this color

# WIRING COLOR SCHEME (CONT.)

## 12 GAUGE

Grounds	White
Living Room & Entryway Lights (hot to switch)	Red
Living Room & Entryway Lights (switched)	Red w/White
Bedroom Lights (hot to switch)	Orange
Bedroom Lights (switched)	Orange w/White
Bathroom Lights (hot to switch)	Brown
Bathroom Lights (switched)	Brown w/White
Kitchen Lights (hot to switch)	Green
Kitchen Lights (switched)	Green w/White
Wrap & Storage Compartment Lights	Black
TV and Stereo	Pink
Furnaces	Green w/Black
3 Way Switches (commons)	Red w/Black
Electric Brakes (tandem axle)	Blue
Fantastic Vent and Water Heater	Brown w/Black
Monitor Panel	Yellow
Refrigerator Controls	Red w/ Yellow
Security Lights (hot to switch)	Purple
Security Lights (switched)	Purple w/White
Slide Out Module (hot feed)	Green/Yellow
Slide Out Motor & Voice Module	Black w/Yellow & Red w/Yellow
Slide out Lights	Grey
Water Pump	Yellow w/Black
Power Step Switch	Black w/White

# WIRING COLOR SCHEME (CONT.)

## 10 GAUGE

Grounds .....	White
Living Room Entry Lights (hot feed) .....	Red
Bedroom Lights (hot feed) .....	Orange
Kitchen Lights (hot feed) .....	Green
Bathroom Lights (hot feed) .....	Brown
Power Rear Awning & Freezer .....	Purple w/Yellow
Power Step (hot feed) .....	Green w/Black
Power Jacks .....	Yellow
Electric Brakes (tri-axle) .....	Blue
100 Watt Inverter .....	Red w/White

## 8 GAUGE

Grounds .....	White
Battery .....	Red
Converter .....	Black
Solar Prep .....	Green
400 Watt Inverter (Class A) .....	Red 6 GA Wire White 6 GA Wire

## 16 GAUGE


### MONITOR PANEL TANK HARNESS

Fresh Water Tank	White* Grey w/Black (replaces Red tank lead) * Black w/Yellow (replaces Blue tank lead) *
Grey Water Tank	White* Green w/White (replaces Red tank lead) * Blue w/Black (replaces Blue tank lead) *
Black Water Tank	White* Red w/White (replaces Red tank lead) * Blue w/White (replaces Blue tank lead) *

\* - multiple applications for this color

# TYPICAL 120V WIRING DIAGRAM




## ELECTRICAL SYMBOLS

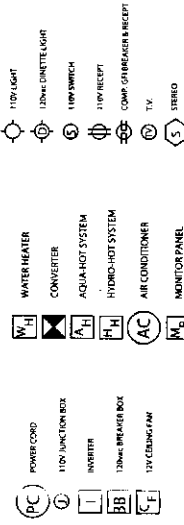

**NOTES:**  
 30A CIRCUITS WIRED W/10-2 ROMEX TYPE NM-B.  
 20A CIRCUITS WIRED W/12-2 ROMEX TYPE NM-B.  
 15A CIRCUITS WIRED W/14-2 ROMEX TYPE NM-B.  
 ALL PRE-WIRE FOR AIR USE 20 AMP FUSE AT BREAKER BOX.  
 DISTRIBUTION PANEL EXPOSED TO AISLE SPACE.


SOME CIRCUITS MAY NOT APPLY TO  
 CERTAIN BRAND AND TYPE UNITS.

CIRCUIT	FUSE BREAKER	LOAD
1	20 Amp HACR	A/C conditioner
2	15 Amp HACR	Water heater
3	15 Amp HACR	Microwave
4	20 Amp HACR	Water heater
5	20 Amp HACR	Lights/general recepts
6	20 Amp HACR	Refr./kitchen recepts
7	20 Amp HACR	Refr./kitchen recepts
8	20 Amp HACR	Refr./kitchen recepts
9	15 Amp HACR	Computer
10	20 Amp HACR	Washer
11	15 Amp HACR	Washer
12	15 Amp HACR	Block heater
13	15 Amp HACR	Heat pump
14	20 Amp HACR	Kitchen recept
15	15 Amp HACR	Breaker
16	15 Amp HACR	Wash/dry combo
17	15 Amp HACR	Refr.
18	15 Amp HACR	Refr.
19	15 Amp HACR	Refr.
20	15 Amp HACR	Refr.
21	15 Amp HACR	Refr.
22	15 Amp HACR	Refr.
23	15 Amp HACR	Refr.
24	15 Amp HACR	Refr.
25	15 Amp HACR	Refr.
26	15 Amp HACR	Refr.
27	15 Amp HACR	Refr.
28	15 Amp HACR	Refr.
29	15 Amp HACR	Refr.
30	15 Amp HACR	Refr.
31	15 Amp HACR	Refr.
32	15 Amp HACR	Refr.
33	15 Amp HACR	Refr.
34	15 Amp HACR	Refr.
35	15 Amp HACR	Refr.
36	15 Amp HACR	Refr.
37	15 Amp HACR	Refr.
38	15 Amp HACR	Refr.
39	15 Amp HACR	Refr.
40	15 Amp HACR	Refr.
41	15 Amp HACR	Refr.
42	15 Amp HACR	Refr.
43	15 Amp HACR	Refr.
44	15 Amp HACR	Refr.
45	15 Amp HACR	Refr.
46	15 Amp HACR	Refr.
47	15 Amp HACR	Refr.
48	15 Amp HACR	Refr.
49	15 Amp HACR	Refr.
50	15 Amp HACR	Refr.
51	15 Amp HACR	Refr.
52	15 Amp HACR	Refr.
53	15 Amp HACR	Refr.
54	15 Amp HACR	Refr.
55	15 Amp HACR	Refr.
56	15 Amp HACR	Refr.
57	15 Amp HACR	Refr.
58	15 Amp HACR	Refr.
59	15 Amp HACR	Refr.
60	15 Amp HACR	Refr.
61	15 Amp HACR	Refr.
62	15 Amp HACR	Refr.
63	15 Amp HACR	Refr.
64	15 Amp HACR	Refr.
65	15 Amp HACR	Refr.
66	15 Amp HACR	Refr.
67	15 Amp HACR	Refr.
68	15 Amp HACR	Refr.
69	15 Amp HACR	Refr.
70	15 Amp HACR	Refr.
71	15 Amp HACR	Refr.
72	15 Amp HACR	Refr.
73	15 Amp HACR	Refr.
74	15 Amp HACR	Refr.
75	15 Amp HACR	Refr.
76	15 Amp HACR	Refr.
77	15 Amp HACR	Refr.
78	15 Amp HACR	Refr.
79	15 Amp HACR	Refr.
80	15 Amp HACR	Refr.
81	15 Amp HACR	Refr.
82	15 Amp HACR	Refr.
83	15 Amp HACR	Refr.
84	15 Amp HACR	Refr.
85	15 Amp HACR	Refr.
86	15 Amp HACR	Refr.
87	15 Amp HACR	Refr.
88	15 Amp HACR	Refr.
89	15 Amp HACR	Refr.
90	15 Amp HACR	Refr.
91	15 Amp HACR	Refr.
92	15 Amp HACR	Refr.
93	15 Amp HACR	Refr.
94	15 Amp HACR	Refr.
95	15 Amp HACR	Refr.
96	15 Amp HACR	Refr.
97	15 Amp HACR	Refr.
98	15 Amp HACR	Refr.
99	15 Amp HACR	Refr.
100	15 Amp HACR	Refr.

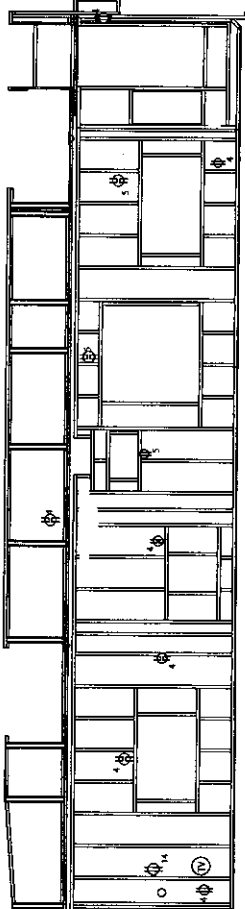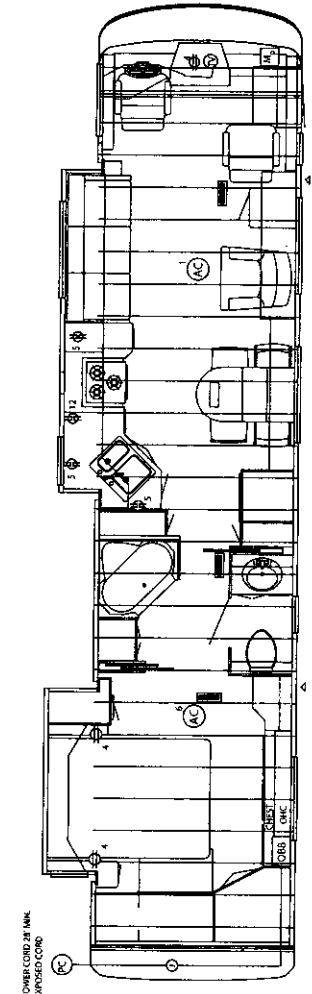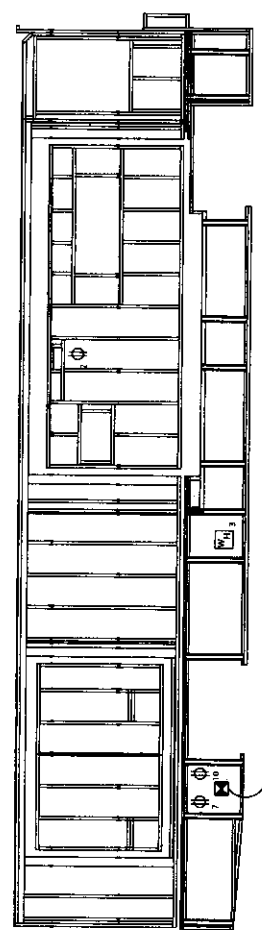





# TYPICAL 120 VAC INSTALLATION WITH INVERTER

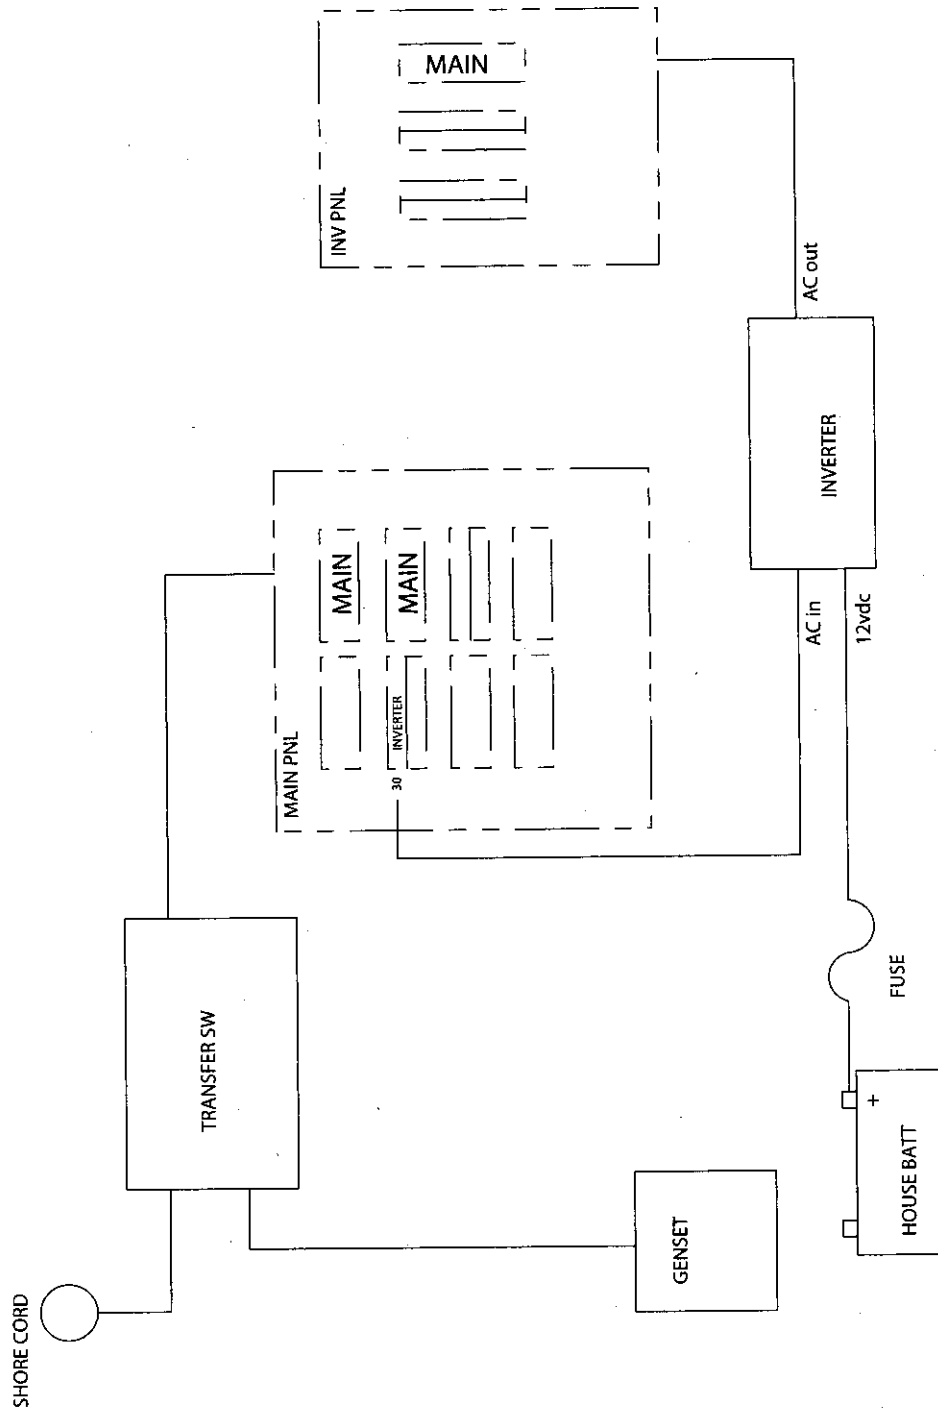


# TYPICAL 120 VAC INSTALLATION WITH 400W INVERTER

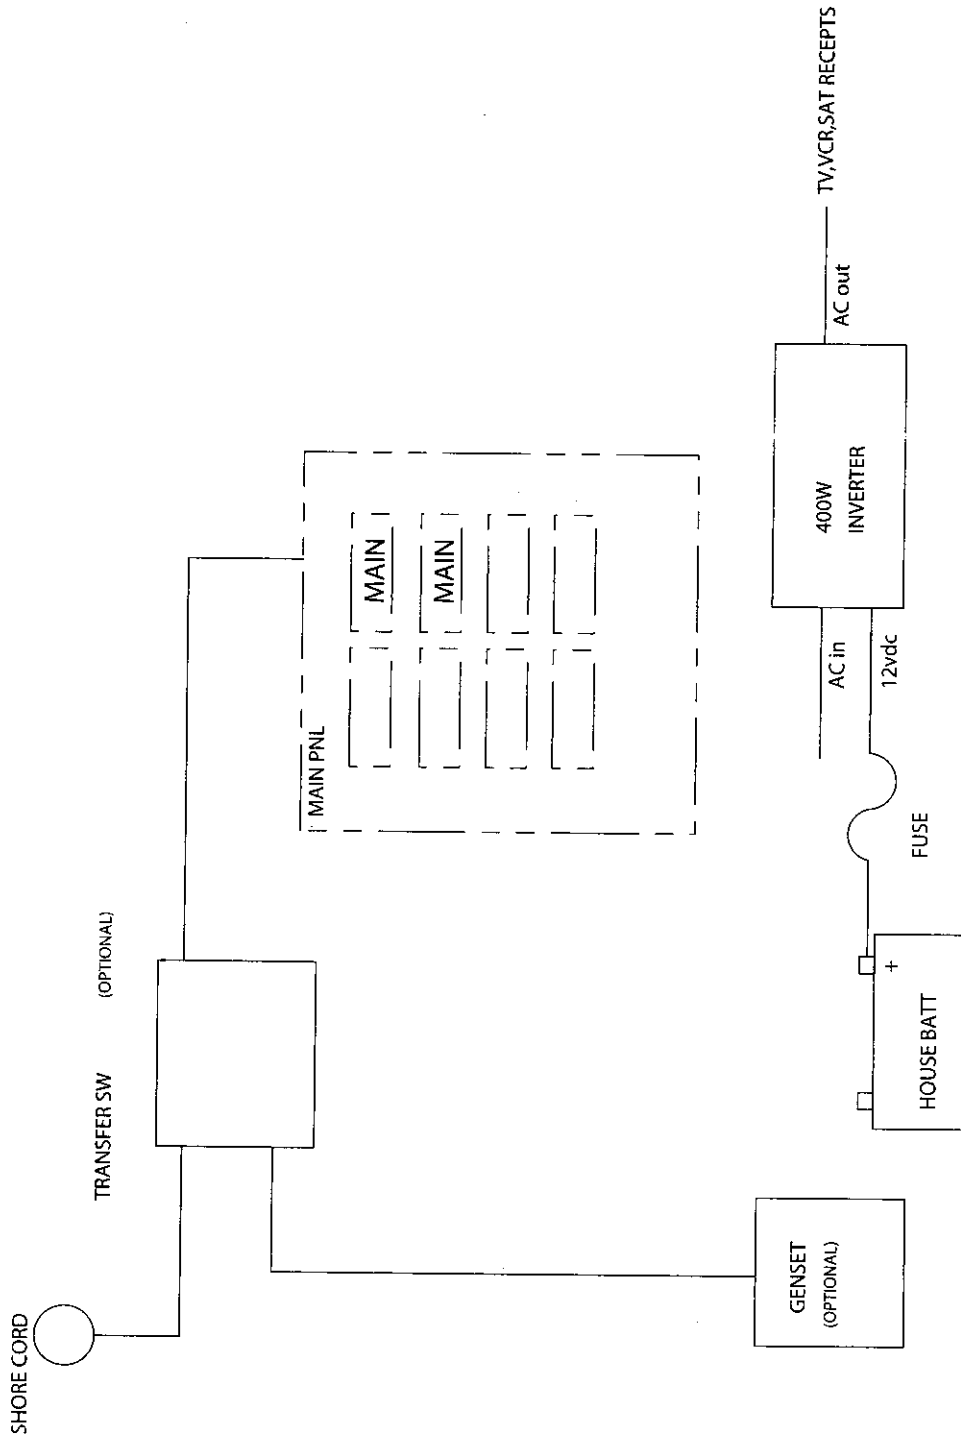


# TYPICAL 120 VAC INSTALLATION WITHOUT INVERTER

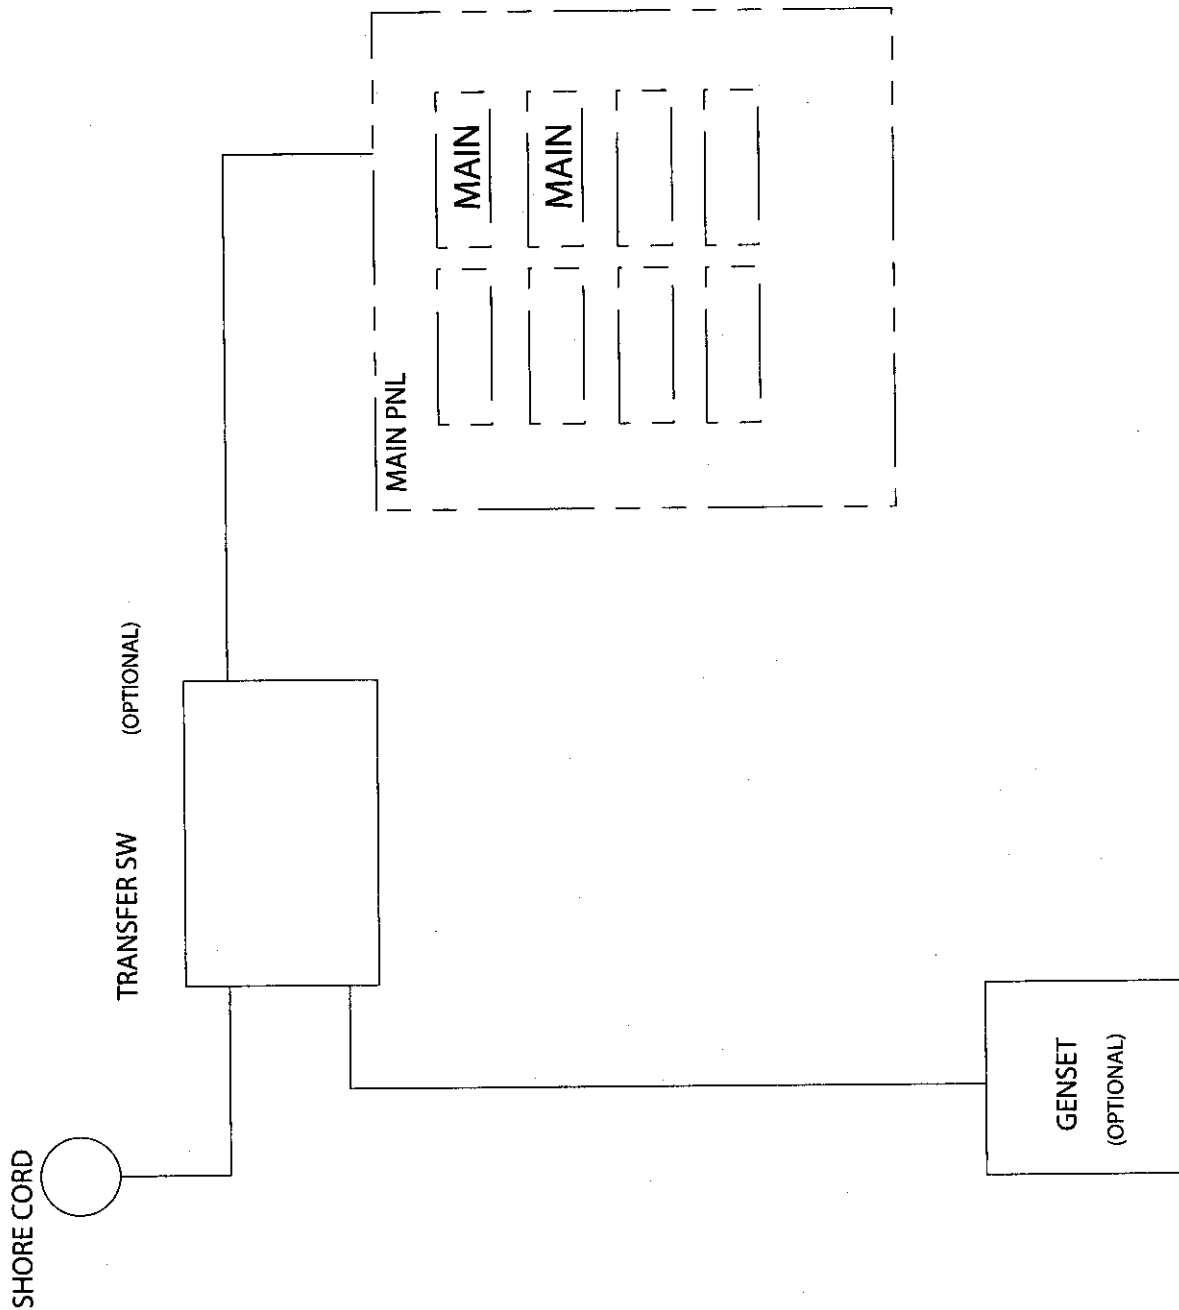


# VIDEO SWITCH BOX WITH XA-300 / XM RADIO

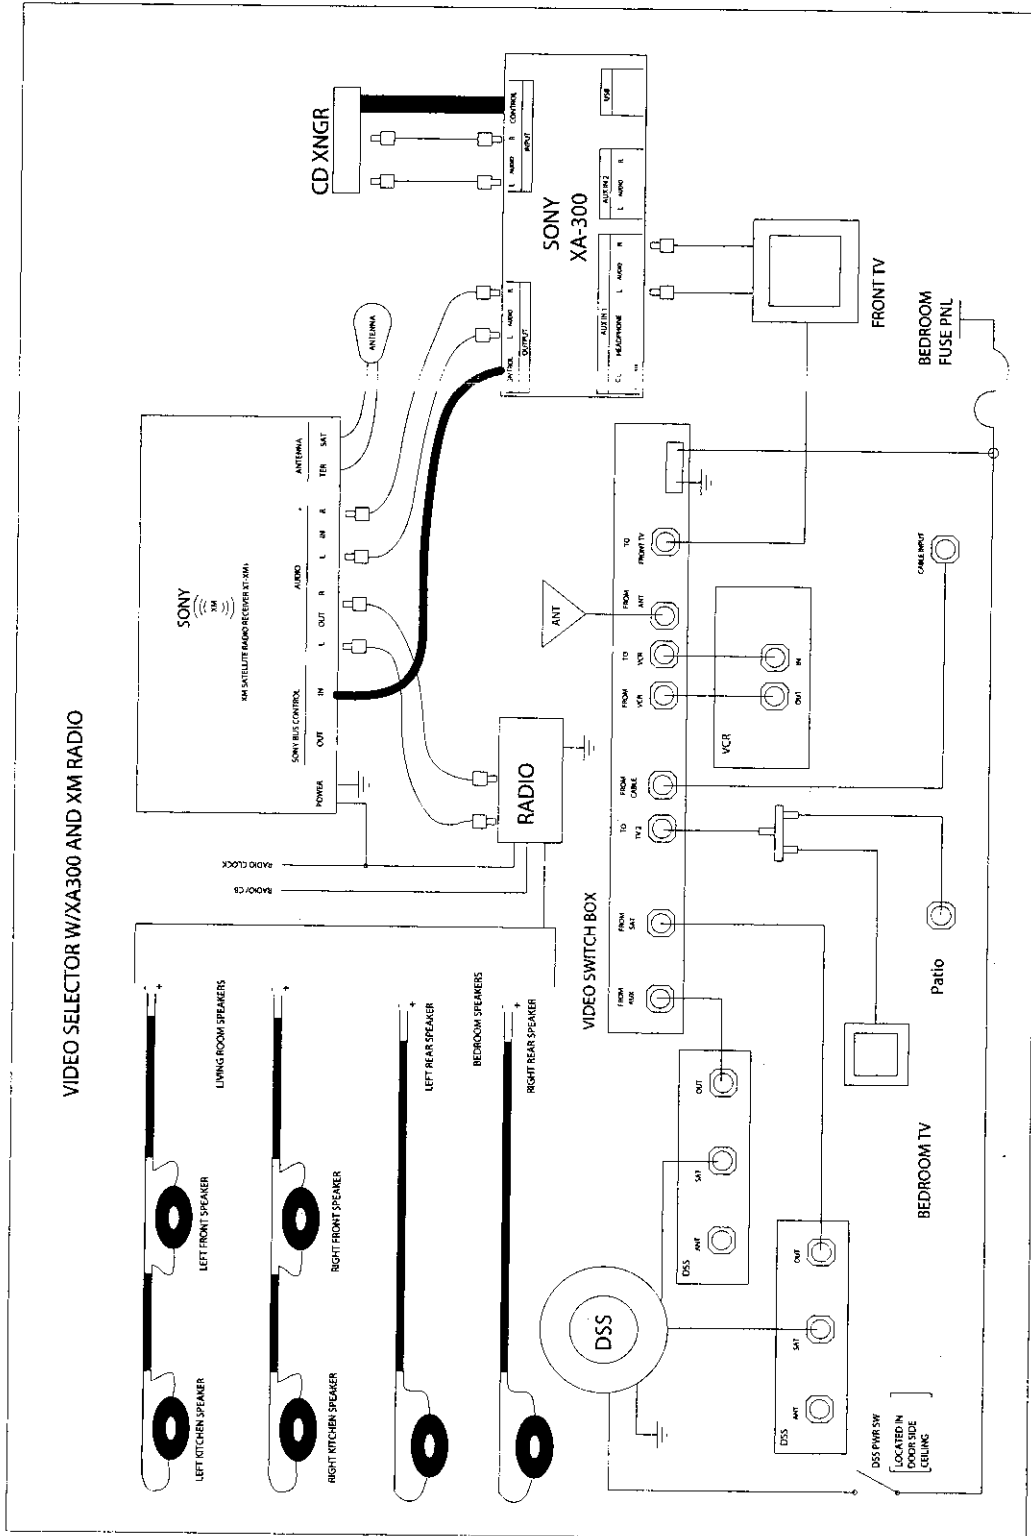

# WATER WORKS SUPPLY CONTROL PANEL

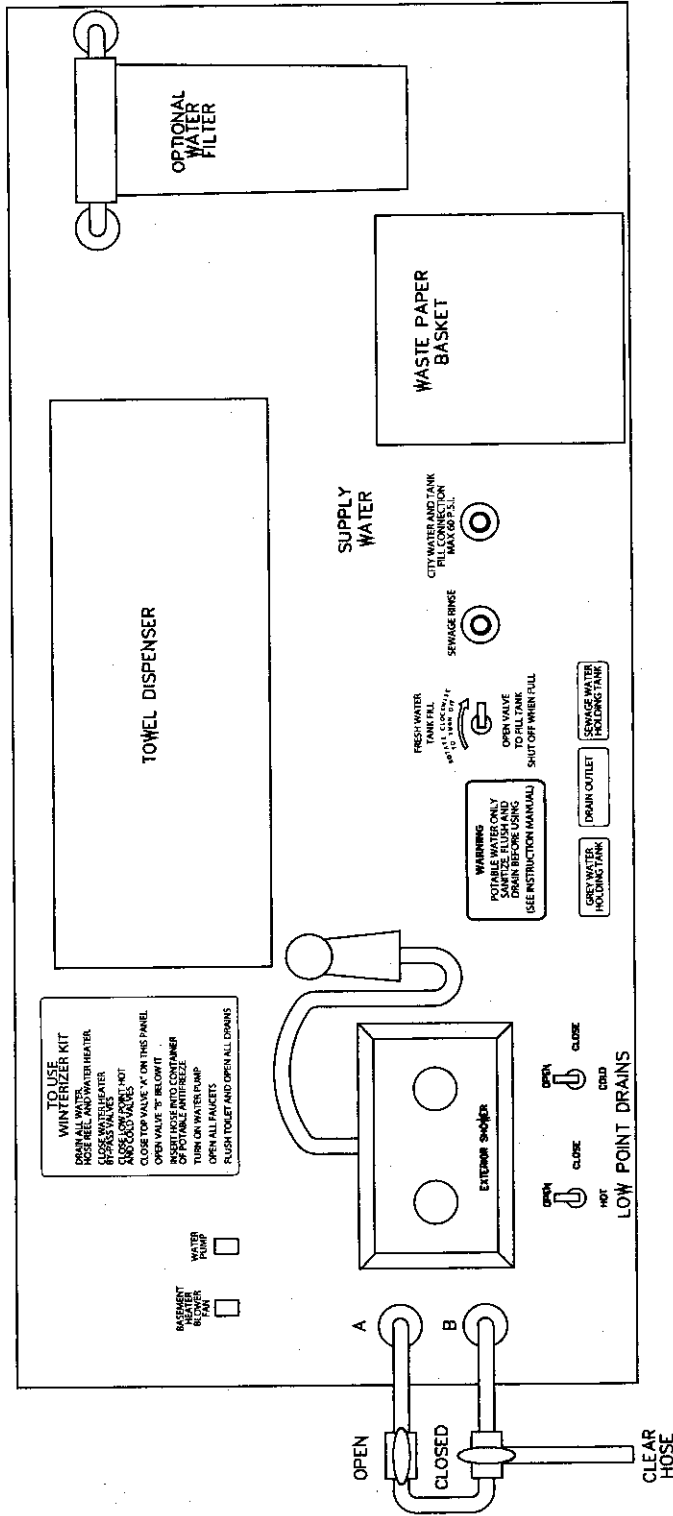


# TYPICAL FRESH WATER DIAGRAM

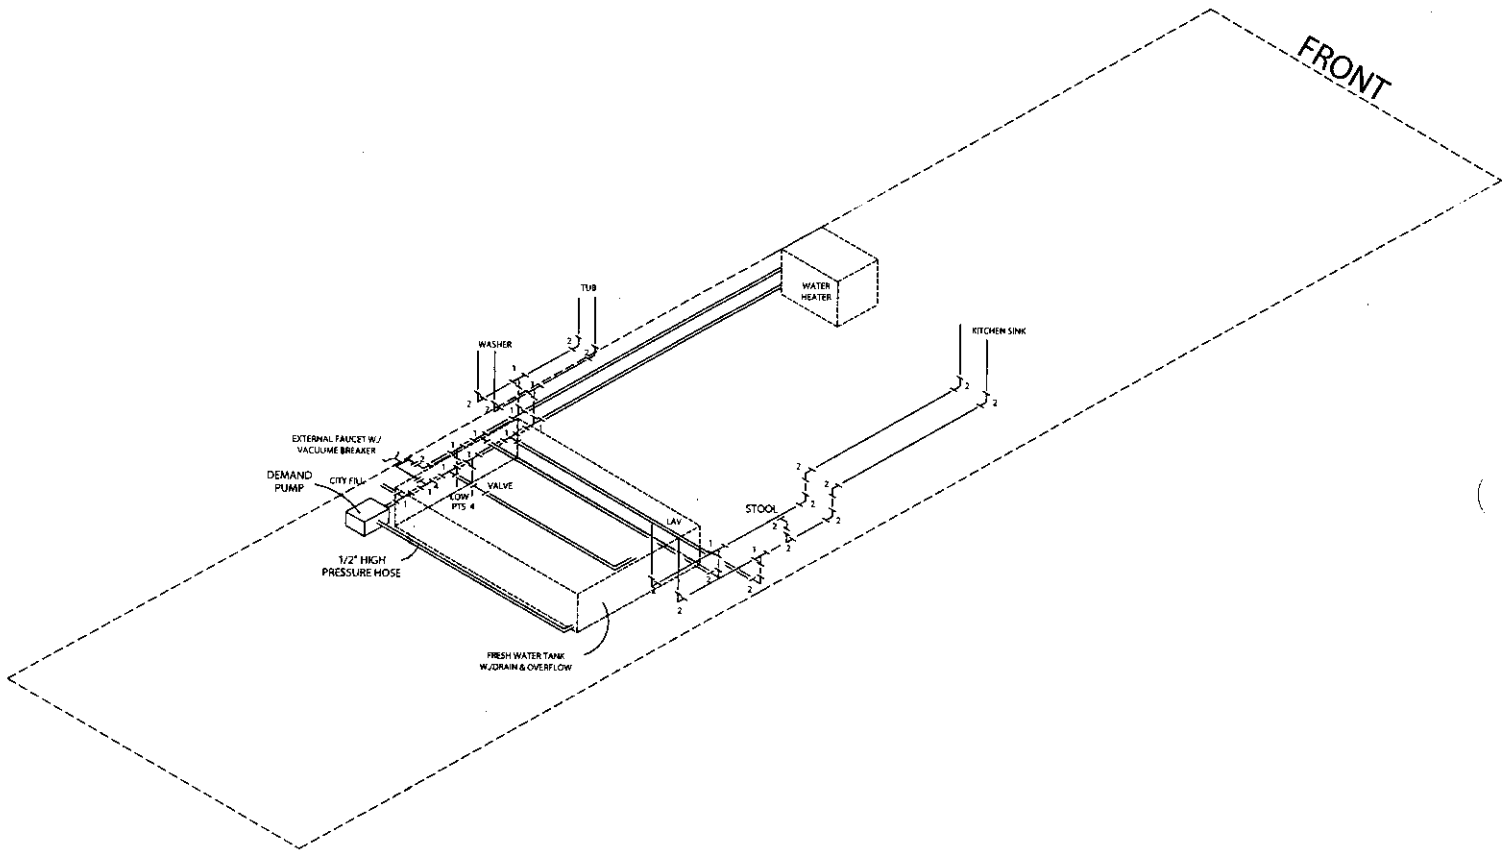


\*NOTE: Plumbing will vary with floor plan

# TYPICAL DRAIN LINE DIAGRAM

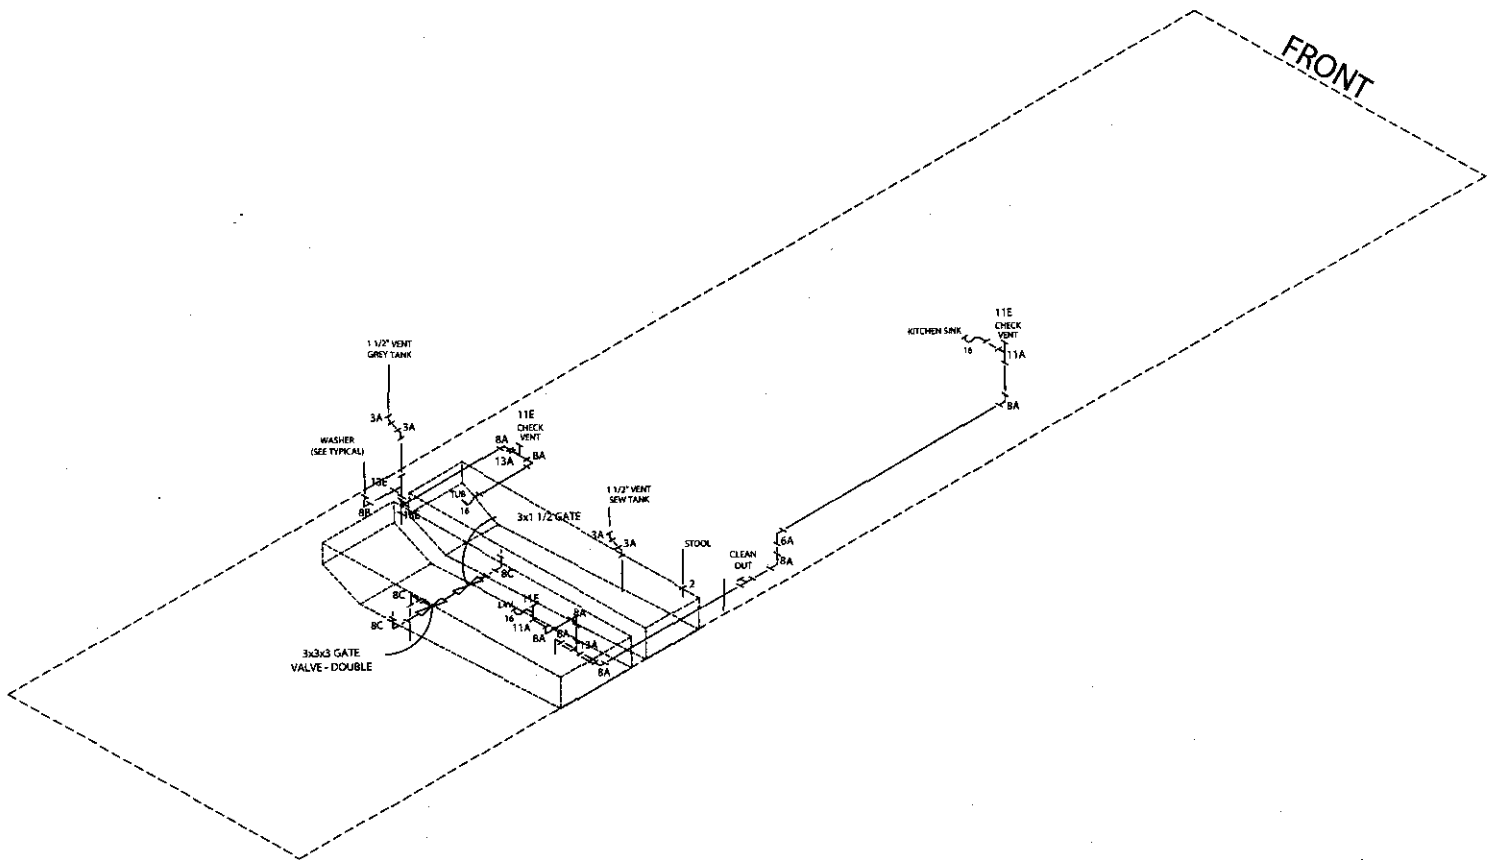

\*NOTE: Plumbing will vary with floor plan


# TYPICAL LP GAS DIAGRAM

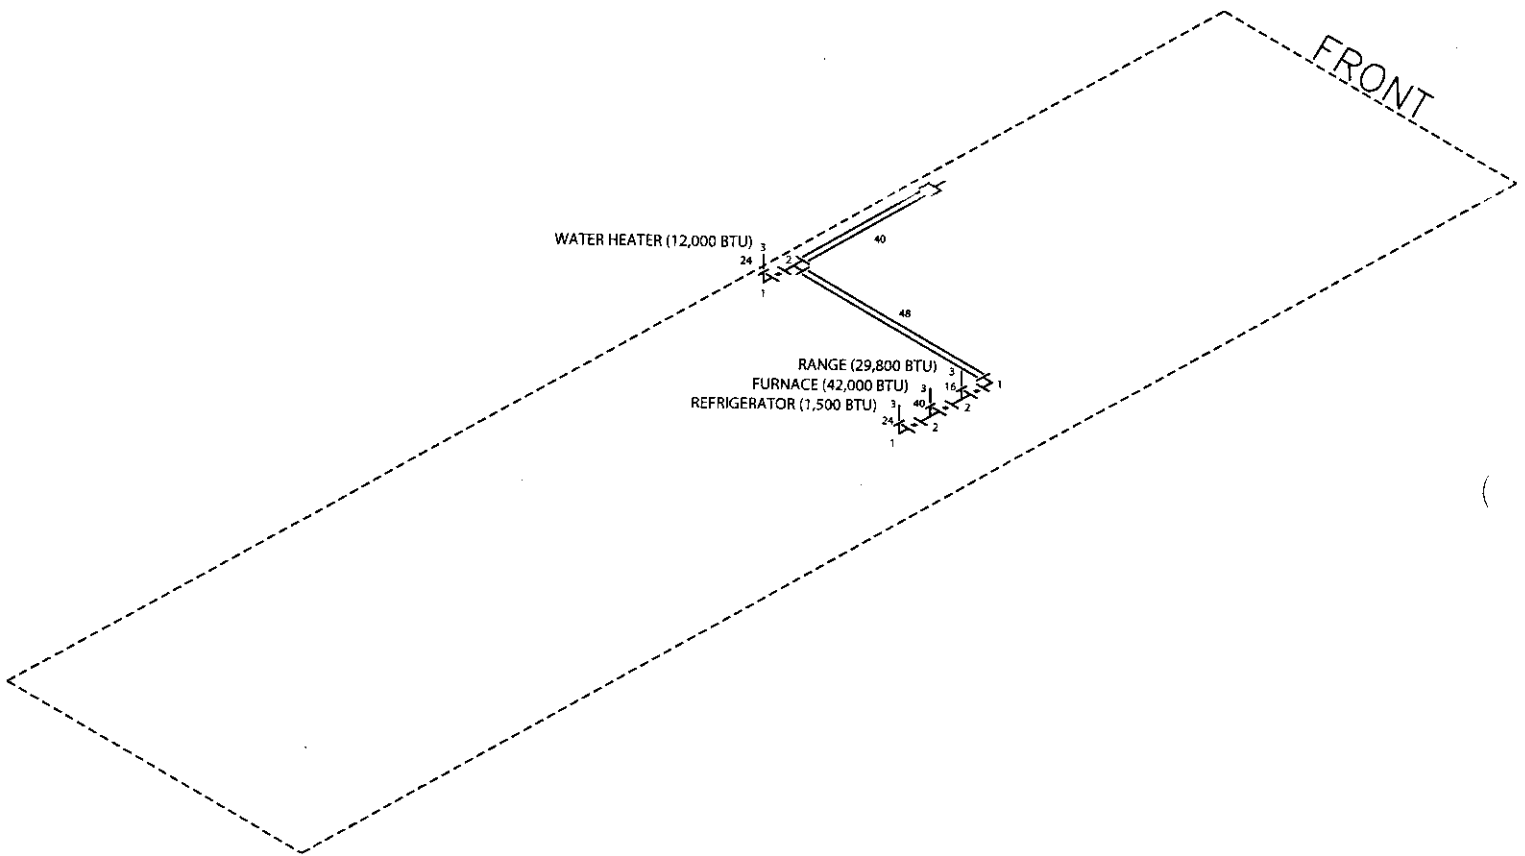

\*NOTE: Plumbing will vary with floor plan



# SLIDE-OUT MECHANISM

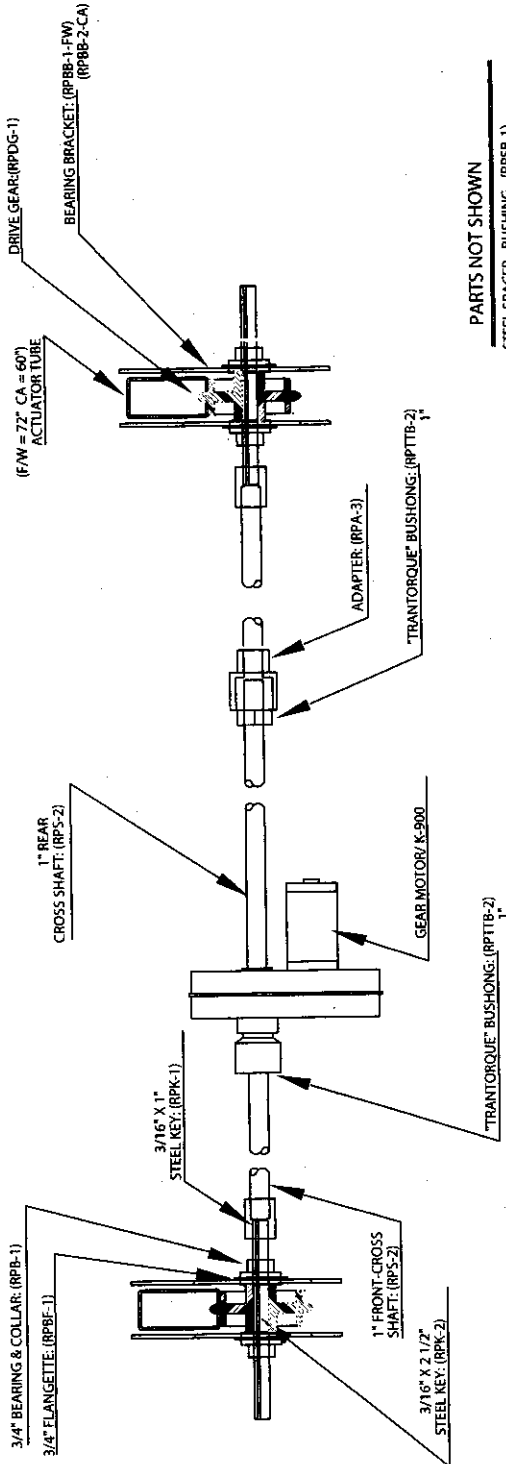



## PARTS NOT SHOWN

- STEEL SPACER - BUSHING - (RPSB-1)
- CORD ARM ASSY. - REAR MT. - (RPCA-R)
- CORD ARM ASSY. - FRONT MT. - (RPCA-F)
- CORD ARM BACKER BRACKET - (RPCBB)
- GEAR MOTOR MT. BRACKET - (RPGMB-1)
- GEAR MOTOR MT. BRACKET - (RPGMB-2)
- SLIDEOUT ROOM CONTROLLER - (000193-100)
- RUBBER WASHER - (RPRW-1)
- 5/16" - 8 X 3/8" SET SCREW
- 1 1/4" X 1/2" DRIVE CROW FOOT WRENCH
- 12V CORD 22228 12/2
- 110V CORD 22328 12/3
- GEAR COVER ABS 1513
- GEAR MOTOR COVER ABS 1512
- 5/16" X 3/4" CARRIAGE BOLT - NUT & LOCK WASHER
- 1/4" X 1" AND 1/4" X 1 1/2" FENDER WASHER


> USED TOGETHER

# FREIGHTLINER FRONT FUSE PANEL

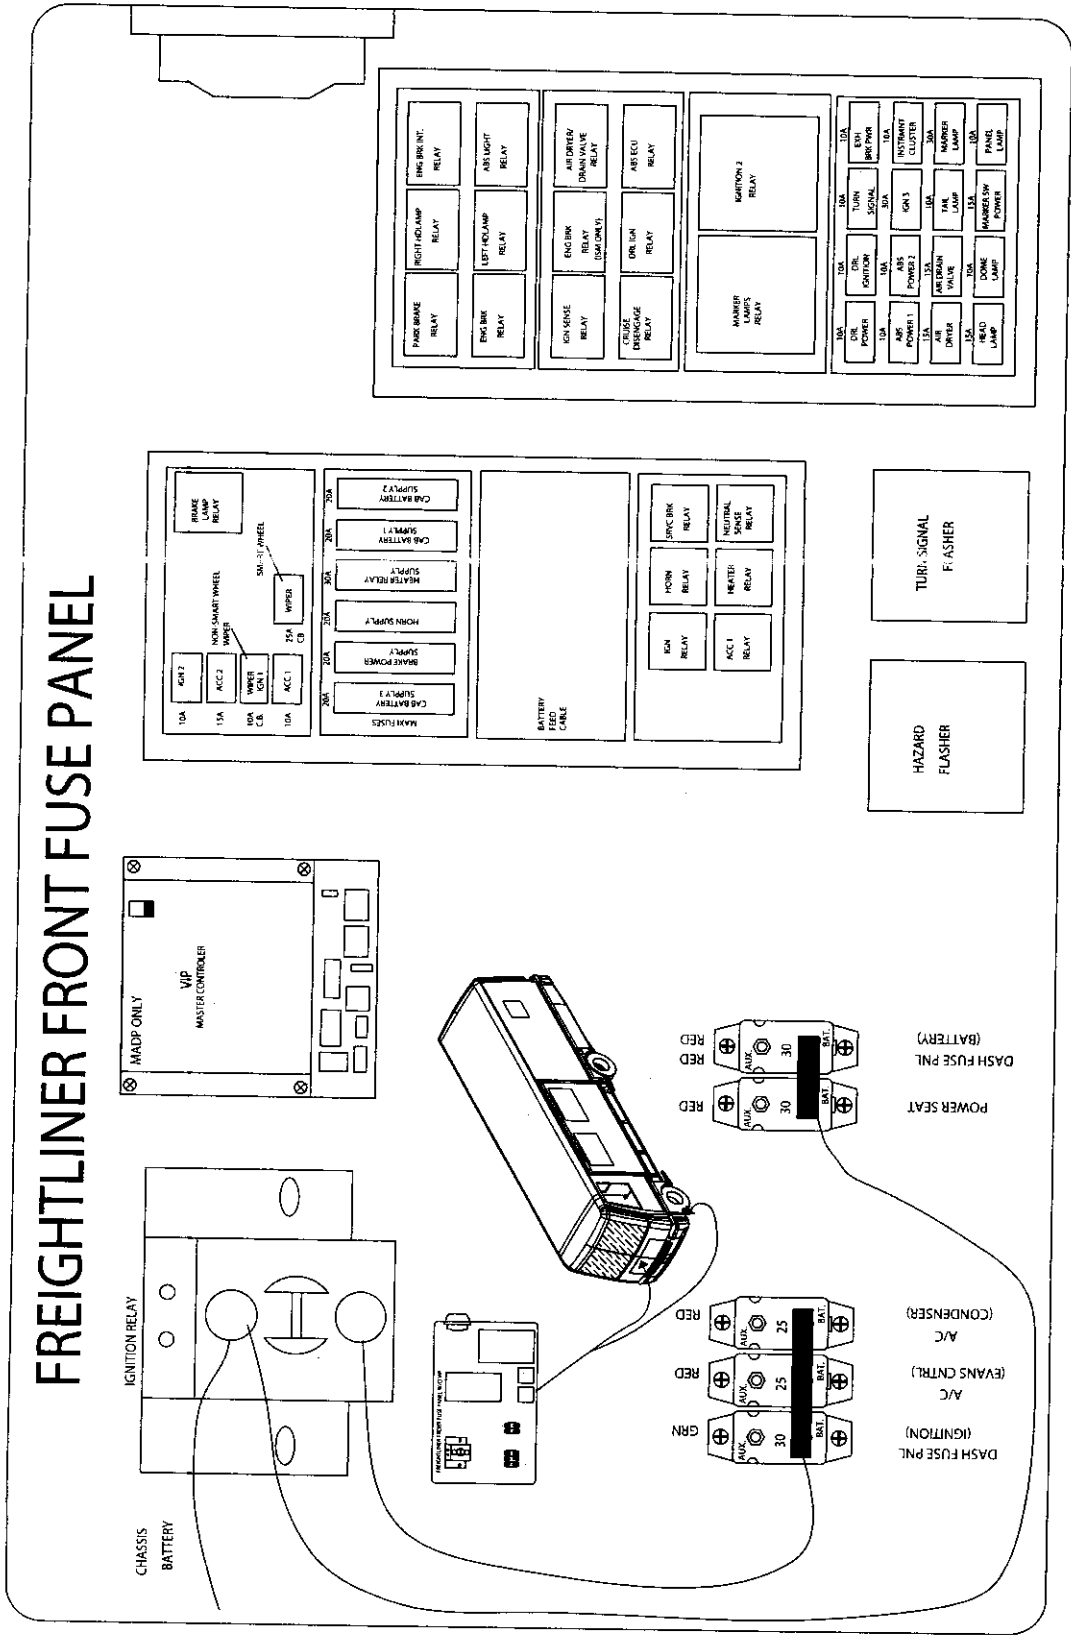


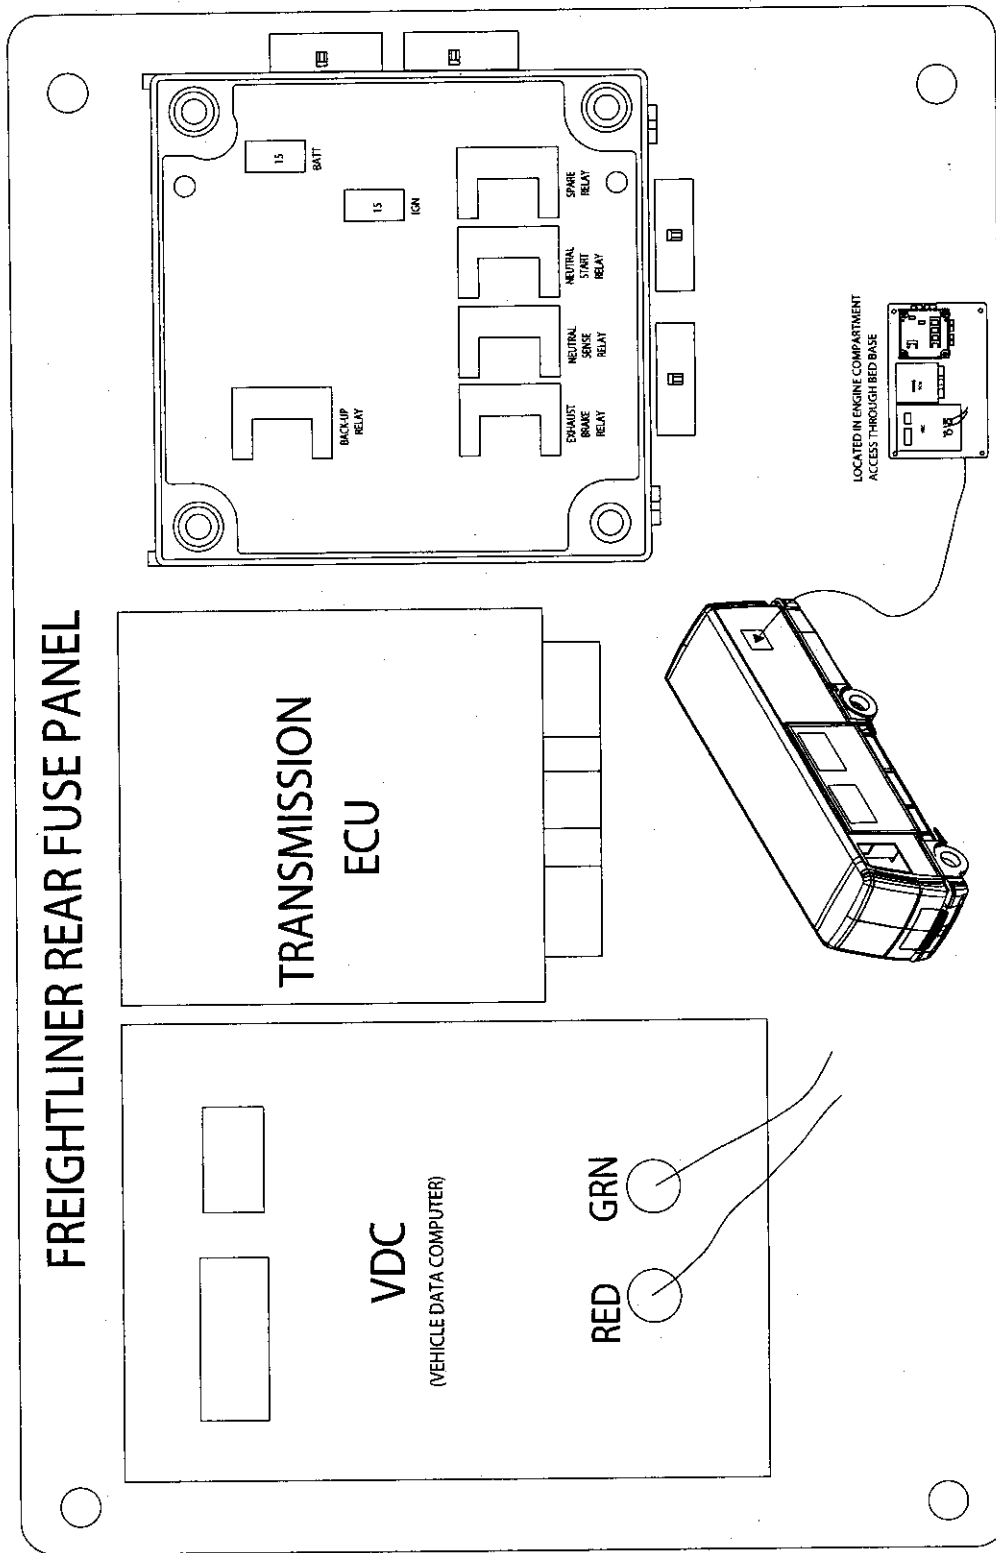


# SPARTAN FRONT FUSE PANEL W/VIP

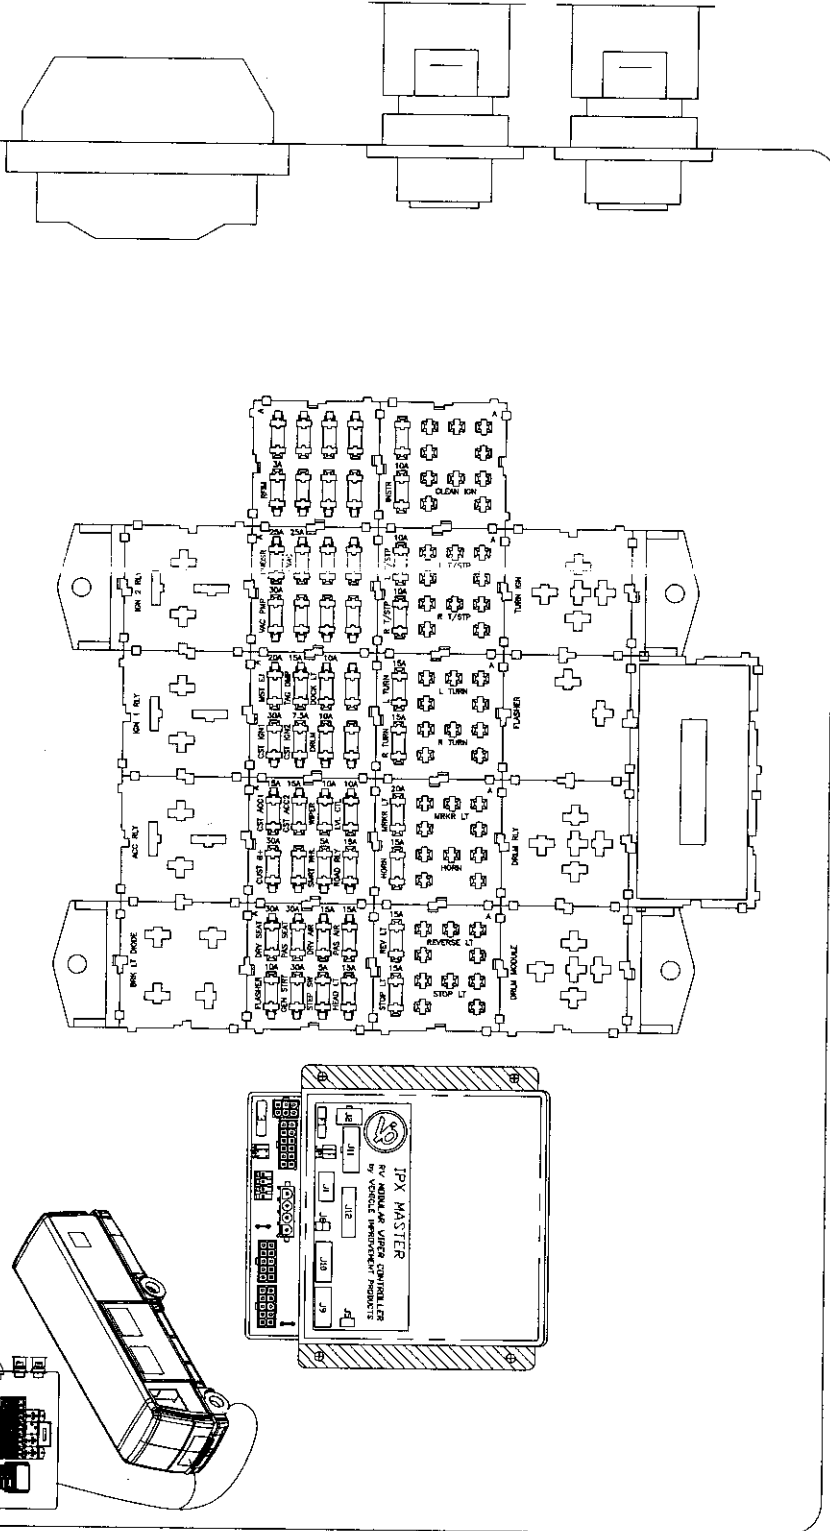


# SPARTAN REAR FUSE PANEL

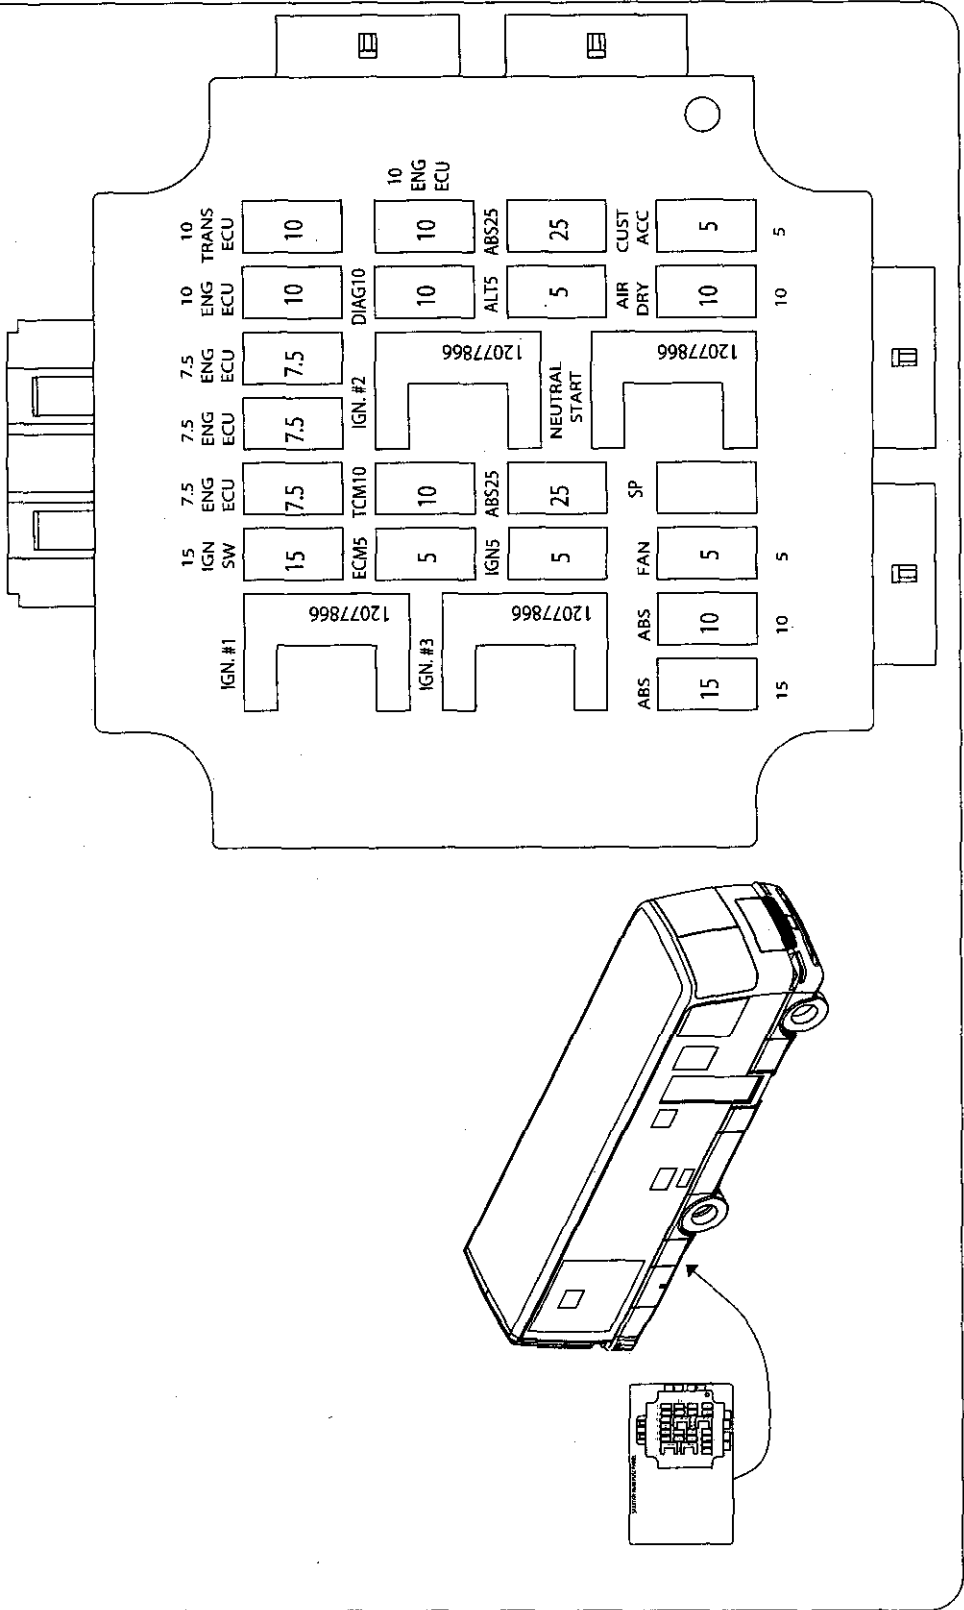

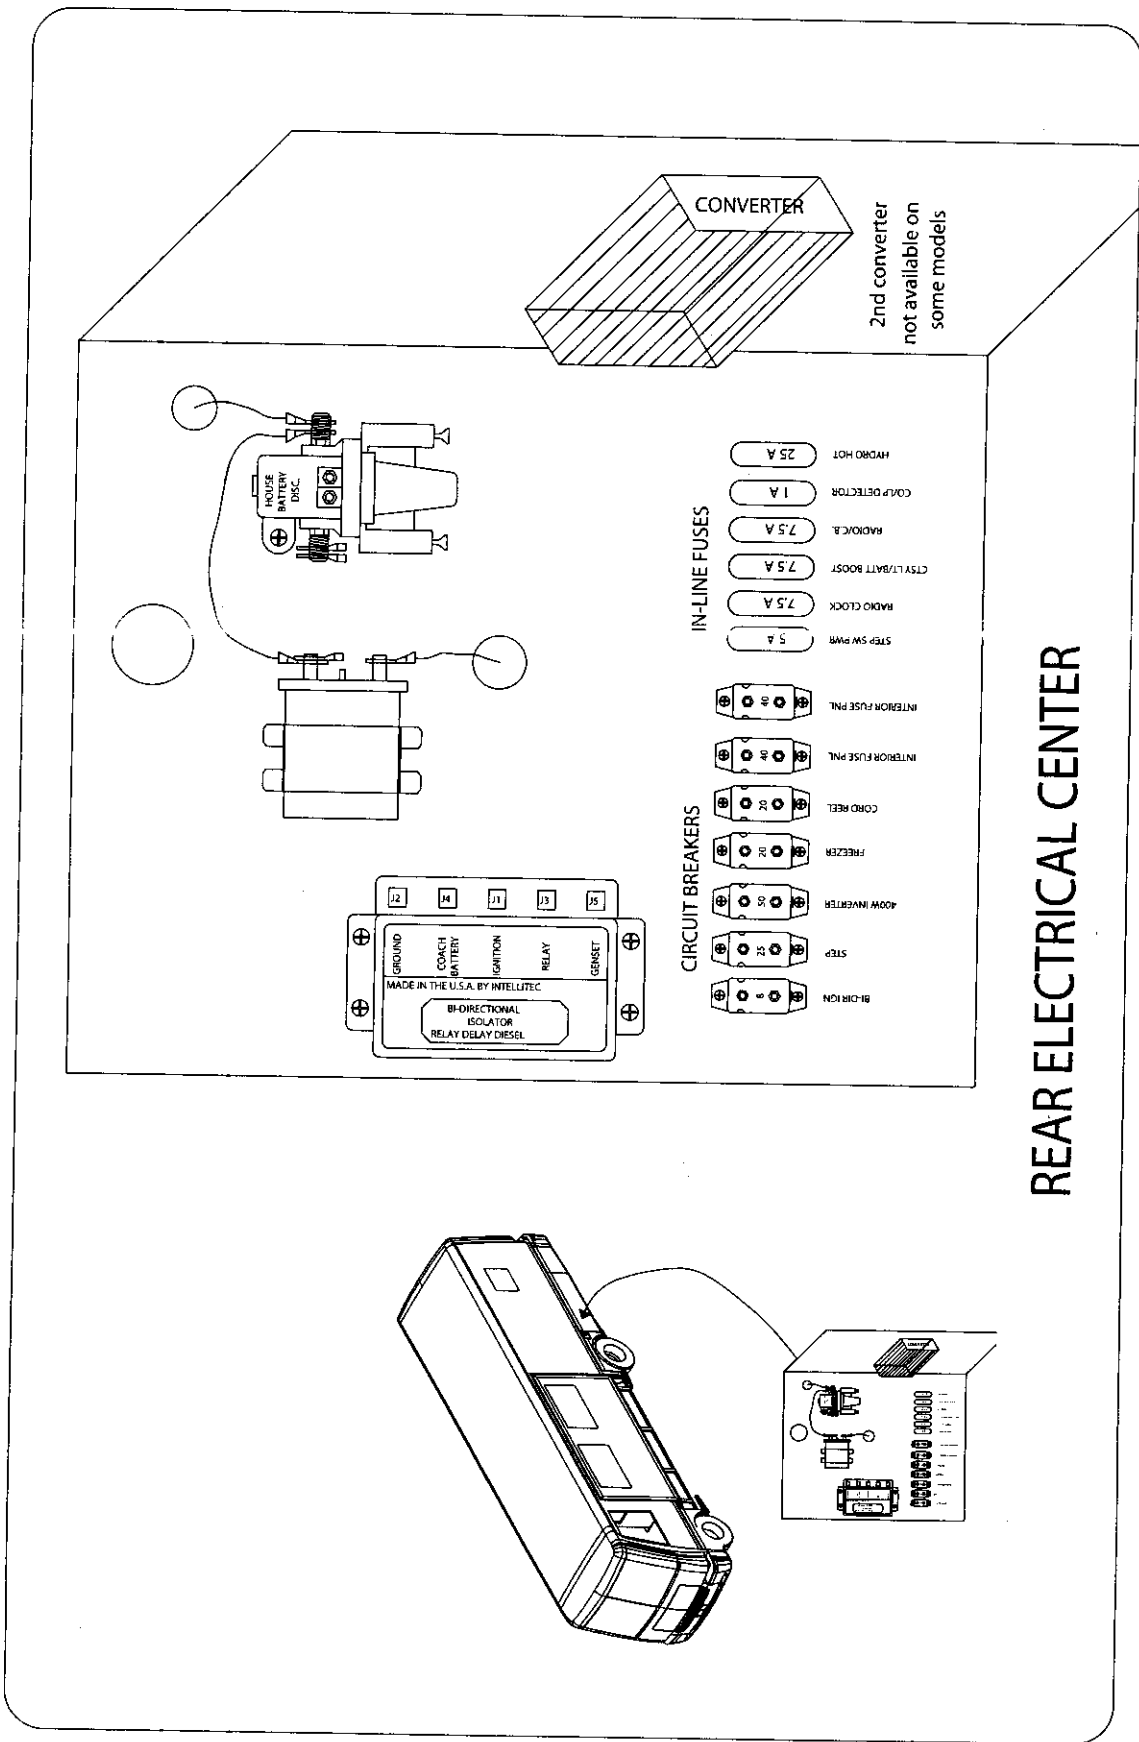

# REAR ELECTRICAL CENTER

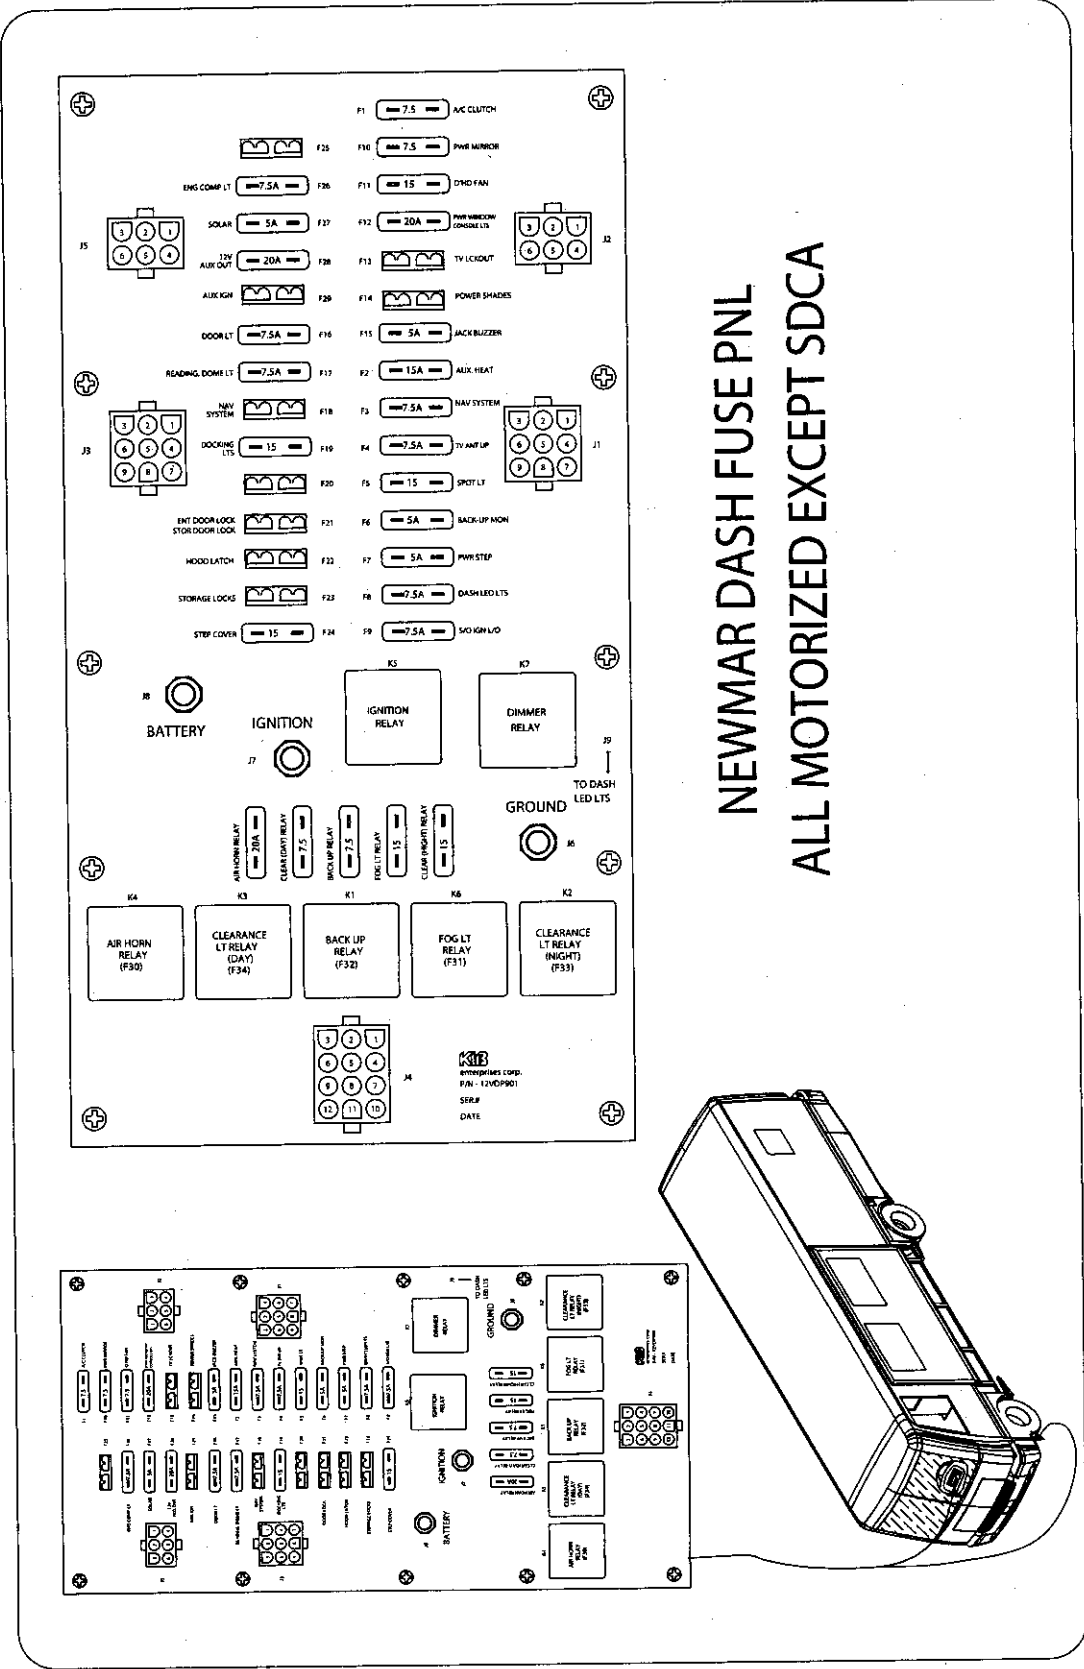

*Customer Information  
Update Form*




NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

**BUSINESS REPLY MAIL**  
FIRST CLASS MAIL PERMIT NO. 102 NAPPANEE IN

POSTAGE WILL BE PAID BY ADDRESSEE

**NEWMAR CORPORATION  
ATTN: SERVICE DEPARTMENT  
PO Box 30  
NAPPANEE, IN 46550**

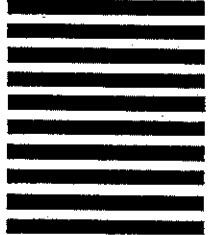

*Customer Information  
Update Form*





## CUSTOMER INFORMATION UPDATE FORM

Newmar Corporation strives to keep the most accurate and current customer information in its files.

If you bought this unit new, we have your information from the warranty registration form on file. However, if you purchased this unit as used then we ask that you complete the following information and mail it or fax it to us so that we can be sure that our records are updated.

Upon receipt of this form, we will send you a warranty registration card. This card is to be presented when you are having warranty work done on your unit at an authorized Newmar service center. Please note that the date of purchase on the card will show the original date the vehicle was first purchased and is the date applicable warranties originated.

If you have any questions, please contact a Newmar representative.

DATE \_\_\_\_\_

COACH # \_\_\_\_\_

CUSTOMER FULL NAME \_\_\_\_\_

CUSTOMER COMPLETE ADDRESS \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

ADDRESS \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

NEWMAR CORPORATION  
ATTN: SERVICE DEPARTMENT  
P.O. BOX 30  
NAPPANEE, IN 46550 FAX: (574) 773-2007