

How to Use Your Genuine **FAN-TASTIC VENT®** Ceiling Fan

This fan is not rain sensor equipped

Operating Instructions:

1. Turn 3 speed knob to desired performance level (0-Off, 1-Low, 2-Medium, 3-High). This activates the fan.
2. Set your Fan Blade action I-On or O-Off. I-On will always pull air from the coach window or door to the outside. O-Off only turns off the fan blade. Dome lift system is still active.
3. Slightly open a window of your choosing. The choice of window will determine how the air is going to flow through the cabin. Maximum airflow will be achieved through one slightly open window only.
4. Pressing the UP on the wall mounted up/down switch opens the dome. When the dome is raised approximately 2 inches or more, the fan will begin operating at the preselected speed.

Manual Dome Operation: Use the dome hand crank knob only in an emergency or for dome adjustment. Pull the knob down (toward the floor) to engage the manual mode. Turn the knob to the desired dome placement. Push the knob back up (toward the sky). Ensure that the knob is "locked" in place.

Recommendations: You may use your Fan-Tastic Vent while driving or in windy conditions. In this case keep your dome fully open. Keep your fingers away from the knob while dome is automatically opening or closing unless you deliberately intend to apply opposite force to stop dome partially open. When storing your Motorhome, lower your dome until it is completely closed and turn the 3 speed knob to O-Off.

NOTE: At 1/3 dome open, exhaust efficiency is reduced to 90%.

NOTE: Fan-Tastic Vent does not recommend placing a vent cover over, or using a foam filter on your Fan-Tastic Vent. This greatly restricts airflow, causing accumulation of dust and increased sound levels.





How to Clean the Screen on Your Genuine **FAN-TASTIC VENT®**

C e i l i n g F a n



Cleaning Instructions:

1. Turn fan motor off.
2. Locate the thumb tab on the Pop 'N Lock Screen, grab and pull down to unsnap.
3. Wash Pop 'N Lock Screen and fan blade with a light non-abrasive soap, rinse and dry.
4. Re-install the Pop 'N Lock Screen by gently snapping back in place.

Suggestion: Once screen and blade are washed and dried, you may wipe or spray 303 protector (a water based protector; do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.



Cleaning Instructions:

1. Turn fan motor off.
2. Remove 8 painted flat head Phillips screws around perimeter of screen insert.
3. Clean screen and blade with soap and water solution and reinstall.
4. Re-Install the screen by reversing step 2.

Suggestion: Once screen and blade are washed and dried, you may wipe or spray 303 protector (a water based protector; do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.

Trouble Shooting:

Fan-Tastic Vent wishes to assist any customer with any problem or need. Please call 1-800-521-0298 for assistance between 8 am and 5 pm E.S.T.

Fan-Tastic Vent Corp.
2083 S. Almont Avenue
Imlay City, MI 48444
Tel: (810) 724-3818
Toll Free: 800-521-0298
www.fantasticvent.com