

## Guardian Series

# **Owner's Manual**

## **Air-cooled Recreational Vehicle Generators**

QUIETPACT® 55, 65 and 75

• Models: 004703-1, 004705-1 004706-1, 004707-1 005750-0



## This manual should remain with the unit.

## INTRODUCTION

## READ THIS MANUAL THOROUGHLY

If any portion of this manual is not understood, contact the nearest Authorized Service Dealer for starting, operating and servicing procedures.

Throughout this publication, and on tags and decals affixed to the generator, DANGER, WARNING, CAUTION and NOTE blocks are used to alert personnel to special instructions about a particular operation that may be hazardous if performed incorrectly or carelessly. Observe them carefully. Their definitions are as follows:



After this heading, read instructions that, if not strictly complied with, will result in personal injury, including death, and property damage.



After this heading, read instructions that, if not strictly complied with, may result in personal injury or property damage.



After this heading, read instructions that, if not strictly complied with, could result in damage to equipment and/or property.

#### NOTE:

#### After this heading, read explanatory statements that require special emphasis.

These safety warnings cannot eliminate the hazards that they indicate. Common sense and strict compliance with the special instructions while performing the service are essential to preventing accidents.

Four commonly used safety symbols accompany the Danger, Warning and Caution blocks. The type of information each indicates follows:

#### ∧ This symbol points out important safety information that, if not followed, could endanger personal safety and/or property of others.





This symbol points out potential fire hazard.

This symbol points out potential electrical shock hazard.

The operator (driver) is responsible for proper and safe use of the vehicle and its equipment, and the safety of all vehicle occupants. We strongly recommend that the operator read this manual and thoroughly understand all instructions before using this equipment. We also strongly recommend instructing other occupants in the vehicle to properly start and operate the generator. This prepares them if they need to operate the equipment in an emergency.

## CONTENTS

This manual contains pertinent owner's information, including warranty, electrical diagrams, exploded views and lists of repair parts. In addition, the latter portion of this manual contains information necessary for the proper installation of these generators.

## OPERATION AND MAINTENANCE

It is the operator's responsibility to perform all safety checks, to make sure that all maintenance for safe operation is performed promptly, and to have the equipment checked periodically by an Authorized Service Dealer. Normal maintenance service and replacement of parts are the responsibility of the owner/operator and, as such, are not considered defects in materials or workmanship within the terms of the warranty. Individual operating habits and usage contribute to the need for maintenance service.

Proper maintenance and care of the generator ensures a minimum number of problems and keep operating expenses at a minimum. See an Authorized Service Dealer for service aids and accessories.

#### ♦ HOW TO OBTAIN SERVICE

When the generator requires servicing or repairs, simply contact an Authorized Service Dealer for assistance. Service technicians are factory-trained and are capable of handling all service needs.

When contacting an Authorized Service Dealer about parts and service, always supply the complete model number and serial number of the unit as given on its data decal, which is located on the generator.

Model No. \_\_\_\_\_\_ Serial No. \_\_\_\_\_



## 1-800-333-1322

ONLY DEALER LOCATION INFORMATION CAN BE OBTAINED AT THIS NUMBER: or locate us on the web at www.guardiangenerators.com.

## Part I — Operating Instructions

Introd	luctionInside Fro	ont Cover
	ad This Manual Thoroughly	
Cor	ntents	IFC
Оре	eration and Maintenance	IFC
Hov	v to Obtain Service	IFC
Aut	horized Service Dealer Locator Number	IFC
Safet	y Rules	2
Secti	on 1 – General Information	4
1.1	Generator Identification	
1.2	Generator Applicability	
1.3	Installation	
1.4	Safety	
1.5	Generator AC Connection System	
1.6	Specifications	
1.7	Evaporative Emissions Information	
1.8	Exhaust Emissions Information (Gasoline)	
1.9	Exhaust Emissions Information (Propane)	8
Secti	on 2 – Operation	8
2.1	Generator Control Panel	8
2.2	Optional Remote Start/Stop Panel	9
2.3	Automatic Choke	9
2.4	Before Starting the Engine	9
2.5	Starting the Generator	10
2.6	Stopping the Generator	10
2.7	Applying Loads to Generator	
2.8	Protection Systems	11
Secti	on 3 – Maintenance	12
3.1	Checking the Engine Oil Level	12
3.2	Changing the Engine Oil and/or Oil Filter	12
3.3	Maintaining the Engine Air Cleaner	13
3.4	Checking the Engine Spark Plug	14
3.5	Fuel Filter (Gasoline Only)	14
3.6	Clean Spark Arrestor	14
3.7	Cleaning the Generator	14
3.8	Battery Maintenance	15
3.9	Adjusting Valve Clearance	15
3.10	Major Service Manual	16
3.11	Drive Belt	16
3.12	Exercising the Generator	16
3.13	Out of Service Procedure	16
3.14	RV Generator Service Interval	16
Secti	on 4 – Notes	17

## Part II — Installation Instructions

Safe	ety Rules	.20
No	otice to Installer	.20
0	tion 1 — General Information	20
3eci 1.1	Purpose and Scope of the Installation Instructions	
1.1 1.2	Safety	
1.2 1.3	Salety Standards Booklets	
1.3 1.4		
	Equipment Description	
1.5	Generator Engine Operating Speed	
1.6	Generator AC Connection System	
	Major Features and Dimensions	.23
Sect	tion 2 — Installation	.24
2.1	Location and Support	.24
2.2	Generator Compartments	.25
2.3	Cooling and Ventilating Air	.27
2.4	Gasoline Fuel System	.29
2.5	LP Gas Fuel System	.30
2.6	Exhaust System	.31
2.7	Electrical Connections	.33
2.8	Battery Installation	.34
2.9	Optional Accessories	.36
Sect	tion 3 — Post Installation	.36
3.1	Post Installation Tests	.36
3.2	Before Initial Start-up	.36
3.3	Initial Start	.36
3.4	Testing Under Load	.37
3.5	Installation Checklist	
Sect	tion 4 – Troubleshooting	.39
4.1	Troubleshooting Guide	.39
Sect	tion 5 – Electrical Data	.40
Sect	tion 6 – Exploded Views and Parts Lists	.42
Sect	tion 7 – Warranty	.52



**Recreational Vehicle Generators** 

SAVE THESE INSTRUCTIONS – The manufacturer suggests that these rules for safe operation be copied and posted in potential hazard areas of the recreational vehicle. Safety should be stressed to all operators and potential operators of this equipment.



# Marking: Image: Constraint of the state of California to cause cancer, birth defects or other reproductive harm. Marking: Image: Constraint of California to cause cancer. Marking: Image: Constraint of California to cause cancer.

This product contains or emits chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

Study these SAFETY RULES carefully before installing, operating or servicing this equipment. Become familiar with this manual and with the unit. The generator can operate safely, efficiently and reliably only if it is properly installed, operated and maintained. Many accidents are caused by failing to follow simple and fundamental rules or precautions.

The manufacturer cannot anticipate every possible circumstance that might involve a hazard. The warnings in this manual, and on tags and decals affixed to the unit, are, therefore, not all-inclusive. If using a procedure, work method or operating technique the manufacturer does not specifically recommend, ensure that it is safe for others. Also make sure the procedure, work method or operating technique that chosen does not render the generator unsafe.



- ▲ Despite the safe design of this generator, operating this equipment imprudently, neglecting its maintenance or being careless can cause possible injury or death. Permit only responsible and capable persons to operate or maintain this equipment.
- Potentially lethal voltages are generated by these machines. Ensure all steps are taken to render the machine safe before attempting to work on the generator.
- A Parts of the generator are rotating and/or hot during operation. Exercise care near running generators.
- Generator exhaust gases contain DEADLY carbon monoxide gas. This dangerous gas, if breathed in sufficient concentrations, can cause unconsciousness or even death.

## 🗥 <u>General Hazards</u> 🖄

- For safety reasons, the manufacturer recommends that the installation, initial start-up and maintenance of this equipment is carried out by an Authorized Service Dealer.
- Keep hands, feet, clothing, etc., away from drive belts, fans, and other moving or hot parts. Never remove any drive belt or fan guard while the unit is operating.
- When working on this equipment, remain alert at all times. Never work on the equipment when physically or mentally fatigued.
- Inspect the generator regularly, and contact the nearest Authorized Service Dealer immediately for parts needing repair or replacement.
- Inspect the generator regularly, and contact the nearest Authorized Service Dealer immediately for parts needing repair or replacement.
- Before performing any maintenance on the generator, disconnect its battery cables to prevent accidental start up. Disconnect the cable from the battery post indicated by a NEGATIVE, NEG or (–) first. Reconnect that cable last.
- Never use the generator or any of its parts as a step. Stepping on the unit can stress and break parts, and may result in dangerous operating conditions from leaking exhaust gases, fuel leakage, oil leakage, etc.

## 🗥 <u>Engine exhaust hazards</u> 🗥

- Generator engine exhaust contains DEADLY carbon monoxide, an odorless, colorless poisonous gas. Breathing carbon monoxide can cause: dizziness, throbbing temples, nausea, muscular twitching, headache, vomiting, weakness and sleepiness, inability to think clearly, fainting, unconsciousness or even death. If you experience any carbon monoxide poisoning symptoms, move into fresh air and immediately seek medical attention.
- Never operate the generator set with the vehicle inside any garage or other enclosed area.
- Adequate, unobstructed flow of cooling and ventilating air is critical for expelling toxic carbon monoxide gas and fuel vapors from the generator compartment and for proper generator operation. Without sufficient cooling airflow, deadly carbon monoxide gas can accumulate and the engine/generator may quickly overheat, causing serious damage to the generator. Do not operate the genset in any confined space.
- The exhaust system must be installed in accordance with the genset installation manual. Do not alter the installation or permit even partial blockage of ventilation systems, as this can seriously affect the safe and proper operation of the generator.



- Do not operate the generator if the exhaust system is leaking or has been damaged or if you have experienced carbon monoxide poisoning symptoms during use. Shut down the generator and do not operate it until it has been inspected and/or repaired.
- Never sleep in the vehicle while the genset is running unless the vehicle has a working carbon monoxide detector.

## A ELECTRICAL HAZARDS

- The generator covered by this manual produces dangerous electrical voltages and can cause fatal electrical shock. Avoid contact with bare wires, terminals, connections, etc., while the unit is running. Ensure all appropriate covers, guards and barriers are in place before operating the generator. If work must be done around an operating unit, stand on an insulated, dry surface to reduce shock hazard.
- Do not handle any kind of electrical device while standing in water, while barefoot, or while hands or feet are wet. DANGEROUS ELECTRICAL SHOCK MAY RESULT.
- During installation onto the vehicle, have the generator properly grounded (bonded) either by solid mounting to the vehicle frame or chassis, or by means of an approved bonding conductor. DO NOT disconnect the bonding conductor, if so equipped. DO NOT reconnect the bonding conductor to any generator part that might be removed or disassembled during routine maintenance. If the grounding conductor must be replaced, use only a flexible conductor that is of No. 8 American Wire Gauge (AWG) copper wire minimum.
- In case of accident caused by electric shock, immediately shut down the source of electrical power. If this is not possible, attempt to free the victim from the live conductor. AVOID DIRECT CONTACT WITH THE VICTIM. Use a nonconducting implement, such as a rope or board, to free the victim from the live conductor. If the victim is unconscious, apply first aid and get immediate medical help.
- Never wear jewelry when working on this equipment. Jewelry can conduct electricity resulting in electric shock, or may get caught in moving components causing injury.

## 🕭 FIRE HAZARDS 🕭

- For fire safety, the generator must be installed and maintained properly. Installation always must comply with applicable codes, standards, laws and regulations. Adhere strictly to local, state and national electrical and building codes. Comply with regulations the Occupational Safety and Health Administration (OSHA) has established. Also, ensure that the generator is installed in accordance with the manufacturer's instructions and recommendations. Following proper installation, do nothing that might alter a safe installation and render the unit in noncompliance with the aforementioned codes, standards, laws and regulations.
- Keep a fire extinguisher in the vehicle at all times. Extinguishers rated "ABC" by the National Fire Protection Association are appropriate for use on the recreational vehicle generator electrical system. Keep the extinguisher properly charged and be familiar with its use. If there are any questions pertaining to fire extinguishers, consult the local fire department.

## 🚵 EXPLOSION HAZARDS 🖄

- Do not smoke around the generator. Wipe up any fuel or oil spills immediately. Ensure that no combustible materials are left in the generator compartment, or on or near the generator, as FIRE or EXPLOSION may result. Keep the area surrounding the generator clean and free from debris.
- Gasoline is extremely FLAMMABLE and its vapors are EXPLOSIVE. Do not permit smoking, open flame, sparks or any source of heat in the vicinity while handling gasoline. Comply with all laws governing the storage and handling of gasoline.
- This generator may use liquid propane (LP) gas as a fuel. LP gas is highly EXPLOSIVE. The gas is heavier than air and tends to settle in low areas where even the slightest spark can ignite the gas and cause an explosion.




**Recreational Vehicle Generators** 

## 1.1 GENERATOR IDENTIFICATION

Please record the following information from the generator DATA DECAL or information decal.

- 1. Model Number \_\_\_\_\_
- 3. kW Rating \_\_\_\_\_
- 5. Phase \_\_\_\_

- 2. Serial Number
- 4. Rated Voltage \_\_\_\_\_
- 6. Hertz \_\_\_

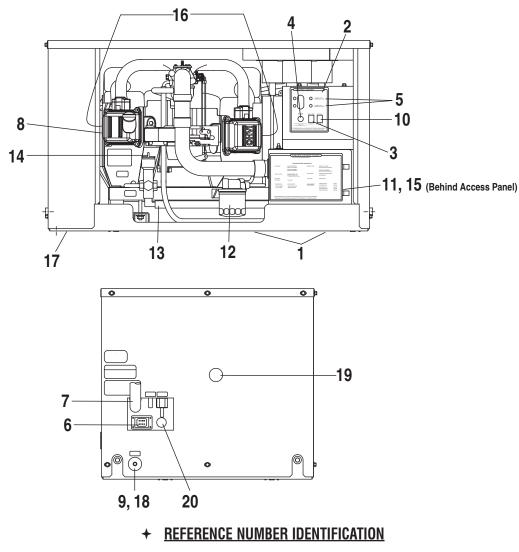

- 1. Generator Air Intake Screen
- 2. Data Plate
- 3. Engine Start/Stop Switch
- 4. 7.5 amp Fuse
- 5. Circuit Breaker
- 6. Optional Remote Panel Receptacle
- 7. Generator AC Output Leads
- 8. Starter Contactor
- 9. Fuel Inlet
- 10. Fuel Primer Switch

- 11. Fuel Pump (Behind access panel.)
- 12. Oil Filter
- 13. Oil Drain Plug
- 14. Oil Dipstick and Filler Tube
- 15. Air Filter (Behind access panel.)
- 16. Spark Plugs
- 17. Exhaust Outlet
- 18. Fuel Filter
- 19. LP Fuel Inlet
- 20. Evaporative Port



## 1.2 GENERATOR APPLICABILITY

These generators have been designed and manufactured for supplying electrical power for recreational vehicles. DO NOT modify the generator or use it for any application other than for what it was designed. If there are any questions pertaining to its application, write or call the factory. Do not use the unit until advised by competent authority.



For fire safety, the generator must have been properly installed in compliance with ANSI 119.2-1975/NFPA 501C-1974, "Standard for Recreational Vehicles, Part III – Installation of Electrical Systems." The generator also must have been installed in strict compliance with the manufacturer's detailed installation instructions. After installation, do nothing that might render the unit in noncompliance with such codes, standards and instructions.

Use the generator set to supply electrical power for operating one of the following electrical loads:

- QUIETPACT 55G & LP: 120 and/or 240 volts, single phase, 60 Hz electrical loads. These loads can require up to 5500 watts (5.5 kW) of total power, but cannot exceed 45.8 AC amperes of current at 120 volts or exceed 22.9 AC amperes at 240 volts.
- QUIETPACT 65G & LP: 120 and/or 240 volts, single phase, 60 Hz electrical loads. These loads can require up to 6500 watts (6.5 kW) of total power, but cannot exceed 54.1 AC amperes of current at 120 volts or exceed 27 AC amperes at 240 volts.
- QUIETPACT 75G & LP: 120 and/or 240 volts, single phase, 60 Hz electrical loads. These loads can require up to 7500 watts (7.5 kW) of total power, but cannot exceed 62.5 AC amperes of current at 120 volts or exceed 31.2 AC amperes at 240 volts.



Do not overload the generator. Some installations may require that electrical loads be alternated to avoid overloading. Applying excessively high electrical loads may damage the generator and may shorten its life. Add up the rated watts of all electrical lighting, appliance, tool and motor loads the generator will power at one time. This total should not be greater than the wattage capacity of the generator. If an electrical device nameplate gives only volts and amps, multiply volts times amps to obtain watts (volts x amps = watts). Some electric motors require more watts of power (or amps of current) for starting than for continuous operation.

## 1.3 INSTALLATION

This Owner's Manual has been prepared under the assumption that a competent, qualified technician installed the generator into a recreational vehicle. We also assume the installer complied with all applicable codes, standards and regulations pertaining to installation.

An INSTALLATION MANUAL was shipped with the generator. That Manual contains manufacturer's instructions and recommendations for installing the unit into an industrial vehicle. After installation, installers should forward the Installation Manual to Owners/ Operators for their information.

Owners/Operators have the responsibility to make sure that nothing is done that might render the installation unsafe or in noncompliance with applicable codes, standards and instructions.

## 1.4 SAFETY

Before using the generator set, carefully read GENERAL SAFETY RULES inside the cover. Comply with these RULES to prevent accidents and damage to equipment and/or property. The manufacturer suggests copying and posting the GENERAL SAFETY RULES to potential operators of this equipment.


## 1.5 GENERATOR AC CONNECTION SYSTEM

These air-cooled generator sets are equipped with dual stator AC power windings. These two stator windings supply electrical power to customer electrical loads by means of a dual 2-wire connection system.

Generators may be installed to provide the following outputs:

 120 VAC loads only — one load with a maximum total wattage requirement equal to the generator's rated power output (in watts), and 120V across the generator output terminals. Figure 1.1 shows the generator lead wire connections for 120VAC ONLY.

## Figure 1.1 – Connection for 120 Volts Only

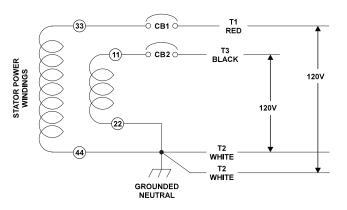




**Recreational Vehicle Generators** 

2. 120/240 VAC loads — one load with a maximum total wattage requirement equal to the generator's rated power output, and 240V across the generator output terminals; or two seperate loads, each with a maximum total wattage requirement equal to half of the generator's rated power output (in watts), and 120V across the generator output terminals. Figure 1.2, shows the generator lead wire connections for 120/240 VAC loads. Also refer to the "Line Breakers" section for circuit breaker ratings.

This procedure should be done by an Authorized Service Dealer or other qualified installer.

#### Figure 1.2 - Connection for 120/240 Volts

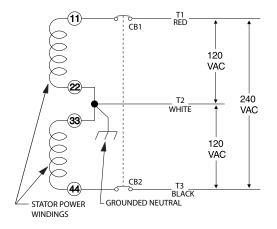

## **1.6 SPECIFICATIONS**

## ◆ 1.6.1 FUEL REQUIREMENTS

This generator is equipped with a gasoline or LP fuel system. Specific installations may provide either a separate fuel tank for the generator, or the generator may "share" the vehicle engine's fuel tank.

#### + 1.6.1.1 Gasoline Fuel Consumption (gph)

Model	10% Load	50% Load	100% Load
QuietPact 75G	0.51	0.80	1.28

#### NOTE

Some installations using a "shared" fuel tank may have a generator fuel pickup tube that is shorter than the vehicle engine's pickup tube. Such an arrangement causes the generator engine to "run out of gas" while adequate fuel for the vehicle remains in the tank.

To reduce lead and carbon deposits use high quality UNLEADED gasoline with the generator. Leaded REGULAR grade gasoline is an acceptable substitute.

#### NOTE:

Using unleaded gasoline contributes to longer engine valve life by reducing lead and carbon deposits.



▲ The manufacturer does not recommend using any gasoline containing alcohol (such as "gasohol"). If using any gasoline containing alcohol, it must not contain more than 10 percent ethanol, and it must be removed from the generator during storage. Do NOT use any gasoline containing methanol. If using gasoline with alcohol, inspect more frequently for fuel leaks and other abnormalities.

#### + 1.6.1.2 LP Fuel Consumption (lb./hour)

The LP powered range of generators are fitted with a nonadjustable, factory set system. These systems are tamper-proof to meet 1997 California Air Resources Board requirements for engine emission.

Model	Idle	50% Load	100% Load
QuietPact 55LP	2.34	3.96	5.07
QuietPact 65LP	2.34	4.20	6.50
QuietPact 75LP	2.34	4.44	8.75

## ◆ 1.6.2 ENGINE OIL REQUIREMENTS

Use only high quality detergent oil rated with American Petroleum Institued (API) Classification SF, SG, SH or SJ. The recommended oil viscosity weights include the following:

- During summer months (40 deg. F and higher), SAE 30 or SAE 10W-30
- During winter months (40 deg. F to -20 deg. F), SAE 5W-30 or SAE5W20
- DO NOT USE SAE 10W-40

Crankcase and oil filter capacity is approximately 1.8 L or 1.9 U.S. quarts. DO NOT use special additives. See sections "Checking the Engine Oil Level" and "Changing the Engine Oil and/or Oil Filter" for oil level check and filling procedures.

## ◆ 1.6.3 ENGINE SPECIFICATIONS

Type of Engine	GT-760
Cooling Method	Air-cooled
Rated Horsepower	
	8.6 to 1
	Aluminum w/Cast Iron Sleeve
	Mechanical, Fixed Speed
Engine Governor Speed	
	Paper Element w/Foam Precleaner
	Solid-state w/Flywheel Magneto
Recommended Spark Plug	
Champion	RC14YC
AC	R45S
Fram Autolite	65

#### Section 1 – General Information

**Recreational Vehicle Generators** 

SERIES	QP55LP	QP65LP	QP75G	QP75LP
Rotor RPM	3600	3600	3600	3600
Rotor Poles	2	2	2	2
Engine RPM	2200	2571	2571	2571
Rated Max. Continuous AC Output Watts*/**	5500	6500	7500	7500
Voltage*	120	120	120	120
Rated Max. Continuous Current Amps (240V)**	45.8 (22.9)	54.1 (27.0)	62.5 (31.2)	62.5 (31.2)
Phase	1	1	1	1
Frequency	60 Hertz	60 Hertz	60 Hertz	60 Hertz
Battery Charging Current (Max.)	2 amps	2 amps	2 amps	2 amps
Weight	329 lbs.	331 lbs.	330 lbs.	333 lbs.
Length	33.7 in.	33.7 in.	33.7 in.	33.7 in.
Width	22.2 in.	22.2 in.	22.2 in.	22.2 in.
Height	19.6 in.	19.6 in.	19.6 in.	19.6 in.

\* All units are reconnectable to 120 and/or 240 volts, dual voltage output. Units are not listed per RVIA/ANSI when reconnected for dual voltage output \*\* Maximum wattage and current are subject to, and limited by, such factors as fuel Btu content, ambient temperature, altitude, engine condition, etc.. Maximum power decreases about 3.5% for each 1,000 feet above sea level; and will also decrease about 1% for each 6° C (10° F) above 16° C (60° F) ambient temperature.

Spark Plug Gap	0.040 inch (1.02 mm)
Recommended Min. Battery	· · · · ·
Class II Emission Certified	

## 1.7 EVAPORATIVE EMISSIONS INFORMATION

This generator is subject to evaporative emission standards which have been implemented by the California Air Resource Board (CARB) and the Environmental Protection Agency (EPA). If this generator is offered for sale in the state of California, it must be covered by a CARB evaporative Executive Order. If this generator is offered for sale to the final consumer in any other state, certified low-permeation fuel line must be used to supply fuel to the generator as required by EPA.

Anyone who installs or configures a fuel system to supply this generator with gasoline is required to comply with all applicable evaporative emission regulations. If this generator is configured such that it shares the primary fuel system of a vehicle in which it is installed, reduced certification requirements may apply. See the CARB guidance document MAC 05-05, located at http://www.arb. ca.gov/msprog/macs/mac0505/mac0505.pdf for further details. If this generator is installed such that it uses a dedicated fuel system, detailed evaporative emission requirements apply; contact a reputable fuel system manufacturer to purchase a complete fuel system certified for use with this generator, or consult the California Code of Regulations if you wish to obtain certification on your own. See the installation instructions in this manual for connecting fuel system vapor lines to the engine.

This generator is not legal for sale in the state of California unless all CARB evaporative emission requirements are adhered to, and is not legal for sale in any other state unless certified low-permeation fuel line is used to supply the generator with gasoline. Contact the California Air Resource Board or the Environmental protection agency for further information. CARB regulations can be found in 13 CCR §§2750 – 2773; EPA regulations can be found in 40 CFR Part 90.

## 1.8 EXHAUST EMISSIONS INFORMATION (GASOLINE)

The Environmental Protection Agency (EPA) and the California Air Resource Board (CARB) require that this generator comply with exhaust emission standards. The generator is certified to meet all applicable exhaust emission levels. This generator is certified for use as a mobile engine. It is important that you follow the maintenance specifications listed in this manual to ensure that the engine complies with emission standards for the duration of its life. This engine is certified to operate on gasoline. The emission control system on the generator consists of the following:

- Fuel Metering System
  - ~ Carburetor assembly
  - $\sim$  Fuel pump and lines
- Air Induction System
  - ~ Intake pipe / manifold
  - $\sim$  Air cleaner
- Ignition System
  - ~ Spark plug
  - ~ Ignition module
- Catalytic Converter (if equipped)

# 

**Recreational Vehicle Generators** 

The Emissions Compliance Period referred to on the Emissions Compliance Label indicates the number of operating hours for which the engine has been shown to meet Federal and California emission requirements. See the table below to determine the compliance period for this generator. The displacement of the engine is listed on the Emissions Compliance Label.

Displacement	Category	Compliance Period
	А	500 Hours
> 66 cc - < 225 cc	В	250 Hours
	С	125 HOurs
	А	1000 Hours
≥ 225 cc	В	500 Hours
	С	250 Hours

## 1.9 EXHAUST EMISSIONS INFORMATION (PROPANE)

The Environmental Protection Agency (EPA) and the California Air Resource Board (CARB) require that this generator comply with exhaust emission standards. The generator is certified to meet all applicable exhaust emission levels. This generator is certified for use as a mobile engine. It is important that you follow the maintenance specifications listed in this manual to ensure that the engine complies with emission standards for the duration of its life. This engine is certified to operate on propane fuel (LP). The emission control system on the generator consists of the following:

- Fuel Metering System
  - ~ Mixer assembly
  - $\sim$  Fuel regulator and lines
- Air Induction System
  - ~ Intake pipe / manifold
  - $\sim$  Air cleaner
- Ignition System
  - ~ Spark plug
  - ~ Ignition module
- Catalytic Converter (if equipped)

The Emissions Compliance Period referred to on the Emissions Compliance Label indicates the number of operating hours for which the engine has been shown to meet Federal and California emission requirements. See the table below to determine the compliance period for this generator. The displacement of the engine is listed on the Emissions Compliance Label.

Displacement	Category	Compliance Period
	А	500 Hours
> 66 cc - < 225 cc	В	250 Hours
	С	125 HOurs
	А	1000 Hours
≥ 225 cc	В	500 Hours
	С	250 Hours

## 2.1 GENERATOR CONTROL PANEL

The following features are mounted on the generator control panel (Figure 2.1):

## ◆ 2.1.1 FUEL PRIMER

Before starting a cold engine (if it has not been started in more than two weeks), press this switch for approximately ten seconds to bring fuel from the tank to the fuel pump. This rocker type switch springs back into its original position when it is released.


## ◆ 2.1.2 START/STOP SWITCH

To crank and start the engine, hold this switch in the START position. Release the switch when the engine starts. To stop an operating engine, press and hold the switch in the STOP position until the engine shuts off. The switch center position is the RUN position.

## ◆ 2.1.3 7.5 AMP FUSE

The fuse protects the engine's DC control circuit against electrical overload. If the fuse element has melted open due to overloading, the engine cannot be cranked. If the fuse must be replaced, use only an identical 7.5 amp replacement fuse.

## Figure 2.1 – Typical Control Panel

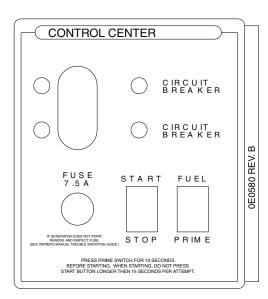

## ◆ 2.1.4 LINE BREAKERS

Protects generator's AC output circiut against overload, i.e., prevents unit from exceeding wattage/amperage capacity. The circuit breaker ratings are as follows:

Model	Circuit Breaker 1	Circuit Breaker 2	240 Volt
QuietPact 55	30A	20A	25A 2P
QuietPact 65	30A	30A	30A 2P
QuietPact 75	35A	35A	35A 2P




#### NOTE:

If this generator has been reconnected for dual voltage AC output (120/240 volts), install line breakers having an amperage rating that is different than that stated above. The replacement line breakers consist of two separate breakers with a connecting piece between the breaker handles (so that both breakers will operate at the same time). If the unit is reconnected for dual voltage, it is no longer RVIA or CSA listed.

## 2.2 OPTIONAL REMOTE START/STOP PANEL

A remote mounted Start/Stop Panel (Figure 2.2) is available that allows starting and stopping the generator engine conveniently from inside the vehicle. The remote panel includes a Start/Stop switch, hourmeter, generator run lamp, a fuel prime switch, and a wire harness.

#### Figure 2.2 — Optional Remote Panel (Part Numbers 0H3068)

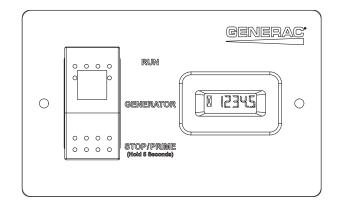

## 2.3 AUTOMATIC CHOKE

This engine is equipped with an automatic choke that consists of two main components: a choke solenoid and prechoke.

## ◆ 2.3.1 CHOKE SOLENOID

During engine cranking (Start/Stop switch at START), a solid-state choke module signals the choke solenoid to activate and cycle (choke on/choke off) until the engine starts. The choke solenoid thus opens and closes the carburetor choke valve only when the engine is cranking. When the engine starts, the choke stops cycling.

## ◆ 2.3.2 PRECHOKE

The choke system also has a temperature-sensitive metal strip that adjusts choke valve angle according to ambient temperatures (i.e., in cold ambient temperatures, choke valve closes more). Once the engine starts, an element heats the temperature-sensitive strip to a normal operating condition, opening the choke valve. This may take about three minutes in cooler weather.

## 2.4 BEFORE STARTING THE ENGINE

Instructions and information in this manual assume the generator has been properly installed, connected, serviced, tested and adjusted by a qualified installation technician or installation contractor.

#### ◆ 2.4.1 INSTALLATION

Generator installation must have been properly completed so it complies with all applicable codes, standards and regulations and with the manufacturer's recommendations.

#### ◆ 2.4.2 ENGINE LUBRICATION

Have the engine crankcase properly serviced with the recommended oil before starting. Refer to sections "Engine Specifications", "Checking the Engine Oil Level" and "Changing the Engine Oil and/ or Oil Filter" for oil servicing procedures and recommendations.



Any attempt to crank or start the engine before it has been properly serviced it with the recommended oil may result in an engine failure.

#### ◆ 2.4.3 FUEL SUPPLY

The engine must have an adequate supply of proper fuel to operate. Before starting it, check that sufficient fuel is available.

#### NOTE:

Depending on the installation, the generator may have either a separate fuel tank, or it may "share" the vehicle engine's fuel tank.

## ◆ 2.4.4 COOLING AND VENTILATING AIR

Air inlet and outlet openings in the generator compartment must be open and unobstructed for continued proper operation. Without sufficient cooling and ventilating airflow, the engine/generator quickly overheats, which causes it to shut down and may damage the generator.

#### ◆ 2.4.5 ENGINE EXHAUST GAS

Before starting the generator engine, inspect for exhaust leaks and ensure there is no way for exhaust gases to enter the vehicle interior and endanger people or animals. Close windows, doors and other openings in the vehicle that, if open, might permit exhaust gases to enter the vehicle.

• See the following safety warnings.





- ☆ Generator engine exhaust contains DEADLY carbon Monoxide, an odorless, colorless poisonous gas. Breathing carbon monoxide can cause: dizziness, throbbing temples, nausea, muscular twitching, headache, vomiting, weakness and sleepiness, inability to think clearly, fainting, unconsciousness or even death. If you experience any carbon monoxide poisoning symptoms, move into fresh air and immediately seek medical attention.
- ▲ Never operate the generator set with the vehicle inside any garage or other enclosed area.
- Adequate, unobstructed flow of cooling and ventilating air is critical for expelling toxic carbon monoxide gas and fuel vapors from the generator compartment and for proper generator operation. Without sufficient cooling airflow, deadly carbon monoxide gas can accumulate and the engine/generator may quickly overheat, causing serious damage to the generator. Do not operate the genset in any confined space.
- ∧ The exhaust system must be installed in accordance with the genset installation manual. Do not alter the installation or permit even partial blockage of ventilation systems, as this can seriously affect the safe and proper operation of the generator.
- ▲ Do not operate the generator if the exhaust system is leaking or has been damaged or if you have experienced carbon monoxide poisoning symptoms during use. Shut down the generator and do not operate it until it has been inspected and/or repaired.
- Never sleep in the vehicle while the genset is running unless the vehicle has a working carbon monoxide detector.

## 2.5 STARTING THE GENERATOR

Read the vehicle manufacturer's instructions. The owner/ operator should become familiar with the vehicle in which this generator is installed. Differences exist between vehicles. For example, some vehicles may use a transfer switch to isolate dockside power from the generator, while other vehicles may use an isolating receptacle. Some vehicles may be equipped with a DC converter which allows the generator to power certain DC lighting and other DC loads.

To crank and start the generator engine, proceed as follows:

1. Turn OFF electrical loads using the means provided in the vehicle (such as a main line circuit breaker or transfer switch).

#### NOTE:

If starting from the generator control panel, turn OFF loads by setting the generator's main circuit breaker to the OFF (or open) position. If starting from a remote panel, turn OFF loads using the means provided in the vehicle (such as a main circuit breaker). Electrical load circuits will be turned ON after the generator has started, stabilized and warmed up.

- 2. If the engine has not been started in more than two weeks, press the Fuel Pump Primer switch and hold it for about 10 seconds. However, if the engine is warm, skip Step 2.
- 3. To crank and start the engine, hold the start/stop switch at START. Release the switch when the engine starts.



- ▲ If the engine does not start after it has been cranking for 15 seconds, release the Start/Stop switch and wait 1 minute before trying again. Holding the switch for longer than 15 seconds can damage the starter motor.
- 4. Let the engine run at no-load for a few minutes to stabilize and warm up.
- 5. Turn ON electrical loads using the means provided (such as a main circuit breaker or transfer switch).

## 2.6 STOPPING THE GENERATOR

- 1. Turn OFF all electrical loads using the means provided (such as a main circuit breaker or transfer switch).
- 2. Let generator run at no-load for a few minutes, to stabilize internal engine generator temperatures.
- 3. Place the Start/Stop switch in its STOP position. The engine will come to a complete stop.

# 2.7 APPLYING LOADS TO GENERATOR

When applying electrical loads to the generator, observe these guidelines:

- Before applying electrical loads, let the generator stabilize and warm up for a minute or two.
- DO NOT overload the generator.

## ◆ 2.7.1 LETTING THE ENGINE STABILIZE

The generator supplies correct rated voltage only at the proper governed speed. Some electrical appliances may be extremely sensitive to voltage. Incorrect voltages can damage such appliances.

If electrical loads are applied at reduced operating speeds, such loads imposed on the engine when sufficient power is not available may shorten engine life. Never turn ON electrical loads until after the generator engine has started and stabilized at no-load.

## ◆ 2.7.2 DO NOT OVERLOAD THE GENERATOR

Read the rated wattage/amperage capacity of the generator on the generator data label (see "Generator Identification").

Applying electrical loads in excess of the unit's rated capacity will cause the engine/generator to automatically shut down.

To avoid overloading, add up the wattage of all connected electrical lighting, appliance, tool and motor loads. This total should not be greater than the generator's rated wattage capacity.

- Most lighting, appliance, tool and motor loads indicate their required watts on their nameplate or data plate. For light bulbs, simply note the wattage rating of the bulb.
- If a load does not show its rated wattage, multiply that load's rated VOLTS times AMPS to obtain WATTS.
- Induction type motors (such as those that run the vehicle's furnace fan, refrigerator, air conditioner, etc.) need about 2-1/2 times more watts of power for starting than for running (for a few seconds during motor starting). Be sure to allow for this when connecting electrical loads to the generator. First, figure the watts needed to start electric motors in the system. To that figure, add the running wattages of other items that will be operated by the generator.
- Do not apply heavy electrical loads for the first two or three hours of operation.

## 2.8 PROTECTION SYSTEMS


## ◆ 2.8.1 LOW OIL PRESSURE SWITCH

This switch (Figure 2.3) has normally closed (N.C.) contacts that are held open by engine oil pressure during cranking and operating. Should oil pressure drop below a preset level, switch contacts close, and the engine automatically shuts down. The unit should not be restarted until oil is added.

## ◆ 2.8.2 HIGH TEMPERATURE SWITCH

This switch (Figure 2.3), which has normally open (N.O.) contacts, is mounted near the oil filter. The contacts close if the temperature should exceed approximately  $270^{\circ}$  F ( $132^{\circ}$  C) for gasoline models, and  $284^{\circ}$  F ( $140^{\circ}$  C) for LP models, initiating an engine shutdown.




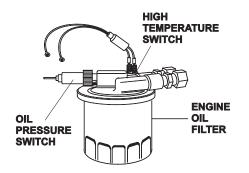

## ◆ 2.8.3 FIELD BOOST

The Controller Circuit Board houses a field boost diode and resistor that are not part of the automatic choke circuit. These two components are part of a "field boost" circuit (Figure 2.4). During engine cranking only, a positive DC (battery) voltage is delivered through a diode, resistor, brushes, slip rings, and the generator rotor. Application of this voltage to the rotor "flashes the field" whenever it is started. Flashing of the field each time the generator starts makes sure that a sufficiently strong magnetic field is available to produce "pickup" voltage in the stator windings.




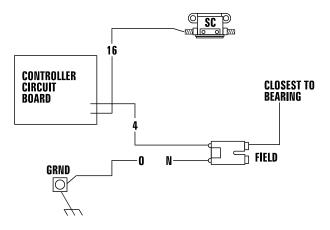

## ◆ 2.8.4 OVERVOLTAGE PROTECTION

A solid-state voltage regulator (Figure 2.5) controls the generator's AC output voltage. This regulator supplies an excitation current to the rotor. By regulating the rotor's excitation current, the strength of its magnetic field is regulated and, in turn, the voltage delivered to connected electrical loads is controlled. When the AC frequency is 60 Hertz, voltage is regulated at 115 volts.



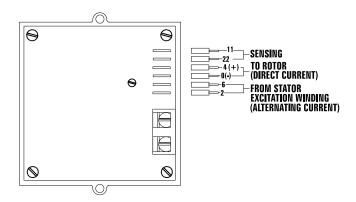

The voltage regulator also incorporates a "voltage surge protection circuit." This circuit prevents troublesome surges in the generator AC output voltage. Voltage surge is a common cause of damage to electronic equipment.



Section 3 – Maintenance

**Recreational Vehicle Generators** 

# ◆ 2.8.5 OPERATION IN HIGH GRASS OR BRUSH

Never operate the generator while the vehicle is parked over high grass, weeds, brush, leaves or any other combustible substance. Such materials can ignite and burn from the heat of the exhaust system. The generator exhaust system becomes extremely hot during operation and remains hot for a long time after it has shut down.

## 3.1 CHECKING THE ENGINE OIL LEVEL

For oil capacities and requirements, see the "Engine Oil Requirements" section. Check the engine crankcase oil level at least every eight hours of operation, or before it is used. To check the engine oil level, proceed as follows (see Figure 3.1):

- 1. Be sure the generator is as level as possible.
- 2. Remove the dipstick and wipe it dry with a clean, lint-free cloth.
- 3. Install and tighten the dipstick cap; then, remove it again. The oil level should be at the dipstick "Full" mark.
- 4. If necessary, remove the oil fill cap on the rocker cover and slowly add oil until it reaches the dipstick "Full" mark. DO NOT FILL ABOVE THE "FULL" MARK.



▲ Never operate the engine with the oil level below the "Add" mark on the dipstick. Doing this could damage the engine.

5. Install and tighten the oil fill cap and the dipstick before operating the engine.

## 3.2 CHANGING THE ENGINE OIL AND/OR OIL FILTER

#### ☆ Hot oil may cause burns. Allow engine to cool before draining oil. Avoid prolonged or repeated skin exposure with used oil. Thoroughly wash exposed areas with soap.


- Change the **engine oil** after the first 25 hours of operation. Thereafter, change the oil every 100 operating hours. Change the oil more frequently if operating consistently under heavy load or at high ambient temperatures.
- Change the engine **oil filter** after the first 25 hours of operation, and every 100 operating hours thereafter.

To change the oil and/or oil filter, proceed as follows:

1. Run the engine until it is thoroughly warmed up (at least five minutes) then shut OFF the engine.

2. With the engine still warm from running, remove the oil drain plug (Figure 3.1). Drain the oil into a suitable container.

#### Figure 3.1 — Oil Dipstick/Fill Tube and Location of Oil Drain Plug

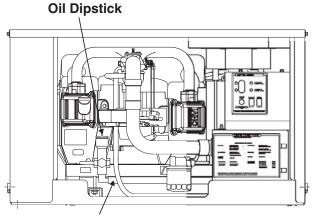

#### Oil Drain Hose


- 3. After the oil has drained, replace the oil drain plug. (If only changing the oil, go to step 7.)
- 4. With the oil drained, remove the old oil filter by turning it counterclockwise (Figure 3.2).
- 5. Apply a light coating of clean engine oil to the gasket of the new filter.
- 6. Screw the new filter on by hand until its gasket lightly contacts the oil filter adapter. Then, tighten the filter an additional 3/4 to one turn.
- 3. After the oil has drained, replace the oil drain plug. (If only changing the oil, go to step 7.)
- 4. With the oil drained, remove the old oil filter by turning it counterclockwise (Figure 3.2).
- 5. Apply a light coating of clean engine oil to the gasket of the new filter.
- 6. Screw the new filter on by hand until its gasket lightly contacts the oil filter adapter. Then, tighten the filter an additional 3/4 to one turn.
- Remove the dipstick and fill crankcase with the proper type and amount of recommended oil (see "Engine Oil Requirements"). The engine crankcase can hold about 1.8 liters or 1.9 quarts with oil filter change. DO NOT FILL ABOVE THE "FULL" MARK.
- 8. Install and tighten the dipstick before operating the engine.
- 9. Start the engine and check for leaks.
- 10. Dispose of used oil at a proper collection center.

#### NOTE:

Check the oil level and fill to the "FULL" mark after checking for leaks. The filter will retain some oil.

# 

Figure 3.2 — Engine Oil Filter

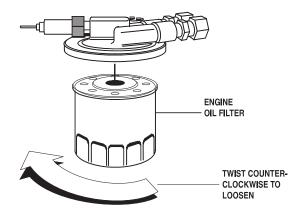


## 3.3 MAINTAINING THE ENGINE AIR CLEANER

## ◆ 3.3.1 CLEANING THE FOAM PRECLEANER

Clean and re-oil the foam pre-cleaner every three months or every 100 hours of operation, whichever occurs first. Service the foam pre-cleaner more frequently if operating the generator in extremely dusty or dirty conditions. Use the following procedure (Figure 3.3).

- 1. At the Air Box Cover, turn the plastic wing screw counterclockwise to loosen.
- 2. Remove the Air Box Cover by pulling up and left to clear the three locating tabs.
- 3. Turn the exterior steel wing nut on the left side of the Air Box Compartment counterclockwise and remove.
- 4. Pull the Air Filter Assembly to the right and out of the front of the compartment.
- 5. Remove the foam pre-cleaner from the air filter.
- 6. Wash the foam pre-cleaner in liquid detergent and water.
- 7. Wrap the foam pre-cleaner in a clean cloth and gently squeeze it dry.
- 8. Saturate the foam pre-cleaner in clean engine oil. Gently squeeze it in a clean cloth to remove excess oil and to distribute the oil evenly (DO NOT TWIST).
- 9. Slide the foam pre-cleaner onto the air filter.
- 10. With your right hand on the air filter end, angle the assembly into the compartment and insert the Offset Stud into the hole on the left side of the Air Box Compartment. Before the air filter gasket contacts the sheet metal wall, ensure the rubber snout of the carburetor intake adapter is "captured" within the footprint of the Air Filter.
- 11. Replace the steel wing nut onto the Offset Stud and tighten clockwise.
- 12. Replace the Air Box Compartment Cover back into all three locating tabs and replace the plastic wing screw (Tighten clockwise carefully).

Figure 3.3 – Engine Air Cleaner

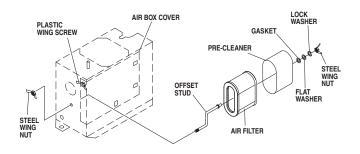

## ◆ 3.3.2 REPLACING THE PAPER AIR FILTER

Replace the Paper Air Filter Element after every 250 hours of operation. Use the following procedure (Figure 3.3).

- 1. At the Air Box Cover, turn the plastic wing screw counterclockwise to loosen.
- 2. Remove the Air Box Cover by pulling up and left to clear the three locating tabs.
- 3. Turn the exterior steel wing nut on the left side of the Air Box Compartment counterclockwise and remove.
- 4. Pull the Air Filter Assembly to the right and out of the front of the compartment.
- 5. Twist the steel wing nut counterclockwise while holding the offset stud. Set aside and save all this hardware for use with the new air filter and pre-cleaner.
- 6. Discard old air filter and pre-cleaner safely.
- 7. Insert the flanged end of the Offset Stud into the new air filter and through the hole in the end plate.
- 8. Install the gasket, flat washer, lock washer and wing nut in that order. Tighten the wing nut clockwise while aligning the Offset Stud as in Figure 3.3.
- Saturate the foam pre-cleaner in clean engine oil. Gently squeeze it in a clean cloth to remove excess oil and to distribute the oil evenly (DO NOT TWIST).
- 10. Slide the foam pre-cleaner onto the air filter.
- 11. With your right hand on the air filter end, angle the assembly into the compartment and insert the Offset Stud into the hole on the left side of the Air Box Compartment. Before the air filter gasket contacts the sheet metal wall, ensure the rubber snout of the carburetor intake adapter is "captured" within the footprint of the Air Filter.
- 12. Replace the steel wing nut onto the Offset Stud and tighten clockwise.
- 13. Replace the Air Box Compartment Cover back onto all three locating tabs and replace the plastic screw (Tighten clockwise carefully).




**Recreational Vehicle Generators** 

## 3.4 CHECKING THE ENGINE SPARK PLUG

Clean the spark plug and reset the spark plug gap every 100 hours of operation.

- 1. Clean the area around the base of the spark plug to keep dirt and debris out of the engine. Clean by scraping or washing using a wire brush and commercial solvent. Do not blast the spark plug to clean.
- 2. Remove the spark plug and check the condition. Replace the spark plug if worn or if reuse is questionable.
- 3. Check the spark plug gap using a wire feeler gauge. Adjust the gap to 0.040 inch (1.02 mm) by carefully bending the ground electrode (Figure 3.4).

#### Figure 3.4 – Setting the Spark Plug Gap

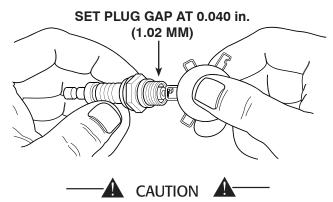

▲ Sparking can occur if the wire terminal does not fit firmly on the spark plug terminal end. If necessary, re-form the wire terminal to obtain a tight fit.

## 3.5 FUEL FILTER (GASOLINE ONLY)

Remove and replace the fuel filter (Figure 3.5) once each year or every 400 hours of operation, whichever comes first.

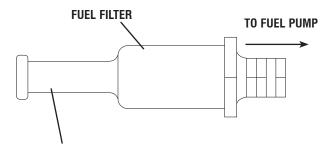


Figure 3.5 – Fuel Filter

#### **CUSTOMER FUEL CONNECTION**

## 3.6 CLEAN SPARK ARRESTOR

The engine exhaust muffler has a spark arrestor screen. Inspect and clean the screen every 50 hours of operation or once each year, whichever comes first.


#### NOTE:

If using the generator on any forest-covered, brush-covered or grass-covered unimproved land, it must equipped with a spark arrestor. The spark arrestor must be maintained in good condition by the owner/operator.

#### Clean and inspect the spark arrestor as follows (Figure 3.6):

- · Remove the screen retaining bracket by removing the screw.
- Slide the spark arrestor screen out from the tail pipe.
- Inspect screen and replace if torn, perforated or otherwise damaged. DO NOT USE a defective screen. If screen is not damaged, clean it with commercial solvent.
- Replace the screen and the retaining bracket.

#### Figure 3.6 - Spark Arrestor

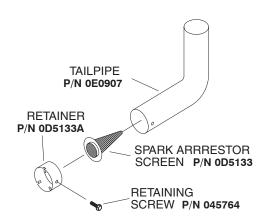

## 3.7 CLEANING THE GENERATOR

Keep the generator set as clean and dry as possible. Protect the unit against excessive dust, dirt, corrosive vapors, road splash, etc. Permitting dirt and moisture to accumulate on generator windings will have an adverse effect on the insulation resistance of those windings.

When moisture is allowed to remain in contact with windings, some of the moisture will be retained in voids and cracks in the insulation. This causes a reduced insulation resistance and will eventually cause problems. Dirt will make the problem worse, since dirt tends to hold moisture in contact with windings. Salt (as from sea air) also will worsen the problem since it tends to absorb moisture from the air. Salt and moisture, when combined, form a good electrical conductor which is detrimental to the generator.

▲ CAUTION ▲ ▲ Do NOT use a forceful spray of water to clean the generator. Water will enter the generator interior and cause problems, and may also con-

taminate the generator fuel system.



## 3.8 BATTERY MAINTENANCE

All lead-acid batteries will discharge when not in use. The generator battery should be inspected as follows:

## ◆ 3.8.1 WEEKLY

- Inspect the battery posts and cables for tightness and corrosion. Tighten and clean as necessary.
- Check the battery fluid level of unsealed batteries and, if necessary, fill with Distilled Water Only. Do not use tap water in batteries.

## ◆ 3.8.2 EVERY SIX MONTHS

 Have the state of charge and condition checked. This should be done with an automotive-type battery hydrometer.
 NOTE:

Servicing of the battery is to be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.

Damage will result if the battery connections are made in reverse.



Do not dispose of the battery in a fire. The battery is capable of exploding. Stored batteries give off explosive hydrogen gas. This gas can form an explosive mixture around the battery for several hours after charging. The slightest spark can ignite the gas and cause an explosion. Such an explosion can shatter the battery and cause blindness or other injury. Any area that houses a storage battery must be properly ventilated. Do not allow smoking, open flame, sparks, or any spark producing tools or equipment near the battery. Discharge static electricity from body before touching the battery by first touching a grounded metal surface.

A battery presents a risk of electrical shock and high short circuit current. The following precautions are to be observed when working on batteries:

- Remove watches, rings or other metal objects;
- Use tools with insulated handles;
- Wear rubber gloves and boots;
- Do not lay tools or metal parts on top of the battery;
- Disconnect any charging source prior to connecting or disconnecting battery terminals; and
- Do not use any jumper cables or booster battery to crank and start the generator engine. If any battery has discharged, remove it for recharging.



- ▲ Do not open or mutilate the battery. Released electrolyte has been known to be harmful to the skin and eyes, and to be toxic.
- ⚠ The electrolyte is a dilute sulfuric acid that is harmful to the skin and eyes. It is electrically conductive and corrosive. The following procedures are to be observed:
- Wear full eye protection and protective clothing;
- Where electrolyte contacts the skin, wash it off immediately with water;
- Where electrolyte contacts the eyes, flush thoroughly and immediately with water and seek medical attention; and
- Spilled electrolyte is to be washed down with an acid neutralizing agent. A common practice is to use a solution of 1 pound (500 grams) bicarbonate of soda to 1 gallon (4 liters) or water. The bicarbonate of soda solution is to be added until the evidence of reaction (foaming) has ceased. The resulting liquid is to be flushed with water and the area dried.

## 3.9 ADJUSTING VALVE CLEARANCE

After the first six (6) months of operation, check the valve clearance in the engine, adjust if necessary.

**Important:** If feeling uncomfortable about doing this procedure or the proper tools are not available, please contact the Authorized Dealer for service assistance. This is a very important step to insure longest life for the engine.

#### To check valve clearance:


- The engine should be cool before checking. If valve clearance is 0.002" 0.004" (0.05 0.1mm), adjustment is not needed.
- · Remove spark plug wires and position wires away from plugs.
- · Remove spark plugs.
- Make sure the piston is at Top Dead Center (TDC) of its compression stroke (both valves closed). To get the piston at TDC, remove the intake screen at the front of the engine to gain access to the flywheel nut. Use a large socket and socket wrench to rotate the nut and hence the engine in a clockwise direction. While watching the piston through the spark plug hole. The piston should move up and down. The piston is at TDC when it is at its highest point of travel.

#### To adjust valve clearance (if necessary):

- Make sure the engine is at 60° to 80° F.
- Make sure that the spark plug wire is removed from the spark plug and out of the way.
- Remove the four screws attaching the valve cover with a #2 or #3 Phillips screwdriver.
- Loosen the rocker jam nut. Use an 10mm allen wrench to turn the pivot ball stud while checking clearance between the rocker arm and the valve stem with a feeler gauge. Correct clearance is 0.002-0.004 inch (0.05-0.1 mm). (Figure 3.7).



## Figure 3.7 - Valve Clearance Adjustment

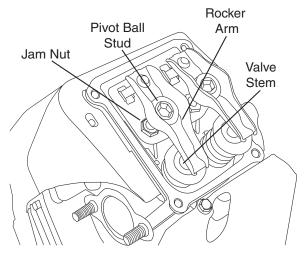

NOTE:

## Hold the rocker arm jam nut in place as the pivot ball stud is turned.

When valve clearance is correct, hold the pivot ball stud in place with the allen wrench and tighten the rocker arm jam nut. Tighten the jam nut to 174 in/lbs. torque. After tightening the jam nut, recheck valve clearance to make sure it did not change.

- Install new valve cover gasket.
- Re-attach the valve cover.

#### NOTE:

Start all four screws before tightening or it will not be possible to get all the screws in place. Make sure the valve cover gasket is in place.

- Install spark plugs.
- Re-attach the spark plug wire to the spark plug.
- On the GT-530 and GT-990, repeat the process for the other cylinder.

## 3.10 MAJOR SERVICE MANUAL

To obtain a service manual for the generator, contact the nearest Authorized Service Dealer. Make sure to identify the MODEL NUMBER and SERIES. Manuals can be obtained from the internet website or a service dealer.

## 3.11 DRIVE BELT

The engine drives the generator rotor by means of a pulley and drive belt arrangement. Drive belt tension was properly adjusted before the unit was shipped from the factory. If suspect that drive belt tension is incorrect, contact an Authorized Service Dealer.

## 3.12 EXERCISING THE GENERATOR

The manufacturer recommends starting and operating the generator at least once every seven days. Let the unit run for at least 30 minutes to "exercise" the engine.

## 3.13 OUT OF SERVICE PROCEDURE

## ◆ 3.13.1 REMOVAL FROM SERVICE

If the generator cannot be exercised every seven days, and it is to be out of service longer than 30 days, prepare the generator for storage as follows:

- 1. Start the engine and let it warm up.
- 2. Close the fuel shutoff valve in the fuel supply line and allow the unit to shut down.
- 3. While the engine is still warm from running, drain the oil completely. Refill the crankcase with SAE 5W-30 oil having API classification "For Service SF."
- 4. Attach a tag to the engine indicating the viscosity and classification of the oil in the crankcase.
- 5. Remove the spark plug and pour two or three tablespoons of clean, fresh engine oil into the spark plug threaded openings. Reinstall and tighten the spark plug.
- 6. Remove the battery and store it in a cool, dry room on a wooden board. Never store the battery on any concrete or earthen floor.
- 7. Clean and wipe the entire generator.

## ◆ 3.13.2 RETURN TO SERVICE

To return the unit to service after storage, proceed as follows:

- 1. Check the tag on the engine for oil viscosity and classification. Verify that the correct recommended oil is used in the engine (see "Engine Oil Requirements"). If necessary, drain and refill with the proper oil.
- 2. Check the state of the battery. Fill all cells of unsealed batteries to the proper level with distilled water. DO NOT USE TAP WATER IN THE BATTERY. Recharge the battery to 100 percent state of charge, or, if defective, replace the battery.
- 3. Clean and wipe the entire generator.
- 4. Reconnect the battery. Observe battery polarity. Damage may occur if the battery is connected incorrectly.
- 5. Turn OFF all electrical loads. Add fuel if necessary and then start the engine.
- 6. Allow the unit to warm up thoroughly.
- 7. Apply electrical loads to at least 50 percent of the unit's rated wattage capacity.
- 8. When the engine is thoroughly warmed up, shut it down.
- 9. The generator is now ready for service.

## 3.14 RV GENERATOR SERVICE INTERVAL

50 Hours	Clean Spark Arrestor
1st 50 Hours, then every 500 Hours	Adjust Valve Lash
100 Hours 0	Change Engine Oil/Filter
100 Hours	Clean Air Pre-filter
100 Hours	Inspect Spark Plugs
250 HoursReplace I	Paper Air Filter Element
400 Hours	Replace Fuel Filter
500 Hours	Replace Spark Plugs

Section 4	4 – Notes	<u>NOTES</u>

17

NOTES	Section 4 – Notes

# PART II – INSTALLATION INSTRUCTIONS

- A DANGER A-----

ONLY QUALIFIED ELECTRICIANS OR CONTRACTORS SHOULD ATTEMPT INSTALLATION! Safety Rules



**Recreational Vehicle Generators** 

DANGER: For fire safety, installation of a generator into a recreational vehicle must comply strictly with article 551, NFPA 70; ANSI C1-1975; AND, ANSI A119.2-1975/NFPA 501C "Standard for Recreational Vehicles" (Part 3, "Installation of Electrical Systems"). In addition, installation must comply with the manufacturer's instructions and recommendations.

## NOTICE TO INSTALLER

These *Installation Instructions* have been published by the manufacturer to aid in the installation of the products described in this manual. The manufacturer assumes that installation personnel are familiar with the procedures for installing such products, or similar products manufactured. The manufacturer also assumes that personnel have been trained in the recommended installation procedures for these products and that such training includes (a) use of common hand tools, (b) use of special tools, and (c) use of any tools and/or equipment from other suppliers.

The manufacturer cannot possibly know of and advise the recreational vehicle trade of all conceivable methods, procedures or techniques by which to perform an installation. Nor can the manufacturer anticipate every possible hazard that might result from each installation method, procedure or technique. The manufacturer has not undertaken any such wide evaluation. Therefore, people who use a method, procedure or technique that the manufacturer does not specifically recommend must first completely satisfy themselves that their safety, the safety of the vehicle's occupants and the product's safety is not endangered by the method, procedure or technique selected.

Information, illustrations, specifications, etc., contained in these *Installation Instructions* are based on the latest information available at the time of publication. Every effort has been expended to be sure that such data is both accurate and current. However, the manufacturer reserves the right to change, alter or otherwise improve this product at any time without prior notice.



- ▲ Despite the safe design of this generator, operating this equipment imprudently, neglecting its maintenance or being careless can cause possible injury or death. Permit only responsible and capable persons to operate or maintain this equipment.
- Potentially lethal voltages are generated by these machines. Ensure all steps are taken to render the machine safe before attempting to work on the generator.
- A Parts of the generator are rotating and/or hot during operation. Exercise care near running generators.
- ☆ Generator exhaust gases contain DEADLY carbon monoxide gas. This dangerous gas, if breathed in sufficient concentrations, can cause unconsciousness or even death.



- For safety reasons, the manufacturer recommends that the installation, initial start-up and maintenance of this equipment is carried out by an Authorized Service Dealer.
- Keep hands, feet, clothing, etc., away from drive belts, fans, and other moving or hot parts. Never remove any drive belt or fan guard while the unit is operating.
- When working on this equipment, remain alert at all times. Never work on the equipment when physically or mentally fatigued.
- Inspect the generator regularly, and contact the nearest Authorized Service Dealer immediately for parts needing repair or replacement.
- Inspect the generator regularly, and contact the nearest Authorized Service Dealer immediately for parts needing repair or replacement.
- Before performing any maintenance on the generator, disconnect its battery cables to prevent accidental start up. Disconnect the cable from the battery post indicated by a NEGATIVE, NEG or (–) first. Reconnect that cable last.
- Never use the generator or any of its parts as a step. Stepping on the unit can stress and break parts, and may result in dangerous operating conditions from leaking exhaust gases, fuel leakage, oil leakage, etc.

## ⚠ ENGINE EXHAUST HAZARDS ⚠

- Generator engine exhaust contains DEADLY carbon monoxide, an odorless, colorless poisonous gas. Breathing carbon monoxide can cause: dizziness, throbbing temples, nausea, muscular twitching, headache, vomiting, weakness and sleepiness, inability to think clearly, fainting, unconsciousness or even death. If you experience any carbon monoxide poisoning symptoms, move into fresh air and immediately seek medical attention.
- Never operate the generator set with the vehicle inside any garage or other enclosed area.
- Adequate, unobstructed flow of cooling and ventilating air is critical for expelling toxic carbon monoxide gas and fuel vapors from the generator compartment and for proper generator operation. Without sufficient cooling airflow, deadly carbon monoxide gas can accumulate and the engine/generator may quickly overheat, causing serious damage to the generator. Do not operate the genset in any confined space.
- The exhaust system must be installed in accordance with the genset installation manual. Do not alter the installation or permit even partial blockage of ventilation systems, as this can seriously affect the safe and proper operation of the generator.





- Do not operate the generator if the exhaust system is leaking or has been damaged or if you have experienced carbon monoxide poisoning symptoms during use. Shut down the generator and do not operate it until it has been inspected and/or repaired.
- Never sleep in the vehicle while the genset is running unless the vehicle has a working carbon monoxide detector.

## 🖄 <u>Electrical Hazards</u> 🆄

- The generator covered by this manual produces dangerous electrical voltages and can cause fatal electrical shock. Avoid contact with bare wires, terminals, connections, etc., while the unit is running. Ensure all appropriate covers, guards and barriers are in place before operating the generator. If work must be done around an operating unit, stand on an insulated, dry surface to reduce shock hazard.
- Do not handle any kind of electrical device while standing in water, while barefoot, or while hands or feet are wet. DANGEROUS ELECTRICAL SHOCK MAY RESULT.
- During installation onto the vehicle, properly ground (bond) the generator either by solid mounting to the vehicle frame or chassis, or by means of an approved bonding conductor. DO NOT connect the bonding conductor to any generator part that might be removed or disassembled during routine maintenance. If the grounding conductor must be replaced, use only a flexible conductor that is of No. 8 American Wire Gauge (AWG) copper wire minimum.
- If the vehicle electrical circuits can be powered by any other source of electricity (such as a "dockside" power receptacle), there must be no possibility of connecting the different power sources to the vehicle circuits at the same time. The dockside (utility) power source must be positively isolated from the vehicle circuits whenever the generator is operating. Failure to isolate the vehicle circuits from the dockside power supply when the generator is running may result in damage to the generator or serious injury or death to dockside (utility) power workers due to backfeed of electrical energy.
- In case of accident caused by electric shock, immediately shut down the source of electrical power. If this is not possible, attempt to free the victim from the live conductor. AVOID DIRECT CONTACT WITH THE VICTIM. Use a nonconducting implement, such as a rope or board, to free the victim from the live conductor. If the victim is unconscious, apply first aid and get immediate medical help.
- Never wear jewelry when working on this equipment. Jewelry can conduct electricity resulting in electric shock, or may get caught in moving components causing injury.

## 🙈 FIRE HAZARDS 🙈

- For fire safety, the generator must be installed and maintained properly. Installation always must comply with applicable codes, standards, laws and regulations. Adhere strictly to local, state and national electrical and building codes. Comply with regulations the Occupational Safety and Health Administration (OSHA) has established. Also, ensure that the generator is installed in accordance with the manufacturer's instructions and recommendations. Following proper installation, do nothing that might alter a safe installation and render the unit in noncompliance with the aforementioned codes, standards, laws and regulations.
- Keep a fire extinguisher in the vehicle at all times. Extinguishers rated "ABC" by the National Fire Protection Association are appropriate for use on the recreational vehicle generator electrical system. Keep the extinguisher properly charged and be familiar with its use. If there are any questions pertaining to fire extinguishers, consult the local fire department.

## 🛕 EXPLOSION HAZARDS 🛕

- Do not smoke around the generator. Wipe up any fuel or oil spills immediately. Ensure that no combustible materials are left in the generator compartment, or on or near the generator, as FIRE or EXPLOSION may result. Keep the area surrounding the generator clean and free from debris.
- Gasoline is extremely FLAMMABLE and its vapors are EXPLOSIVE. Do not permit smoking, open flame, sparks or any source of heat in the vicinity while handling gasoline. Comply with all laws governing the storage and handling of gasoline.
- Fuel lines must be properly installed and fastened, and free of leaks. There must be no possibility of gasoline vapors entering the vehicle interior.
- It is required that an approved, flexible, nonconductive fuel line between the generator fuel connection point and rigid fuel lines be installed.
- If the generator is equipped with a liquid propane (LP) gas fuel system, install the unit so it complies with all codes, standards and regulations pertaining to such systems. LP gas is highly explosive. The gas tends to settle in low areas where even the slightest spark can ignite it and cause an explosion. Do not allow gas vapors to enter the vehicle.

## 1.1 PURPOSE AND SCOPE OF THE INSTALLATION INSTRUCTIONS

These *Installation Instructions* have been prepared especially for the purpose of familiarizing installers and owners of the applicable equipment with the product's installation requirements. Give serious consideration to all information and instructions in the manual, both for safety and for continued reliable operation of the equipment.

Because of the different recreational vehicle models and the variations between the models, it would be extremely difficult, if not impractical, to provide detailed instructions for every possible installation. For that reason, instructions and illustrations in this manual are general in nature. Illustrations are not intended to serve as detailed installation blueprints.

The installation should comply strictly with all applicable codes, standards and regulations pertaining to the installation and use of this product. If any portion of this manual appears to be in conflict with such codes, standards or regulations, the applicable codes, standards or regulations must take precedence over the manual.

## 1.2 SAFETY

Before handling, installing, operating or servicing this equipment, carefully read the "Notice to Installer" and "Safety Rules". Comply with all safety rules to prevent death, personal injury or damage to equipment and/or property. Stress safety to all installers, operators and service technicians who work on this equipment.

## 1.3 STANDARDS BOOKLETS

Installation, use and servicing of this equipment should comply strictly with published standards, as well as the manufacturer's recommendations. The following standards booklets (latest revision) are available from the sources indicated:

- 1. NFPA Standard 501C, "Standard for Recreational Vehicles," available from the National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.
- 2. NFPA 70, "NFPA Handbook of the National Electric Code," available same as Item 1.
- ANSI C1-1975 and ANSI 119.2-1975, available from the American National Standards Institute, 1430 Broadway, New York, NY 10018.
- 4. ANSI A119.2/NFPA 501C, available from the Recreational Vehicle Association, 1896 Preston White Drive, Reston, VA 22090.
- 5. California Administrative Code, Title 25, available from the State of California, Documents Section, P.O. Box 1015, North Highlands, CA 95660.
- CSA Electrical Bulletin 946, available from the Canadian Standards Association, Housing and Constructions Materials Section, 178 Rexdale Boulevard, Rexdale, Ontario, Canada, M9W 1R3.

## 1.4 EQUIPMENT DESCRIPTION

Instructions and information in this section pertain to air-cooled generators. These generators are designed specifically for installing in recreational vehicles. They operate 120-volt, single-phase, 60-Hertz, AC electrical loads.

## 1.5 GENERATOR ENGINE OPERATING SPEED

The generator's revolving field (rotor) is driven by a two-cylinder, four-cycle engine through a pulley and drive belt arrangement. The generator supplies 120 volts AC at 60 Hertz when the rotor is operating at 3,600 rpm.The drive belt arrangement allows the engine to operate at a lower speed than the rotor.

## 1.6 GENERATOR AC CONNECTION SYSTEM


These air-cooled generator sets are equipped with dual stator AC power windings. These two stator windings supply electrical power to customer electrical loads by means of a dual 2-wire connection system.

Generators may be installed to provide the following outputs:


1) 120 VAC loads only — one load with a maximum total wattage requirement equal to the generator's rated power output (in watts), and 120V across the generator output terminals (see Fig. 1.1).

2) 120/240 VAC loads — one load with a maximum total wattage requirement equal to the generator's rated power output, and 240 V across the generator output terminals; or two seperate loads, each with a maximum total wattage requirement equal to half of the generator's rated power output (in watts), and 120 V across the generator output terminals (see Fig. 1.3.)

## Figure 1.1 – Connection for 120 Volts Only

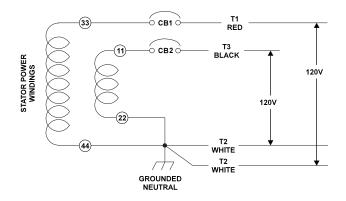

## GENERAL INFORMATION

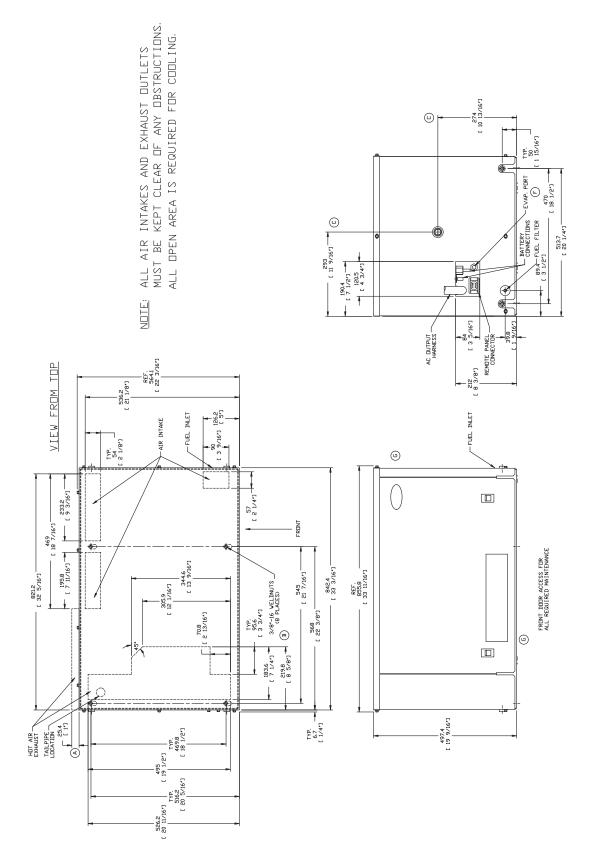


*igure 1.2 - Major Features and Dimensions (Drawing No. 0E1058-G)* 

Section 2 – Installation

**Recreational Vehicle Generators** 

Figure 1.3 - Connection for 120/240 Volts

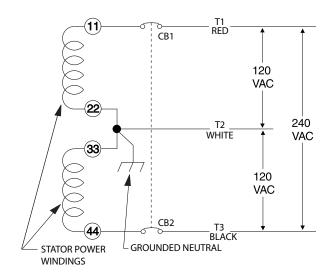

- The AC connection system on air-cooled generators uses a GROUNDED neutral.
- A separate green ground wire is connected to the recreational vehicle's junction box.
- Loads connected across T1 (Red) to T2 (White), and T3 (Black) to T2 (White), must not exceed ratings for the specific generator (see "Generator Specifications").

NOTE:

Do NOT connect loads in excess of circuit breaker ratings.

## 2.1 LOCATION AND SUPPORT

## ◆ 2.1.1 GENERATOR LOCATION

#### NOTE

## Be sure the installation complies with all standards and codes listed in the "Standards Booklets" section of this manual.

The most desirable location for the generator set is between the vehicle's main frame members. However, this is seldom possible. Most units must be installed on the side of the vehicle and are difficult to reinforce.

Many recreational vehicles have been factory equipped with an area for the generator set. Some vehicles may even have a generator compartment provided by the vehicle manufacturer.

Plan the generator location based on the following:


- The generator set must be installed on a framework that is part of the recreational vehicle, as outlined in the "Generator Support" section.
- The location must provide an access opening that is large enough to permit generator removal (unless the generator is to be removed from underneath the supporting framework).
- The location must provide easy access to frequently serviced components, such as filters, oil drains, spark plugs and other common maintenance parts.

- The location must provide sufficient room to allow minimum clearances as outlined in "Generator Compartments". If sound insulation is to be used on the compartment walls and ceiling, the minimum recommended applies to the space between the generator and such insulation.
- The location must provide adequate cooling and ventilating airflow for the generator without a great deal of work and expense.
- If mounting the generator in an enclosed compartment, the base of the generator must rest flat on the floor without any gaps.
- When using a suspended mounting system, ensure the base of the generator is flush with the surrounding bodywork. If the unit is mounted higher in the structure, heated air may recirculate into the generator causing it to overheat.

## ◆ 2.1.2 GENERATOR SUPPORT

The generator must be securely attached to a metal framework that has been made part of the vehicle frame structure by bolting or welding. The metal framework on which the generator will rest and which will restrain the generator set should consist of at least two horizontal beams. These beams should consist of (a) 1-1/2-inch square, 11-gauge steel tubing OR (b) 1-1/2-inch, 11-gauge angle iron. A typical supporting frame with horizontal support tubing, is shown in Figure 2.1.

## Figure 2.1 – Typical Horizontal Support Frame

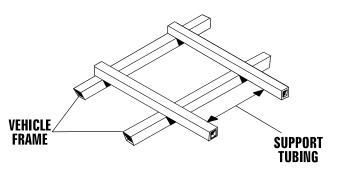

The generator can be installed so that it sits on top of the horizontal support tubing if the vehicle design permits. Another method is to suspend the generator below the horizontal support tubing by means of suitable, structurally sound metal framework. The following general rules apply:

- Vehicle construction MUST be capable of supporting the weight of the generator.
- Whether the generator is mounted above the horizontal support tubing or suspended below the tubing, the supporting frame used must be structurally sound.
- If the generator cannot be bolted directly to the supporting frame or support tubing, consider using additional tubing, angle brackets or other supports to give the supporting frame sufficient strength.




## ◆ 2.1.3 SUSPENDED MOUNTING

If planning to suspend the generator below the horizontal support tubing, the suspension method to use with the vehicle frame members must (a) be able to support the weight of the generator AND (b) provide sufficient restraint for the generator. One typical suspended mounting system is shown in Figure 2.2. The location of a suspended mounting system must be carefully planned, keeping the following general rules in mind:

• Protect the generator against road splash and debris. Baffles or splash guards may be required to protect certain areas of the generator. To make sure the generator is adequately protected, road test the installation through mud, water and slush.

#### Figure 2.2 – Typical Suspended Mounting System

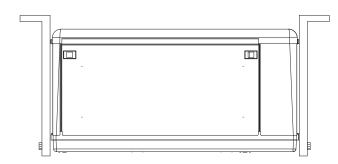


• The installer must make certain that the selected location will permit adequate cooling and ventilating airflow to be supplied.

## ◆ 2.1.4 GENERATOR RESTRAINT

Use four 3/8"-16 hardened steel bolts (Grade 5) to fasten the generator to the supporting frame or the support tubing. These bolts must pass through (a) the generator mounting base, (b) the compartment floor (if a compartment is used) and (c) the supporting framework (Figure 2.3). All bolts must be long enough so that when tight, at least three threads are visible past the retaining lock nuts. Refer to "Generator Compartments" for the location of the generator mounting holes.



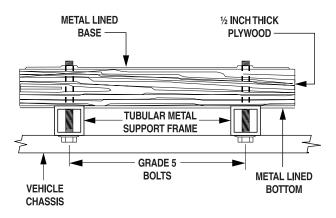

## 2.2 GENERATOR COMPARTMENTS


Whether the generator set is being installed inside a compartment specifically manufactured to house a generator or inside a compartment that the installer constructs, the compartment MUST meet certain specifications as outlined in the following sections:

## 2.2.1 COMPARTMENT SIZE

Plan the compartment size carefully. Provide a minimum clearance of 1/2 inch (13 mm) on the front and top, 1 inch (25 mm) on the sides, and from the back for air circulation AFTER the compartment has been lined with metal and sound insulation (Figure 2.4). **NOTE:** 

#### Refer to "Figure 1.2 – Major Features and Dimensions".

#### Figure 2.4 – Clearances

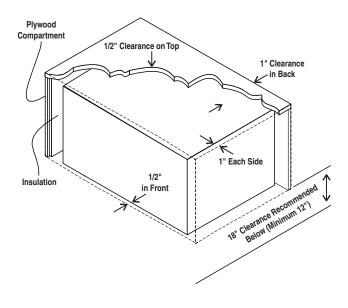

#### 2.2.2 COMPARTMENT CONSTRUCTION

• The generator compartment should be either constructed of, or lined with, 26-gauge galvanized steel.

#### NOTE:


## Aluminum is NOT an acceptable alternative to galvanized steel due to aluminum's low melting point.

- If the compartment is lined with galvanized steel, it may be constructed of any material. The manufacturer recommends that the compartment be constructed of 1/2-inch thick plywood (not strandboard), with the floor made of a double thickness of 1/2-inch plywood with the grain of the wood at cross section for added strength (Figure 2.5).
- If constructing a compartment, line the exterior (underside) of the compartment floor with 26-gauge galvanized steel.
- All seams, splices and joints of the compartment walls (unless vapor tight by design) should be caulked to prevent poisonous, flammable or explosive vapors from entering the vehicle interior.

Section 2 – Installation

**Recreational Vehicle Generators** 

Figure 2.5 – Typical Compartment Construction

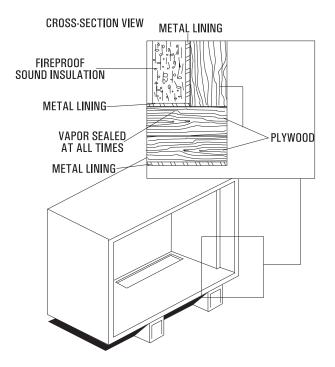

#### NOTE:


Caulking must be done so that the caulking material will stay in place permanently. Pressing such materials as putty tape onto joints and seams is not acceptable. A high quality silicone rubber base sealant is recommended.

- Holes and openings made in the compartment walls to allow for the passage of electrical conduit, conductors, hoses, cables, etc., into the vehicle living area must be sealed vapor tight with silicone rubber base sealant.
- If flexible metal conduit is used, it must be sealed internally at the end where it terminates inside the compartment's electrical junction box.

#### NOTE:

Flexible metal conduit, due to its unique construction, is NOT vapor tight along its entire length.

- Seams and joints of the galvanized steel (whether used as a liner or for the compartment itself) must be lapped and mechanically secured. Such seams may be manufactured, welded, bolted, riveted or screwed. Manufactured lock seams are shown in Figure 2.6. Installer constructed compartments typically utilize a standard lap joint.
- After the compartment has been metal lined and vapor sealed, line the compartment interior walls and ceiling with an approved, nonflammable sound insulating material. See "Sound Insulating Materials".

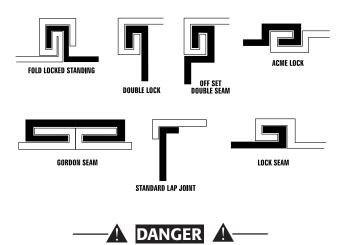

Do not install any flammable material directly above or around the compartment. Heat, transferred through the compartment structure, may be sufficient to ignite, char or discolor seat cushions, fiberboard and other flammable materials. Use approved nonflammable insulating materials in high temperature areas.

#### 2.2.3 SOUND INSULATING MATERIALS

Once installers have determined that a compartment is properly constructed and metal lined, they can add acoustical material. This may include additional sealant or insulating material, to reflect noise away from the vehicle interior.

Sound insulating materials should be of a nonflammable type. One excellent insulating material is a 1-inch (25 mm) thick fiberglass having a 2-pound density. When fiberglass is used, its coated side should face toward the compartment interior.



#### Do not install sound insulation or any absorbent material on the compartment floor interior. Such materials will become soaked with combustible or explosive vapors and liquids and will become a fire hazard.

Using a combination of sound insulating materials can often reduce noise more effectively than a single material. For example, a sheet of lead or visco-elastic material, along with a layer of other acoustical material, is more effective than when a single material is used.

#### Figure 2.6 – Types of Lock Seams



## ◆ 2.2.4 ACOUSTICS

For additional noise abatement, the installer may wish to consider the following:

- Using special sound insulating materials.
- Construction of a special noise abatement compartment.

NOTE:

#### Any method used to reduce noise must not adversely affect the flow of cooling and ventilating air into or out of the compartment.

In addition to the effective use of sound insulating materials, construction of a special noise abatement compartment might be considered to reduce noise levels. Such a compartment might be constructed as follows (Figure 2.7):


- Use 5/8-inch thick or 3/4-inch thick plywood in the compartment.
- Construct the compartment floor of a double thickness of 5/8inch or 3/4-inch plywood.
- Line the compartment interior walls and floor, as well as the underside of the floor, with 26-gauge galvanized steel.
- · Vapor seal all compartment seams and joints.
- Over the galvanized steel lining, install a combination of acoustical materials as mentioned in "Sound Insulating Materials".



# To prevent fire or explosion, do not install any insulation or other absorbent materials on the interior or underside of the compartment floor.

• Seal all compartment door edges to prevent noise leakage around the door perimeter.

#### Figure 2.7 – Typical Noise Abatement

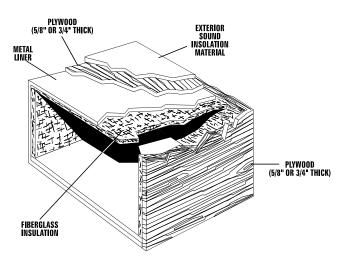

• Line the compartment door interior (except for air openings) with suitable, fireproof sound insulation (such as 1-inch (25 mm) thick fiberglass with a 2-pound density).

#### ◆ 2.2.5 COMPARTMENT FLOOR CUTOUTS

Provide openings in the generator compartment for the following items (Figure 2.8):

- · Engine exhaust and cooling air outlets
- · Generator cooling air inlet
- Four holes for passage of generator mounting bolts. See "Generator Restraint".



Fuel lines and exhaust piping must not penetrate into the vehicle living area.

## 2.3 COOLING AND VENTILATING AIR

It is absolutely essential that an adequate flow of air for cooling, ventilating and engine combustion be supplied to the generator set. Without sufficient airflow, the engine/generator quickly overheats. Such overheating can cause serious operating difficulties and also may cause fire and personal injury. The installer must make sure that sufficient air is available to the generator for cooling, ventilating and combustion. The installer also must provide for a path for exhausting the cooling air to the exterior of a compartment, if so equipped.




Never use discharged cooling air for heating or permit such air to enter the vehicle interior. This air contains deadly carbon monoxide gas and other poisonous, flammable or explosive gases.

## ◆ 2.3.1 GENERATOR AIRFLOW

Engine operation drives cooling fans for the two-stage cooling air system. A pressure fan draws cooling air into the top of the generator (Figure 2.9). This airflow cools the engine/generator and electronic components. The second part of the cooling system, a suction fan, draws air that is heated from a hot engine into a collector pan at the base of the unit. This heated air (although cooler than exhaust muffler) is then deflected out the bottom toward the ground.


#### Figure 2.9 – Airflow Through Engine/Generator

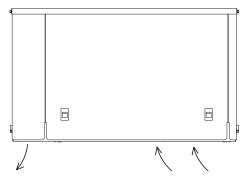



**Recreational Vehicle Generators** 



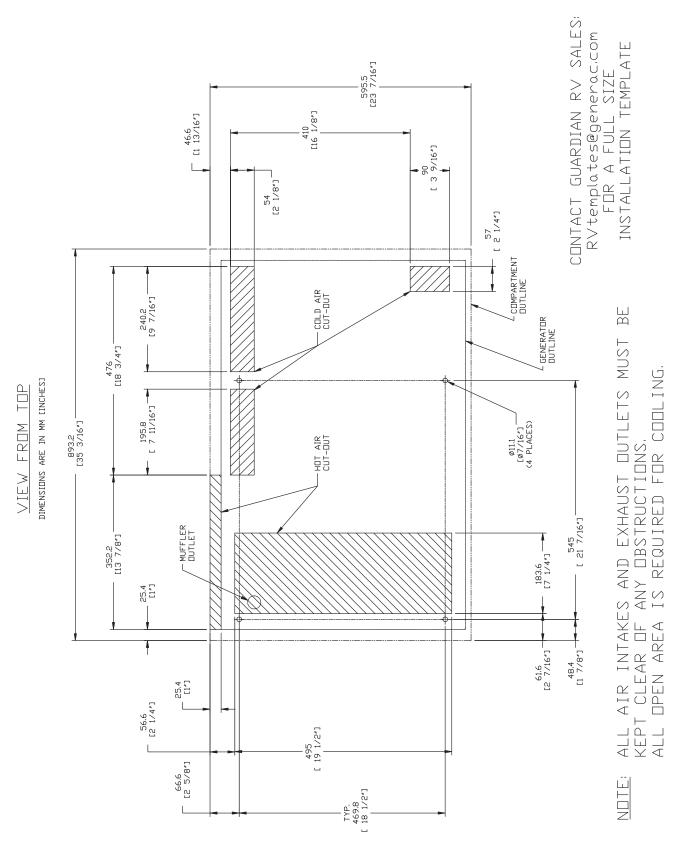



## ◆ 2.3.2 TESTING THE INSTALLATION

The manufacturer recommends testing the installation to be sure adequate cooling airflow is available to the unit before placing the unit into service. If the unit shows signs of overheating, enlarge the air openings. Never place a unit into service until absolutely certain that cooling and ventilation is adequate.

#### NOTE:

The installation must be tested, especially if bringing in air from below the generator set.


## 2.4 GASOLINE FUEL SYSTEM

## -A DANGER A-

Gasoline is highly flammable, and its vapors are explosive. Comply with all codes, standards and regulations pertaining to gasoline fuel systems used in recreational vehicle generators. Properly install and maintain the fuel system and keep it entirely free of leaks. Gasoline vapors must not enter the vehicle interior.

The installation of a gasoline fuel system (Figure 2.10) for a recreational vehicle generator set must comply with applicable codes, standards and regulations. The entire fuel system must be completely free of leaks. There must be no possibility of gasoline vapors entering the vehicle interior.

Figure 2.10 – Generator Fuel System

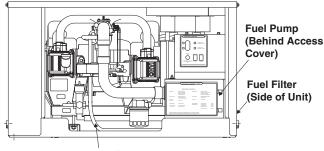

Fuel Line

Factory installed generator fuel system components include (a) fuel filter, (b) 12-volt DC electric pump, (c) engine carburetor, and (d) interconnecting lines and fittings. Connect a fuel supply line to the fuel filter inlet. Use a flexible length of approved fuel hose between the fuel filter inlet connection and rigid fuel lines.

## ◆ 2.4.1 FUEL TANK

Either the generator must share the vehicle engine's fuel tank, or a separate fuel tank for the generator set must be installed. All fuel tanks installed on the vehicle must be constructed, installed and restrained so they comply with applicable codes, standards and regulations. The generator has an evaporative emissions port to evacuate accumulated gasoline vapors whtn necessary.

If the generator is to share the vehicle engine's tank, separate fuel pickup tubes are required for the engine and the generator. The manufacturer recommends that the fuel pickup tube be two to three inches (51 to 76 mm) shorter than the vehicle engine's pickup tube. This prevents the generator from depleting the entire fuel supply during prolonged generator operating periods.



▲ Do NOT tie the generator fuel supply line into the vehicle engine fuel supply line. If this is done, the generator will be starved of fuel when both engines are operating at the same time. Also, while the vehicle engine is not running, generator operation may drain the vehicle engine supply line, making it difficult to start the vehicle engine.

An evaporative emissions port model 05750 has a 5/16" hose barb provided for connection to a carbon canister as necessary for specific applications.

## ◆ 2.4.2 GENERATOR FUEL SUPPLY LINE

## + 2.4.2.1 Rigid Fuel Lines

Those lines used to supply fuel from a tank to the generator must comply with applicable codes, standards and regulations. The following general rules apply to rigid fuel lines:

- Rigid lines should be of annealed, seamless, drawn aluminum or steel.
- Lines and fittings must comply with SAE J512F, "Standard Automotive Fittings," or with ANSI B126.26 (latest edition).
- Route the fuel line so that at least 2 inches (51 mm) of clearance is maintained between the line and any exhaust system parts.
- Do not attach electrical wiring to fuel lines. Route the wiring so it cannot come into contact with any fuel line.
- Route fuel lines so if they leak, fuel does not drip onto any electrical or exhaust system parts.
- Use nonferrous metal straps without sharp edges to secure fuel lines.

## + 2.4.2.2 Flexible Fuel Line

Use an approved flexible length of fuel hose between the generator fuel inlet connection and rigid fuel lines. This prevents breaking of the line caused by vibration, shifting, settling or movement. The following rules apply:

- The flexible hose must comply with SAE J30R7, "Standard for Fuel and Oil Hose." It must be approved for use with gasoline and low permeability.
- The hose should be at least 6 inches (152 mm) longer than is needed to prevent the hose from rupturing if the generator shifts or settles.

Section 2 – Installation Recreational Vehicle Generators

# 2.5 LP GAS FUEL SYSTEM

LP gas is highly EXPLOSIVE. The gas is heavier than air and tends to settle in low areas. Even the slightest spark can ignite it and cause and explosion. Only competent, qualified people should be allowed to install, test, adjust or service an LP gas fuel system. Install the optional fuel system in compliance with applicable codes, standards and regulations. After the installation, do not do anything that might render the system in noncompliance with applicable codes and standards.


## ◆ 2.5.1 PARTS NOT INCLUDED IN FUEL SYSTEM

The propane fuel system does NOT include such items as (a) gas tank, (b) gas piping, (c) fittings, (d) valves, and (e) primary regulator, used to store the gaseous fuel and deliver it to the gaseous fuel solenoid (Figure 2.11).



Use only approved components in the fuel supply system. All components must be properly installed in accordance with applicable codes. Improper installation or use of unauthorized components may result in fire or an explosion. Follow approved methods to test the system for leaks. No leakage is permitted. Do not allow fuel vapors to enter the vehicle interior.



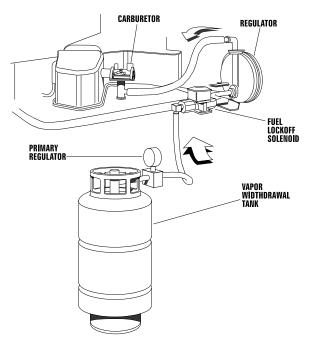

## ◆ 2.5.2 SOME IMPORTANT CONSIDERATIONS

When installing an LP gas system, consider seriously the following items:

- All fittings, lines, hoses and clamps must be tight and free of leaks. Apply a pipe sealant to threads when assembling threaded connections. This reduces the possibility of leakage.
- Test the entire fuel system for leaks using approved test methods.
- Optimum gas pressure at the inlet to the gaseous fuel solenoid valve and secondary regulator is 11 inches water column.
- The installer's fuel supply connection point is at the gaseous fuel solenoid valve. This is a 3/4-inch (female) connection. Provide a suitable 3/4-inch NPT (male) connector to attach to the fuel supply line.
- Use a length of approved flexible fuel hose between the gaseous fuel solenoid valve and rigid gas piping. The flexible line should be at least 6 inches longer than necessary.

## ◆ 2.5.3 VAPOR WITHDRAWAL

LP gas is stored in pressure tanks as a liquid. The gas systems used with these generators were designed only for vapor withdrawal type systems. Vapor withdrawal systems use the gas vapors that form above the liquid fuel in the tank. Do NOT attempt to use the generator with any liquid withdrawal type system.

## ◆ 2.5.4 PRIMARY REGULATOR

Gas pressure delivered to the solenoid valve must be properly regulated by means of a primary gas regulator. Mount the primary regulator at the gas tank outlet or in the supply line from the gas tank. The following rules apply:

- For best results, the primary regulator supplies gaseous fuel to the secondary regulator at 11 inches water column. Do NOT exceed 14 inches water column.
- The installer must be sure the primary regulator is rated at sufficient gas flow to operate the generator plus all other gas appliances in the circuit.

#### NOTE:

Recommended MINIMUM gas flow rate for air-cooled generators is 67 cubic feet per hour.

If an existing primary gas regulator does not have a sufficient flow capacity for the generator and other gas appliances in the circuit, (a) install a primary regulator with adequate flow rate, or (b) install a separate regulator only and rated at least 67 cubic feet per hour. The inlet side of any primary regulator that supplies the generator must connect directly to a gas pressure tank. Do NOT tee the generator line into a gas circuit feeding other areas.


Section 2 – Installation Recreational Vehicle Generators



## ◆ 2.5.5 GASEOUS CARBURETION

LP gas vapors should be supplied to the secondary regulator inlet at about 11 inches water column (positive pressure). The engine pistons draw air in during the intake stroke (Figure 2.12). This air passes through a carburetor venturi, which creates a low pressure that is proportional to the quantity of air being pumped. The low pressure from the carburetor venturi acts on the regulator diaphragm to pull the diaphragm toward the source of low pressure. A lever attached to the diaphragm opens a valve to permit gas glow through the carburetor.

Figure 2.12 – LP Gas Carburetion Diagram

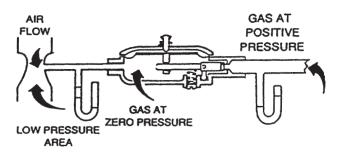

The greater the airflow through the carburetor venturi, the lower the pressure at the venturi throat. The lower the pressure at the venturi throat, the greater the diaphragm movement, and the greater the movement of the regulator valve. The more the regulator valve opens, the greater the gas flow that is proportional to airflow through the generator.

The following facts about the secondary regulator must be emphasized:

- The regulator must be sensitive to venturi throat pressure changes throughout the operating range.
- The regulator must be properly adjusted so it will stop the flow of gas when the engine is not running (no air flow through the carburetor).
- The slightest airflow (and vacuum in the venturi throat) should move the regulator valve off its seat and permit gas to flow.

## ◆ 2.5.6 FUEL SUPPLY LINES

- LP gas lines must be accessible, but protected against possible damage.
- Do NOT connect electrical wiring to any LP gas fuel line or run wiring alongside the lines.
- · Route gas lines away from hot engine exhausts.
- Retain gas lines with metal clamps that do not have sharp edges.
- Install an approved length of flexible hose between the gaseous fuel solenoid valve and rigid fuel supply lines. The flexible line must be nonmetallic, nonorganic and nonconductive. It must be approved for use with LP gas.



Gaseous fuel lines between the tank and the secondary regulator are under a positive pressure (about 11 inches water column). Gas pressure at the outlet side of the secondary regulator, however, is a negative pressure and can draw flame inside a line or fitting and cause an explosion.

## ◆ 2.5.7 EXCESS FLOW VALVE

LP gas tanks should have an excess flow valve, according to NFPA 501C. This valve and the gas lines must be carefully sized so the valve will close when a fuel line is severed or broken. Consult the Natural-LP Gas Association for information and limitations of excess flow valves.

Manual shutoff valves on the supply tank and elsewhere in the system must be fully open when operating the generator. The excess flow valve functions properly only if all valves are fully open.

## ◆ 2.5.8 LEAKAGE TESTS

Do not place the generator into service until the gas system has been properly tested for leaks. To test the system, a separate source of 12 volts DC to open the gaseous fuel solenoid valve is needed.

The leak test must comply fully with NFPA, Paragraph 318. All connections, hoses, valve regulators, fittings, and other fuel system parts must be tested under gas or air pressure of not less than 90 psi (620 kPa), while using soap and water or an equivalent solution to check for leaks. Other approved methods of testing for leaks may be used, if appropriate. DO NOT USE ANY FLAME TO TEST FOR LEAKS.

## 2.6 EXHAUST SYSTEM

The generator exhaust system must be safely and properly installed. Only approved mufflers and other exhaust system parts must be used. A properly installed exhaust system must be vapor tight, quiet and completely safe.



☆ Generator engine exhaust contains DEADLY carbon Monoxide, an odorless, colorless poisonous gas. Breathing carbon monoxide can cause: dizziness, throbbing temples, nausea, muscular twitching, headache, vomiting, weakness and sleepiness, inability to think clearly, fainting, unconsciousness or even death. If you experience any carbon monoxide poisoning symptoms, move into fresh air and immediately seek medical attention. **Recreational Vehicle Generators** 

- Adequate, unobstructed flow of cooling and ventilating air is critical for expelling toxic carbon monoxide gas and fuel vapors from the generator compartment and for proper generator operation. Without sufficient cooling airflow, deadly carbon monoxide gas can accumulate and the engine/generator may quickly overheat, causing serious damage to the generator. Do not operate the genset in any confined space.
- The exhaust system must be installed in accordance with the genset installation manual. Do not alter the installation or permit even partial blockage of ventilation systems, as this can seriously affect the safe and proper operation of the generator.
- ▲ Do not operate the generator if the exhaust system is leaking or has been damaged or if you have experienced carbon monoxide poisoning symptoms during use. Shut down the generator and do not operate it until it has been inspected and/or repaired.
- ▲ Never sleep in the vehicle while the genset is running unless the vehicle has a working carbon monoxide detector.



 
Never tee the generator engine exhaust pipe into the vehicle engine exhaust piping. This causes excessive back pressure on the generator engine. Also, water from one engine can damage the other engine.

## ◆ 2.6.1 MUFFLERS AND SPARK ARRESTORS

This muffler meets code and standard requirements of the U.S. Forest Service. Use only mufflers and parts approved by the manufacturer. Any person(s) installing an unapproved muffler, or an unapproved exhaust system part, or modifying an exhaust system in any way that might cause a hazard, is liable for any damage, injury or warranty expense that might be caused by such unapproved installation or modification.

Failure to provide and maintain a spark arrestor may be in violation of the law. If this generator is used on any forest covered, brush covered or grass covered unimproved land, a spark arrestor must be provided. The vehicle owner or operator must maintain this device in good condition. In the state of California, the preceding is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. When installing/replacing the tailpipe or spark arrestor components, verify that the tailpipe has a hole to securely fasten the spark arrestor components (see Figure 2.13). Use only manufacturer supplied hardware. Substitution of parts may cause damage to the screen or a loose fit to the tailpipe.





## ◆ 2.6.2 EXHAUST SYSTEM SAFETY

- Maintain a clearance of at least 3 inches (76 mm) between exhaust system parts and any combustible material (such as wood, felt, cotton, organic fibers or other like material). If the 3-inch (76 mm) clearance cannot be maintained, locate, insulate or shield the exhaust part(s) so that the temperature of any combustible material is not raised more than 117° F (65° C) above the ambient air temperature.
- Extend the exhaust system at least 1 inch (25 mm) past the outer edge of the vehicle. Do not terminate the exhaust system under the vehicle.
- Terminate the exhaust tailpipe such that exhaust gases will not be drawn back into the generator compartment and recirculated.
- If there is any possibility of the tailpipe or muffler being damaged, protect these damage-prone areas by means of a protective device (such as a skid bar).
- Install the generator exhaust system according to safe automotive practices.
- Use enough exhaust system hangers to prevent any part of the system from being dislocated.
- Use exhaust system parts recommended by the manufacturer. Using unapproved exhaust mufflers and exhaust system parts is the responsibility of the person(s) installing such unauthorized parts.
- Do not terminate the exhaust system under any opening, window or vent that can be opened or is not permanently sealed from the vehicle interior.
- Exhaust piping must be large enough to prevent excessive back pressure on the generator engine.
- Never tee the generator engine exhaust pipe into the vehicle engine exhaust piping. This causes excessive back pressure on the generator engine. Also, water from one engine can damage the other engine.
- Plan exhaust system installation carefully. Comply with all applicable codes, standards and regulations.



## 2.7 ELECTRICAL CONNECTIONS

The following general rules apply to electrical connections in a recreational vehicle:

- Qualified electricians who are familiar with applicable codes, standards and regulations should install electrical wiring.
- The wiring should comply with codes, standards and regulations. The National Electrical Code (NFPA 70), and state and local codes apply.
- Switches and circuit breakers should be of a type approved for use in recreational vehicles and must be mounted and installed to prevent damage from road shock.
- Wiring must be of adequate size, have approved insulative qualities and be properly supported.
- Conduit and wire openings into the generator compartment (if used) must be vapor-sealed to prevent entry of flammable, explosive or poisonous gases into the vehicle.

## ◆ 2.7.1 ELECTRICAL JUNCTION BOX

Install an approved, square electrical junction box with a blank cover on the interior or exterior wall of the area planned for installation of the generator (NOT on the generator). Route the generator's AC output leads into this junction box through approved flexible conduit. This is the point of first termination for generator AC output leads.

## ◆ 2.7.2 WIRING


- Wiring should be of stranded copper to reduce the chance that vibration may cause breakage.
- Wire gauge size should be large enough to handle at least 115 percent of the installed generator's rated maximum current.
- If neutral conductors are used, they must be the same size as other leg wires.
- Route power supply conductors from generator AC output leads T1 (red), T2 (white), T3 (black) and the green ground wire through approved flexible conduit to the electrical junction box on the compartment wall.
- If flexible metal conduit is used between the generator and the compartment junction box, the conduit end that terminates the compartment junction box must be vapor-sealed. Flexible metal conduit is NOT vapor tight along its entire length.
- From the junction box, route power supply wires through approved conduit to either (a) double-pole, double-throw transfer switch, or (b) approved isolation receptacle. Connecting to a transfer switch or isolation receptacle must prevent vehicle electrical circuits from being connected to two different power supplies at the same time (such as generator and dockside power).
- Conductors must be rated 221° F (105° C) or must be of a larger conductor size.

## ◆ 2.7.3 GENERATOR AC CONNECTIONS

Generator AC output leads T1 (red), T2 (white) and T3 (black) come out of the generator as shown in Figure 2.14. Leads T1 (red) and T3 (black) are "hot," while T2 (white) is the grounded neutral lead. There is also a green lead that connects to ground in the junction box of the recreational vehicle.

Line T1 (red) to T2 (white) is protected against overload by a circuit breaker (CB1). Use this line-to-neutral connection separately to operate 120-volt, single-phase, 60 Hertz, AC loads. Line T3 (black) to T2 (white) also is protected against overload by a circuit breaker (CB2). Use this line-to-neutral connection separately to operate similar loads. However, be sure the total unit load does not exceed the maximum rating of the generator. The neutral line (T2, white) on all units is a grounded neutral.

#### Figure 2.14 – Generator AC Output Leads

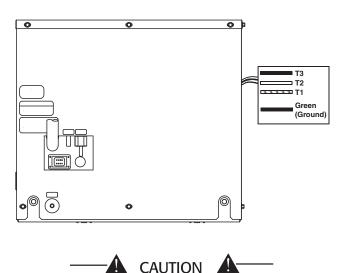

Do NOT connect electrical loads in excess of any circuit breaker rating or problems will develop with circuit breaker tripping, which causes a loss of AC output. Also, do NOT exceed the generator's rated wattage capacity. Add the watts or amperes of all lighting, appliance, tool and motor loads the generator will operate at one time. This total should be less than the unit's rated wattage/amperage capacity.

# 

**Recreational Vehicle Generators** 

## ◆ 2.7.4 CONDUIT

Route the connections between the generator and the junction box through approved, flexible conduit. The following general rules apply:

- Cut wiring to the required length and allow extra wire for junction box connections.
- Carefully prepare conduit ends to prevent sharp edges from cutting through wiring insulation.
- Route conduit so it does not interfere with generator movement.
- If using metallic conduit, vapor seal the end of the conduit where it enters the junction box. Do this because flexible metallic conduit is not vaporproof along its entire length.

## ◆ 2.7.5 ISOLATING DIFFERENT POWER SOURCES

Connections from the junction box must terminate in a doublepole, double-throw transfer switch (Figure 2.15). An alternate method for isolating different power sources is by using an isolating receptacle (Figure 2.16). Whichever method is used, be certain that both power sources are NOT connected at the same time.

## ◆ 2.7.6 POWER SUPPLY CORD

The power supply cord must comply with all applicable codes, standards and regulations. It must be large enough to handle the full amperage to which it will be subjected.

## ◆ 2.7.7 GROUND FAULT CIRCUIT INTERRUPTERS

The National Electrical Code (NFPA 70, article 551) requires that ground fault circuit interrupters (GFCIs) on all external and some internal electrical receptacles be installed. Contact the manufacturer or dealer for recommendations.

## 2.8 BATTERY INSTALLATION

## ◆ 2.8.1 RECOMMENDED BATTERY

Install a battery that meets the following requirements:

- The battery must be a 12-volt, automotive type storage battery.
- For prevailing ambient temperatures above 32° F (0° C), use a battery rated 70 amp-hours and capable of delivering 400 coldcranking amperes.
- For prevailing ambient temperatures below 32° F (0° C), use a battery rated 95 amp-hours and capable of delivering 400 cold-cranking amperes.

#### NOTE:

If the battery is to be used to power other vehicle accessories, as well as start the generator, a battery with a larger capacity may be needed.

## ◆ 2.8.2 BATTERY CABLES

Using battery cables that are too long or too small in diameter may cause a drop in voltage, which causes starting problems. For the best cold weather starting, the voltage drop between battery terminals and the generator connection point should not exceed 0.12 volts per 100 amperes of cranking current.

These generators are rated at about 100 DC amperes of cranking current.

Select battery cables based on (a) cable length and (b) prevailing ambient temperatures. Generally, the longer the cable and the colder the weather, the larger the cable size must be, as shown in the chart.

CABLE LENGTH in Feet (meters)	CABLE SIZE	
0 to 10 (0 to 3)	2*	
11 to 15 (3.4 to 4.5)	0	
16 to 20 (4.5 to 6)	000	
*For warm weather, use No. 2 cable up to 20 feet.		

## ◆ 2.8.3 BATTERY CABLE CONNECTIONS


1. Connect the battery cable from the battery post or terminal indicated by a POSITIVE, POS or (+) to the lug on the starter contactor (Figure 2.17).

NOTE:

## Check to be sure the battery cable boot for the starter cable has been installed.

- 2. Connect the battery cable from the battery post indicated by a NEGATIVE, NEG or (-) to the frame ground connection (Figure 2.17).
- 3. Connect cables so the connectors are clean and tight.

#### Figure 2.17 – Connecting Battery Cables

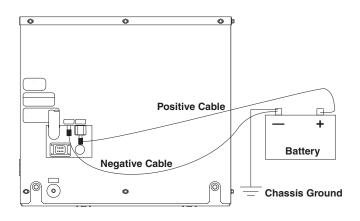

## ♦ 2.8.4 BATTERY COMPARTMENT

Install the generator battery in its own, vented compartment. Place the battery compartment away from any source of heat, sparks or flame.




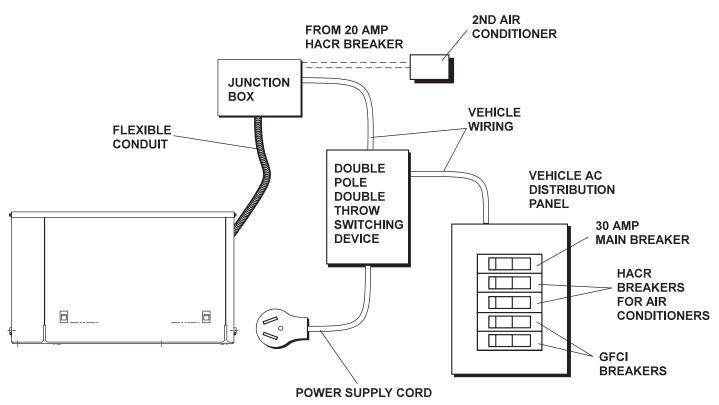




Figure 2.16 — Installation With Isolation Receptacle



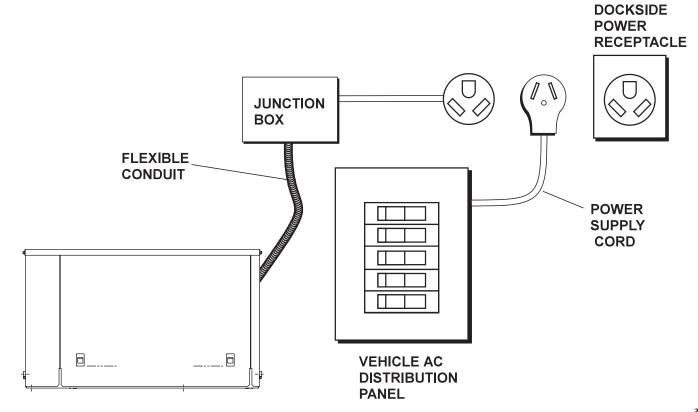


Provide ventilation openings in the battery compartment. The minimum size of openings should be 2 square inches at the top of the compartment. Mount the battery on a strong, rigid supporting structure, where leaks and spills of battery fluid will not cause damage.

# 2.9 OPTIONAL ACCESSORIES

A plug-in receptacle (Figure 2.18) is provided on the generator set, above the muffler enclosure. Use this receptacle to connect an optional remote-mounted start/stop panel to the generator. Installation of such a panel will permit starting and stopping the generator engine from any convenient location inside the vehicle.

#### Figure 2.18 – Remote Panel Plug-in Receptacle

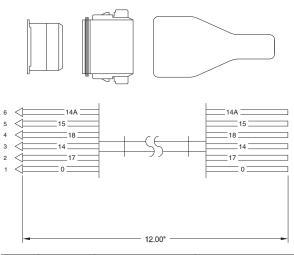

WIRE No.	WIRE COLOR	LENGTH (mm)	FUNCTION
0	WHITE	12.0 (305)	GROUND
14	RED	12.0 (305)	ENGINE RUN SIGNAL
15	ORANGE	12.0 (305)	12 VDC
17	YELLOW	12.0 (305)	START
18	BROWN	12.0 (305)	STOP
14A	BLUE	12.0 (305)	PRIME

P/N: 0D9099-B

# ◆ 2.9.1 REMOTE PANEL MODELS

The remote panels mount a rocker type start/stop switch, a "Generator Run" advisory lamp and an hourmeter. The hourmeter should be used in conjunction with the maintenance operations found in Part I of this manual.

• Part number 0H3068 includes the remote panel and a 30 foot long, 6 wire harness.

# 3.1 POST INSTALLATION TESTS

The air-cooled generator set was factory tested and adjusted. It should not be necessary to adjust the unit any further except under special circumstances.



▲ Do not make any unnecessary adjustments. Factory settings are correct for most applications. When making adjustments, however, be careful to avoid overspeeding the engine.

# 3.2 BEFORE INITIAL START-UP

Before starting, complete the following:

- 1. Check the engine crankcase oil level and, if necessary, fill to the dipstick "FULL" mark (cross-hatched area) with the recommended oil. Do not fill above the FULL mark.
- 2. Check the fuel supply. Gas fuel lines must have been properly purged and leak tested in accordance with applicable fuel codes. All fuel shutoff valves in the fuel supply lines must be open.



▲ If a liquid propane (LP) gas fuel system has been installed, it must be properly tested for leaks before operating the system in compliance with ANSI A119.2/NFPA 501C. No leakage is permitted. Be sure that gasoline fuel vapors do not enter the vehicle interior.

# 3.3 INITIAL START

When certain that the unit has been properly installed and prepared for use, start the engine as follows:

- 1. Turn off all electrical loads. Do this by setting the generator's main circuit breakers to their "OFF" (or open) position.
- 2. Refer to Part I, "Starting the Generator", for cranking and starting instructions. The engine may require more cranking for initial starting since the fuel lines have to be primed (use of the primer switch will shorten this time).
- 3. Let the engine warm up for about five minutes to allow internal temperatures to stabilize.
- 4. Carefully inspect the engine/generator for fuel, oil and exhaust system leaks. Before proceeding to the next step, correct any leakage immediately.
- 5. When all tests and adjustments at no-load are completed, apply electrical loads and check for proper operation under load (see "Testing Under Load"). Run the unit at least 30 minutes with loads applied.
- 6. Turn off all electrical loads by setting the generator's main circuit breakers to their "OFF" (or open) position.
- 7. Let the unit run at no-load for a few minutes to stabilize internal engine/generator temperatures. Then, shut down the engine.

Section 3 – Post Installation

**Recreational Vehicle Generators** 



#### NOTE:

The generator set was thoroughly tested and adjusted at the factory before shipping. No additional adjustment should be necessary. Only qualified service technicians who have been trained should perform adjustments outlined in this manual.

## 3.4 TESTING UNDER LOAD

Apply electrical loads equal to about 75 to 100 percent of the unit's rated wattage/amperage capacity.

Let the unit run at least 30 minutes with load applied. During this part of the test, check that the unit is not running excessively hot and that adequate cooling airflow is available. Do not allow the unit to overheat during prolonged operation.

#### NOTE:

The generator engine is equipped with a high temperature switch. The switch has normally open (N.0.) contacts. When the engine temperature is too high, switch contacts close, and the engine shuts down automatically.

THE MANUFACTURER RECOMMENDS THAT THE GENERATOR BE TESTED FOR ADEQUATE COOLING.



Section 3 – Post Installation

**Recreational Vehicle Generators** 

# 3.5 INSTALLATION CHECKLIST

## ♦ LOCATION AND SUPPORT

- □ Generator is properly located.
- Generator is properly supported.
- Generator is properly restrained.

## GENERATOR COMPARTMENT

- Compartment construction is proper.
- □ Holes/Openings are vapor-sealed.
- Compartment size is correct.
- Compartment is vapor-sealed.
- Sound insulation is correct.
- □ Floor cutouts are properly completed.

## ◆ COOLING AND VENTILATING AIR

- □ Airflow is adequate.
- □ Air inlet opening is correct.
- Compensate for restrictions.
- Check that installation has been tested.

## ♦ GASOLINE FUEL SYSTEM

- □ Fuel tank complies with all applicable codes.
- □ Fuel system is properly installed and checked for leaks.

### ♦ OPTIONAL LP GAS FUEL SYSTEM

- □ Fuel system is properly installed and checked for leaks.
- □ Pressure at regulator inlet is correct.
- □ Rated flow of primary regulator is correct.
- □ All parts are properly installed.
- □ Fuel system is properly tested/adjusted.

## EXHAUST SYSTEM

- □ Exhaust system complies with all applicable codes.
- □ Exhaust system is properly and safely installed.

### ELECTRICAL CONNECTIONS

- Connections comply with local code requirements and all National Electrical Codes.
- □ Junction box is properly installed.
- □ Wiring meets all standards.
- □ All connections are correct.
- □ Conduit is properly installed and sealed.
- Generator is properly bonded to the vehicle.

### BATTERY INSTALLATION

- □ Recommended battery is installed.
- □ Recommended cables are installed.
- □ Cables are clean and tight.
- **Cables are connected properly.**
- □ Proper ventilation is provided.
- □ Terminals are coated with anti-corrosion grease, and terminal covers are positioned.

### OPTIONAL ACCESSORIES

- □ Check that remote start/stop panels (if used) are installed properly.
- □ Check that hourmeter kit (if used) is installed properly.
- □ Check that any other options and accessories (if used) are installed properly.

## POST INSTALLATION TESTS

□ Check that all tests are completed properly.

DATE OF INSTALLATION \_\_\_\_\_

 
NAME OF INSTALLER

### SIGNATURE OF INSTALLER




Problem	Ca	use	Correction			
Engine won't crank.	1. 2.	7.5 amp fuse blown. Loose, or corroded or defective battery cable(s).	1. 2.	Replace blown fuse. Tighten, clean or replace, as necessary.		
	3.	Battery is discharged or defective.	3.	Recharge or replace battery.		
	4.	Defective Start/Stop switch.	4.	Replace switch.		
	5.	Defective starter contactor.	5.	Replace starter contactor.		
	6.	Defective starter motor.	6.	Replace starter motor.		
	7.	Defective Engine Control Board	7.	Contact an authorized service dealer.		
Engine cranks, won't start.	1.	Out of fuel.	1.	Refill fuel tank.		
	2.	Fuel shutoff valve is closed.	2.	Open fuel shutoff valve(s).		
	3.	Fuel pump not operating.	3.	Repair or replace pump.		
	4.	Automatic choke not operating properly.	4.	Repair, replace or adjust.		
	5.	Engine is flooded.	5.	Wait 5-10 minutes; try again.		
	6.	Fuel filter is clogged.	6.	Replace filter if clogged.		
	7.	Engine spark plugs defective.	7.	Clean, regap or replace as needed.		
	8.	Bad ignition magneto on engine.	8.	Replace if defective.		
	9.	Bad carburetor.	9.	Adjust, repair or replace.		
	10.	Dirty air cleaner.	10.	Clean or replace as needed.		
ngine starts hard, runs rough.	1.	Dirty engine air cleaner.	1.	Clean or replace as needed.		
	2.	Automatic choke is sticking.	2.	Free choke linkage as needed.		
	3.	Defective spark plugs.	3.	Clean, regap or replace.		
	4.	Defective ignition magneto.	4.	Replace it if defective.		
Engine starts, then shuts down.	1.	Engine oil level is low.	1.	Add oil as needed.		
	2.	Bad low oil pressure switch.	2.	Replace, if bad.		
	3.	Defective high temp switch.	3.	Replace, if bad.		
	4.	Water in fuel.	4.	Drain fuel tank and refill.		
	5.	Defective remote harness.	5.	Disconnect remote harness. Contact authorised service facility.		
No AC output voltage.	1.	Main breaker(s) open.	1.	Close main breaker(s).		
	2.	Transfer switch (if so equipped) is set to wrong position.	2.	Reset transfer switch.		
	3.	Failure in vehicle electrical system.	3.	See vehicle manual.		
	4.	Generator component failure.	4.	Contact an authorized service facility.		

#### Section 5 — Electrical Data





Recreational Vehicle Generators Electrical Schematic - V-Twin – Drawing No. 0E1057-F

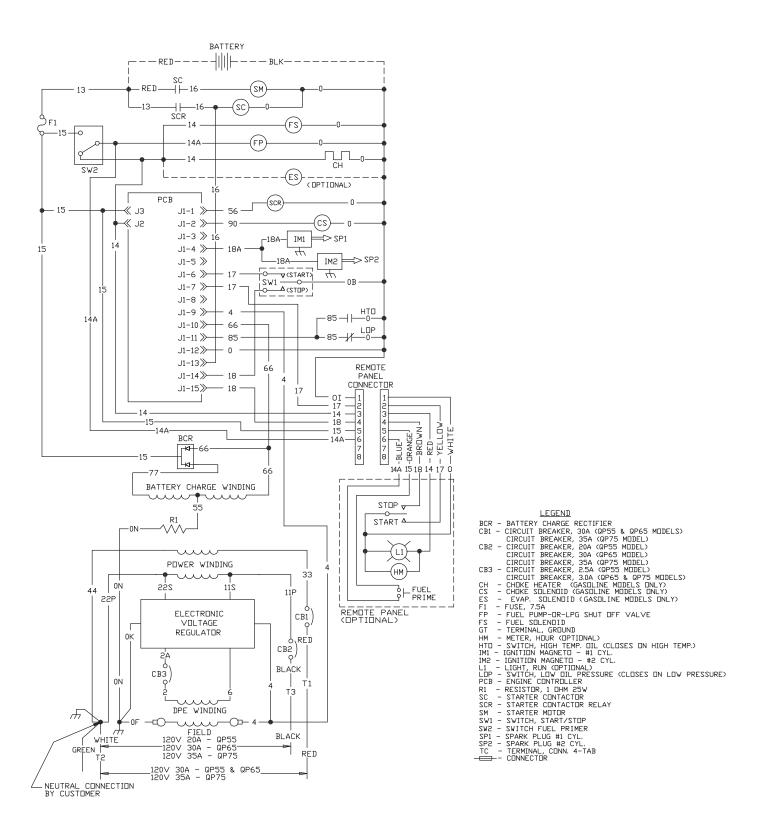

Section 5 — Electrical Data


#### 

 

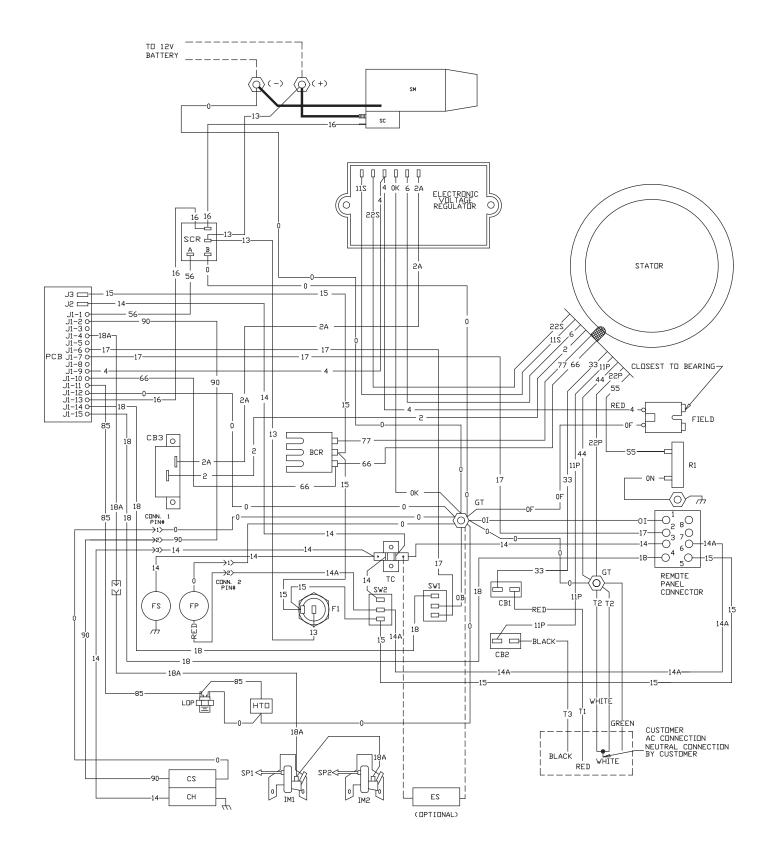



Recreational Vehicle Generators Base & Pulley – Drawing No. 0E1323-H

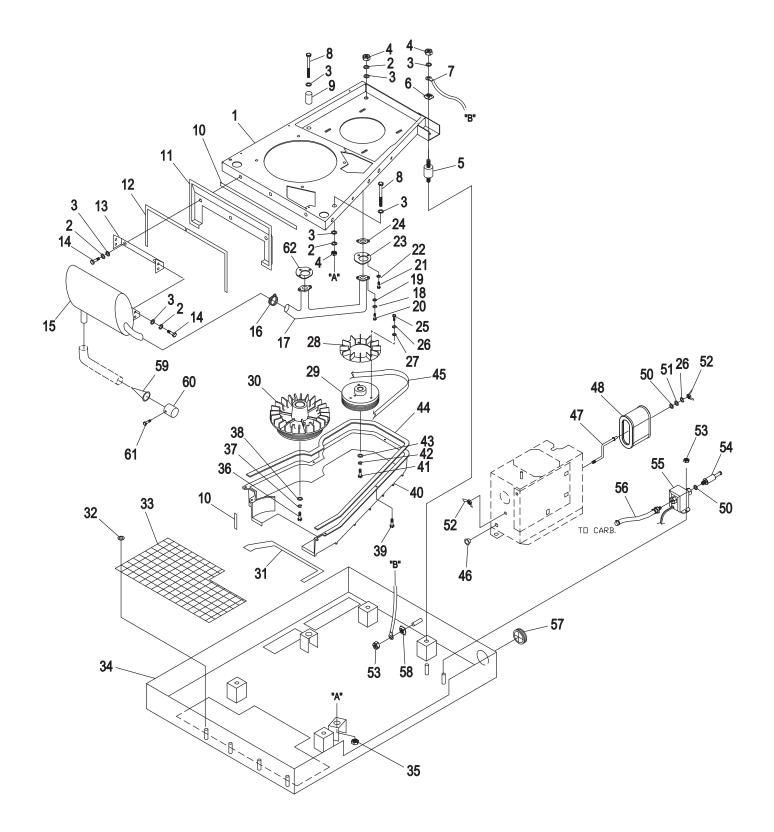


Recreational Vehicle Generators Base & Pulley – Drawing No. 0E1323-H



ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0E0196	1	FRAME, 760 ENGINE	31	0E0586	1	GASKET, BOTTOM AIR OUT QPRV
2	022129	12	WASHER LOCK M8-5/16	32	0D7176	4	WASHER SELF LOCKING 1"DIA 12GA
3	022145	15	WASHER FLAT 5/16-M8 ZINC	33	0E1334	1	SCREEN, BOTTOM AIR OUT
4	022259	6	NUT HEX 5/16-18 STEEL	34	0D8824	1	TRAY, V-TWIN RV
5	0C7758	4	VIB MNT 1.5 X 1.38 X 5/16-18	35	081105	2	NUT FLG 5/16-18 LOCK
6	0C3168	1	WASHER LOCK SPECIAL 5/16	36	073118	1	SCREW HHC 3/8-24 X 2-1/4 G8
7	0C2417	1	EARTH STRAP	37	046526	1	WASHER LOCK M10
8	077603	2	SCREW HHC 5/16-18 X 3.5 SPC	38	022131	1	WASHER FLAT 3/8-M10 ZINC
9	0E0588	1	SPACER, SAFETY BOLT .375 I.D.	39	0C2824	7	SCREW TAP-R #10-32 X 9/1
10	029451	1.5 FT.	TAPE ELEC UL FOAM 1/8 X ½	40	0E1077	1	BLOWER HOUSING GTV760 RV
11	0D8912	1	DUCT, AIR OUT	41	042633	1	SCREW HHC 3/8-24 X 1 G5
12	0E0571	2	GASKET,AIR OUT DUCT	42	022237	1	WASHER LOCK 3/8
13	0D8911	1	BRACKET, MUFFLER SUPPORT	43	049451	1	WASHER FLAT .406ID X 1.620D
14	043107	7	SCREW HHC M8-1.25 X 25 G8.8	44	0C1441	1	SET, BLOWER HOUSING GASKET
15	0D9021	1	MUFFLER, GTV760 RV	45	0C1112	1	BELT, V-RIB 4LX42.5"
16	096289	1	CLAMP, EXHAUST 1.25"	46	023484T	1	BUSHING SNAP (GASOLINE ONLY)
17	0D8940	1	MANIFOLD, EXHAUST		0E1534	1	PLUG PLASTIC 0.687" (LP ONLY)
18	070006	4	WASHER LOCK M8 SS	47	0D7530	1	STUD, M6-1.0 OFFSET
19	070008	4	WASHER FLAT M8 SS	48	0D9723	1	ELEMENT AIR FILTER
20	040976	4	SCREW SHC M8-1.25 X 20 G12.9	49			
21	056893	5	SCREW CRIMPTITE 10-24 X 1/2	50	0D8981	2	FILTER GASKET RV (GASOLINE ONLY)
22	023897	5	WASHER FLAT #10 ZINC		0D8981	1	FILTER GASKET RV (LP ONLY)
23	0E1078	1	GASKET, EXH BASE, GTV760 RV	51	0D8451	1	WASHER FLAT .281"ID X 1.25"OD
24	0C4138	2	GASKET, EXHAUST PORT	52	087680	2	NUT WING M6-1.0
25	043116	3	SCREW HHC M6-1.0 X 12 G8.8 (5.5 KW	53	0D3700	3	NUT FLANGE M6-1.0 NYLOK (GASOLINE
			ONLY)				ONLY)
26	022097	4	WASHER LOCK M6-1/4 (5.5 KW ONLY)		0D3700	1	NUT FLANGE M6-1.0 NYLOK (LP ONLY)
	022097	1	WASHER LOCK M6-1/4 (6.5 & 7.5 KW	54	087769	1	FILTER FUEL (GASOLINE ONLY)
			ONLY)	55	0E0570	1	ASSEMBLY, NON SHTOFF FUEL PUMP
27	022473	3	WASHER FLAT 1/4-M6 ZINC (5.5 KW				(GASOLINE ONLY)
			ONLY)	56	0D9919	1	ASSEMBLY, RV V-TWIN FUEL LINE
28	0C1751	1	FAN NYLON 7" DIA (5.5 KW ONLY)				(GASOLINE ONLY)
29	0C1753B	1	PULLEY, ALTERNATOR 2200 RPM (5.5 KW	57	0E1330	1	GROMMET, 38.1 DIA. CROSS SLIT
			ONLY)				(GASOLINE ONLY)
	073106B	1	PULLEY, ALTERNATOR 2500 RPM (6.5 &		0E1534A	1	PLUG PLASTIC 1.50" (LP ONLY)
			7.5 KW ONLY)	58	0A1658	1	WASHER LOCK SPECIAL 1/4"
30	075224A	1	PULLEY, ENGINE 2100 RPM (5.5 KW	59	0D5133	1	SCREEN, SPARK ARRESTOR
			ONLY)	60	0D5133A	1	RETAINER, SPARK ARREST SCREEN
	075224B	1	PULLEY, ENGINE 2500 RPM (6.5 & 7.5	61	045764	1	SCREW HHTT M4-0.7 X 8 BP
			KW ONLY)	62	0E1078A	1	GASKET, EXHAUST BASE



Recreational Vehicle Generators Enclosure – Drawing No. 0G7865-C

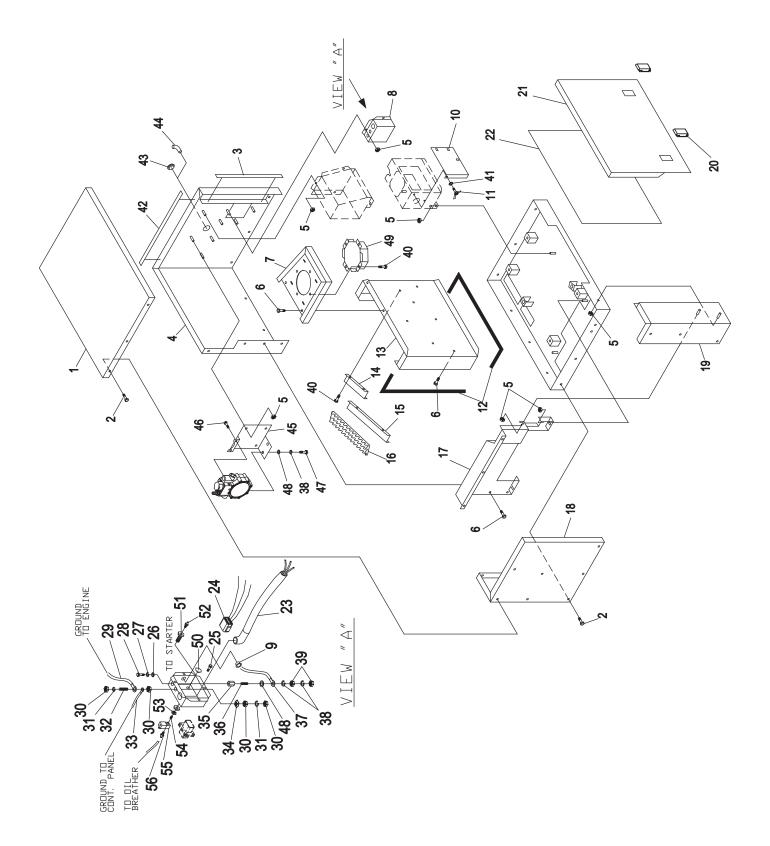

Recreational Vehicle Generators Enclosure – Drawing No. 0G7865-C




#### ITEM PART NO. QTY. DESCRIPTION

	ITEM	PART	NO.	QTY.	DESCRIPTION
--	------	------	-----	------	-------------

1	0D8827	1	PANEL, ENCLOSURE ROOF	32	0C7423	1	STUD 3/8-16 X 2-1/4 BRASS
2	0G4933	22	SCREW SWT 1/4-20 X 5/8 W/W	33	0742600151	1	GND WIRE C/PNL TO STUD V-T RV
3		11.5 FT.	TAPE ELEC UL FOAM 1/8 X 1/2"	34	0A4456	1	WASHER LOCK SPECIAL 3/8
4	0D8825	1	PANEL, SIDE AND BACK ENCLOSURE	35	0D8502	1	NEUTRAL CONNETCTOR UL
5	0D3700	14	NUT FLANGE M6-1.0 NYLOK (GASOLINE	36	0E0593	1	STUD, 1/4-20 TO 5/16-18
Ū	000100		ONLY)	37	0742600148	1	WIRE ASM BATT. (POS.) QP RV
	0D3700	17	NUT FLANGE M6-1.0 NYLOK (LP ONLY)	38	022129	2	WASHER LOCK M8-5/16 (GASOLINE
6	090388	8	SCREW HHTT M6-1.0 X 12 YC	00	022120	-	ONLY)
7	0D8979	1	PANEL, AIR IN DUCT BASE		022129	4	WASHER LOCK M8-5/16 (LP ONLY)
8	0D8960A	1	PANEL, CUSTOMER CONNECTION	39	022259	2	NUT HEX 5/16-18 STEEL
9	023484D	1	BUSHING SNAP SB-875-11	40	045756	8	SCREW HHTT M6-1.0 X 10 YC
10	0E0594	1	COVER, RV AIR CLEANER BOX	41	0A2115	1	WASHER NYLON .250
11	064113	1	STUD WINGNUT M6-1.0 X 20MM NY	42	029451A	6.5 FT.	TAPE, 1/2" X 1/16" CLOSED CELL
12	0E0575	1	FOAM SEALING STRIP 1" X 12FT	43	0E1534A	1	PLUG PLASTIC 1.50" (GASOLINE ONLY)
13	0D8980	1	PANEL, AIR IN DUCT BACK	44	0A5606	1	ELBOW 90DEG 3/8X3/4 (LP ONLY)
14	0E1376	1	BAFFLE, V-TWIN RV SHORT	45	0E1528	1	BRACKET, LP REGULATOR MOUNTING
15	0E1377	1	BAFFLE, V-TWIN RV LONG				(LP ONLY)
16	0D8628	3.5	FOAM, AIR OUT COMPARTMENT	46	0A1495	2	SCREW HHTT M4-0.7 X 10 BP (LP ONLY)
17	0D8910	1	PANEL, MUFFLER SHIELD	47	039253	2	SCREW HHC M8-1.25 X 20 G8.8 (LP
18	0D8826	1	PANEL, ENCLOSURE SIDE	ONLY)			
19	0D9162	1	PANEL, FRONT & SIDE ENCLOSURE	48	022145	1	WASHER FLAT 5/16-M8 ZINC (GASOLINE
20	0C5644	2	SLIDE LATCH, FLUSH				ONLY)
21	0D8828	1	PANEL, ENCLOSURE DOOR		022145	3	WASHER FLAT 5/16-M8 ZINC (LP ONLY)
22	0E0585	1	FOAM PANEL, DOOR 1/2"THK QP RV	49	0D8979A	1	PANEL, AIR IN DUCT
23	0E1486	1	HARNESS, AC OUTPUT (5.5, 6.5, & 7.5	50	061669	1	PLUG, PLASTIC (GASOLINE ONLY)
			KW ONLY)	51	069598	1	BULKHEAD ADAPTER 1/4 x 1/4 x 3/4-16
	0E1774	1	HARNESS, AC OUTPUT (5.0 & 7.0 KW-50				(MODEL 05750 ONLY)
			Hz ONLY)	52	058043	1	BARBED STRAIGHT 1/4 NPT x 5/16
24	0D9099	1	CUST. CONN. 4KW RV REMOTE				(MODEL 05750 ONLY)
25	074908	4	SCREW HHTT M5-0.8 X 10 BP	53	035579	1	BUSHING, REDUCER HEX 1/4 TO 1/8
26	022473	1	WASHER FLAT 1/4-M6 ZINC				(MODEL 05750 ONLY)
27	022097	1	WASHER LOCK M6-1/4	54	035578	1	NIPPLE, CLOSE 1/8 NPT (MODEL 05750
28	022507	1	SCREW HHC 1/4-20 X 1/2 G5				ONLY)
29	0742600149	1	WIRE ASM. BATT. (NEG.) QP RV	55	0G0247	1	SOLENOID VALVE 12 VDC (MODEL
30	0C7968	4	NUT HEX JAM 3/8-16 BRASS				05750 ONLY)
31	022237	2	WASHER LOCK 3/8	56	028414A	1	BARBED STRAIGHT 1/8 NPT x 1/4 (MODEL
							05750 ONLY)



Recreational Vehicle Generators Engine Accessories – Drawing No. 0G7866-D

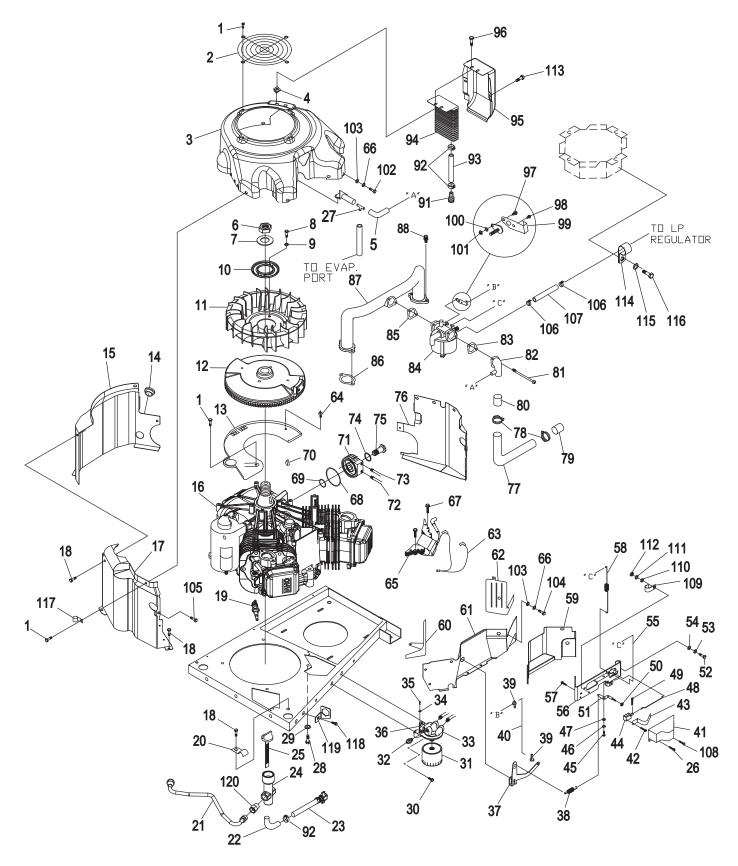

Recreational Vehicle Generators Engine Accessories – Drawing No. 0G7866-D




#### ITEM PART NO. QTY. DESCRIPTION

#### ITEM PART NO. QTY. DESCRIPTION

1	045756	15	SCREW HHTT M6-1.0 X 10 YC	57	0A7095	2	RHMS 4-40 X 5/16SEMS
2	0D1131	1	GUARD, FAN 12KW HSB	58	0D9404	1	SPRING, CHOKE RETURN
3	0F1169G	1	HOUSING, BLOWER V-TWIN RV	59	0D9801A	1	WRAP, VALLEY UPPER SPCC
4				60			,
4	0C9763	4	NUT, GROMMET 1/4 PLUG		0C3018A	1	WRAPPER, UPR #1 W/ M8 WELD NUT
5	0D9782A	1	HOSE, BREATHER	61	0D9680A	1	WRAP, VALLEY RV SPCC
6	0C3034	1	NUT HEX M24-2.0 G8 YEL CHR	62	0D1143A	1	WRAPPER,UPR #2 W/ M8 WELD NUT
7	0C3033	1	WASHER, BELLEVILLE 25MM BOLT	63	0F1177	1	ASSY, GROUNDING WIRE
8	051754	2 2	SCREW HHC M8-1.25 X 12 G8.8	64	0E4997	1	ASSY, GROUND WIRE CONNECTOR
9	0A5992	2	WASHER SHAKEPROOF INT M8 SS	65	0G3222	2	ASSY, IGN COIL W/DIODE NO ADV
10	0C3032	1	PLATE, FAN	66	022097	4	WASHER LOCK M6-1/4
			,				1
11	0C3031	1	FAN NYLON	67	0G3110	4	SCREW HHTT M6-1.0 X 20 ZINC
12	0C3725D	1	FLYWHEEL ASSY	68	0C1546	1	0-RING 59.92 X 66.98 X 3.53MM
13	0G4928A	1	PLATE, BACKING WITH OIL COOL ZINC	69	0C1547	1	0-RING 21.89 X 27.13 X 2.62MM
14	023484S	1	BUSHING SNAP	70	082774	1	KEY, WOODRFF 4 X 19D
15	0D9679A	1	WRAP, CRANKCASE RV SPCC	71	0A5358	1	ADPTR OIL PAD, FLARE
16	0E8775	1	VERTICAL SHAFT RV ENGINE	72	0D9312	1	TUBE, ENGINE OIL RETURN
				73	0D9314	1	TUBE, ENGINE OIL OUT
17	0F1167A	1	WRAP, CYL 1 RV SPCC				
18	056893	13	SCREW CRIMPTITE 10-24 X 1/2	74	0C1557	1	0-RING 20.35 X 23.91 X 1.78MM
19	0E7585A	2	SPARK PLUG	75	0A9028	1	Bolt, oil adaptor
20	0E0998	1	CLAMP VINYL 9.5 O.D. TUBE	76	0D9682A	1	WRAP, CYL 2 GTV760 RV SPCC
21	0G4853	1	TUBE, OIL DRAIN & CHECK	77	0D9270	1	INTAKE TUBE 1.25" X 20 GA
22	043790	1	BARBED EL 90 3/8NPT X 3/8	78	048031A	2	HOSE CLMP-BAND 1 5/8
22				70		1	1
23	0G4403	1	ASSEMBLY, OIL DRAIN HOSE		0D9269		BOOT, INTAKE AIRBOX
24	0E0361B	1	OIL DRAIN / DIPSTICK	80	0E0142A	1	BOOT, CARB ADAPTOR
25	0E0393	1	ASSEMBLY, CAP & DIP STICK	81	078643B	2	BOLT,CARB MOUNT M6 X 1.0 -85LG
26	0C2824	1	SCREW TAP-R #10-32 X 9/16 (GASOLINE	82	0D9219	1	ADAPTER, AIR INTAKE CARB
			ONLY)	83	0E0573	1	GASKET, CARB TO ADAPTOR
27	0G6950	1	BARBED TEE 1/4" NYLON (05750 ONLY)	84	0D8807	1	CARBURETOR, (GASOLINE ONLY)
28	075246	4	SCREW HHTT 3/8-16 X 1-1/4 CZ	-04	0E1217	1	CARBURETOR, (LP ONLY)
		4		05			
29	0A4456	1	WASHER LOCK SPECIAL 3/8	85	0E0572	1	GASKET, CARB TO INTAKE MANIFOLD
30	0A2311	2	SCREW SWAGE 1/4-20 X 1 Z/YC	86	0C3043	2	GASKET INTAKE PORT
31	070185B	1	OIL FILTER	87	0D8836	1	MANIFOLD, INTAKE RV
32	0D9235	1	SWITCH OIL PRESSURE HOBBS	88	0G3730A	4	SCREW SHC M8-1.25 X 30 SEMS
33	0A5360	1	SUPPORT OIL FLTR, FLARE	91	035461	2	BARBED STR 1/4NPT X 3/8
34	043182	2	WASHER LOCK M3	92	0G3662	5	CLAMP, HOSE OETIKER STEPLESS 17mm
		2 2				2	
35	0C1085	2	SCREW PPHM M3-0.5 X 8	93	0G4695A		HOSE,3/8"IDX6"L BRAIDED-WRAPPED
36	0E1497	1	SWITCH, OIL HIGH TEMP (GASOLINE	94	0E9506	1	COOLER, OIL
			ONLY)	95	0D9683A	1	DUCT, OIL CLR RV SPCC
	075281	1	SWITCH, OIL HIGH TEMP (LP ONLY)	96	0C9764	4	PLASTITE,1/4-15 X <sup>3</sup> ⁄4
37	0D9399	1	ASSEMBLY, GOVERNOR LÈVER	97	036933	1	SCREW PPHM #10-32 X 3/8
38	0D9513	1	SPRING, GOV.(5.5 KW & 5.0 KW-50HZ	98	0E0246	1	SCREW HHTT #4-40 X 1/4
00	000010		ONLY)	99	0D9394	1	
	051400	4					PLATE, THROTTLE
	0E1498	1	SPRING, GOV.(6.5/7.5 KW & 7.0 KW-50HZ	100	022152	1	WASHER LOCK #10
			ONLY)	101	022158	1	NUT HEX #10-32 STEEL
39	0D1366	2	BUSHING, GOVERNOR ROD	102	043116	2	SCREW HHC M6-1.0 X 12 G8.8
40	0D9395	1	ROD, GOVERNOR	103	049811	4	WASHER FLAT M6
41	077075	1	BOOT CHOKE SOLENOID (GASOLINE ONLY)	104	047411	2	SCREW HHC M6-1.0 X 16 G8.8
42	0A7094	2	RHMS 4-40 X 1/4 SEMS (GASOLINE ONLY)	105	066849B	2	SCREW HHTT M5-0.8 X 8 BP
43		1		106	048031M		CLAMP HOSE #8 .53 - 1.00 (LP ONLY)
43	0D8590	I	ASSY, BI-METAL/HEATER (GASOLINE			2	
			ONLY)	107	0F7065	2.25 FT.	
44	0D8591	1	SOLENOID, CHOKE (GASOLINE ONLY)	108	075476	1	SCREW PPHM M4-0.7 X 16 (GASOLINE
45	045770	1	SCREW HHC M5-0.8 X 10 G8.8				ONLY)
46	049226	1	WASHER LOCK M5	109	082121A	1	CLIP-J VINYL COAT .375 ID (GASOLINE
47	051713	1	WASHER FLAT M5				ONLY)
48	0D9402	1	LINKAGE, CHOKE (GASOLINE ONLY)	110	038150	1	
				110			WASHER FLAT #8 (GASOLINE ONLY)
49	077091	1	COTTER PIN (GASOLINE ONLY)	111	022264	1	WASHER LOCK #8 (GASOLINE ONLY)
50	082025	1	NUT LOCK HEX M5-0.8 SS NYL INS	112	051715	1	NUT HEX M4-0.7 G8 YC (GASOLINE ONLY)
51	0E1247	1	ASSEMBLY, GOV. ADJUSTMENT	113	0D6029	2	SCREW HHTT M6-1.0 X 16 ZYC
52	055173	2	SCREW HHC M8-1.25 X 20 G10.9	114	055934D	1	CLAMP VINYL 1.06 X .406 (LP ONLY)
53	022129	2	WASHER LOCK M8-5/16	115	022473	1	WASHER FLAT 1/4-M6 (LP ONLY)
54	022145	2			090388	1	
			WASHER FLAT 5/16-M8 ZINC	116			SCREW HHTT M6-1.0 X 12 (LP ONLY)
55	0D9403	1	LINKAGE CHOKE BELLCRANK/CARB	117	0E3200	1	CLAMP VINYL .437" X .281"
56	0E1246	1	ASSEM., CHOKE BRACKET (GASOLINE	118	0A2110	1	SCREW SWAGE 1/4-20 X 1/2
			ONLY)	119	0G4576	1	OIL CHECK TUBE BRACKET
	0D9400	1	BRAĆKET, CHOKE (LP ONLY)	120	0G3432	1	3/8 NPT TO INVTD FLR 3/8 OD
			· · · /				· ,
							4 –



Recreational Vehicle Generators Control Panel – Drawing No. 0E1013-B

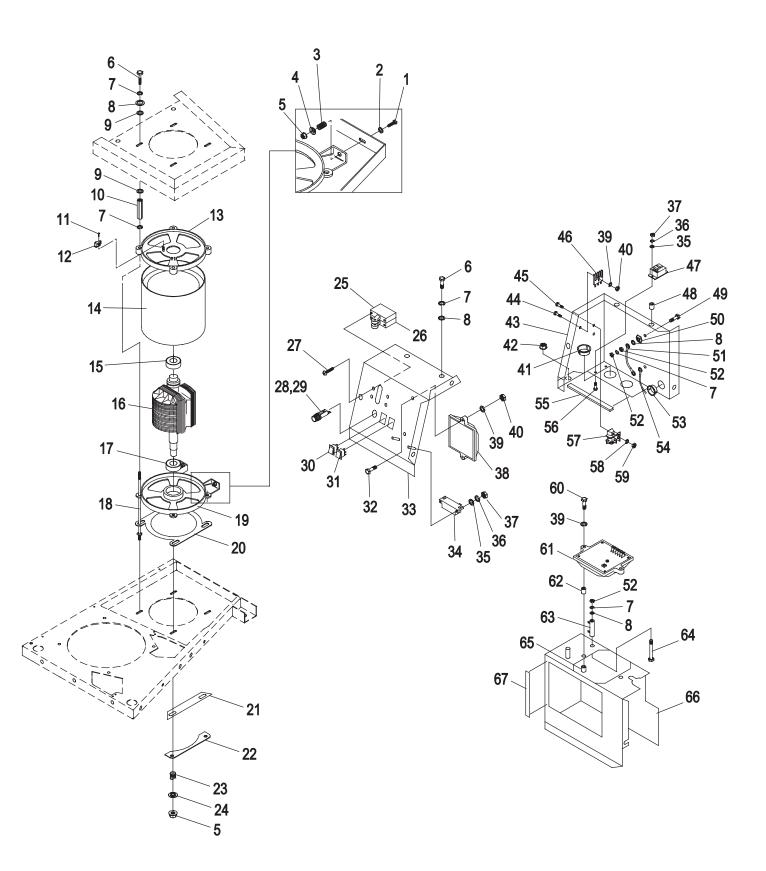

Recreational Vehicle Generators Control Panel – Drawing No. 0E1013-B




#### ITEM PART NO. QTY. DESCRIPTION

#### ITEM PART NO. QTY. DESCRIPTION

1	0C2375	2	SCREW HHC M8-1.25 X 90 G8.8	34	054502	1	CIRCUIT BREAKER 3 X 1
2	022145	2	WASHER FLAT 5/16-M8 ZINC	35	031879	4	WASHER FLAT #4 ZINC
3	029459	2	TENSION SPRING	36	043182	4	WASHER LOCK M3
4	075215	2	WASHER, SPRING CENTER	37	051714	4	NUT HEX M3-0.5 G8 YEL CHR
5	052858	6	NUT LOCK FL M8-1.25	38	092234	1	ASSY POTTED RV CNTL
6	047411	7	SCREW HHC M6-1.0 X 16 G8.8	39	049226	5	WASHER LOCK M5
7	022097	13	WASHER LOCK M6-1/4	40	051716	3	NUT HEX M5-0.8 G8 YEL CHR
8	022473	10	WASHER FLAT 1/4-M6 ZINC	41	023484R	2	BUSHING SNAP
9	080925	8	WASHER NYLON .404	42	0D3700	1	NUT FLANGE M6-1.0 NYLOK
10	0D9921	4	STANDOFF, 1/2" HEX	43	0D9378	1	PANEL, BOTTOM CONTROL
11	066849	2	SCREW HHTT M5-0.8 X 16	43	052619	1	SCREW HHC M5-0.8 X 20 G8.8
12	066386	1	ASSY, BRUSH HOLDER	45	075476	2	SCREW PPHM M4-0.7 X 16
12	000380 0C9674	1	BEARING CARRIER, UP	45	065795	1	RECTIFIER-BATTERY CHARGE
13	0E0363H	1		40	003793 0C2174	1	RELAY 12V 25A SPST
14			STATOR ASSEMBLY (5.5 KW ONLY)	47			
	0E0364H	1	STATOR ASSEMBLY (6.5 KW ONLY)		092120	4	NUT LOCK TRIC M6 X 1.0 Y/ZNC
45	0E0362H	1	STATOR ASSEMBLY (7.5 KW ONLY)	49	049721	2	SCREW HHC M6-1.0 X 35 G8.8 BLK
15	073159	1	BEARING BALL	50	0A1658	2	WASHER LOCK SPECIAL 1/4"
16	077005H	1	ROTOR ASSEMBLY (5.5 KW ONLY)	51	074260-146	1	WIRE ASM GRD STD CONN.
	077004H	1	ROTOR ASSEMBLY (6.5 KW ONLY)	52	049813	4	NUT HEX M6 X 1.0 G8 YEL CHR
	073163H	1	ROTOR ASSEMBLY (7.5 KW ONLY)	53	023484D	1	BUSHING SNAP
17	031971	1	BEARING	54	074260-151	1	GROUND WIRE C/PNL TO STUD V-T RV
18	077006	4	STUD,RV STATOR D/C	55	084867	1	RUBBER U-CHANNEL
19	0C9675	1	BEARING CARRIER, LOW	56	043181	2	SCREW PHM M3-0.5 X 10MM
20	0A5351	1	NYLON SLIDE	57	075210A	1	BLOCK 1 POSITION
21	073146	2	SLIDE, NYLON	58	022264	2	WASHER LOCK #8-M4
22	0C1878	2	Support, SLIDE	59	051715	2	NUT HEX M4-0.7 G8 YEL CHR
23	075242	4	SPRING, GEN. MOUNT	60	0C7605	2	SCREW HHC M5-0.8 X 60 G8.8
24	075237	4	WASHER, SPRING CENTER	61	0F9719	1	ASY POTTED REG W/FIN
25	090145	1	CIRCUIT BREAKER 30 X 1 (5.5 & 6.5 KW	62	089047	2	SPACER .25 X .43 X .55 ST/ZNC
			ONLY)	63	075234	1	RESISTOR WW LUG 1R 5% 25W
	0E1529	1	CIRCUIT BREAKER 35 X 1 (7.5 KW ONLY)	64	0A2053	1	SCREW HHC M6-1.0 X 65 G8.8
26	090144	1	CIRCUIT BREAKER 20 X 1 (5.5 KW ONLY)	65	058000K	2	NUT TRIC M5 X .8
	090145	1	CIRCUIT BREAKER 30 X 1 (6.5 KW ONLY)	66	0D8941	1	Compartment, Air Box
	0E1529	1	CIRCUIT BREAKER 35 X 1 (7.5 KW ONLY)	67	029451A	2.3 FT.	TAPE, 1/2" X 1/16" CLOSED CELL
27	025105	4	SCREW RHM 6-32 X 1/4 SIMS	68	0E0583	1	WIRE HARNESS, QP RV (GASOLINE
28	0A9611	1	FUSE 7.5 AMP				ONLY) (NOT SHOWN)
29	032300	1	HOLDER FUSE		0E1812	1	WIRE HARNESS, QP RV (LP ONLY) (NOT
30	092113	1	SWITCH SPDT ON-MOM-ON				SHOWN)
31	087798	1	SWITCH 6A SPDT	69	0E1375	1	WIRE ASS'Y STARTER TO C/PNL (NOT
32	055440	2	SCREW HHC M5-0.8 X 25 G8.8			-	SHOWN)
33	0D9377	1	PANEL, TOP CONTROL				,
00	000011		inite, for contribe				



Recreational Vehicle Generators 760 V-Twin Engine – Drawing No. 0F1997-C

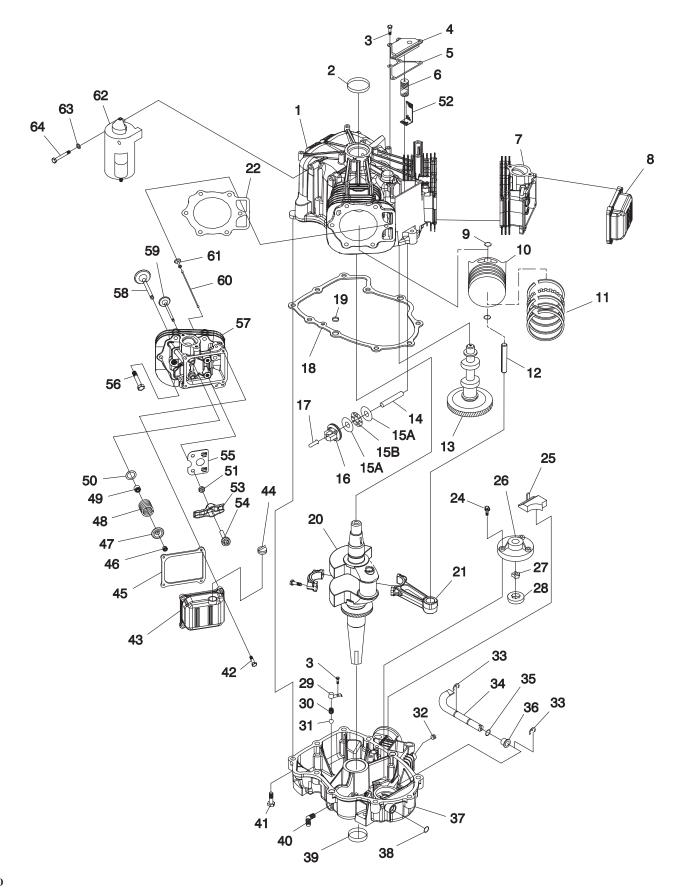

Recreational Vehicle Generators 760 V-Twin Engine – Drawing No. 0F1997-C



ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0C5730A	1	ASSEMBLY, CRANKCASE RV	33	0C2991	2	E-RING, GOVERNOR ARM
2	0E9843	1	SEAL, 38 I.D. CRANKCASE	34	0D1667A	1	ARM, GOVERNOR
3	090388	6	SCREW, HHTT M6-1.0 X 12mm	35	0C2988	1	THRUST WASHER, GOVERNOR
4	0C5372	1	ASSEMBLY, BREATHER	36	0C2992	1	BUSHING, GOVERNOR LOWER
5	0C3005	1	GASKET, BREATHER COVER	37	0C5732	1	ASSEMBLY, SUMP WITH SLEEVE
6	0E3372A	1	SEPARATOR, OIL BREATHER	38	0C2993	1	SEAL, GOVERNOR SHAFT
7	0D8067A	1	ASSEMBLY, HEAD #1	39	0E9842	1	SEAL, 42 I.D. CRANKSHAFT
8	0C2981C	1	COVER, ROCKER	40	0D9756	1	CONNECTOR, 3/8NPT TO INVTD FLR
9	071983	4	RETAINER, PISTON PIN 20				3/80D
10	0G2751	2	PISTON, FLAT TOP DIA 90 COATED	41	0C3006	10	SCREW, HHFC M10-1.5 X 55mm
11	0G2565	2	RING SÉT, PISTON DIA 90	42	080318	8	SCREW HHFC M6-1.0 X 25mm
12	0E1466	2	PIN, PISTON	43	0C2982	1	COVER, ROCKER WITH OIL FILL
13	0D4041	1	ASSEMBLY, CAMSHAFT & GEAR	44	093064	1	ASSEMBLY, OIL FILL CAP
14	0C2983	1	SHAFT, GOVERNOR	45	0C2979	2	GASKET, VALVE COVER
15A	0C2985A	2	ROLLER BEARING, GOVERNOR PLATE	46	086515	8	KEEPER, VALVE SPRING
15B	0C2985B	1	ROLLER BEARING, GOVERNOR	47	0D2274	4	RETAINER, VALVE SPRING
16	0D4042	1	ASSEMBLY, GOVERNOR GEAR	48	0D3867	4	SPRING, VALVE
17	0A7811	1	SPOOL, GOVERNOR MACHINED	49	078672	2 4	SEAL, VALVE STEM D7
18	0C2977	1	GASKET, CRANK CASE	50	0C5371	4	WASHER, VALVE SPRING
19	0C5943	1	SEAL, OIL PASSAGE	51	0D3998	4	NUT HEX M8-1.0 G8
20	0E3790A	1	ASSY,CRANK GTV-760 BELT DRIVE	52	0E3273	1	SCREEN CRANKCASE BREATHER
21	0E3222	2	ASSEMBLY, CONNECTING ROD	53	0D5313	4	ROCKER ARM
22	0C2978	2	GASKET, HEAD	54	072694	4	STUD, ROCKER ARM PIVOT
23				55	0G8552	2	PLATE, PUSH ROD GUIDE
24	0G6431A	3	SCREW, SHC M6-1.0 X 30mm SEMS	56	0C2976	12	SCREW HHFC M8-1.25 X 65mm
25	0C2994	1	SCREEN, OIL PICKUP	57	0D8067B	1	ASSEMBLY, HEAD #2
26	0C2997	1	COVER, GEROTOR	58	0C2229	2	VALVE, INTAKE
27	0C2995	1	GEROTOR, INNER	59	086516	2 2 4	VALVE, EXHAUST
28	0C2996	1	GEROTOR, OUTER	60	0D9853D		PUSHROD 147
29	0C3011	2	COVER, OIL RELIEF	61	083897	4	TAPPET, SOLID
30	0C3009	2	SPRING, OIL RELIEF	62	0E9323	1	STARTER
31	0C3010	2	BALL, 1/2D OIL RELIEF	63	022129	2	WASHER LOCK M8
32	050873A	1	1/4" NPT PIPE PLUG	64	061906	2	SCREW, HHC M8-1.25 X 85mm





**Recreational Vehicle Generators** 

# CALIFORNIA AND FEDERAL EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board (CARB) and the United States Environmental Protection Agency (EPA), together with Generac Power Systems, Inc. (Generac), are pleased to explain the Emission Control System warranty on your new 2008 and later generator. New equipment that use small spark-ignited engines must be designed, built, and equipped to meet stringent anti-smog standards for the state of California and the federal government. Generac will warrant the emission control system on your generator for the period of time listed below provided there has been no abuse, neglect, unapproved modification or improper maintenance of your equipment.

Your emission control system may include parts such as the: carburetor, ignition system, fuel system catalytic converter, and other associated emission-related components (if equipped).

## MANUFACTURER'S WARRANTY COVERAGE:

This emission control system is warranted for two years. If, during such warranty period, any emission-related part on your equipment is found to be defective in materials or workmanship, repairs or replacement will be performed by a Generac Authorized Warranty Service Dealer.

## **OWNER'S WARRANTY RESPONSIBILITIES:**

As the generator owner, you are responsible for the completion of all required maintenance as listed in your factory supplied Owner's Manual. For warranty purposes, Generac recommends that you retain all receipts covering maintenance on your generator, but Generac cannot deny warranty solely due to the lack of receipts.

As the generator owner, you should be aware that Generac may deny any and/or all warranty coverage or responsibility if your generator, or a part/component thereof, has failed due to abuse, neglect, improper maintenance or unapproved modifications, or the use of counterfeit and/or "grey market" parts not made, supplied or approved by Generac.

You are responsible for contacting a Generac Authorized Warranty Dealer as soon as a problem occurs. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

Warranty service can be arranged by contacting either your selling dealer or a Generac Authorized Warranty Service Dealer. To locate the Generac Authorized Warranty Service Dealer nearest you, call our toll free number:

### 1-800-333-1322

IMPORTANT NOTE: This warranty statement explains your rights and obligations under the Emission Control System Warranty (ECS Warranty), which is provided to you by Generac pursuant to California and federal law. See also the "Generac Limited Warranties for Generac Power Systems, Inc.," which is enclosed herewith on a separate sheet, also provided to you by Generac. Note that this warranty shall not apply to any incidental, consequential or indirect damages caused by defects in materials or workmanship or any delay in repair or replacement of the defective part(s). This warranty is in place of all other warranties, expressed or implied. Specifically, Generac makes no other warranties as to the merchantability or fitness for a particular purpose. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

The ECS Warranty applies only to the emission control system of your new equipment. If there is any conflict in terms between the ECS Warranty and the Generac Warranty, the Generac Warranty shall apply. Both the ECS Warranty and the Generac Warranty describe important rights and obligations with respect to your new engine.

Warranty service can be performed only by a Generac Authorized Warranty Service Facility. When requesting warranty service, evidence must be presented showing the date of the sale to the original purchaser/owner.

If you have any questions regarding your warranty rights and responsibilities, you should contact Generac at the following address:

#### ATTENTION WARRANTY DEPARTMENT GENERAC POWER SYSTEMS, INC. P.O. BOX 297 • WHITEWATER, WI 53190

Part 1



# **EMISSION CONTROL SYSTEM WARRANTY**

Emission Control System Warranty (ECS warranty) for equipment using small spark-ignited engines:

- (a) Applicability: This warranty shall apply to equipment that uses small off-road engines. The ECS Warranty period shall begin on the date the new equipment is purchased by/delivered to its original, end-use purchaser/owner and shall continue for 24 consecutive months thereafter.
- (b) General Emissions Warranty Coverage: Generac warrants to the original, end-use purchaser/owner of the new engine or equipment and to each subsequent purchaser/owner that the ECS when installed was:
  - (1) Designed, built and equipped so as to conform with all applicable regulations; and
  - (2) Free from defects in materials and workmanship which cause the failure of a warranted part at any time during the ECS Warranty Period.
- (c) The warranty on emissions-related parts will be interpreted as follows:
  - (1) Any warranted part that is not scheduled for replacement as required maintenance in the Owner's Manual shall be warranted for the ECS Warranty Period. If any such part fails during the ECS Warranty Period, it shall be repaired or replaced by Generac according to Subsection (4) below. Any such part repaired or replaced under the ECS Warranty shall be warranted for the remainder of the ECS Warranty Period.
  - (2) Any warranted part that is scheduled only for regular inspection as specified in the Owner's Manual shall be warranted for the ECS Warranty Period. A statement in the Owner's Manual to the effect of "repair or replace as necessary" shall not reduce the ECS Warranty Period. Any such part repaired or replaced under the ECS Warranty shall be warranted for the remainder of the ECS Warranty Period.
  - (3) Any warranted part that is scheduled for replacement as required maintenance in the Owner's Manual shall be warranted for the period of time prior to first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement, the part shall be repaired or replaced by Generac according to Subsection (4) below. Any such emissions-related part repaired or replaced under the ECS warranty shall be warranted for the remainder of the period prior to the first scheduled replacement point for that part.
  - (4) Repair or replacement of any warranted, emissions-related part under this ECS Warranty shall be performed at no charge to the owner at a Generac Authorized Warranty Service Facility.
  - (5) Notwithstanding the provisions of subsection (4) above, warranty services or repairs must be provided at Generac Authorized Service Facilities.
  - (6) When the engine is inspected by a Generac Authorized Warranty Service Facility, the purchaser/owner shall not be held responsible for diagnostic costs if the repair is deemed warrantable.
  - (7) Throughout the ECS Warranty Period, Generac shall maintain a supply of warranted emission-related parts sufficient to meet the expected demand for such parts.
  - (8) Any Generac authorized and approved emission-related replacement parts may be used in the performance of any ECS warranty maintenance or repairs and will be provided without charge to the purchaser/owner. Such use shall not reduce Generac ECS Warranty obligations.
  - (9) Unapproved, add-on, modified, counterfeit and/or "grey market" parts may not be used to modify or repair a Generac engine. Such use voids this ECS Warranty and shall be sufficient grounds for disallowing an ECS Warranty claim. Generac shall not be held liable hereunder for failures of any warranted parts of Generac equipment caused by the use of such an unapproved, add-on, modified, counterfeit and/or "grey market" part.

#### EMISSION RELATED PARTS MAY INCLUDE THE FOLLOWING (IF EQUIPPED):

1) FUEL METERING SYSTEM

- A. CARBURETOR AND INTERNAL PARTS B. PRESSURE REGULATOR
- 2) AIR INDUCTION SYSTEM A. INTAKE MANIFOLD
- B. AIR FILTER
- 3) IGNITION SYSTEM
  - A. SPARK PLUGS B. IGNITION COILS / MODULE
- Part 2

- 4) AIR INJECTION SYSTEM
- A. PULSE AIR VALVE 5) EXHAUST SYSTEM
  - A. CATALYST
  - B. THERMAL REACTOR
  - C. EXHAUST MANIFOLD

Section 7 – Warranty



**Recreational Vehicle Generators** 

#### GENERAC POWER SYSTEMS' THREE-YEAR LIMITED WARRANTY FOR GUARDIAN RECREATIONAL VEHICLE GENERATORS

**NOTE: ALL UNITS MUST BE INSTALLED BY GENERAC POWER SYSTEMS AUTHORIZED SERVICE FACILITIES.** For a period of 3 (three) years of operation from the date of original sale, Generac Power Systems, Inc. (Generac) will, at its option, repair or replace any part which, upon examination, inspection and testing by Generac or a Generac Authorized Warranty Service Facility, is found to be defective under normal use and service, in accordance with the warranty schedule set forth below. Any equipment that the purchaser/owner claims to be defective must be returned to and examined by the nearest Generac Authorized Warranty Service Facility. All transportation costs under the warranty, including return to the factory, are to be borne and prepaid by the purchaser/owner. This warranty applies only to Generac generators sold and rated for "Recreational Vehicle" (RV) applications, as Generac has defined Recreational Vehicle generator applications. The factory recommends exercising the unit one half-hour every month.

#### WARRANTY SCHEDULE – COMMERCIAL APPLICATIONS

YEAR ONE – 100% (one hundred percent) coverage on part(s), labor, removal and reinstallation listed:

- Engine All components
- Alternator All components

#### WARRANTY SCHEDULE – CONSUMER/PERSONAL APPLICATIONS

YEARS ONE AND TWO – 100% (one hundred percent) coverage on part(s), labor, removal and reinstallation listed:

- Engine All components
- Alternator All components
- YEAR THREE 100% (one hundred percent) only on selected part(s) and labor listed [Any labor and part(s) not listed, and removal and reinstallation are the owner's responsibility]:
- Rotor, Stator, Computer Control Board (part numbers 0A6060 and 0A3369) and inverter, (if applicable with regard to the generator) Cylinder Block, Cylinder Head, Crankshaft, Piston(s), Valve, Valve Lifter(s), Intake and Exhaust Manifolds

Generac RV generators manufactured prior to December 31, 1997, **DO NOT** have a transferable warranty. Generac RV generators manufactured after January 1, 1998, have a transferable warranty to the second owner **ONLY** for the remainder of the three-year limited warranty. Proof-of-purchase is required and must be presented to a Generac Authorized Warranty Service Facility prior to the performance of any warranty service.

All warranty expense allowances are subject to the conditions defined in Guardian's Warranty Policies and Procedures Guide.

#### THIS WARRANTY SHALL NOT APPLY TO THE FOLLOWING:

- Generac Guardian generators that utilize non-Generac replacement parts.
- · Costs of normal maintenance, adjustments, installation and start-up.
- Repairs or diagnostics performed by individuals other than Guardian/Generac authorized dealers not authorized in writing by Generac Power Systems.
- Failures caused by any contaminated fuels, oils, coolants or lack of proper fluid amounts.
- Failures due, but not limited, to normal wear and tear, accident, misuse, abuse, negligence or improper installation. As with all mechanical devices, the Generac engines need periodic part(s) service and replacement to perform well. This warranty will not cover repair when normal use has exhausted the life of a part(s) or engine.
- Failures caused by any external cause or act of God, such as collision, theft, vandalism, riot or wars, nuclear holocaust, fire, freezing, lightning, earthquake, windstorm, hail, volcanic eruption, water or flood, tornado or hurricane.
- · Damage related to rodent and/or insect infestation.
- · Products that are modified or altered in a manner not authorized by Generac in writing.
- Any incidental, consequential or indirect damages caused by defects in materials or workmanship, or any delay in repair or replacement of the defective part(s).
- Failure due to misapplication.
- Telephone, cellular phone, facsimile, internet access or other communication expenses.
- Living or travel expenses of person(s) performing service, except as specifically included within the terms of a specific unit warranty period.
- Expenses related to "customer instruction" or troubleshooting where no manufacturing defect is found.
- · Rental equipment used while warranty repairs are being performed.
- Overnight freight costs for replacement part(s).
- Overtime labor.
- Starting batteries, fuses, light bulbs and engine fluids.

THIS WARRANTY IS IN PLACE OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. SPECIFICALLY, GENERAC MAKES NO OTHER WARRANTIES AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

GENERAC'S ONLY LIABILITY SHALL BE THE REPAIR OR REPLACEMENT OF PART(S) AS STATED ABOVE. IN NO EVENT SHALL GENERAC BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF SUCH DAMAGES ARE A DIRECT RESULT OF GENERAC'S NEGLIGENCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights. You also have other rights from state to state.

#### **GENERAC® POWER SYSTEMS, INC.**

P.O. BOX 297 • WHITEWATER, WI 53190

Revision 02.05