



# Decorative Door Panel Instructions for 1200 models

## Installation

**RECOMMENDATION:** Do not remove the protective film from the decorative door panels until ready to operate the refrigerator.

1. Pull the panel retainer [1] off the hinge side of the door (See Art01744):

2. If there is an existing decorative door panel in the door, remove it.

- If the refrigerator is not equipped with a water dispenser, continue with Steps 3 and 4.

- If the refrigerator is equipped with a water dispenser, continue with Steps 5 -10.

3. Put the decorative door panel into the door (See Art01747):

- Turn the decorative door panel [5] so the thicker edge goes into the door first.
- Slide the mounting disks [6] of the decorative door panel into the slots [7] of the top and bottom endcap.
- Push the decorative door panel fully into the door.

4. Push the panel retainer into the slot on the edge of the door.

5. If the refrigerator has a water dispenser, remove the back splash assembly [2] and the water dispenser panel [3] (See Art01745):


- To remove the back splash assembly, firmly grasp the back splash assembly at the top corners and pull it away from the refrigerator.
- Using a marker or an ink pen, draw line on the door at the bottom edge of the water dispenser panel between the two (2) vertical lines [4].
- Remove the four (4) hex-head screws [8] from water dispenser panel.
- Pull the water dispenser panel down so it comes out from behind the door endcap [9] (See Art01743).

6. Put on the cosmetic strip:


- Remove the backing from the cosmetic strip [10].
- Put the cosmetic strip onto the door to completely cover the line drawn on the door [11].
- Make sure that you can not see any of the line drawn on the door.

7. Put the decorative door panel into the door (See Art01747):

**NOTE:** The lower LH decorative door panel has a notched out area on the top edge to fit around the water dispenser.

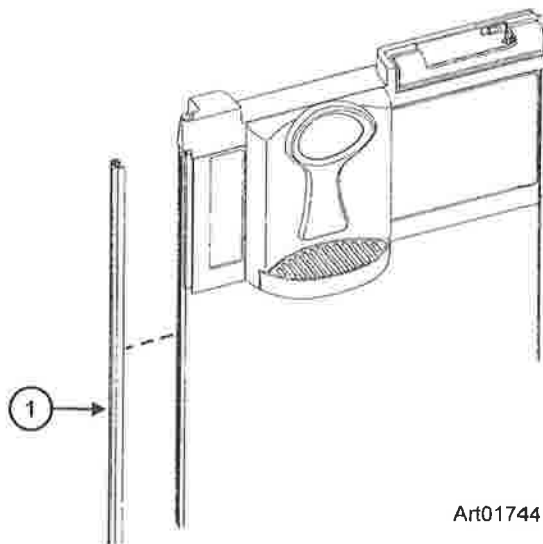

Art01744

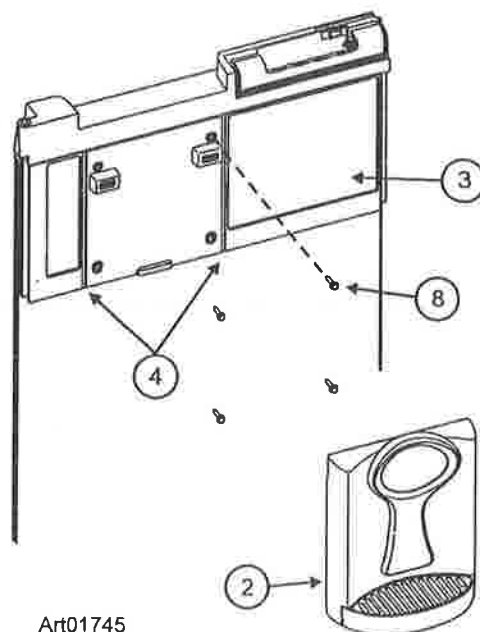

Art01745

- Turn the decorative door panel [5] so the thicker edge goes into the door first.
- Put the lower edge of the water dispenser panel into the upper mounting disks of the decorative door panel.
- Slide one lower mounting disks [6] of the decorative door panel into the slot [7] of the bottom endcap.
- Push the decorative door panel and the water dispenser panel into door at the same time.
- Make sure that the top of the water dispenser panel is behind the upper door cap [9].

8. Put the four (4) hex-head screws back into the water dispenser panel.

9. Install the back splash assembly (See Art01746):

- Put the hook on the bottom of the back splash assembly [2] down into the slot [10] of the water dispenser panel [3].
- Align the two (2) rectangular mounting studs on the rear of the back splash assembly with the two (2) mounting lugs [11] on the water dispenser panel.
- Using equal pressure, push both mounting studs into the mounting lugs at the same time.
- The mounting studs should engage and lock into the mounting lugs with a "click" sound.

10. Push the panel retainer into the slot on the edge of the door.

### Adjustment

If the decorative door panel is too loose in the door or if it does not appear to be aligned with the door, adjust the mounting disks. The mounting disks are eccentric about the screw hole for adjustments to the decorative door panel.


- Remove the decorative door panel from the door.
- Loosen the screw of the mounting disk .
- Turn the mounting disk about the screw until it is in the preferred position.
- Tighten the screw.
- Reinstall the decorative door panel in the door.

### Cleaning


**NOTE: Do not use any abrasive cleaners, chemicals, scouring pads, or paper towels to clean the decorative door panels because they can damage the finish of the decorative door panels.**

Clean the decorative door panels only with a soft cloth and a solution of liquid dish detergent and warm water.


Rinse with clean water and gently pat dry with a soft cloth.

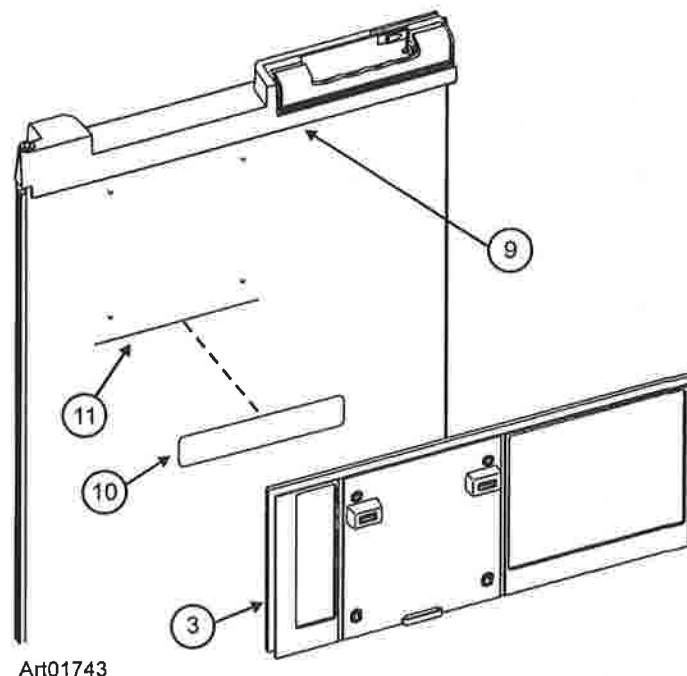

Art01743

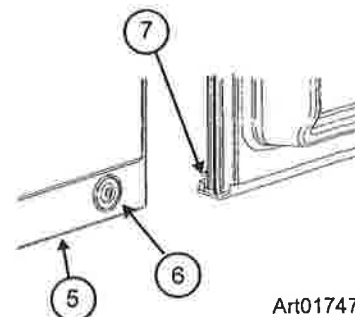

Art01747

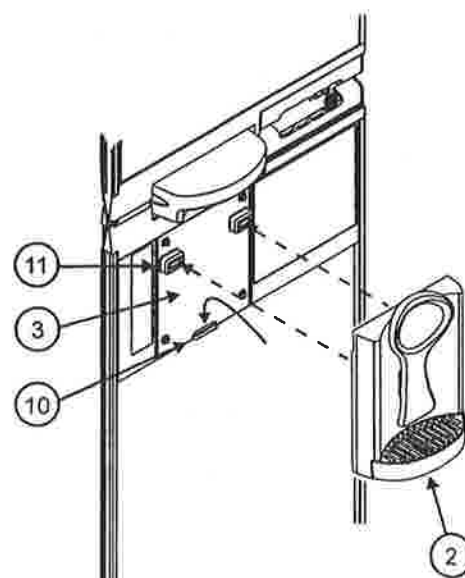

Art01746