


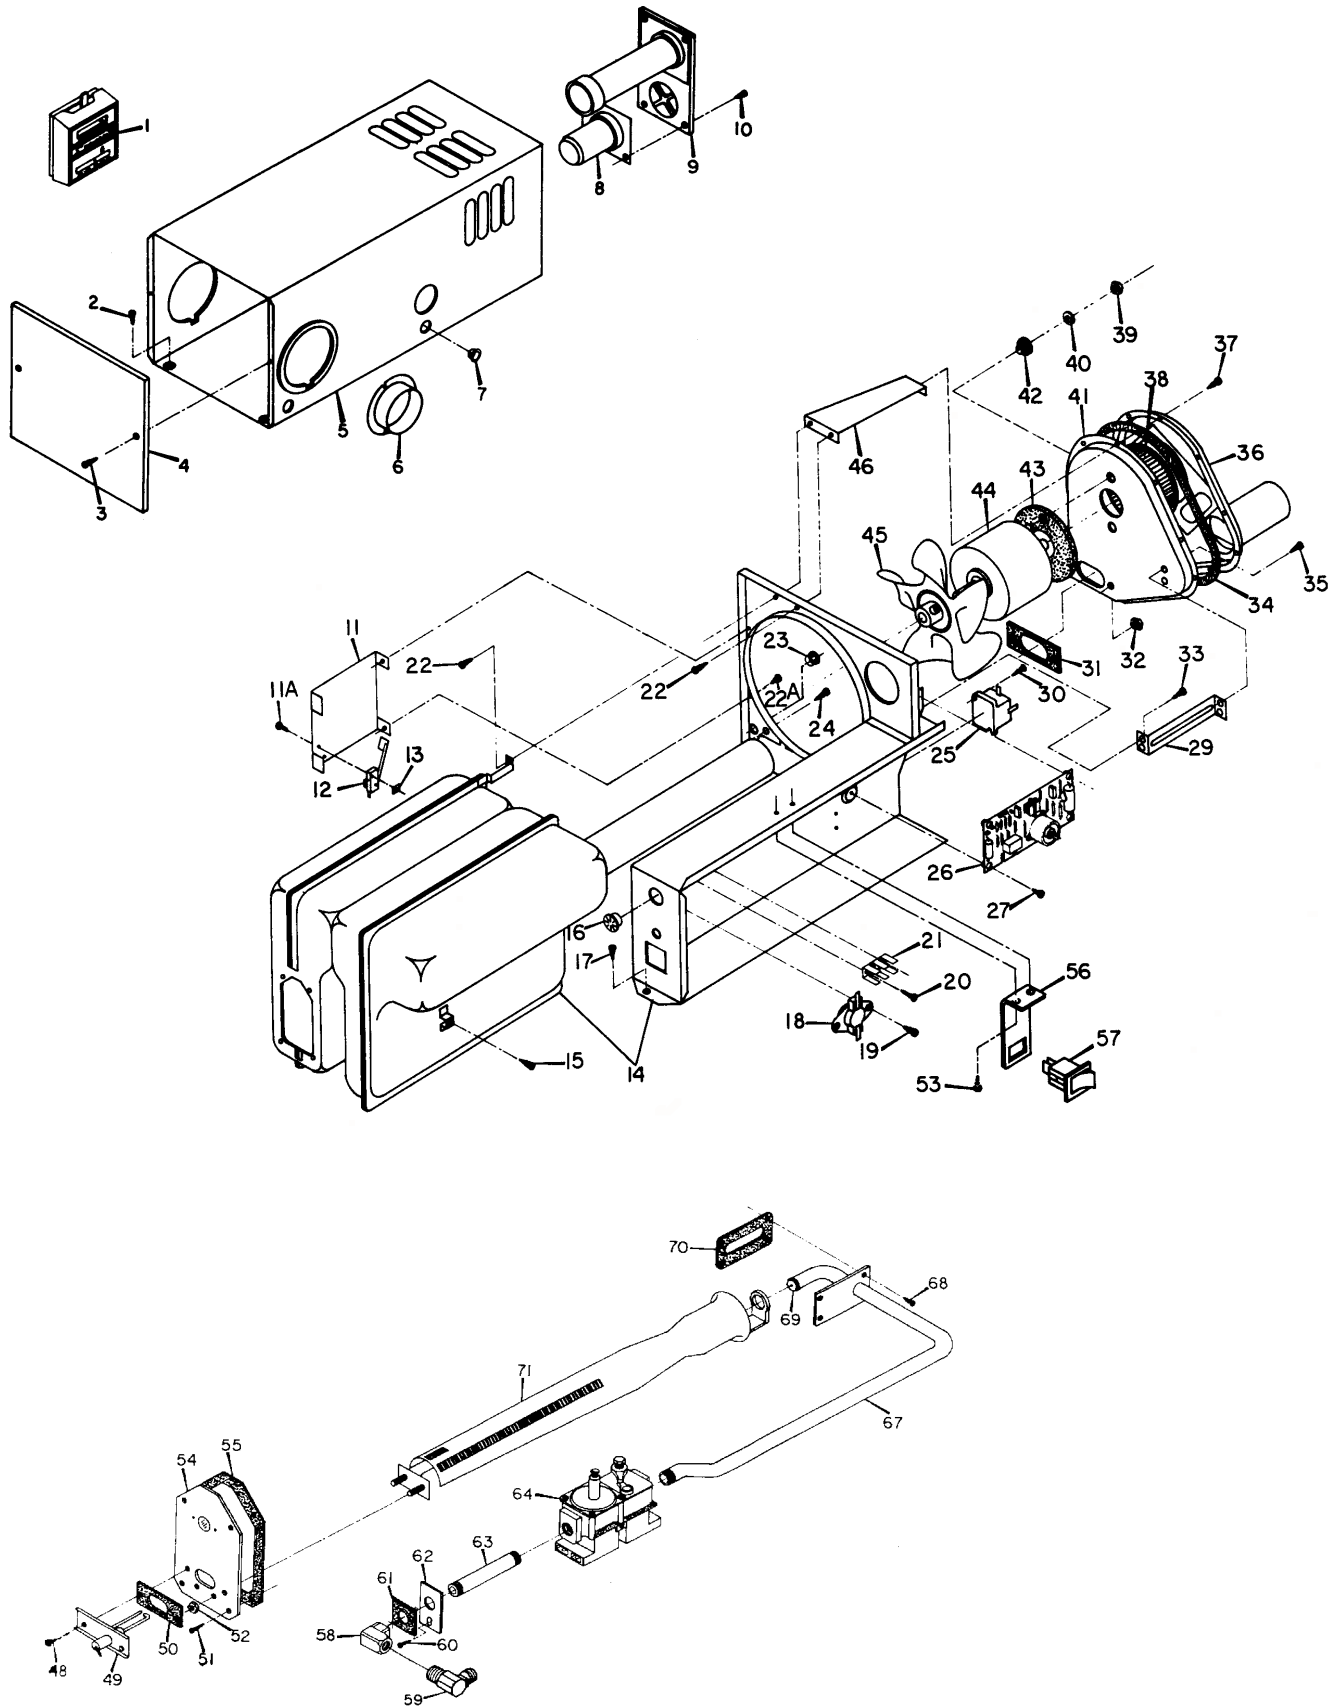



Suburban

Manufacturing Company

a subsidiary of AIRXCEL, Inc.

MODELS

NT-12S • NT-16S • NT-20S

Item No.	NT-12S	NT-16S	NT-20S	Description
1	160912	160912	160902	Thermostat (Suburban supplied thermostat not applicable to some models)
2	121224	121224	121224	Screw, #10 x 3/4 (2 Required)
3	120158	120158	120158	Screw, #8 x 3/8 (2 Required)
4	100960	100960	100960	Front, Cabinet
5	100959	100959	100959	Cabinet
6	050715	050715	050715	Duct Collar (2 Required)
7	070569	070569	070569	Bushing, Snap
8	050906	050906	050906	Tube Assembly, Intake 3"
	050712	050712	050712	Tube Assembly, Intake 5"
	050708	050708	050708	Tube Assembly, Intake 7 1/4"
9	260098	260098	260098	Vent Cap and Exhaust Tube Assembly
10	121853	121853	121853	Screw, #10 x 3/4 (6 Required)
11	062476	062476	062476	Bracket, Microswitch Mounting
11A	121247	121247	121247	Screw, # 2-56 x 5/8 (2 Required)
12	230933	230933	230933	Microswitch Assembly
13	121661	121661	121661	Fastener, Tinnerman (2 Required)
14	020890BK	020890BK	020890BK	Combustion Chamber
15	121388	121388	121388	Screw, #10 x 1/2 Serrated Head
16	070362	070362	070362	Bushing, Snap
17	120158	120158	120158	Screw, #8 x 3/8
18	230621	230621	230621	Limit Switch
19	120158	120158	120158	Screw, #8 x 3/8 (2 Required)
20	121244	121244	121244	Screw, #6 x 1/4 (2 Required)
21	230714	230714	230714	Splicer
22	120158	120158	120158	Screw, #8 x 3/8
22A	120158	120158	120158	Screw, #8 x 3/8 (2 Required)
23	070270	070270	070270	Bushing, Snap
24	121388	121388	121388	Screw, #10 x 1/2 Serrated Head
25	230625	230625	230625	Relay, Time Delay
26	231741	231741	231741	Module Board
27	121271	121271	121271	Nut, 6-32 Hex Lock (2 Required)
29	062392	062392	062392	Bracket, Combustion Air Housing Stiffener
30	121502	121502	121502	Screw, #6 x 5/8 (2 Required)
31	070450	070450	070450	Gasket, Burner Tunnel
32	120717	120717	120717	Nut, 10-24 Hex Lock with Washer (2 Required)
33	120158	120158	120158	Screw, #8 x 3/8 (2 Required)
34	070446	070446	070446	Gasket, Combustion Air Box
35	120158	120158	120158	Screw, #8 x 3/8 (2 Required)
36	390222BK	390222BK	390222BK	Box, Combustion Air (Outside) Assembly
37	120158	120158	120158	Screw, #8 x 3/8 (9 Required)
38	350082	350082	350082	Wheel, Combustion Air
39	121329	121329	121329	Nut, 10-32 Hex Lock (2 Required)
40	120722	120722	120722	Washer, Flat (2 Required)
41	390223BK	390223BK	390223BK	Box, Combustion Air (Inside) Assembly
42	530089	530089	530089	Grommet (2 Required)
43	070448	070448	070448	Gasket, Motor
44	230616	230634	230634	Motor
45	350083	350083	350083	Impeller, Room Air
46	062290	062290	062290	Bracket, Combustion Air Housing Mounting
48	121407	121407	121407	Screw, #8-32 Self Tapping (2 Required)
49	231931	231931	231931	Electrode
50	070163	070163	070163	Gasket, Electrode
51	121388	121388	121388	Screw, #10 x 1/2 (4 Required)
52	120717	120717	120717	Nut, 10-24 Hex Lock with Washer (2 Required)
53	120158	120158	120158	Screw 8 x 3/8
54	030621	030621	030621	Door, Burner Access
55	070398	070398	070398	Gasket, Burner Access Door
56	063262	063262	063262	Bracket, Switch Mounting
57	232351	232351	232351	Switch, ON/OFF
58	171428	171428	171428	Elbow, 90E
59	170374	170374	170374	Gas Fitting
60	121388	121388	121388	Screw, #10 x 1/2
61	071034	071034	071034	Gasket, Pipe Inlet
62	062143	062143	062143	Plate, Gas Inlet Cover
63	170758	170758	170758	Pipe, Gas Inlet
64	161123	161123	161123	Valve
67	170746	170746	170746	Manifold Assembly
68	120615	120615	120615	Screw, #8 x 1/2 (4 Required)
69	180225	180224	180231	Orifice, Main Burner
70	070449	070449	070449	Gasket, Manifold
71	010614	010614	010614	Burner Assembly