

P.T.L. ENTRANCE DOOR ADJUSTMENTS

(PREFERRED DOOR)

SCREEN DOOR ADJUSTMENT

- 1) To adjust screen door up or down in the opening loosen 4 bolts on each hinge at the screen.
- 2) Slots in the hinge will allow movement up and down .
- 3) Now latch the screen door to the door with the door open.
- 4) Check to see that screen hinges fit tight to the trim of the door.
- 5) Loosen the allen head screws on the hinges to adjust door , retighten screws.
- 6) Check door pad on inside of door and make sure it lies within the trim of the door, if not within trim you must resize the pad so it doesn't hold the screen door from sealing correctly.

CHANGING GLASS IN SCREEN DOOR

- 1) Slide both pieces of glass to the hinge side of the screen door.
- 2) On the latch side of the screen door use a screwdriver to pull down the plastic spacer. Pull it all the way out of the track , note the direction of the spacer to reinstall the same way.
- 3) This will allow you to push the glass up and out of the bottom track..
- 4) Install new glass by reversing the procedure.
- 5) Slider glass has a spacer on two corners for centering the glass when closed.

