


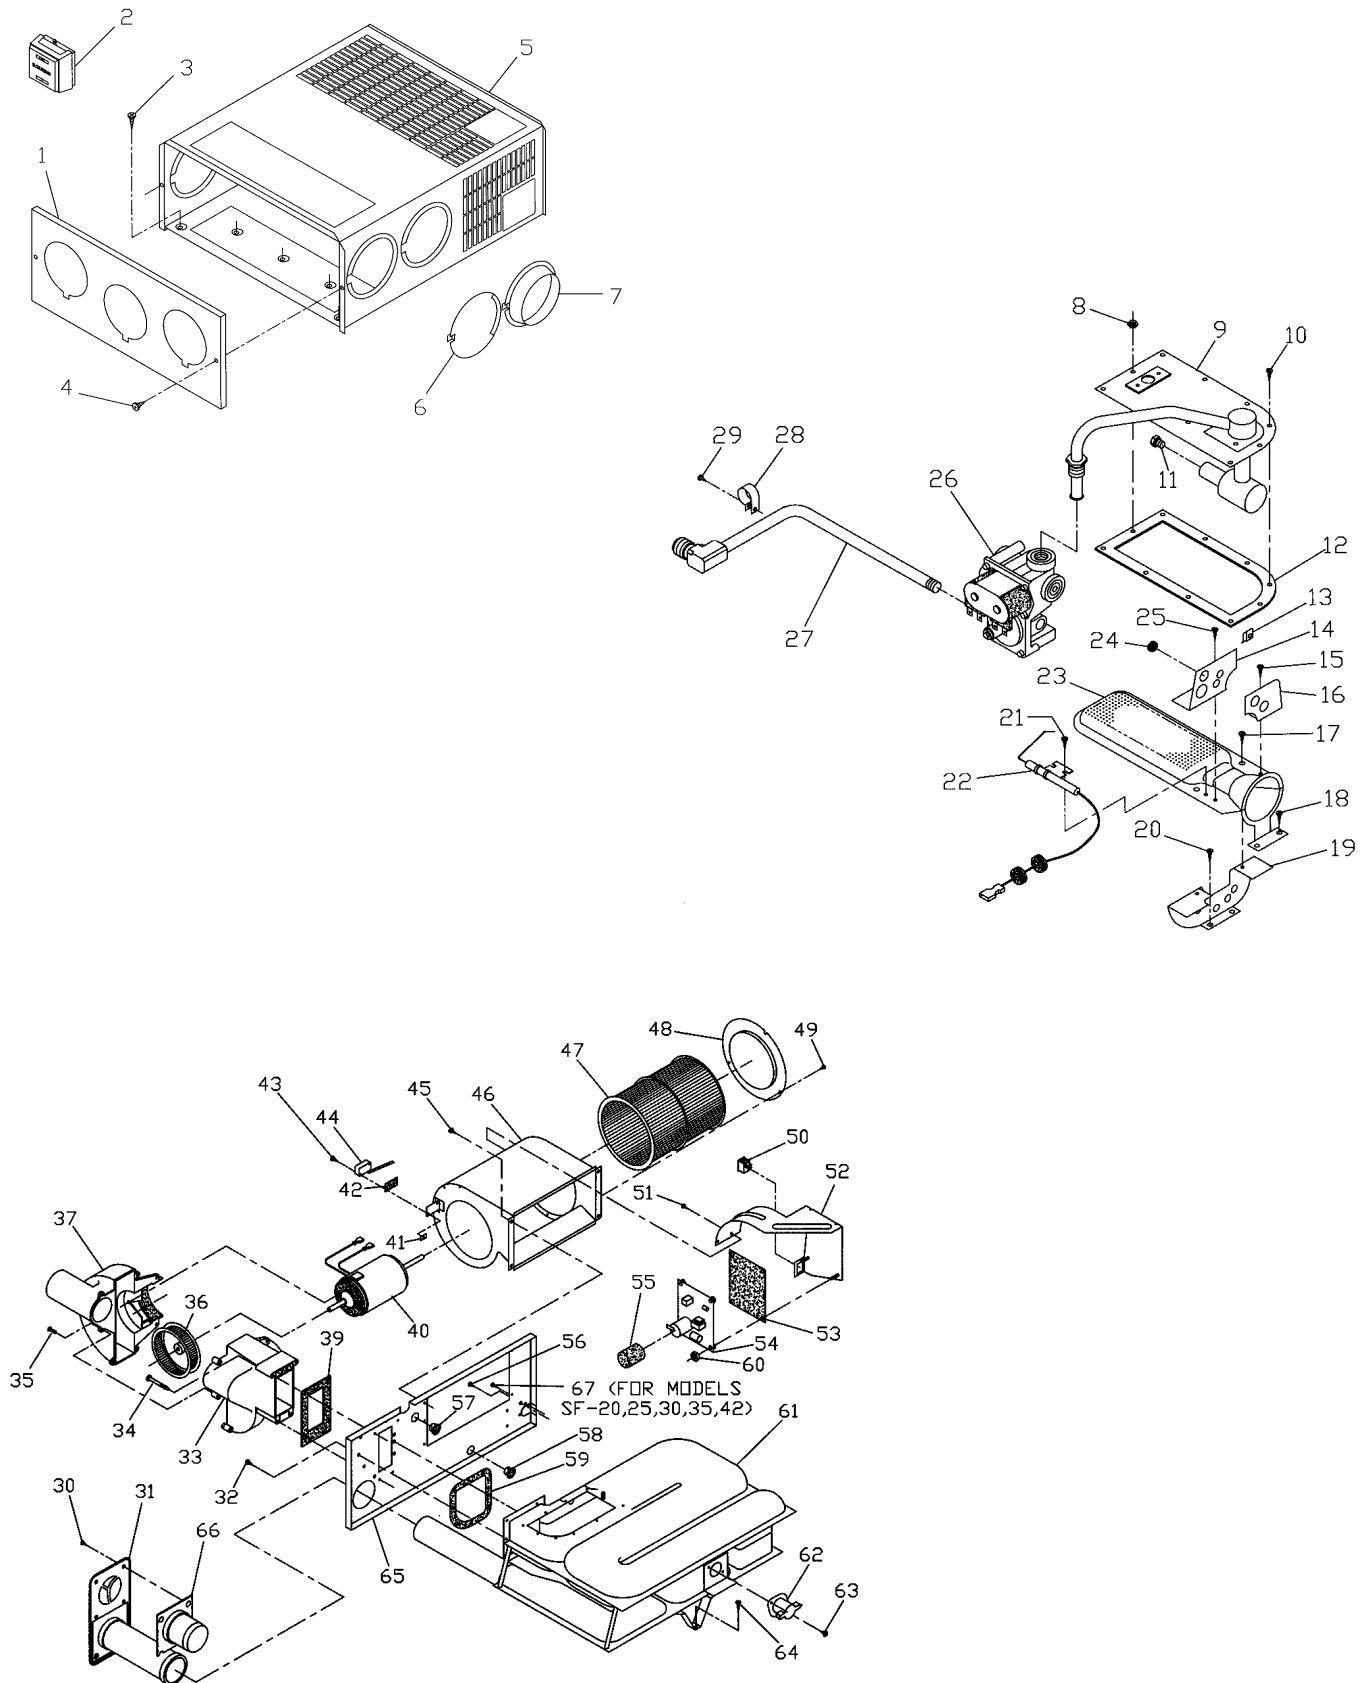

Item No.	Description	Part Number
1	Cabinet Front Assembly	101888
2	Thermostat	161154
3	Screw #10 x 3/4 (2 Required)	121853
4	Screw #8 x 3/8 (2 Required)	120158
5	Cabinet Assembly	101094
6	Cover, Duct	050733
7	Collar, Duct	050715
8	Nut 8-32 Keps	121694
9	Manifold Assembly Complete	171517
10	Screw #8-18 x 1/2 (9 Required)	121651
11	Orifice, Main Burner	180242
12	Gasket, Burner Access Cover	070811
13	Tinnerman	121704
14	Plate, Secondary Air (Top-Back Half)	063198
15	Screw #8-18 x 1/2 Stainless	121651
16	Plate, Secondary Air (Top-Front Half)	062933
17	Screw #8-18 x 1/2 Stainless (2 Required)	121651
18	Screw #8-18 x 1/2 Stainless (2 Required)	121651
19	Plate, Secondary Air (Bottom)	062935
20	Screw #8-18 x 1/2 Stainless (2 Required)	121651
21	Screw #8-18 x 1/2 Stainless	121651
22	Electrode	232286
23	Burner Assembly Complete	010799
24	Grommet	070963
25	Screw #8-18 x 1/2 Stainless	121651
26	Valve	161122
27	Pipe Assembly, Gas Inlet	171574
28	Clamp, Wire	062180
29	Screw #8-18 x 1/2 Self-Drilling	121857
30	Screw #10 x 3/4 (6 Required)	121853
31	Vent Cap and Exhaust Tube Assembly	260231
32	Screw #8-18 x 1/2 (8 Required)	121857
33	Combustion Air Housing Assembly (Front Half)	390852

Item No.	Description	Part Number
34	Screw #8-18 x 2 1/4 (4 Required)	121929
35	Screw #6-19 x 1/2 (7 Required)	121928
36	Wheel, Combustion Air	350183
37	Combustion Air Housing (Rear Half)	390848
39	Gasket, Firewall (Combustion Air)	071084
40	Motor Assembly with Gasket	232683
41	Nut (2 Required)	120672
	Washer (2 Required)	121364
42	Insulator, Sail Switch	230877
43	Screw #2-56 x 5/8 (2 Required)	121247
44	Switch, Sail (Assembly)	232261
45	Screw #8-18 x 1/2 (4 Required)	121857
46	Blower Assembly (Room Air)	390740BK
47	Wheel, Room Air	350129
48	Orifice Ring	390696
49	Screw #8 x 3/8 (3 Required)	120158
50	Switch, ON/OFF	232351
51	Screw #8 x 3/8 (3 Required)	120158
52	Panel Assembly (Module Board)	101663
53	Insulator Module Board	070807
54	Module Board	520820
55	Insulator Cap, Module Board Coil	070973
56	Screw #8-18 x 1/2	121857
57	Bushing, Universal	070362
58	Bushing, Strain Relief	231809
59	Gasket, Firewall (Chamber Side)	070808
60	Nut 6-32 Hex Lock (2 Required)	121271
61	Chamber Assembly Final	021150BK
62	Switch, Limit	232505
63	Screw #8 x 3/8 (2 Required)	120158
64	Screw #8 x 3/8	120158
65	Firewall	110747
66	Tube Assembly Intake (Vent)	051248
67	Screw #8-18 x 1/2	121857