


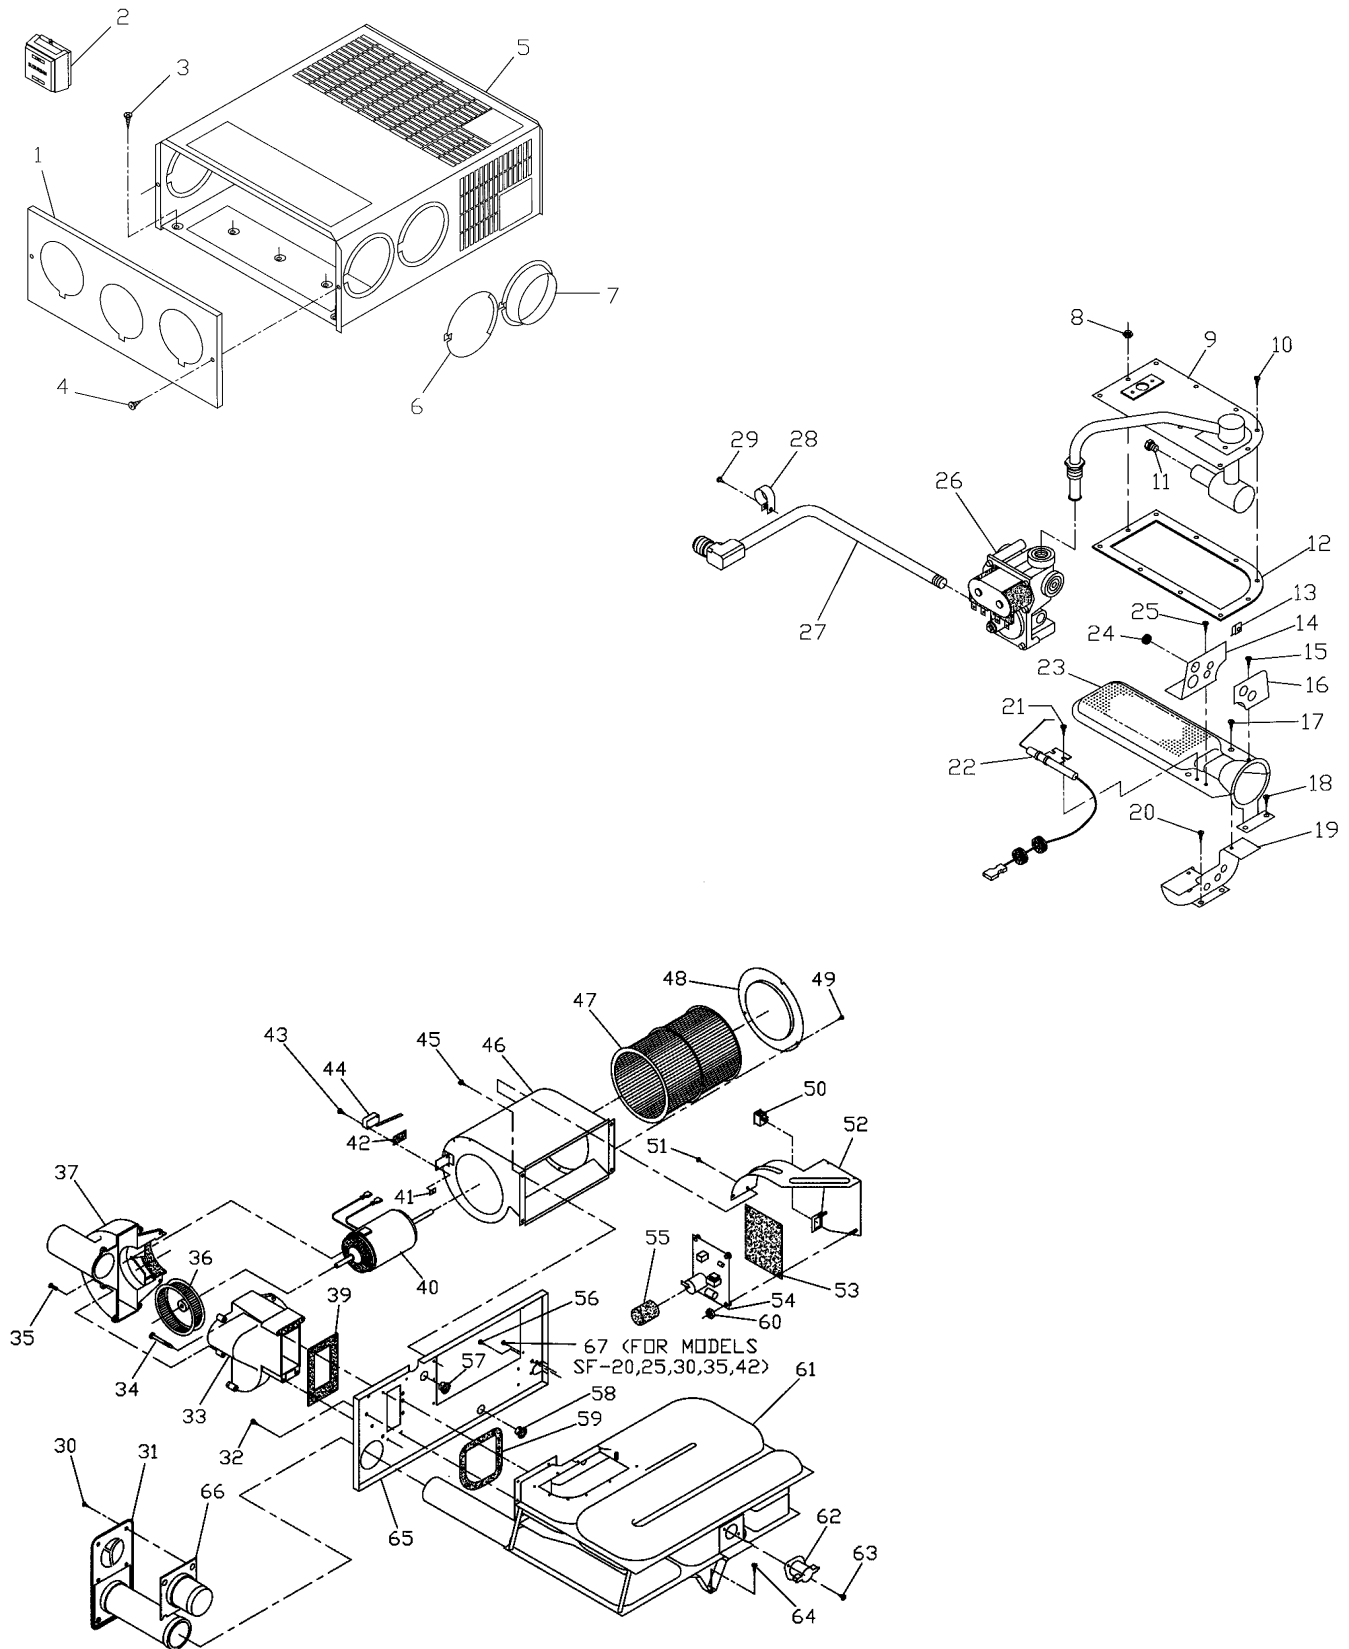

Item No.	Description	Part Number
1	Cabinet Front Assembly	101888
2	Thermostat	161154
3	Screw #10 x 3/4 (2 Required)	121853
4	Screw #8 x 3/8 (2 Required)	120158
5	Cabinet Assembly (SF-20, SF-25, SF-30 only)	101889
	Cabinet Assembly (SF-35 only)	101893
6	Cover, Duct	050733
7	Collar, Duct	050715
8	Nut 8-32 Keps	121694
9	Manifold Assembly Complete	171571
10	Screw #8 x 3/8 (9 Required)	120158
11	Orifice, Main Burner (SF-20)	180188
	Orifice, Main Burner (SF-25)	180193
	Orifice, Main Burner (SF-30)	180214
	Orifice, Main Burner (SF-35)	180222
12	Gasket, Burner Access Cover	070811
13	Tinnerman	121704
14	Plate, Secondary Air (Top-Back Half)	
	(SF-20, SF-25, SF-30)	063198
	Plate, Secondary Air (Top-Back Half) (SF-35)	063199
15	Screw #8-18 x 1/2 Stainless	121651
16	Plate, Secondary Air (Top-Front Half)	
	(SF-20, SF-25, SF-30)	062933
	Plate, Secondary Air (Top-Front Half) (SF-35)	062936
17	Screw #8-18x 1/2 Stainless (2 Required)	121651
18	Screw #8-18x 1/2 Stainless (2 Required)	121651
19	Plate, Secondary Air (Bottom)	
	(SF-20, SF-25, SF-30)	062935
	Plate, Secondary Air (Bottom) (SF-35)	062938
20	Screw #8-18x 1/2 Stainless (2 Required)	121651
21	Screw #8-18x 1/2 Stainless	121651
22	Electrode	232286
23	Burner Assembly Complete (SF-20)	010767
	Burner Assembly Complete (SF-25)	010762
	Burner Assembly Complete (SF-30, SF-35)	010745
24	Grommet	070963
25	Screw #8-18 x 1/2 Stainless	121651
26	Valve	161122
27	Pipe Assembly, Gas Inlet	171574
28	Clamp Wire	062180
29	Screw #8-18 x 1/2 Self-Drilling	121857
30	Screw #10 x 3/4 (6 Required)	121853

Item No.	Description	Part Number
31	Vent Cap and Exhaust Tube Assembly	260231
32	Screw #8-18 x 1/2 (8 Required)	121857
33	Cumbustion Air Housing Assembly (Front Half)	390852
34	Screw #8-18 x 2 1/4 (4 Required)	121929
35	Screw #6-19 x 1/2 (7 Required)	121928
36	Wheel, Combustion Air (SF-20 Only)	350189
	Wheel, Combustion Air (SF-25, SF-30, SF-35)	350184
37	Combustion Air Housing (Rear Half) (SF-20)	390849
	Combustion Air Housing (Rear Half) (SF-25, SF-30, SF-35)	390848
39	Gasket, Firewall (Combustion Air)	071084
40	Motor Assembly with Gasket	
	(SF-20, SF-25, SF-30)	232682
	Motor Assembly with Gasket (SF-35)	232684
41	Tinnerman (2 Required)	121661
42	Insulator, Sail Switch	230877
43	Screw #2-56 x 5/8 (2 Required)	121247
44	Switch, Sail (Assembly)	232261
45	Screw #8-18 x 1/2 (4 Required)	121857
46	Blower Assembly, Room Air	390739BK
47	Wheel, Room Air	350129
48	Orifice Ring	390696
49	Screw #8 x 3/8 (3 Required)	120158
50	Switch, On/Off	232351
51	Screw #8 x 3/8 (3 Required)	120158
52	Panel Assembly (Module Board)	101663
53	Insulator Module Board	070807
54	Module Board	520820
55	Insulator Cap, Module Board Coil	070973
56	Screw #8-18 x 1/2	121857
57	Bushing, Universal	070362
58	Bushing, Strain Relief	231809
59	Gasket, Firewall (Chamber Side)	070808
60	Nut 6-32 Hex Lock (2 Required)	121271
61	Chamber Assembly Final	021149BK
62	Switch, Limit (SF-20)	232503
	Switch, Limit (SF-25, SF-30, SF-35)	232504
63	Screw #8 x 3/8 (2 Required)	120158
64	Screw #8 x 3/8	120158
65	Firewall	110747
66	Tube Assembly Intake (Vent)	051248
67	Screw #8-18 x 1/2	121857