


# NEWMAR CORPORATION WARRANTY DEPARTMENT

TECHNICAL SERVICE BULLETIN						
DATE ISSUED	MODEL YEAR(S) AFFECTED	MODEL(S) AFFECTED	TSB #			
10/16/95	1996	ALL	118			
BRAND		TYPE				
All <input type="checkbox"/>	American Star <input type="checkbox"/>	Kountry Star <input checked="" type="checkbox"/>	Dutch Star <input type="checkbox"/>	All <input checked="" type="checkbox"/>	T T <input type="checkbox"/>	F W <input type="checkbox"/>
NewAire <input type="checkbox"/>	Mountain Aire <input checked="" type="checkbox"/>	Kountry Aire <input checked="" type="checkbox"/>	London Aire <input checked="" type="checkbox"/>	C A <input type="checkbox"/>	D P <input type="checkbox"/>	D B <input type="checkbox"/>
<input checked="" type="checkbox"/> Air Conditioning & Heating				<input type="checkbox"/> Electrical Components		
<input type="checkbox"/> Appliances & Accessories				<input type="checkbox"/> Exterior Components		
<input type="checkbox"/> Cabinets & Furniture				<input type="checkbox"/> Interior Components		
<input type="checkbox"/> Chassis Components				<input type="checkbox"/> Plumbing & Bath Components		
<input type="checkbox"/> Construction Components				<input type="checkbox"/> Windows, Awnings, Vents, & Doors		
DESCRIPTION OF PROBLEM						
Operation of Duo-Therm thermostat.						
RECOMMENDED SOLUTION						
Refer to the attached instructions from Duo-Therm.						

# NEWMAR CORPORATION WARRANTY DEPARTMENT

## STARTING THE COMFORT CONTROL SYSTEM

**NOTE:** The basic steps for normal operation of your Comfort Control system are covered in this User's Guide. If you encounter difficulty or want more information about your system, refer to the Operating Instructions manual.

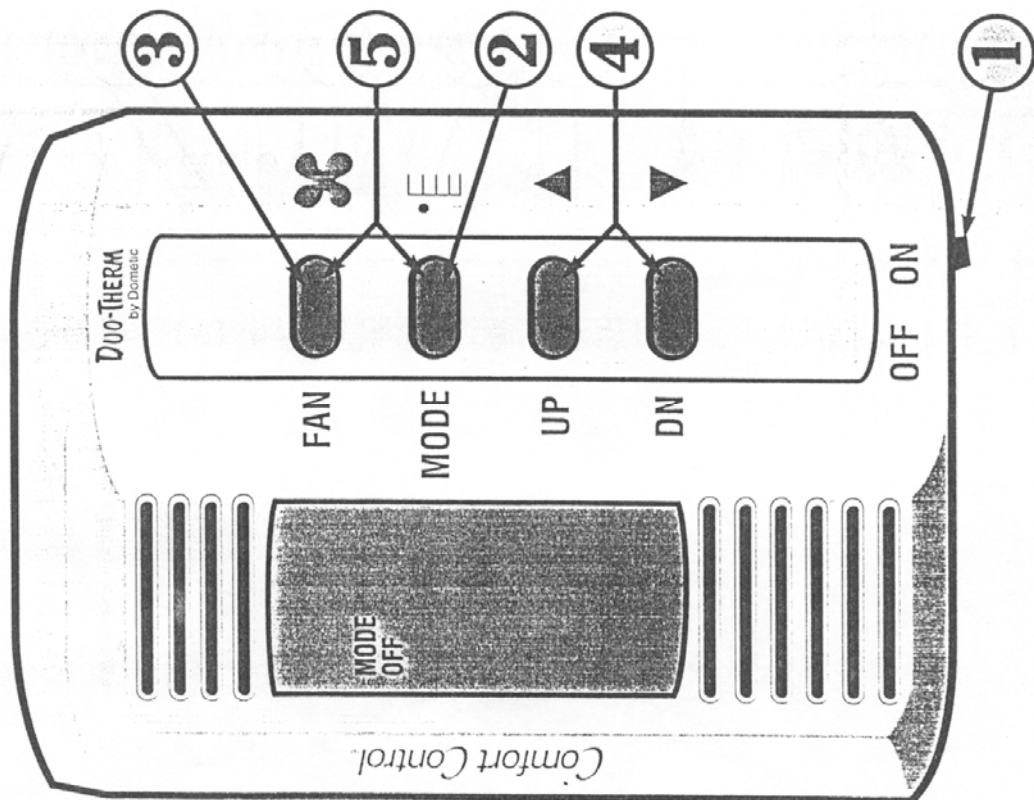

**Step One:** Move power switch to ON

**Step Two:** Press MODE button to select function. (COOL\*, FURNACE, FAN ONLY, etc.)

**Step Three:** Press FAN button to select fan speed or automatic operation.

**Step Four:** Press UP or DN button to set your desired temperature for the zone

**Step Five:** If your vehicle contains more than one ZONE, depress FAN and MODE simultaneously to select zone 2, and repeat procedures from step 2 above. Repeat entire procedure for each additional zone.

\* There is an approximate 2-minute time delay after selecting cooling function for refrigerant compressor to start.

### SHUTDOWN


If you turn the Comfort Control off, or if there is a power interruption for any reason, the system will resume operation on the last settings when power returns.

**SEE BACK PAGE FOR FAN ONLY AND  
HEAT PUMP OPERATION**

# NEWMAR CORPORATION WARRANTY DEPARTMENT

## *Fan Only Mode of Operation*


1. Place the power switch to ON by moving the lever to the right.
2. Depress and release the MODE button until FAN ONLY indicator is illuminated.
3. Depress and release the FAN push-button until desired speed (LOW, MED, HIGH, AUTO) is illuminated. If your vehicle is equipped with a heat pump or basement air conditioner system, your choice for fan speeds will be (LOW, HIGH, AUTO).
4. If your vehicle contains more than one zone, depress FAN & MODE simultaneously to select ZONE 2. Repeat the above procedure to set each zone.

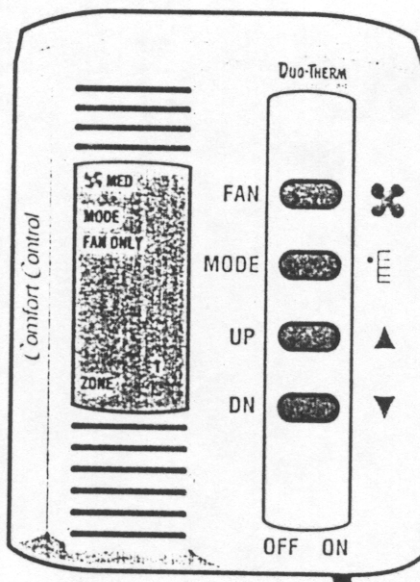

## *Heat Pump Operation*

To set heating temperatures for vehicles equipped with Duo-Therm basement or rooftop Heat Pumps:

1. Press the MODE button until HEAT PUMP appears on the LCD display.
2. Press the FAN button to select the desired speed or AUTO.
3. Press the UP or DN button until the desired temperature is displayed. The compressor will start in approximately 2 minutes to begin the heating process.
4. If your vehicle has more than one zone, press FAN and MODE buttons simultaneously to select ZONE 2. Repeat the above procedure to set each zone.

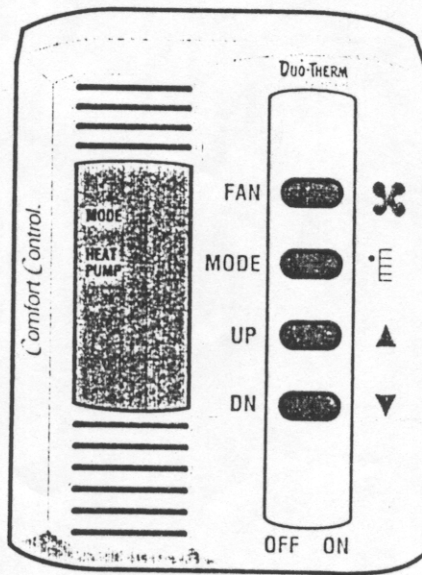

**For more information, refer to the Operating Instructions.**