

CANYON STAR

2024

Canyon Star
FRONT ENGINE DIESEL





WHEN YOU KNOW THE DIFFERENCE™

Canyon Star Owner’s Guide
Table of Contents

Introduction.....1

Safety 13

Appliances 29

Chassis 53

Electrical 67

Electronics.....101

Entertainment Systems.....125

Exterior 141

HVAC.....165

Interior175

Plumbing.....187

Slideouts.....209

Care and Maintenance 217

 **IMPORTANT**

This Owner’s Guide is a compilation of quick start guides for various components in your coach and should not take the place of the complete Operation Manual(s) provided by this component manufacturer(s). Refer to the complete manuals provided by the component manufacturers, which may be located in your owner’s information package and/or Newgle.

 **NOTICE**

This Owner’s Guide is published and printed from Newmar’s online knowledgebase. For the most up-to-date version of this content, and for more product-specific information, how-to articles, and troubleshooting information, please refer to Newgle. All of the information in Newgle is believed to be accurate at the time of publication. However, it may be necessary to make revisions, and Newmar reserves the right to make any such changes without notice or obligation.



This page is intentionally blank.

 **IMPORTANT**

Reset all default keyless entry codes and WiFi system network passwords to prevent unauthorized access to the coach and its components.

For more information, refer to the Electronics chapter in this owner's guide.



This page is intentionally blank.



INTRODUCTION: ABOUT NEWMAR AND YOUR NEW COACH

This chapter provides you with an introduction to Newmar, our warranty process, and our seamless service promise.

New Coach Delivery Process and Limited Warranty

This article provides a detailed list of the customer and dealer responsibilities during the delivery process, as well as information about Newmar's limited warranty.

Introduction To Newmar

Welcome to the exciting world of recreational vehicles and the growing Newmar family! Congratulations on your purchase of a Newmar product! Your coach proudly carries the Newmar torch, as a new generation of RV'ing begins. We share your excitement at this moment, and with you look forward to the years and miles of adventure the RV lifestyle offers you in your coach.

Whether camping at your favorite remote fishing hole or tailgating at the big game with your friends, Newmar is with you every step of the way.

THE NEWMAR LEGACY

Your new coach was built with care using today's technology and old-world craftsmanship. At Newmar, we strive to build vehicles that are safe, dependable, and comfortable. Born on Christian principles and from the desire to build the best, the legacy associated with the name Newmar is one of family pride and quality. It is the culmination of decades of RV design and building experience.

We take humble pride in our history of innovation. We introduced the industry to the first slideout rooms, and continued our tradition of innovation with the first flush floor slideout in a motorized coach and the smooth, seamless fiberglass body. Your coach is at the forefront of current technology, built by the skilled hands and quality conscious eyes of craftsmen.

At Newmar, we recognize that a craftsman's final product is only as good as the materials they use, so we are selective about what we put into our coaches. We start with a foundation forged in the strength of steel and aluminum. We fill it with beautiful, durable hardwoods, and select name brand appliances and components, then build it on a chassis built to stand the test of time. Then we finish our units with an artist's gentle touch.

The Newmar Warranty

We stand behind our work with an exceptional warranty and dependable service, so you can travel with the kind of confidence that comes from knowing you're protected. What helps Newmar stand out from other coach manufacturers is our commitment to following our customers throughout the repair process to ensure any issues get taken care of the right way, right away.

Please read the Newmar Limited Warranty and all other component warranties that apply to the equipment installed on your coach. A copy of the "Newmar Limited Warranty" is available in Newgle.

CHASSIS AND COMPONENT MANUFACTURER WARRANTIES

The limited warranties issued by the chassis and component manufacturers require periodic service and maintenance. The owner's failure to provide this service and/or maintenance may result in the loss of warranty coverage.

Be sure to file the appropriate warranty registration with the proper manufacturer to activate the warranties on the components within your Newmar coach.

If you, for any reason, have a problem obtaining satisfactory and timely warranty service that may substantially impair the use, value, or safety of your Newmar coach, please call Newmar Customer Service toll free at 1-800-731-8300 (select the appropriate menu option).

The Delivery Process

Throughout the manufacturing process, your vehicle has been inspected by Newmar qualified technicians. However, our final inspection at the factory is not to be the last one. The pre-delivery inspection and systems check your dealer performs are the final inspections done to the unit prior to you receiving your new coach. Your dealer may assist you in understanding the limited warranties and with completing all warranty forms for the various appliances and accessories installed in your unit.

CUSTOMER RESPONSIBILITIES

To assist you in avoiding problems with your vehicle, we recommend you do the following:

1. Read the warranty. Go over it thoroughly with your dealer.
2. Inspect the vehicle. Do not accept delivery until you have gone through the coach with the dealer. Newmar has provided a checklist as part of the Owner's Registration to be used during retail delivery. Check each item on the list, and make sure the dealer does the same. Do not sign this checklist until you have checked off each item.

⚠ NOTICE

The sales literature versus actual specifics to the vehicle's measurements, weights, or quantities may vary.

3. Ask questions about anything that you do not understand concerning your recreational vehicle.

⚠ IMPORTANT: CYBERSECURITY ALERT

- **Reset all default keyless entry codes and WiFi system network passwords to prevent unauthorized access to the coach and its components. For more information, refer to Newgle and/or your coach owner's guide for keyless entry and WiFi security documentation.**
- **For customers with SilverLeaf touchscreen(s) with version 1.81 or higher, LR 125 version 2.01 or higher, web version 5.0, and operating system version 4.0: An additional layer of SilverLeaf LR125/Control app security called "white listing" is available for the customer to use if they wish; however, it is not required. For more information about using white listing, refer to the PDF file in Newgle called "White Listing Devices via LR125 and System Control App."**

DEALER RESPONSIBILITIES

1. A pre-delivery inspection and systems check: thoroughly inspecting the vehicle and the operation of the factory-installed components.
2. A customer walk-through to familiarize the customer with the vehicle, its systems and components, and their operation.
3. Delivery of the Owner's Information Package. This package contains the warranty cards and registrations for the vehicle and factory-installed components that carry a separate warranty. The detailed operating and maintenance instructions on these components are also included in this package.
4. Assisting the customer in completing the component registration forms, at the customer's request. To avoid loss of warranty coverage, the dealer should review the limited warranty provisions with the customer, stressing the importance of filing warranty cards and registrations to the component manufacturers within the prescribed time limit.
5. Providing the customer with information regarding warranty and non-warranty work on the vehicle, as well as its separately warranted components, whether the customer is in or out of the area.

385 N. DELAWARE ST.
PO BOX 30
NAPAVINE, IN 46550-0030
574-773-7791 FAX 574-773-2885

OWNER'S REGISTRATION
Must be returned to Newmar within 10 days of date of purchase.

LAST NAME	FIRST	MODEL	DATE PURCHASED	MODEL	YEAR	SERIAL NUMBER	MILEAGE
STREET ADDRESS			SELLING DEALER VIN				
CITY	STATE	ZIP	CITY	STATE	ZIP		
E-MAIL ADDRESS			SALES REPRESENTATIVE NAME				
HOME TELEPHONE #			CELL TELEPHONE #				

PRE-DELIVERY AND ACCEPTANCE DECLARATION
The selling dealer will inspect, correct and adjust as necessary, the following items with the new owner immediately prior to delivery:

<p><input type="checkbox"/> Dealer checks box on left Customer checks box on right</p> <p>1. WATER SYSTEM Check for leaks, correct as necessary</p> <p><input type="checkbox"/> Water Inlet Valve <input type="checkbox"/> Water Tank <input type="checkbox"/> Water Pump <input type="checkbox"/> Water Heater & Review Operation <input type="checkbox"/> All Water Lines <input type="checkbox"/> Drain Cocks <input type="checkbox"/> All Faucets <input type="checkbox"/> Winterize if Necessary</p> <p>2. PLUMBING SYSTEM Check and correct as necessary</p> <p><input type="checkbox"/> Holding Tank <input type="checkbox"/> Tub/Shower <input type="checkbox"/> Gate Valve <input type="checkbox"/> Sink <input type="checkbox"/> All Pipes <input type="checkbox"/> Laundry <input type="checkbox"/> Toilet Bowl <input type="checkbox"/> Waste Water Tank <input type="checkbox"/> Winterize if Necessary</p> <p>3. L.P. GAS SYSTEM Meter-check entire system Correct and adjust as necessary</p> <p><input type="checkbox"/> Furnace - Pilot - Burner <input type="checkbox"/> Range - Pilot - Burners <input type="checkbox"/> Water Heater - Pilot - Burner <input type="checkbox"/> Refrigerator Burner <input type="checkbox"/> Gas Regulator: Adjust Pressure <input type="checkbox"/> Gas Lines <input type="checkbox"/> LP Detector Fuse Activated</p>	<p>4. ELECTRICAL SYSTEM Check operation, correct as necessary.</p> <p><input type="checkbox"/> 110 V. System <input type="checkbox"/> 12 V System <input type="checkbox"/> All Interior Lights <input type="checkbox"/> All Interior Switches <input type="checkbox"/> All Interior Fans <input type="checkbox"/> Heater/Air Cond./Thermostat <input type="checkbox"/> All Exterior Lights <input type="checkbox"/> All Exterior Receptacles <input type="checkbox"/> Electric Water Heater <input type="checkbox"/> Converter/Inverter <input type="checkbox"/> Generator & Review Operation</p> <p>5. EXTERIOR Check and correct as necessary</p> <p><input type="checkbox"/> Entrance Door, Locking, Proper Adj. <input type="checkbox"/> Tank Door, Locking, Proper Adj. <input type="checkbox"/> Sidewall Operation <input type="checkbox"/> Sidewall Appearance & Fit</p> <p>6. GENERAL APPEARANCE / ITEMS Inspect and correct as necessary</p> <p><input type="checkbox"/> Interior, Exterior, Trim Match <input type="checkbox"/> Exterior Finish, Spot Paint, Nips, Bumps, A/C, Touch-Up</p>	<p>7. FACTORY-INSTALLED OPTIONS AND ACCESSORIES Inspect & adjust as necessary</p> <p><input type="checkbox"/> Check All Engine & Transmission Fluids <input type="checkbox"/> Check Automotive Diagrams During Test Drive <input type="checkbox"/> Tag Axis & Review Operation <input type="checkbox"/> Vehicle Handling / Ride <input type="checkbox"/> Tire Pressure <input type="checkbox"/> Wheel Covers</p> <p>8. OWNER/DEALER DELIVERY</p> <p><input type="checkbox"/> Review Owner's Guide and Instruction Book with Owner <input type="checkbox"/> Demonstrate Operation of All Appliances and Accessories <input type="checkbox"/> Road Test with Owner <input type="checkbox"/> Review Warranty</p> <p>9. INTERIOR</p> <p><input type="checkbox"/> Cleanliness <input type="checkbox"/> Fire Extinguisher <input type="checkbox"/> CO2 Detector Activated <input type="checkbox"/> Smoke Detector</p>
--	--	--

Time Inspection Took _____ Location of Inspection _____

Were there any additional questions? ☐ Yes ☐ No If yes, explain: _____

Were these questions answered to your satisfaction? ☐ Yes ☐ No If no, explain: _____

After this inspection, do you feel competent to operate and maintain your recreational vehicle within all its guidelines set forth in the enclosed owner's manuals? ☐ Yes ☐ No If no, explain: _____

WARNING: BUYER IS EXPECTED TO READ THIS DOCUMENT BEFORE IT IS SIGNED.

In the interest of complete consumer education, the dealer is required to perform the pre-delivery inspection and demonstrations. The purchaser should not sign this document until all of the items indicated above have either been performed or explained to his satisfaction and he and the dealer have checked the respective box. The dealer is not authorized to deliver this vehicle unless indicated items have been performed and this form has been properly completed and signed by both the Seller and the Purchaser.

NOTICE: CONSUMER WARRANTY SERVICE OBLIGATION

The registration of this warranty provides you with certain warranty and service rights pursuant to Newmar's Express Limited Warranty for repair and/or warranty service. You agree by the execution of this registration that Newmar's Express Limited Warranty is the only expressed warranty provided by Newmar, and that it is a repair and service warranty only, and that in the event your RV requires warranty service that you will schedule to advance a warranty service appointment with an authorized Newmar service facility, and you will deliver your unit to that service facility at the beginning of the business day of the scheduled appointment.

One of service time will not begin before the day actually scheduled for the warranty dealer for service and shall only include those days upon which work is actually performed by the servicing dealer, provided the vehicle is in the dealer's possession and shall otherwise be applicable with limitations for those items needing service.

I certify that I made the complete inspection of the vehicle and took the test drive at the time of purchase, and I found the vehicle to be without defects.

I certify that the purchaser made the inspection and took the test drive as required above and that all inspection items have been performed in his presence and / or explained to his complete satisfaction.

Date of Inspection _____ Dealer's Full Signature _____

Date of Inspection _____ Purchaser's Full Signature _____

NEWMAR CORPORATION

PURCHASE DATE _____

SERIAL # _____

NEWMAR CORPORATION • 355 N DELAWARE ST • PO BOX 30 • NAPPANEE IN 46550-0030

2024 RECREATIONAL VEHICLE TWELVE MONTH LIMITED WARRANTY

BRANDS: BAY STAR SPORT • BAY STAR • CANYON STAR • SUPER STAR • SUPREME AIRE
KOUNTRY STAR • VENTANA • DUTCH STAR • NEW AIRE • MOUNTAIN AIRE • LONDON AIRE • ESSEX • KING AIRE

Newmar Corporation warrants this recreational vehicle for twelve (12) months from the original retail owner's date of purchase under normal use and service while in operation in the United States and Canada excluding the exceptions set out below.

If any part of your new Newmar Corporation product fails because of a manufacturing defect within twelve (12) months from the original retail owner's date of purchase, it will be repaired without charge for either parts or labor by Newmar Corporation, providing the required maintenance as outlined in the Newmar Owner's Guide and claim procedures below are followed.

Upon discovery of a defect, you should notify the dealership where you purchased your Newmar recreational vehicle, or the local authorized Newmar Service Center and set up an appointment to have the defect corrected without charge for either parts or labor. Owner agrees it is his obligation and an essential term of this warranty that he makes his vehicle available for warranty service whenever it needs warranty service at his selling dealer or at an authorized Newmar service center. If you do not know the location of your closest Newmar Service Center, you may contact the Newmar Corporation warranty department by telephone at 800-731-8300, or by mail at PO BOX 30, NAPPANEE IN 46550-0030. Newmar will then direct you to the nearest service center. You may then call the service center and set up an appointment, or ask the warranty department to assist you in scheduling an appointment at the service center. Service performed by non-authorized service centers must have prior written approval for warranty reimbursement. If you do not get immediate response from any component manufacturer, call Newmar Customer Service and Newmar will assist you in obtaining warranty service from the component part supplier for the term of the Newmar warranty.

The repair or replacement of defective parts under this warranty shall be made by an authorized Newmar Corporation Dealership or Authorized Newmar Service Center.

THE LIMITED 5-YEAR STRUCTURAL WARRANTY. If any part of your Newmar recreational vehicle superstructure (which is the steel/aluminum structure of the sidewall, roof, or frame) fails to perform properly within five years from the date of purchase because of faulty workmanship or material supplied by Newmar, it will be repaired without charge for either parts or labor by Newmar providing the claim procedures stated above are followed. This structural warranty is available only to the original purchaser and is non-transferable.

THIS WARRANTY DOES NOT COVER OR INCLUDE:

- Any normal deterioration of appearance items due to wear and/or exposure, including drapery, upholstery, carpeting, exterior paint and finish, rust and corrosion;
- Any Newmar Corporation product used for commercial purposes (any use for business for profit, or nonprofit,) or held for rental or hire;
- Unauthorized Modifications. Installation of any 'aftermarket' devices or modifying any existing system originally installed by Newmar Corporation should be considered an unauthorized modification. Any condition or repair related to the performance or function of the Newmar unit as a result of an unauthorized modification will not be considered a warrantable defect in materials, workmanship, or components, and necessitated repairs as a result thereof will not be covered under the Newmar Limited Warranty;
- Any damage or defect caused by, but not limited to, collision, fire, theft, vandalism, riot, explosion, acts of God, war, objects striking the vehicle, neglect, misuse, overloading, accident, unauthorized repairs, alterations, improper dealer handling, improper or un-applied maintenance, or failure to follow operating instructions;
- Normal Maintenance Cost and Requirements. Normal maintenance cost and requirements detailed in the Newmar Owner's Guide are the responsibility of the purchaser. For an itemized list of required maintenance procedures and schedules, please refer to your Newmar Owner's Guide;
- Cosmetic alignment of the slide out(s) and other cosmetic adjustments are considered routine maintenance and are not covered,
- Equipment and components supplied and separately warranted by other manufacturers, including but not limited to, tires, batteries, chassis, including all items supplied by the chassis manufacturer, and other installed equipment or accessories. These suppliers provide their own warranties or extensions. These warranties are separate from the Newmar Limited Warranty. Please review each separate warranty for descriptions and details of their respective warranty. The terms, conditions and warranty periods of these warranties may vary from the Newmar twelve (12) month warranty.
- Any undertaking, representation, or warranty made by dealers or other parties selling or representing the products covered by this warranty other than those specifically stated herein.

NEWMAR CORPORATION WILL NOT BE RESPONSIBLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING (BUT NOT LIMITED TO) LOSS OF USE OF VEHICLE, LOSS OF TIME, INCONVENIENCE, EXPENSES FOR TRAVEL, LODGING, TELEPHONE, TRANSPORTATION CHARGES, LOSS OR DAMAGES TO PERSONAL PROPERTY, OR LOSS OF INCOME.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Newmar Corporation reserves the right to make changes in design and changes or improvements upon its products without imposing any obligation upon itself to install the same upon products theretofore manufactured.

This warranty is expressly in lieu of any other express warranties, written or verbal, made on the part of Newmar Corporation, which corporation does not undertake responsibility to any purchaser of its products for any undertaking, representation or warranty made by dealers beyond those herein expressed. **Any implied warranties as to the Newmar Corporation Recreational Vehicle including any warranty of merchantability or fitness for a particular purpose or use are limited to a period of twelve (12) months immediately following the original retail owner's date of purchase as therefore stipulated. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.**

This warranty is null and void unless the purchaser of and the dealer who sells the recreational vehicle fill out completely and mail the respective registration form supplied with this recreational vehicle within 10 days from date of original sale. Purchaser and dealer further agree the courts (state or federal) located in the State of Indiana have exclusive jurisdiction to resolve any dispute based on this warranty, any implied warranty, or any alleged warranty breach, as well as any claim or cause filed in conjunction with a breach of warranty claim. Indiana Law shall apply to all agreements, disputes, negotiations, litigation, and settlements.

In addition to the above provisions, the purchaser has certain legal remedies provided by the MAGNUSON-MOSS WARRANTY ACT, Public Law 93-637, 88 Stat. 2183-2193; U.S. Code, Secs. 2301-2312.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

3/2023

Owner's Guide, Information Package, and Appliance Data Sheet

This article provides information about the Newmar owner's guide and information package, as well as the appliance data sheet posted in the coach.

⚠ NOTE FROM NEWMAR

The Newmar Owner's Guide, Information Package, and Appliance Data Sheet must NOT be removed from the vehicle in the event that the coach is sold. These items should remain with the coach for the next owner.

Owner's Information Package (Black Bag) and Newmar Owner's Guide

Included in your Owner's Information package are valuable documents about your vehicle and its components and systems. Carefully read both the instructions in your Owner's Guide, as well as the booklets supplied by the chassis and component manufacturers for important operation, safety, and maintenance information. This Owner's Guide should be kept in your vehicle for quick reference.

The Newmar Owner's Guide does not cover every possible detail of the equipment (standard and/or optional) installed on or in your coach. Consulting the booklets and instruction manuals in this package will help you safely operate, maintain, and troubleshoot these items. For more details about each of the components and systems installed in the coach, refer to Newgle.

⚠ IMPORTANT

Read all of the information and understand the safety and operating instructions included in the Owner's Information Package. To assure full warranty coverage, it is essential that all maintenance instructions are followed.

Take time to get acquainted with your coach and how it operates. Should you have any questions, consult your dealer or the Newmar customer support team.



Appliance Data Sheet

An information sheet is provided containing important information about your coach for your convenience.

- Your coach's Newmar Serial Number. This number is needed whenever making an appointment for service or ordering parts through your Newmar Dealer or Service Center.
- Your coach's Vehicle Identification Number (VIN). The VIN is the legal identification of the completed vehicle and is used by the state for vehicle registration.
- Your coach's Year, Model, Type, and Floorplan.
- Manufacturer, Model, and Serial Number of factory-installed equipment. Use these model numbers to quickly locate relevant information in Newgle about the parts, including links, files, and articles.

⚠ IMPORTANT

The manufacturer, model, and serial number of the appliances and accessories installed at the factory in your coach are listed on this label for convenience. It is important that the label remains in the coach for identification purposes. Do not remove or relocate this label.

THANK YOU FOR PURCHASING A QUALITY NEWMAR PRODUCT! FOR YOUR CONVENIENCE, WE HAVE ENCLOSED A SERIAL NUMBER LIST OF IMPORTANT EQUIPMENT INSTALLED IN YOUR 2020 CDDH 4362. THE SERIAL NUMBER FOR YOUR UNIT IS: 436225 VIN# 4VZAU09XLC086331 DECOR# 350 WOOD COLOR CARAMEL GLAZED CHERRY-BROWN-85

DESCRIPTION	MODEL	SERIAL NUMBER
CASH A/C	8V201058	436225
INVERTER 1	M02812	W01-07993
FRONT RADIO	XD701118	010-01314
MONITOR	AGMT-13	W0115103W03745
JACK PUMP	AP58462	1838
JACK LEFT FRONT	AP37791	21956
JACK RIGHT FRONT	AP37791	23955
JACK LEFT REAR	AP53137	3317
JACK RIGHT REAR	AP53137	3313
REFRIGERATOR	WHP5068YMO5	V08J384967
RANGE	82P2	807279188
WASHER	ABNKP129W	809182036
DRIER	LYM63X	7884513896
MICROWAVE	YMMH78019H21	0014615183700182
FREEZER	CF80	84897574
TOILET 1	8740	831612
FRONT TV	50N06900	924441
REAR TV	43N06900	924442
TV #3	43N06900	924442
GENERATOR	10N06CA-12607H	818043716
FRONT A/C	651816H751J0	84524097
CENTER A/C	651816H751J0	83921665
REAR A/C	651816H751J0	83921664
REAR CAMERA	VCMS1558	W118TCTW00594
SAFE	PWS-18228	L015902150289
SATELLITE #1	RTT-208	1031180400492784
EXT TV	43N06900	84363
SIDE ANNING 1	GG	GG
ANNING ARM 1	GG	GG
ANNING DOOR	GG	GG
WINDOW 1	GG	GG
WINDOW 2	GG	GG
WINDOW 3	GG	GG
WINDOW 4	GG	GG
WINDOW 5	GG	GG
SO TOPPER 1	GG	GG
SO TOPPER 2	GG	GG
SO TOPPER 3	GG	GG
SO TOPPER 4	GG	GG
SOFA	147234	
CAPT CHAIR DRIVER	99205 003	
CAPT CHAIR PASSENGER	99205 002	
SATELLITE #2	SKM-300	1121180400499394
FIBERGLASS SIDEWALLS (ds)		012016854
FIBERGLASS SIDEWALLS (ods)		012016853
ANNING ARM 2	GG	012016058
FIBERGLASS FRONT S/O (ds)		012016856
FIBERGLASS REAR S/O (ds)		012016857
FIBERGLASS FRONT S/O (ods)		11018TCTW00594
SIDE CAMERA	VCMS12R	K0718TCTW03424
SIDE CAMERA	VCMS12L	
SIDE ANNING 2	GG	84897575
TOILET 2	8740	924808584CAP-017
WI-PI RANGER	11 PROLEPACKATT	855941
WI-PI SKYBOX	TUB8912G2HPMD	CS50-34900-1128-9248
HIGH HEAT	34900	2309594
FRONT DVD	BDP-01700	2241058
BEDROOM DVD	BDP-01700	
FRONT CAP	BETTERWAY	
REAR CAP	BETTERWAY	
WIPE MOTOR	JUNE 2010	0624
WATER HOSE REEL	ROBE MASTER M	23818
CASES IM-178	IM-12	17280-1128-9273
PYL ENTRY/EXIT DOOR	036611	036170
HOLDING TANK	AMERI-KART	
FRESH TANK	AMERI-KART	

Contacting Newmar

This article provides information relating to Newmar's Customer Support opportunities.

Before You Reach Out To Us...

We have built a large pool of online tools and content to help RV'ers and Newmar customers alike. Explore Newgle and see if there's a resource to help solve your concern.

Newgle is Newmar's dynamic, multi-faceted knowledge center and is created specifically for Newmar coach owners and certified technicians. Because content pertaining to your coach is constantly evolving and changing, the only way we can provide you with access to the most up-to-date and relevant information is by linking you directly to it!

Much of our information comes from the manufacturer of the items that are specific to your coach model and year, so we urge you to check out the site for any additional information that may not (currently) be included in your owner's guide. Newmar reserves the right to make any such changes without notice or obligation. For more information, refer to the Introduction to Newgle article.

Customer Service

If you would like to speak to a Newmar Customer Service Representative, please call 1-800-731-8300 (select the appropriate menu option) or email customerservice@newmarcorp.com or call or email your brand specialist per the chart below.

Canyon Star	
Phone:	866-540-9594
Email:	canyonstarservice@newmarcorp.com

If you wish to schedule maintenance work, schedule service work, or order parts you should notify your local authorized Newmar Service Center to set up an appointment. If you are unsure of the location of the closest authorized Service Center, contact Newmar Customer Service. For more information, visit the Parts and Support page on Newmar's website.

Sales (Factory Tour)

To find out details about the Newmar factory tours, or to contact the Newmar Sales department, call **1-800-852-1731** or visit the Factory Tour page on Newmar's website.

Shipping/Mailing Address

Newmar Corporation
355 N Delaware Street
PO Box 30
Nappanee, IN 46550-0030



WHEN YOU KNOW THE DIFFERENCE

Parts



For parts inquiries, refer to the NewPar (formerly ComNet) parts catalog (<https://newpar.newmarcorp.com/>) or contact the parts department at 1-800-731-8300 (select the appropriate menu option).

Newgle



For questions or feedback pertaining to the Newgle knowledgebase, email newgle@newmarcorp.com. For coach-specific information or inquiries, please contact Customer Service.

New-Serv



In select areas, Newmar's mobile service team can come to you if you do not have the time, resources, or ability to take the coach to a service center or dealership for repairs. Some repairs and services include, but are not limited to: awnings, electrical, fresh water system, furnaces, plumbing, slideouts, and basic care and maintenance. To inquire about or schedule a warranty or retail New-Serv appointment, please contact your Newmar Customer Service Representative at 1-800-731-8300.

Notices in Newgle and Newmar's Owner's Guide

Reference is made to the following terms throughout Newgle and the Owner's Guide: Danger, Warning, Caution, Important, Notice, and Note From Newmar. These terms indicate important information that must be understood and followed.

Safety Definitions

DANGER

DANGER indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. Failure to observe a **DANGER** may also result in damage to the equipment or unit.

CAUTION

CAUTION indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. Failure to observe a **CAUTION** may also result in damage to the equipment or unit.

WARNING

WARNING indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. Failure to observe a **WARNING** may also result in damage to the equipment or unit.

IMPORTANT

IMPORTANT notices are not related to personal injury, but provide additional information to make a step easier or clearer.

NOTE FROM NEWMAR

NOTE FROM NEWMAR indicates helpful information to improve customer experience or satisfaction outside of what is provided by a component manufacturer or supplier.

NOTICE

NOTICE indicates information that is not necessary or required, but may prove to be helpful.

Newgle Introduction and Navigational Overview

This article provides a brief overview of Newgle: what it is, how to access it, how to navigate it, and what information is available. It also explains the different types of search filters that can be utilized in Newgle to produce the most effective search results.

What Is Newgle, and Why Do I Need It?

Do you have trouble finding reliable and trustworthy resources about your coach? How much time do you spend trying to figure out how to operate your appliances or what cleaning products are safe to use on your floors? What about troubleshooting information when something in your coach just is not working quite right? Do you prefer to find the answer yourself rather than asking for advice online or your neighbor parked next to you at the RV resort, or even contacting your dealer or customer service? You have come to the right place!

Welcome to the wonderful world of Newgle! Our free online knowledgebase provides you with coach information directly from Newmar, as well as our manufacturers and suppliers. Content is added and updated regularly and is only available to current coach owners and authorized service technicians. As part of Newmar's seamless service promise, your questions can be answered quicker than ever before with just a few clicks on Newgle's search-focused platform right from your laptop, tablet, or smartphone.

Newgle consists of nearly a dozen categories, hundreds of knowledge articles, and thousands of parts with associated coach models and years, files, and links.

Leave the research to us. Our goal is to provide you with the most updated information at all times. Though not coach-specific, Newgle supplies endless documentation about your coach model and year, all verified by Newmar's Technical Publication department.

IMPORTANT


Newgle is an ever-changing knowledgebase. The Newgle Team strives to introduce new features and content regularly to improve the site. The included screenshots and navigational instructions may change without notice. Always refer to Newgle for the most up-to-date version of this content.

NOTICE

Any technical information published in Newgle is only intended for use by qualified, Newmar-authorized service technicians. Newmar is not responsible for misuse of this information.

How Do I Navigate The Website?

The Home Page is a launching pad into the endless sea of knowledge. You can easily return to the home page at any time by clicking the Newgle logo, the “Home” button at the top of the page, or by selecting the “Home” option from your username or nickname in the upper right-hand portion of the screen. There are three key ways to navigate our website: the Category Drop-Downs, Coach Filter, and Search Bar.

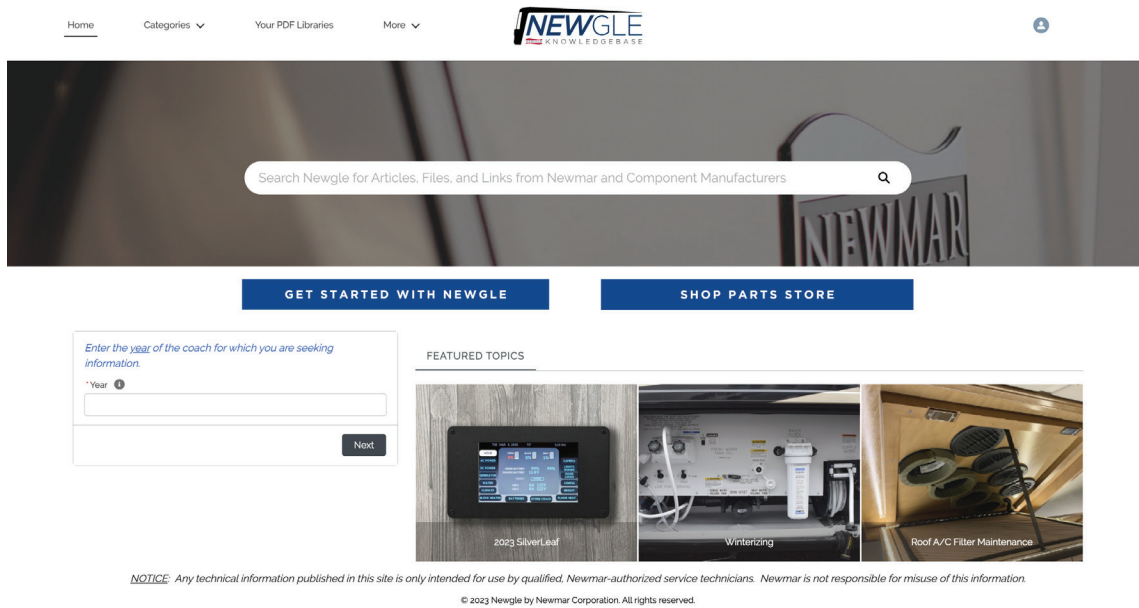

CATEGORY DROP-DOWNS

Navigate through Newgle using the drop downs at the top of the page: Category, Sub-Category, and Product Manufacturer Name. From here, select the model number of the component installed in your coach. This type of navigation provides a basic overview of the site structure, but does not associate products with any coach models or years.

COACH FILTER

To view products and parts related to your coach model and year, click through each option on the home page to narrow your results. First, enter your coach model year, then your model. Then, select the category and sub-category of the information you are seeking. This will narrow your results down to the products and parts that are relevant to these specifications. Then select the component installed in your coach to view the product page, which often includes associated features, files, links, and knowledge articles.

SEARCH BAR

Search from the home page or from anywhere in the site using a key word or phrase, or by the product name, manufacturer, or model number. There is no need to search using coach information like the production number, VIN, model or year. Using the search bar produces the most results of the three different navigational options, which often contain one or more types of the following documentation:

- **Products (Parts) by year and model** - Specific components, items, and parts installed by Newmar, which can be refined by the coach model and year.
- **Files** - Attached documentation provided directly from Newmar’s product manufacturers, suppliers, vendors, and distributors. The file results often include owner’s guides, instruction manuals, installation guides, troubleshooting articles, care and maintenance guides, and much, much more. Files can be filtered on the left side of the screen by title and type of document.
- **Links** – Helpful web addresses of product manufacturers that often contain additional resources such as online warranty registrations, safety information, reference material, contact information, etc.
- **Knowledge articles** - Customer-friendly documentation written or revised by Newmar’s Technical Publications department. These may contain basic operating instructions, additional safety information, product overviews, how-to and troubleshooting articles, as well as related videos produced by Newmar. In the past few years, Newmar’s owner’s guides for each model have been built from such articles, as they are meant to be an operational overview for a new coach owner. Note: The model-year coach filter on the Home screen bypasses these articles unless they are associated with a specific product or part. To view a more complete list of these articles, use the search bar.

After typing a search term or phrase, relevant results will populate on the screen; however, this is often not a comprehensive list. Instead, it only provides a “preview” of the results. For a more exhaustive list, click on the “View More” button in the top right corner of the section you wish to expand. Click on the Show More button at the bottom of the page if you wish to view even more results.

With so many results, it may be necessary to narrow them down. Refine your search results by choosing one of the categories on the left side of the screen: Products by Year Model, Files, Links, or Knowledge Articles, depending on what type of documentation you prefer to view. For example, review parts associated to your coach model and year by clicking on the “Products by Year Model” tab. Then refine your results using the filters shown on the left side of the screen, such as year, model, product description, etc.

Once you find the part that you are looking for, click on the blue link to review the product page for that part. On this page, you will find helpful resources such as a picture (if it is available in Newmar’s online part’s catalog), the product description and features, as well as relevant files, links, and knowledge articles, for all of the documentation provided by Newmar and the part’s manufacturer or supplier.

EXAMPLES

How do I set the clock on my GE Advantium microwave and why does the time disappear from the display when I am not using it?

First, type in a simple search term such as “microwave.” Then, click on the “Products by Year Model” tab on the left side of the screen. Enter your coach year, followed by the model name or abbreviation (Dutch Star Diesel Pusher = DSDP). Click on the magnifying glass or press “Enter” or “Return” for each box. Easily clear one box at a time without erasing all of your search criteria. Note: If you do not know your model abbreviation, refer to the Newgle article titled “How do I find my coach model abbreviation for filtering?”

Select the microwave installed in your coach, and click on the related blue link (i.e. 125682P) to open the “GE Profile Advantium 1.7 Cu Ft 925w Stainless Steel Over-the-Range Microwave Oven” product page. On the product page, review the associated manufacturer’s links and files and select the best option that may answer your question. The user guide or manual often contains operation instructions, care and maintenance recommendations, and troubleshooting tips. The information about the clock is available in the “Other Features” portion of the GE Owner’s Manual.

A knowledge article also answers this question. Use a phrase such as “microwave clock” to locate an article about the GE microwave (PSA9120) containing this information. Scroll to the “Other Features” section of the article to read about the Clock settings. Whenever possible, Newmar provides text like this to answer your frequently asked questions quickly and efficiently.

How do I sanitize my coach’s fresh water system?

For this type of information, you want the Newmar-recommended procedures, rather than generic steps that may be available outside of Newgle. Simply type “sanitize” in the search bar. Results will show the files and links that may include information from product manufacturers, but they also produce knowledge articles. Click on the article about Sanitizing the Fresh Water System to view the step-by-step instructions for this procedure. But that’s not all! For this particular topic, you even have a video available for this topic provided by a Newmar Brand Specialist!

What If I Can’t Find What I’m Looking For?

Now that you know how to navigate, feel free to explore! Forget Google, and surf Newgle to answer your coach-related questions!

Just like the RV industry, our site is always growing, changing, and improving. Our dedicated, full-time Newgle staff is working diligently to provide you with access to more model- and year-specific information directly from the manufacturers as quickly as we can. Help us prioritize our efforts!

If you have suggestions for a better user experience, or if you are unable to locate the information you need, feel free to contact us:

- Email the Newgle team: newgle@newmarcorp.com
- Email the Customer Service team: customerservice@newmarcorp.com
- Call to speak to a Customer Service Brand Specialist: 1-800-731-8300 (select the appropriate menu option).

Newgle Registration and Login Assistance

This article provides information about registration and login assistance for Newgle, Newmar's online knowledgebase.


How Do I Register For Newgle?

Visit Newgle at <https://newgle.newmarcorp.com> to register for an account.

CUSTOMER ACCOUNTS

If you currently own a Newmar coach, click the link associated with an owner account, "Coach Owner Account Request." You will be asked to provide your coach information and some basic contact information, allowing the Newgle Team to verify ownership and set up an account just for you!

Once your account has been created, you will receive a verification email, which will include your new username and a link to create a password. The email address you provide when registering for an account will be used as your username, as well as for all Newgle-related communication, including account credentials, password resets, or any special updates from the Newgle team.

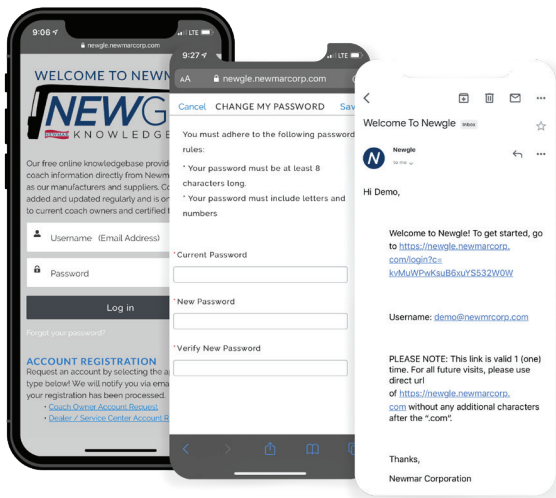


⚠ IMPORTANT

This link is only valid one time. Please use the direct URL - <http://newgle.newmarcorp.com> - for future access to the site.

If you already have a Newgle account but have since purchased a different coach, please request a new account to ensure that we have the most up-to-date information in our system. Your login credentials may or may not change pending the newly provided email address.

LOGOUT

Click the user profile icon in the upper right corner; then select "Logout" from the down-down menu to end your Newgle session quickly with the click of a button.

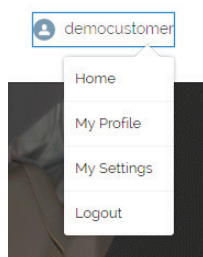

Having Trouble Logging In?

After three failed login attempts, your account will become locked for 15 minutes. Wait 15 minutes, and try to login again. If you forget or lose your password, or if it is no longer working, you can reset it from the login screen.

Click on the "Forgot Your Password?" link, and enter your username (the email address you used when registering for your account), then click or tap "Continue." You should receive an email with a link to reset your password. Remember, this link is only valid one time. Please use the direct URL - <https://newgle.newmarcorp.com> - for future access to the site.

If you do not receive an email, it may be necessary to re-register for an account. Rather than entering your username and password, click the "Coach Owner Account Request" and complete the registration form. Once it is submitted, your account will be re-activated and a password reset link will be sent to the email address used when registering.



Forgot Your Password

To reset your password, enter your username.

Username

Cancel

Continue

⚠ IMPORTANT

Your Newgle account may be deactivated after twelve months of inactivity. Log in to the site often to avoid account deactivation. You may not be notified prior to deactivation.

⚠ IMPORTANT

You will be asked to change your password every 180 days to ensure the highest level of security available. A new password cannot match any of the previously-used three passwords. When prompted, follow the onscreen instructions to create a new password that meets all of the requirements.

If you have any questions regarding your account, please email the Newgle Team at newgle@newmarcorp.com.

How to Locate a Coach Page in Newgle

This article provides instructions on how to locate a “Coach Page” in Newgle. These pages often include files (diagrams/schematics, owner’s guides, brochures, etc.), links, and knowledge articles in Newgle, which may be relative to a coach’s year and model and may even be specific to a particular floorplan or option.

⚠ IMPORTANT


Newgle is an ever-changing knowledgebase. The Newgle Team strives to introduce new features and content regularly to improve the site. The included screenshots and navigational instructions may change without notice. Always refer to Newgle for the most up-to-date version of this content.

Navigating to a Coach Page via Search

From the Newgle home page, click on the search bar.

Type in the coach production year, model abbreviation, and floorplan (separated by spaces). Coach pages may start displaying as “search recommendations,” allowing you to select the relevant floorplan from the drop-down list.

- Example: 2023 NADP 3547
- If you are unsure of your model abbreviation, refer to the “How Do I Find My Coach model Abbreviation for Filtering” article in Newgle.

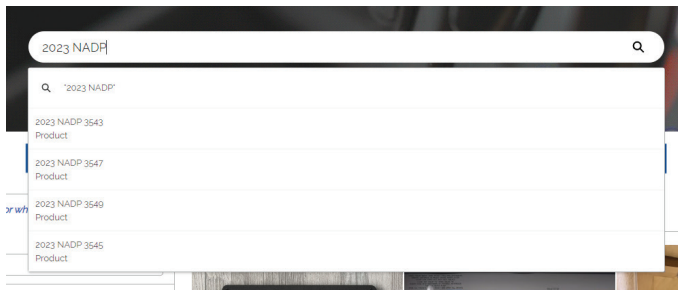

What Will I Find on a Coach Page?

Once on the coach page for the model, year, and floorplan of your choosing, you will have access to coach features and a copy of the owner support sticker, as well as any relevant files, links, and articles. The amount of content will vary by coach year and model.

⚠ IMPORTANT

The layout and location of components on this screen may vary due to device and/or screen size (desktop/laptop computer, tablet, or smartphone).

RELEVANT FILES

Depending on the device used to access Newgle, the Files section may appear on the side or bottom of the screen or in a “Related” tab. The type of documentation located in the Files section will vary, but may include:

- Newmar’s Original Coach Brochure, Owner’s Guide, and Sales Data
- Newmar Diagrams and Schematics (A/V, Electrical, Plumbing, etc.)
- Chassis Manufacturer Manuals, Brochures, Specs, and/or Diagrams

RELEVANT LINKS

Depending on the device used to access Newgle, the Links section may appear on the side or bottom of the screen or in a “Related” tab. Depending on the year and model of the coach, you may have access to web links such as:

- Chassis Manufacturer Content (Brochures, Specs, Manuals, Contact Info, Videos, etc.)
- Newmar Sales Documentation (Brochures, Videos, Product Specs, etc.)
- Coach CPU Walkthroughs (Year/Model Specific when available)

PRODUCT KNOWLEDGE ASSOCIATIONS

Depending on the device used to access Newgle, the Articles section may appear on the side or bottom of the screen or in a “Related” tab. Some Newgle knowledge articles are written to correspond with a particular coach model and year, so they may appear on the related coach pages.

⚠ IMPORTANT

Newer coaches may have more documentation available than previous model years due to the availability of data. Some coach years/models may have limited documentation available.

 **PRODUCT**
2023 NADP 3547

Category	Subcategory	Product Group	Product Code	Active
Coach	New Aire	Diesel Pusher	2023NADP3547	<input checked="" type="checkbox"/>

Product Description

2023 New Aire Diesel Pusher w/Floor Plan 3547

Product Name

2023 NADP 3547

Product Brand

Newmar

Product Code

2023NADP3547

Product Features

Length: 35' 10"
Width: 101.5"
Height: 12' 03"
Interior Width: 95.5"
Interior Height: 81.5"
Grey Tank: 60 gal
Sewage Tank: 40 gal
Water Tank: 105 gal
LP Propane Tank: 0
Water Heater: 0
Furnace: 50,000 btu
No. of House Batteries (Standard): 2
Total Battery Amp Hour (Standard): 640

**Coach
Features****Product Family**

Coach

Category

Coach


Subcategory

New Aire

Product Group

Diesel Pusher



Image**Owner Support
Sticker** **FILES (6+)**

 MANUAL - Fre... Feb 9, 2023	 MANUAL - Fre... Feb 9, 2023	 INFO - Spartan ... Feb 6, 2023
 INFO - 2022 Sp... Feb 6, 2023	 MANUAL - Spa... Jan 25, 2023	 INFO - 2023 Sp... Jan 25, 2023

[View All](#)**Files Related to
Year/Model/Floorplan** **PRODUCT LINKS (6+)****Product Link**

Freightliner Chassis DriveTech Experience YouTube Video Page	
2023 Newmar New Aire Motorhome Official Tour Diesel Class A RV YouTube Video	
Experience the Newmar Difference in the 2023 New Aire 3547	
Freightliner Chassis DriveTech Explainer YouTube Video Page	
Newmar Official YouTube Video Page	
Newmar Corporation Home Page	

[View All](#)**Links Related to
Year/Model/Floorplan** **PRODUCT KNOWLEDGE****Knowledge Article**

2023 New Aire SilverLeaf Touchscreen Guide	
2023 New Aire Water Compartment Overview	
2023 New Aire Lithium Battery Quick Start Guide	
2023 New Aire Aqua View Fresh Water Reclamation System Overview	

**Articles Related to
Year/Model/Floorplan**

This page is intentionally blank.



SAFETY

This chapter provides information about Newmar's compliance requirements, placards and labels, and driving safety. It also includes details about emergency exits and installed safety components (smoke, propane, and carbon monoxide detectors).

⚠ IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the manufacturer's complete documentation. Refer to Newgle for more information about safety-related components offered for your coach's model year.

Safety Resources and Compliance Requirements

This article provides information about Newmar's safety and compliance requirements.

Resources

- Recreation Vehicle Safety and Education Foundation (RVSEF)
- Transport Canada (TC)
- National Highway Traffic Safety Administration (NHTSA)

Compliance Requirements

Newmar motorhomes meet or exceed compliance for the following agencies:

UNITED STATES

- Federal Motor Vehicle Safety Standards (FMVSS)
- Nebraska and Washington State Seals
- National Fire Protection Association (NFPA) 1192 through Recreation Vehicle Industry Association (RVIA)
- National Fire Protection Association (NFPA) 70 National Electrical Code
- Ford Qualified Vehicle Modifiers (QVM) (Ford Chassis Only)
- Carb Compliant Phase 2

CONTACTING NATIONAL HIGHWAY TRAFFIC SAFETY ADMINISTRATION (NHTSA)

Mailing Address:

NHTSA Headquarters
1200 New Jersey Avenue SE
West Building
Washington, DC 20590

Telephone:

800-424-9153 (Hearing-Impaired)
888-327-4236 (Toll free)

Online:

<https://www.nhtsa.gov/recalls>

⚠ IMPORTANT

If you believe that your vehicle has a significant defect which could cause a crash or could cause injury or death, inform the National Highway Traffic Safety Administration (NHTSA) or Transport Canada (TC), and Newmar Corporation immediately.

CANADA

- Canada Motor Vehicle Safety Standards (CMVSS)
- QAI Laboratories is Newmar's listing agent

CONTACTING TRANSPORT CANADA

Mailing Address:

Transport Canada - ASFAD
330 Sparks Street
Ottawa, ON K1A 0N5

Telephone:

819-994-3328 (Ottawa - Gatineau area or internationally)
800-333-0510 (Toll free)

Online:

<http://www.tc.gc.ca/recalls>

Adresse postale :

Transports Canada -ASFAD
330, rue Sparks
Ottawa (Ontario) K1A 0N5

Téléphone: 819-994-3328 (dans la région de Ottawa-Gatineau et à l'extérieur du pays)

Sans frais: 1-800-333-0510 (au Canada)

Internet:

<http://www.tc.gc.ca/rappels>

Placards and Labels

A variety of placards and labels are located throughout your coach. These are installed to aid in the operation of a component, provide coach-specific information, or to warn of potential dangers while operating a specific appliance, accessory, or system.

IMPORTANT

Reading, understanding, and heeding all such labels and placards is critical to the safe, efficient use of your coach. These labels should not be removed for any reason.

Driving Safety

Before Driving Away

Provides a brief list of procedures that will aid in your driving safety and extend the life of your coach.

WARNING

Prior to driving your vehicle, be sure you have read your entire owner's guide and that you understand your vehicle's equipment completely. Read and understand all of the instructions and precautions in this owner's guide and the chassis manufacturer owner's manual before operating your new coach.

Listed below are some safety precautions that must be adhered to while your coach is in motion. These precautions, as well as others that involve possible damage to equipment, are also listed in the appropriate areas in this manual.

There are various adjustments that need to be made prior to starting and moving the vehicle. Among them are the driver's seat, the tilt steering, and the exterior side view mirrors, as well as checking the rear view monitoring system. In addition, the following procedures will aid in your driving safety and extend your equipment's life.

- Windows, mirrors, and light lenses are to be clean and unobstructed.
- Tires should be checked for proper cold inflation pressure.
- Wheel lug nuts should be checked for proper tightness.
- Fluid levels, including engine oil, transmission fluid, coolant, power steering fluid, brake fluid, and windshield washer solvent, should be checked and filled, if necessary.
- Disconnect the unit from power. Store the sewer and water supply hoses, as well as shoreline power cords.
- Secure all cargo in the storage compartments in the event of a sudden stop.
- Verify that the step has retracted prior to engine ignition and/or travel.
- Know the overall height of your coach to avoid overhead damage from low clearance bridges, overpasses, awnings, etc.

Dangerous Driving Conditions and Severe Weather Safety

This article provides safety tips to follow for driving in dangerous conditions or encountering severe weather while using the coach.

Always Stay Informed

Avoid weather-related surprises by checking the forecast each day.

- If severe weather is a possibility, check a local weather website or phone application frequently for updates in your area. The National Weather Service (<https://www.weather.gov/>) is a great resource to check local forecasts. It may also be a wise decision to invest in a weather radio to receive up-to-date forecasts directly from the NWS.
- Know where you are at all times. Knowing which county you are in will help you know what is coming and when.
- For any extended stays, find out where the storm warning systems and alarms are located. It may also be helpful to know the days and times when these are typically tested to avoid any unnecessary concern.

Prepare Ahead of Time

If poor weather is in the forecast, preparing ahead of time can save you a lot of hassle.

- Check the function of your windshield wipers, brake lights, and headlights. Make sure you have plenty of fuel and that your tire pressure is correct to avoid hydroplaning.
- In the event of snow, freezing rain, or ice, make sure your coach is properly winterized. If you do not have to travel, wait until the roads are clear before proceeding to your next stop.

WARNING

The cruise control is not to be operated on icy roads, extremely wet roads, winding roads, heavy traffic, or in any other traffic situation where a constant speed cannot be maintained.

WARNING

While driving on slippery surfaces, use care when accelerating or decelerating. Skidding and loss of vehicle control may be the result of abrupt changes in speed.

- If parked, try to avoid surrounding trees or power lines. Secure all loose belongings that could blow away. Bring them inside the RV or store them securely in a basement compartment before a storm hits to prevent physical damage to you or the RV.
- Retract all awnings to prevent wind and water damage.
- Find out where local storm shelters are and have an evacuation plan in place.
- Pack an emergency bag of necessities (i.e. medical supplies, important documents, cell phone chargers, water, non-perishable food, etc.).

Take Cover

Your coach can protect you from most severe weather, but it is not always the safest option.

- If straight line winds or the threat of tornado(s) are in the forecast, leave the RV, and find a local storm shelter.
- If you are driving and severe weather or a tornado pops up, park the RV in a safe location (not under a bridge or overpass), lay down away from windows, and cover your head.
- In the event of heavy rain or floodwaters, do not attempt to drive through water that is crossing a road. **TURN AROUND; DON'T DROWN.**

WARNING

Driving through water deep enough to wet the brakes may affect the stopping distance or cause the vehicle to pull to one side. If you have driven through deep water, check the brake operation in a safe area to be sure they have not been affected.

WARNING

Never operate a vehicle if a difference in braking efficiency is noticeable. Extreme terrain and adverse weather may affect the handling and/or performance of your vehicle.

- If there is a threat (even a small one) of severe weather, plan indoor activities in a safe, sheltered place. Be prepared; have a plan in place; and use good judgment.

Seat Belt Safety

This article provides information about the seat belts installed in the coach, including operation and care and maintenance instructions.

One of the most important safety features in your vehicle is the restraint system. Research has shown that seat belts save lives. And they can reduce the seriousness of injuries in a collision. Some of the worst injuries happen when people are thrown from the vehicle. Everyone in a motor vehicle needs to be buckled up at all times.

WARNING

It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. In a collision, people riding in these areas are more likely to be seriously injured or killed. Do not allow people to ride in any area of your vehicle that is not equipped with seats and seat belts. Be sure everyone in your vehicle is in a seat and is using a seat belt properly.

How To Operate Your Seat Belts and Restraint System

⚠ WARNING

If you wear your safety belt improperly, both the effectiveness and comfort will decrease.

LAP/SHOULDER COMBINATION RESTRAINTS

1. Enter the vehicle and close the door. Sit back, and adjust the seat.
2. The latch plate of the belt is above the back of your seat. Grasp the latch plate, and pull out the belt. Slide the latch plate up the webbing as far as necessary to make the belt go around your lap.
3. When the belt is long enough to fit, insert the latch plate into the buckle until you hear a “click.”
4. Position the lap belt across your thigh, below your abdomen. If you need the lap portion tighter, pull up a bit on the shoulder part. A snug belt reduces the risk of sliding under the belt in a collision. Position the shoulder belt on your chest so that it is comfortable and not resting on your neck. The retractor will withdraw any slack in the belt.
5. To release the belt, push the release button on the buckle.



⚠ NOTICE

Some shoulder belts can be adjusted upward or downward to help position the belt away from your neck. Push on the anchorage cover to release it, and then move it up or down to the position that serves you best.

⚠ IMPORTANT

Everyone in your vehicle needs to be buckled up at all times. Every state in the United States and all Canadian provinces require that small children ride in proper restraint systems. This is the law, and you can be prosecuted for ignoring it.

LAP BELT RESTRAINTS WITHOUT A SHOULDER HARNESS

⚠ WARNING

Always wear your seat belt when the vehicle is in operation.

1. Slide the latch up the webbing as far as necessary to make the belt go around your lap.
2. Insert the latch plate into the buckle until you hear a “click.”
3. Adjust and position the belt low and snug across your hips by removing the slack from the belt.
4. To release the belt, push the release button on the buckle.

There are different sizes and types of restraints for children from newborn to near-adult size children. Use the restraint that is correct for your child:

- The restraint must be appropriate for your child’s weight and height. Check the label on the restraint for this, too.
- Carefully follow the instructions that come with the restraint. If you install the restraint improperly, it may not work when you need it.
- Buckle the child into the restraint exactly as the manufacturer’s instructions have directed.

⚠ IMPORTANT

Each belt is intended to restrain only one person at a time. Do not put two people under one belt.

⚠ CAUTION

Never attempt to restrain a child in your lap using the lap belt around both you and the child. The child could be severely injured or killed in the event of a collision.

⚠ IMPORTANT

Seat belts are matched sets. Do not mix or use this belt or parts of this belt with other types of seat belts.

How To Maintain Your Seat Belts and Restraint System

Periodically examine your restraint equipment to be sure it functions correctly and to be sure there are no worn or broken components that either needs repair or replacement. Damaged parts must be replaced immediately. Do not disassemble or modify the system.

Restraint equipment must be replaced after an accident if they have been damaged. If there is any question regarding belt or retractor condition, replace the belt. It is a good idea to have your restraint system inspected during each periodic scheduled maintenance session. If the belts need cleaning, use a mild soap solution or lukewarm water. Do not remove the belts from the vehicle to wash them.

Fire Safety

This article provides information about the smoke detectors and fire extinguishers installed in the coach.

The possibility of fire exists in all areas of life, and the recreational lifestyle is no exception. Recreational vehicles are complex machines made up of many materials, some of which are flammable. Like most hazards, the possibility of fire can be minimized, if not totally eliminated by recognizing the danger and practicing common sense safety and maintenance habits. For safety reasons, your unit is furnished with both a fire extinguisher and a smoke alarm.

WARNING

A frayed or torn belt could rip apart in a collision and leave you with no protection. Inspect the belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the system. Seat belt assemblies must be replaced after an accident if they have been damaged (bent retractor, torn webbing, etc.)

WARNING

Do not bleach, dye or clean the belts with chemical solvents or abrasive cleaners. This may severely weaken the fabric. In a crash, they might not be able to provide adequate protection.

WARNING

Test smoke alarm operation after vehicle has been in storage, before each trip, and at least once per week during use. Failure to do so can result in death or serious injury.

AVERTISSEMENT

Vérifier l'avertisseur de fumée si le véhicule a été entreposé, avant chaque déplacement et au moins une fois par semaine en service. L'absence de vérification peut entraîner des blessures graves ou la mort.

DD-94

DANGER

Vehicles and equipment powered by internal combustion engines and placed in recreational vehicles can cause carbon monoxide poisoning or asphyxiation, which could result in death or serious injury. The flammable liquids used to power these items can cause a fire or explosion, which can result in death or serious injury.

To reduce risk:

1. Do not ride in the vehicle storage area when vehicles are present.
2. Do not sleep in the vehicle storage area when vehicles are present.
3. Close doors and windows in walls of separation (if installed) when any vehicle is present.
4. Run fuel out of engines of stored vehicles after shutting off fuel at the tank.
5. Do not store, transport, or dispense fuel inside this vehicle.
6. Open the windows, openings, or air ventilation systems provided for venting the transportation area when vehicles are present.
7. Do not operate propane appliances, pilot lights, or electrical equipment when motorized vehicles are present.

DANGER

If a fire occurs in the vehicle, evacuate the vehicle as quickly and as safely as possible. Consider the cause and the severity of the fire and the risk involved before trying to extinguish it. If the fire is major or fuel fed, move away from and stand clear of the vehicle and wait for emergency assistance to arrive.

Smoke Detectors

The smoke detector installed in your coach is operated on a 9 volt battery. The smoke detector is mounted on the ceiling in the living area of the unit. Read the operating instructions for details on the testing and care for this important safety device.

Test the smoke detector after the unit has been in storage, before each trip, and at least once a week during use. Check your smoke detector for the manufacturer's expiration date. The battery needs to be tested periodically and replaced once a year and/or when the low battery signal sounds.

When cleaning the case on any of the detectors, use a damp cloth or paper towel. Do not spray cleaners or wax directly into the case as it may cause false alarms.

IMPORTANT

The detector should never be disabled because of nuisance or false alarm from cooking smoke or a dusty furnace. Ventilate the unit with fresh air and the alarm will shut off. Never disconnect or remove the battery from the smoke alarm.

Fire Extinguishers

The fire extinguisher is rated for Class B (grease, gasoline, diesel fuel, flammable liquids) and Class C (electrical) fires. These are the most common types of fires in vehicles. Fire extinguishers are mechanical, pressurized devices. Care must be exercised when they are handled.

The extinguisher should be inspected at least once a month. More frequent inspections may be required if the extinguisher is exposed to the weather or to possible tampering. Do not test the extinguisher by partially discharging, as it will cause a loss of pressure. Your fire extinguisher must be maintained as the operator's manual instructs for proper and safe operation.

Read the operator's manual and the instructions on the fire extinguisher. Be sure to know how and when to use the extinguisher and where it is located.

DANGER

Failure to comply could result in an increased risk of fire, explosion, asphyxiation, serious injury, or death.

BRK Smoke Detector Operation (Model: FG250RV)

This article provides basic operation instructions for a BRK smoke detector (Model: FG250RV).

If The Smoke Alarm Sounds

During an alarm, you will hear a loud, repeating horn pattern: 3 beeps, pause, 3 beeps, pause; and the Red LED will flash rapidly.

⚠ WARNING

If the unit alarms and you are not testing the unit, it is warning you of a potentially dangerous situation that requires your immediate attention. NEVER ignore any alarm. Ignoring the alarm may result in injury or death.

⚠ WARNING

Never remove the batteries from a battery operated Smoke Alarm to stop an unwanted alarm (caused by cooking smoke, etc.). Removing batteries disables the alarm so it cannot sense smoke, and removes your protection. Instead open a window or fan the smoke away from the unit. The alarm will reset automatically.

⚠ WARNING

If the unit alarms get everyone out of the house immediately.

Regular Maintenance

This unit has been designed to be as maintenance free as possible, but there are a few simple things you must do to keep it working properly.

- Test it at least once a week.
- Clean the Smoke Alarm at least once a month; gently vacuum the outside of the Smoke Alarm using your household vacuum's soft brush attachment. Test the Smoke Alarm. Never use water, cleaners or solvents since they may damage the unit.
- If the Smoke Alarm becomes contaminated by excessive dirt, dust and/or grime, and cannot be cleaned to avoid unwanted alarms, replace the unit immediately.
- Relocate the unit if it sounds frequent unwanted alarms. See "Locations to Avoid for Smoke Alarms" for details.
- When the battery becomes weak, the Smoke Alarm unit will "chirp" about once a minute (the low battery warning). This low battery warning should last 7 days, but you should replace the battery immediately to continue your protection. Note: If locking pin is engaged see "Locking Feature" section for unlocking instructions.

Weekly Testing

It is important to test this unit every week to make sure it is working properly. Using the test button is the recommended way to test this Smoke Alarm. Press and hold the test button on the cover of the unit until the alarm sounds (the unit may continue to alarm for a few seconds after you release the button). If it does not alarm, make sure the unit is receiving power and test it again. If it still does not alarm, replace it immediately. During testing you will hear a loud, repeating horn pattern: 3 beeps, pause, 3 beeps, pause; and the Red LED will flash rapidly.

⚠ WARNING

Never use an open flame of any kind to test this unit. You might accidentally damage or set fire to the unit or to your home. The built-in test switch accurately tests the unit's operation as required by Underwriters Laboratories, Inc. (UL).

⚠ WARNING

If the alarm ever fails to test properly, replace it immediately.

⚠ CAUTION


Do not stand close to the alarm when the horn is sounding. Exposure at close range may be harmful to your hearing. When testing, step away when horn starts sounding.

Replacing The Battery

Your Smoke Alarm requires one standard 9V battery. The following batteries are acceptable as replacements: Duracell #MN1604, Eveready (Energizer) #522. You may also use a Lithium battery like the Ultralife U9VL-J, U9VL-J-P for longer service life between battery changes. These batteries are available at many local retail stores.

To lock/unlock the cover to the base:

1. Using needle-nose pliers or a utility knife, detach locking pin from back of alarm base.
2. Insert locking pin into the slot located on the front of the alarm as shown in the diagram.
3. Remove pin to unlock and replace battery.

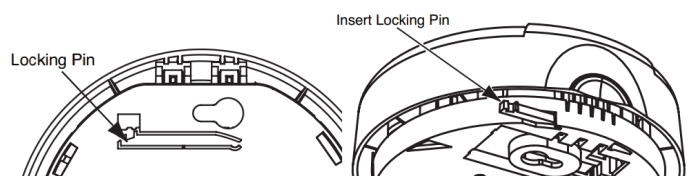

Source(s): BRK Battery Powered Smoke Alarm User's Manual

Product(s): BRK Electronics Smoke Detector (Model: FG250RV, Newmar Part Number: 119606)

Kidde 10 lbs. Fire Extinguisher UL Operation.

This article provides basic operation instructions for a Kidde fire extinguisher.

How To Use Fire Extinguishers

Stand 5 feet away from the fire and follow the four-step PASS procedure recommended by the National Fire Protection Association:

- **P** - Pull the pin and hold the extinguisher with the nozzle pointing away from you.
- **A** - Aim low at the base of the fire.
- **S** - Squeeze the lever slowly and evenly to discharge the extinguishing agent. When the agent first hits the fire, the fire may briefly flare up. This should be expected.
- **S** - Sweep the nozzle from side to side, moving carefully toward the fire. Keep the extinguisher aimed at the base of the fire.



Source(s): Kidde Fire Extinguisher Owner's Manual

When To Use Fire Extinguishers

It's important to remember that fire extinguishers are only one element of a complete fire survival plan. Only use your extinguisher after making sure:

- All residents of the home have been evacuated to safety
- The fire department has been notified
- There is a clear exit behind the person using the extinguisher

Use your extinguisher only to keep a small self-contained fire from growing, only when the room is not filled with smoke, or to create a safe pathway out of the home. Be sure to read the instructions and become familiar with your fire extinguisher's parts and operation before a fire breaks out.

Carbon Monoxide Safety

This article provides information about the safe use of carbon monoxide-producing coach components. Carbon monoxide is a colorless, tasteless, odorless gas. It is a by-product of the burning of fossil fuels (gasoline, propane gas, diesel fuel, etc.). The chassis and generator engines, furnaces, water heater, propane gas refrigerator, and range produce carbon monoxide constantly while they are operating.

Carbon Monoxide Poisoning

If you, or anyone else, experience any of the following carbon monoxide poisoning symptoms, exit the coach immediately. Seek medical attention if the symptoms persist. Shut down the coach, and do not operate it until it has been thoroughly inspected and repaired.

- Dizziness
- Nausea
- Vomiting
- Muscular twitching
- Throbbing in the temples
- Inability to think coherently
- Weakness and/or sleepiness
- Intense headaches

DANGER

Carbon monoxide is deadly. Read and understand the following precautions, as well as any warning labels in your coach, to protect yourself and others from the effects of carbon monoxide poisoning.

WARNING

Do not sleep in this area. Carbon monoxide or other harmful vapors could enter the area through the floor openings, which could result in death or serious injury.

AVERTISSEMENT

Ne pas dormir dans cette aire. Du monoxyde de carbone ou d'autres vapeurs nocives pourraient y pénétrer par des ouvertures dans le plancher et entraîner des blessures graves ou la mort.

DANGER

Vehicles and equipment powered by internal combustion engines and placed in recreational vehicles can cause carbon monoxide poisoning or asphyxiation, which could result in death or serious injury.

- To reduce risk:
1. Do not ride in the vehicle storage area when vehicles are present.
 2. Do not sleep in the vehicle storage area when vehicles are present.
 3. Close doors and windows in walls of separation (if installed) when any vehicle is present.
 4. Run fuel out of engines of stored vehicles after shutting off fuel at the tank.
 5. Do not store, transport, or dispense fuel inside this vehicle.
 6. Open the windows, openings, or air ventilation systems provided for venting the transportation area when vehicles are present.
 7. Do not operate propane appliances, pilot lights, or electrical equipment when motorized vehicles are present.

WARNING

Do not block the tailpipes or exhaust ports. Do not situate the vehicle in a place where the exhaust gases have any possibility of accumulating either outside, underneath, or inside your vehicle or any nearby vehicles. Outside air movements can carry exhaust gases inside the vehicle through windows or other openings remote from the exhaust outlet. Operate engines, carbon monoxide-producing systems, or components only when safe dispersion of exhaust gases can be assured. Monitor outside conditions to be sure that exhaust continues to be dispersed safely.

Carbon Monoxide (CO) Detectors

The detector is equipped with a “sensor activation strip,” which must be removed for the detector to operate properly. This should have been done during the dealer’s Pre-Delivery Inspection. Please check the detector to verify that the activation strip has been removed. The CO detectors are self-contained and do not require any maintenance other than normal cleaning and dusting.

Install battery or batteries into the battery holder, and observe the polarity. After approximately 30 seconds, the battery-operated detector will begin monitoring for carbon monoxide, making the device operational. The test/reset button is used to test the detector’s electronics and reset the detector after an alarm. Test the detector weekly.

BRK (First Alert) Carbon Monoxide Alarm Operation (Model: CO250RVA)

This article provides basic operation instructions for a BRK (First Alert) carbon monoxide alarm (Model: CO250RVA).

How Your CO Alarm Works

A CO Alarm measures the CO levels in the air. It will alarm if CO levels rise quickly (if the heat exchanger on your furnace breaks, for example), or if CO is consistently present (a slow CO leak on a fuel-burning appliance).

This Carbon Monoxide alarm features a permanently installed sensor and an 85 dB alarm horn. It also has a silence feature to temporarily quiet the alarm horn.

Welcome Chirp	Horn chirps and light blinks once when batteries are first connected.
Alarm Receiving Battery Power	Light flashes every minute. Horn is silent.
Low Battery Warning	The light continues to flash (RED) and the horn also "chirps" once every minute. This warning should last for up to 30 days, but you should replace the batteries as soon as possible.
During Testing	Light flashes RED with the horn pattern (4 beeps, pause, 4 beeps), simulating a CO Alarm condition.
CO Alarm	Sensor has detected enough CO to trigger an alarm. Light flashes rapidly and horn sounds loudly (repeating 4 beeps, pause). During an alarm, move everyone to a source of fresh air. DO NOT move the CO Alarm!
CO Alarm Requires Service (Malfunction Signal)	The light flashes (RED) and the horn sounds 3 "chirps" every minute. CO Alarm needs to be replaced.
CO Alarm Has Reached Its End of Life	The light flashes (RED) and the horn sounds 3 "chirps" every minute. CO Alarm needs to be replaced.

WARNING

Under no circumstance should you operate any engine while sleeping. When you are sleeping, you are not able to monitor outside conditions to assure that engine exhaust does not enter into the coach. Check the exhaust system frequently for damage. If damage is found, do not operate the system. Never modify the exhaust system(s) in any way.

If The CO Alarm Sounds

WARNING

Actuation of your CO Alarm indicates the presence of carbon monoxide (CO) which can kill you. In other words, when your CO Alarm sounds, you must not ignore it!

IF THE ALARM SIGNAL SOUNDS

1. If you hear the alarm horn and the Red light is flashing, move everyone to a source of fresh air. DO NOT disconnect the battery from the CO Alarm! Do a head count to check that all persons are accounted for. Do not re-enter the premises, or move away from the open door or window until the emergency services responder has arrived, the premises have been aired out, and your CO Alarm remains in its normal condition.
2. Call your emergency services, fire department or 911.
3. After following steps 1-2, if your CO Alarm reactivates within a 24-hour period, repeat steps 1-2 and call a qualified appliance technician to investigate for sources of CO from fuel-burning equipment and appliances, and inspect for proper operation of this equipment. If problems are identified during this inspection have the equipment serviced immediately.

Using The Silence Feature

WARNING

The Silence Feature is for your convenience only and will not correct a CO problem. Always check your home for a potential problem after any alarm. Failure to do so can result in injury or death.

WARNING

NEVER remove the batteries from your CO Alarm to silence the horn. Use the silence feature. Removing the batteries removes your protection!

The Silence Feature is intended to temporarily silence your CO Alarm's alarm horn while you correct the problem—it will not correct a CO problem. While the alarm is silenced it will continue to monitor the air for CO.

When CO reaches alarm levels the alarm will sound—repeating horn pattern: 4 beeps, a pause, 4 beeps, etc. Press and hold the Test/Silence button until the horn is silent. The initial Silence cycle will last approximately 4 minutes.

NOTE: After initial 4-minute Silence cycle, the CO Alarm re-evaluates present CO levels and responds accordingly. If CO levels remain potentially dangerous—or start rising higher—the horn will start sounding again.

WHEN THE DETECTOR IS SILENCED:

- IF the CO alarm is silent for only 4 minutes, then starts sounding loudly - 4 beeps, pause, 4 beeps, pause... THEN the CO levels are still potentially dangerous.
- IF the CO alarm remains silent after you pressed the Test/Silence button... THEN the CO levels are dropping.

SILENCING THE LOW BATTERY WARNING

This silence feature can temporarily quiet the low battery warning “chirp” for up to 8 hours. You can silence the low battery warning “chirp” by pressing the Test/Silence button. The horn will chirp, acknowledging that the low battery silence feature has been activated.

After 8 hours, the low battery “chirp” will resume. Replace the battery as soon as possible; this unit will not operate without battery power!

To deactivate this feature: Press the Test/Silence button again. The unit will go into Test Mode and the low battery warning will resume (LED flashes and unit sounds “chirp” once a minute.)

If you cannot silence the low battery warning, replace the battery immediately.

SILENCING THE END OF LIFE SIGNAL

This silence feature can temporarily quiet the End of Life warning “chirp” for up to 2 days. You can silence the End of Life warning “chirp” by pressing the Test/Silence button. The horn will chirp, acknowledging that the End of Life silence feature has been activated.

- After approximately 2 days, the End of Life “chirp” will resume.
- After approximately 2-3 weeks the End of Life warning cannot be silenced.

Testing and Maintenance

WEEKLY TESTING

WARNING

Test the CO Alarm once a week. If the CO Alarm ever fails to test correctly, have it replaced immediately! If the CO Alarm is not working properly, it cannot alert you to a problem.

WARNING

Do NOT stand close to the Alarm when the horn is sounding. Exposure at close range may be harmful to your hearing. When testing, step away when horn starts sounding.

Push and hold the Test/Silence button on the cover until the LED flashes. The alarm horn will sound 4 beeps, a pause, then 4 beeps. The ALARM (RED) light will flash.

The alarm sequence should last 5-6 seconds. If it does not alarm, make sure fresh batteries are correctly installed, and test it again. If the unit still does not alarm, replace it immediately.

IF THE ALARM DOES NOT TEST PROPERLY:

1. Make sure the battery is installed correctly.
2. Be sure the Alarm is clean and dust-free.
3. Install a fresh 9V battery and test the Alarm again.

WARNING

DO NOT try fixing the Alarm yourself - this will void your warranty! Install a new CO Alarm immediately.

WARNING

The Test/Silence button is the only proper way to test the CO Alarm. NEVER use vehicle exhaust! Exhaust may cause permanent damage and voids your warranty.

REGULAR MAINTENANCE

To keep the CO Alarm in good working order:

- Test it every week using the Test/Silence button.
- Vacuum the CO Alarm cover once a month, using the soft brush attachment. Never use water, cleaners, or solvents, since these may damage the unit. Test the CO Alarm again after vacuuming.
- Replace the batteries when the CO Alarm “chirps” about every minute (the low battery warning). The low battery warning should last for 30 days, but you should replace the battery immediately to continue your protection.

CHOOSING A REPLACEMENT BATTERY:

This CO Alarm requires one 9V alkaline battery. The following batteries are acceptable as replacements: Alkaline Batteries — Duracell MN1604 or Energizer 522; Lithium Batteries — Ultralife U9VL-J. These replacement batteries are commonly available at local retail stores.

⚠ WARNING

Always use the exact batteries specified by this User’s Manual. DO NOT use rechargeable batteries. For products requiring multiple batteries, replace all batteries of a set at the same time. Do Not Mix Old and New Batteries. Clean the battery contacts and also those of the device prior to battery installation. Install batteries correctly with regard to polarity (+ and -).

⚠ WARNING

Please dispose of or recycle used batteries properly, following any local regulations. Consult your local waste management authority or recycling organization to find an electronics recycling facility in your area. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

Source(s): BRK Battery Powered Carbon Monoxide Alarm (CO250RVA-48B) User’s Manual

Product(s): BRK Electronics Carbon Monoxide Alarm (Model: CO250RVA, Newmar Part Number: 125654)

Propane System Operation and Safety Overview

This article provides details about the propane fuel system in a Newmar coach, including propane safety and maintenance.

Your coach may be equipped with an ASME (American Society of Mechanical Engineers) approved propane tank. This tank is controlled with an automatic pressure regulator. The propane tank contains liquid petroleum gas under high pressure. As the fuel is used, the liquid gas vaporizes and passes through the tank valve to a regulator that automatically reduces the pressure. The low-pressure gas is then distributed to the appliances throughout the pipe manifold system.

The components relating to the propane gas system in your coach have been approved for use in recreational vehicles by a nationally recognized testing laboratory. Propane gas is a clean-burning dependable fuel when properly handled.

⚠ IMPORTANT

While in high altitudes or extreme cold weather, a gas shortage may be experienced. Running one appliance at a time can help adjust to this problem.

⚠ DANGER

Exhaust gases contain carbon monoxide (an odorless, colorless, and poisonous gas) produced by burned gasoline, diesel, or propane gas. Items such as the range, furnace, water heater, refrigerator, chassis engine, or generator engine can produce these gases. These fumes should not be inhaled.

Propane Safety

⚠ WARNING

Portable fuel-burning equipment, including wood and charcoal grills and stoves, shall not be used inside the coach, as they can cause fire or asphyxiation. Failure to comply could result in serious injury or death.

PROPANE (LP) DETECTOR

The propane detector in your coach is located in the main living area close to the floor. It is wired to the 12 volt electrical system in your unit and may be controlled by a switch in the front overhead cabinet. Operating instructions and a test button are located on the face of the detector. The propane detector should be tested after the vehicle has been in storage, before each trip, and at least once per week during use.

Never attempt to repair the propane detector. Do not remove the fuse or disconnect wiring to the propane detector. If the propane detector will not function, check for 12 volt power at the detector. If an issue is found, or if the 12 volt electric circuit not operational, repair the 12 volt issue or replace the propane detector.

⚠ WARNING

Do not use coach with a non-operational LP detector.

⚠ IMPORTANT

Never spray any type of aerosol or cleaner directly onto or into the propane detector. Spraying any type of material into the opening on any of these detectors can render them useless, and would not be covered by the manufacturer's warranty.

Refer to Newgle for more information about your coach's propane (LP) gas detector.

PROPANE WARNING LABELS**⚠ IMPORTANT**

Read and understand the following precautions, as well as any warning labels in your coach, to protect yourself and others from the risks of operating an LP system.

The following labels regarding propane safety are strategically placed inside of your coach.

⚠ WARNING This propane piping system is designed for use with propane only. Do not connect natural gas to this system. Securely cap inlet when not connected for use. After turning on propane, except after normal cylinder replacement, test propane piping and connections to appliances for leakage with soapy water or bubble solution. Do not use products that contain ammonia or chlorine to test for leaks. May lead to a fire or explosion, which could result in death or serious injury.	⚠ AVERTISSEMENT Cette tuyauterie de propane est conçue pour n'être utilisée qu'avec du propane. Ne pas l'utiliser pour du gaz naturel. Bien capuchonner l'entrée de la tuyauterie lorsqu'elle n'est pas raccordée. Après avoir ouvert la vanne du propane, sauf lors du remplacement normal du cylindre, faire un essai d'étanchéité de la tuyauterie de propane et des raccords aux appareils à l'aide d'eau savonneuse ou d'une solution qui produit des bulles. Ne pas effectuer d'essai d'étanchéité à l'aide d'ammoniac ou de chlore. Le non-respect de cette instruction peut causer un incendie ou une explosion, ce qui pourrait entraîner des blessures graves ou la mort.	⚠ CAUTION Shut off gas supply before disconnecting appliance.
⚠ ATTENTION Couper le gaz avant de déconnecter l'appareil.		

IF YOU SUSPECT A GAS LEAK

If the detector alarms while in use, or if you smell propane or suspect a gas leak (the odor smells similar to rotten eggs or sulfur), follow the warning labels in your coach.

⚠ DANGER

Never test for a leak by lighting a match or having an open flame where you suspect leaking gas.

- Immediately turn off all potential sources of ignition (furnace, water heater, refrigerator, stove/range, etc.), and extinguish any open flames, pilot lights, and all smoking materials.
- Do not touch electrical switches.
- Shut off the propane supply at the container valve(s) or propane supply connection.
- Open doors and other ventilating openings.
- Evacuate the unit, and leave the area until the odor clears.
- Consult an authorized service technician for repairs, as the propane system must be checked and leakage source corrected before using again.

⚠ DANGER IF YOU SMELL PROPANE 1. Extinguish any open flames and all smoking materials. 2. Shut off the propane supply at the container valve(s) or propane supply connection. 3. Do not touch electrical switches. IGNITION OF FLAMMABLE VAPORS COULD LEAD TO A FIRE OR EXPLOSION AND RESULT IN DEATH OR SERIOUS INJURY.	⚠ DANGER SI VOUS SENTÉZ UNE ODEUR DE PROPANE : 1. Éteignez toute flamme nue et tout article pour fumeur. 2. Coupez l'alimentation en gaz de l'appareil au réservoir ou au raccordement d'alimentation. 3. Ne touchez pas aux interrupteurs électriques. L'INFLAMMATION DES VAPEURS INFLAMMABLES POURRAIT PROVOQUER UN INCENDIE OU UNE EXPLOSION ET ENTRAÎNER DES BLESSURES GRAVES OU LA MORT.
--	---


Propane Operation

Check the LP level either from the monitor panel in the coach or the gauge on the LP tank to ensure an adequate fuel level.

Make sure the LP valve is open. To open it, turn the valve counterclockwise.

When having the tank filled, or if the coach is in storage, or if LP is not currently needed, turn off the gas at the LP tank by turning the valve clockwise.

The tank fill valve and the 80% bleeder valve should not be tampered with by the user. These valves are for filling purposes and should only be performed at a licensed filling station.

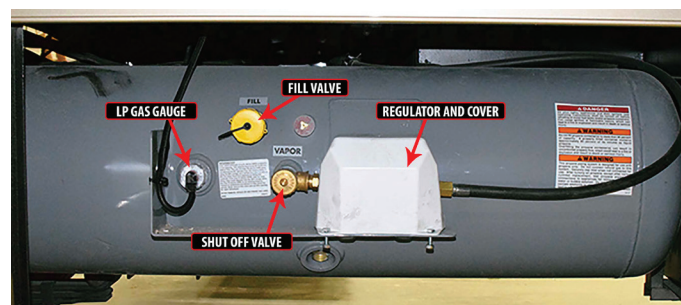**Propane System Maintenance**

It is recommended to have the propane system inspected by an authorized service technician at least once a year and after every extended trip. This system is tested by both the manufacturer and the dealer; however, leaks may be caused by travel vibrations.

FILLING THE PROPANE SYSTEM

Tank filling should only be performed by trained professionals. Prior to filling the propane tank, turn off all flame or spark-producing appliances, extinguish any smoking items, and turn off the coach engine.

⚠ WARNING

Inspect the propane fill valve for foreign materials before refueling. Introducing foreign material into the fill valve may cause leaking or overfilling, resulting in uncontrolled gas flow and a fire or explosion.

⚠ WARNING

While refilling the fuel or propane tank, the engine must be off, all pilot lights must be extinguished, and appliances turned off. The vehicle should be as level as possible, and the service valve should be turned off. Smoking is also prohibited at this time.

⚠ WARNING

Shut off the propane gas valve when refueling to avoid potential danger from pilot lights igniting fuel fumes. Some appliances, such as the refrigerator, water heater, and furnace, have DSI (direct spark ignition) boards, so it is important that you turn the appliances off when the propane gas is turned off. The ignition in the appliances may continue to spark even if there is no propane gas available.

⚠ IMPORTANT

All protective covers and caps must be replaced after filling the propane system. Once the valve is closed, securely latch the propane door.

⚠ WARNING

Propane gas is extremely flammable. Propane gas containers, gasoline, or other flammable liquids shall not be placed or stored inside the vehicle. Propane cylinders are equipped with safety devices that relieve excessive pressure by discharging propane to the atmosphere. Failure to comply could result in serious injury or death.

⚠ WARNING

Do not fill propane container(s) to more than 80 percent capacity. Overfilling the propane container can result in uncontrolled propane flow, which can cause fire or explosion. A properly filled container contains approximately 80 percent of its volume as liquid propane. Failure to comply could result in serious injury or death.

⚠ WARNING

Do not fill propane container(s) to more than 80 percent of capacity. A properly filled container contains approximately 80 percent of its volume as liquid propane. Overfilling the propane container(s) can result in uncontrolled propane flow, which could lead to a fire or explosion and result in death or serious injury.

⚠ WARNING

This propane piping system is designed for use with propane only. Do not connect natural gas to this system. Securely cap inlet when not connected for use. After turning on propane, except after normal cylinder replacement, test propane piping and connections for leakage with soapy water or bubble solution. Do not use products that contain ammonia or chlorine to test for leaks. May lead to a fire or explosion, which could result in death or serious injury.

⚠ AVERTISSEMENT

Ne pas remplir les bouteilles de propane à plus de 80 % de leur capacité. Une bouteille remplie de manière appropriée est remplie de propane liquide à environ 80 pour cent de son volume. Un remplissage excessif peut entraîner un écoulement incontrôlé du propane, ce qui pourrait provoquer un incendie ou une explosion et causer des blessures graves ou la mort.

⚠ AVERTISSEMENT

Cette tuyauterie de propane est conçue pour le propane uniquement. Ne pas raccorder de gaz naturel à cette tuyauterie. Obtenir l'orifice d'entrée lorsque le réservoir n'est pas utilisé. Une fois le robinet d'alimentation ouvert, sauf après un remplacement normal de la bouteille, vérifier l'étanchéité de la tuyauterie et des raccords avec une eau savonneuse ou autre solution faisant des bulles. Ne pas utiliser de produits contenant de l'ammoniac ou du chlore pour les essais d'étanchéité. Peut provoquer un incendie ou une explosion et causer des blessures graves ou la mort.

CO-251

⚠ WARNING

When removing or servicing any gas appliance, close the main gas valve on the propane tank to prevent dangerous gas leakage that could result in an explosion and possible serious injury. If a gas leak is suspected, have the system inspected and repaired by a qualified service technician as soon as possible.

STORING A PROPANE-EQUIPPED COACH

Keep the tank valve closed and all of the appliances turned off when the unit is stored. If any of the Propane gas valves do not close leak-tight by hand, consult a service technician.

On older coaches, an LP switch may be located in the front overhead or toward the bottom of the passenger chair. This switch shuts off power to the propane detector to prevent an unnecessary draw from the battery bank while the coach is in storage.

Newer coaches are wired to the disconnect side of the battery disconnect solenoid to prevent the detector from draining the battery while the coach is in storage with the disconnect turned off. Keep this switch turned on when the coach is in use for the capability of detecting a leak in the propane system.

⚠ CAUTION

Shut off the main gas valve at the tank when the vehicle is not in use.

SERVICING THE GAS DISTRIBUTION LINES

The primary gas supply manifold is a black steel pipe running the length of the unit. Most secondary lines leading to the gas appliances are made of copper tubing with flare fittings.

⚠ WARNING

If any of these lines rupture, do not attempt to splice them. Always run a new line. Gas distribution work must be performed by an authorized service technician.

RV Safe 12 Volt Propane Leak Detector Operation (Model: RVLP-2B)

This article provides basic operation instructions for a RV Safe 12 Volt Propane Leak Detector (Model: RVLP-2B).

Understanding The Dangers of Propane Gas

Liquified petroleum (LP) gas is commonly called propane and is used as fuel for heating and cooking appliances, especially for RV's. Propane gas is explosive at the lower-explosive-limit (LEL), which is 21,000 parts per million (ppm). RV Safe will alarm at 10% LEL, or 2,100 ppm.

Propane gas is denser than air, and will usually accumulate close to the floor. Therefore, RV Safe should be placed near the floor in order to quickly detect propane gas leaks.

Alarm Features and Functions

RV Safe includes an 85dB audible horn, two LEDs, and a Silence/Test button. The chart below summarizes the alarm outputs in each state.

State	Green LED	Red LED	Audible Horn
Normal Operation	ON	OFF	OFF
Power Off	OFF	OFF	OFF
Self Test	OFF	ON/Flashing	4 Chirps constant beeps
Propane Alarm	OFF	ON	Constant beeps
Alarm Silenced (5 Minutes Max.)	OFF	Flash each second	OFF
Low Battery	Flash each minute	Flash each minute	Chirp each minute
End-of-Life or Other Failure	OFF	Double flash each minute	Chirp each minute



NORMAL OPERATION STATE

The green power LED is ON when the alarm is functioning normally and no CO or propane gas is present. Press the Silence/Test button to perform a self test and enter the Test State. Note: Supply current will remain higher for 30 seconds after power-up. Alarm will not detect CO or Propane for the first 30 seconds and will draw extra current.

POWER OFF STATE

If no LEDs are on, then the alarm is powered off. Apply power to the alarm to resume normal operation.

SELF TEST STATE

If the Silence/Test button is pressed while in normal operation, the alarm will perform a self test of the CO sensor, propane sensor and battery voltage. It is recommended to perform a self test weekly, after power up from storage, and before each trip. If the self test passes, the alarm will perform 2 cycles of the CO horn pattern (4 rapid chirps followed by a 4 second pause), followed by 2 cycles of the propane horn pattern (constantly beeping).

PROPANE ALARM STATE

If propane gas exceeds 10% of the lower-explosive-limit for more than 30 seconds, the alarm will enter propane alarm state. The horn will sound with constant beeps and the red LED will be on. Immediately turn off all propane appliances and gas valve at the propane tanks. Open doors and windows to properly ventilate the RV. Check for any gas leaks and contact a qualified RV technician to diagnose possible propane leaks. The alarm may be silence for 5 minutes by pressing the Silence/Test button.

ALARM SILENCE STATE

A CO alarm or propane alarm can be silenced for up to 5 minutes by pressing the Silence/Test button. The red LED will flash each second while the alarm is silenced. The original alarm state will resume after 5 minutes if the CO or propane levels still exceed safe levels.

LOW BATTERY STATE

If the supply voltage drops below 8VDC, the alarm will enter Low Battery State. The horn will chirp every minute and both LEDs will flash every minute. Alarm performance cannot be guaranteed as the supply voltage drops below the low battery threshold. Charge or replace the RV battery immediately. Do NOT disconnect the alarm.

END-OF-LIFE OR OTHER FAILURE STATE

If the CO or propane alarm fails a self test, or if the End-of-Life is reached (after 5 years of operation), the alarm will enter the Failure State. The horn will chirp every minute and both LEDs will do a double flash every minute. Replace the alarm immediately.

Maintaining Your Alarm

- Verify proper alarm function by pressing the Silence/Test button after storage, before every use and once per week during extended use.
- Vacuum the alarm with a soft brush attachment to remove dust monthly.

Source(s): RV Safe Propane Gas Alarm (RVLP-2 and RVLP-3) for RVs
Owner's Manual

Product(s): RV Safe Alarm 12V Propane Detector (Model: RVLP-2B,
Newmar Part Number: 152865)

Emergency Exits

Hehr/LCI Emergency Exit and Vent Window Operation

This article provides instructions for opening and closing Hehr/LCI emergency exit and vent windows.

Hehr/LCI Egress Emergency Exit Window

Select Hehr windows have an opening window pane in the egress window for ventilation. This style of window can also be opened in the event of an emergency.



TO OPEN THE VENT:

1. Unclip and lower the arm.
2. Swing the arm 90 degrees, and push out on the arm until the red handle latches.

TO CLOSE THE VENT:

1. Unclip the red handle from the latch by lifting slightly while pushing outward.
2. Once the latch releases, pull the arm in until the window is closed.
3. Rotate the arm 90 degrees until it latches into the closed position.

IN THE EVENT OF AN EMERGENCY, OPEN THE WINDOW:

1. Remove the screen by pulling out on the red handle.
2. Push and release the lever from the locking hook.
3. Rotate the lever 90 degrees, and push it through the slot in the window frame.
4. Escape through the opening.

Hehr/LCI Double-Latched Emergency Exit Window



TO OPEN THE EMERGENCY EXIT DOUBLE-LATCHED WINDOW:

1. Flip both latches up to the open position.
2. Push out on the window.

TO CLOSE THE EMERGENCY EXIT DOUBLE-LATCHED WINDOW:

1. Pull the window shut while holding the window track with one hand.
2. With the other hand, rotate the latch up until it connects with the track on the window.
3. Press the front side down until it latches.
4. Repeat the steps for the second latch.

How to Operate the Emergency Egress Exit Door and Ladder

This article provides the Newmar-recommended step-by-step instructions for operating the emergency exit door and ladder.

NOTICE

The emergency egress exit door and ladder is a feature only installed on some coach floor plans.

Emergency Egress Exit Door and Ladder

TO USE THE EMERGENCY EGRESS EXIT DOOR:

1. Unlock the deadbolt by turning it in the direction specified on the label.
2. Make sure the door latch is unlocked.
3. Unlatch and completely open the door to avoid coach damage during ladder extension.



4. Grab and pull the tab to remove the ladder cover, and set it aside.
5. Grab and pull the tab on the Velcro strap to release the ladder.
6. Flip the ladder out, allowing it to extend to the ground.



TO CLOSE THE EMERGENCY EXIT DOOR:

1. Lift the ladder from the bottom, stacking the rungs and pushing the ladder up into the door cavity.
2. Secure it in place with the Velcro strap.
3. Reinstall the ladder cover.
4. Close and latch the door.
5. Lock the door latch by sliding it into the locked position.
6. Lock the deadbolt by turning it in the direction specified on the label.

This page is intentionally blank.



APPLIANCES

This chapter provides information regarding each appliance available for your coach model and year, including cooktops and ranges, dishwashers, fireplaces, microwaves and convection ovens, refrigerators and freezers, central vacuum systems, and washers and dryers.

IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the manufacturer's complete documentation. Refer to Newgle for more information about appliances offered for your coach's model year.

Before Scheduling Service Work For Your Appliance

This article provides helpful tips to follow prior to scheduling service work for your coach appliances.

IMPORTANT

Most appliance manufacturers (i.e. Whirlpool, GE, Maytag, Samsung, Fisher Paykel) require that service work performed on their appliances be completed by one of their own authorized service technicians. However, most appliance service technicians will not remove any appliance from its secured location if it is installed inside an RV. Instead, most require the appliance to be removed from its secured location prior to completing any service work.



Complete the following steps prior to scheduling any appliance servicing, repairs, or replacement, as this requires the coordination of multiple parties to complete the repair.

Note: It is recommended that you contact the appliance manufacturer right away so they can note the account/issue. They may also assist with locating an authorized service technician near your location.

In order to service an appliance in your coach, select one of the following options:

Option 1

1. Take the coach to your dealer, who can coordinate an appointment with a local manufacturer-specific appliance service technician to come on-site to make the repair.
2. In the meantime, one of the dealer technicians will remove the appliance from its mounted position so that the manufacturer-specific technician can service it.
3. Once repairs are complete on the appliance, the dealer technician will reinstall the appliance in its mounted position.

Option 2

1. Set an appointment with a local manufacturer-specific service technician.
2. Contact a local mobile technician to come to your location to remove the appliance prior to the appointment with a manufacturer-specific appliance technician.
3. Once the mobile technician has removed the appliance, the manufacturer-specific technician can then service the appliance.
4. After repairs are made, contact the mobile technician to come back to the coach and reinstall the appliance.

Option 3

1. Set an appointment with a local manufacturer-specific appliance service technician.
2. Remove your own appliance from its mounted position. Some instructions may be obtained on Newgle or by contacting Newmar Customer Service at 1-800-731-8300 (select the appropriate menu option).
3. Once the manufacturer-specific technician has serviced the appliance, reinstall it by reversing the procedure for removing it from its mounted position.



Cooktops and Ranges

Single or Double Solid Surface Cooktop Cover Overview

This article provides an overview of the solid surface cover for the range or cooktop. This cover may be made up of one or two solid surface pieces.

Your range may be equipped with a solid surface cover that matches your countertop material. This cover helps to protect the burners when they are not in use. Before cooking on the range top, the cover must be removed and stored during cooking.

Some coaches with an induction cooktop may have a solid surface cover with a built-in cutting board.



⚠ IMPORTANT

**Never close the cover while the burners are in use.
Never use the range while the RV is moving and remember to reinstall the solid surface cover when the range top is not in use.**

Suburban 3-Burner Propane Elite Series Slide-In Cooktop with Backlighting Operation (Models: 3634A, 3636A, 3684A, 3685A)

This article provides basic operation instructions for a Suburban 3-Burner Propane Elite Series Slide-In Cooktop with Backlighting (Models: 3634A, 3636A, 3684A, 3685A).



⚠ CAUTION

Hand held ignitors may be used but be sure they are the type designed for lighting open flame burners.

- Verify sufficient gas supply before attempting to light the burner. Air in the gas line will significantly delay burner ignition. The burner may light unexpectedly as the air in the line clears and is replaced by propane gas. This unexpected ignition could burn you. Air in the gas lines may occur after the vehicle gas bottle and/or tank is refilled, during and after servicing other appliances on same gas line, etc.
- Do not attempt to light more than one burner at a time.

Operating Instructions

⚠ WARNING

Do not use surface burners with cover in closed position.

TOP BURNERS

1. Know which knob controls which burner. Always be sure the correct burner is turned on.
2. Depress knob and turn fully counter-clockwise to "Lite" position.

If your model ends with "EC", the burner can be lit by rotating piezo knob clockwise rapidly. This produces a spark at the burner which ignites the gas. If your model ends with "SC," the burners can be lit by depressing the button. This produces a spark at the burner which ignites the gas.


3. If any burner should extinguish after initial lighting or due to accidental blow-out, turn gas off by turning control knob clockwise to “OFF”, wait five (5) minutes before attempting to relight the burner. Failure to follow these instructions could result in a fire or explosion.

If the burner should go out while cooking, or if there is an odor of gas, turn control knob(s) clockwise to “OFF.” Wait five (5) minutes for gas odor to disappear. If gas odor is still present - do not relight burners.

4. To turn burner(s) “OFF,” turn the appropriate control knob clockwise to “OFF.”

WARNING

Be sure all control knobs are turned “OFF” when you are not cooking. Someone could be burned or a fire could start if a burner is accidentally left on or unattended even if only momentarily.

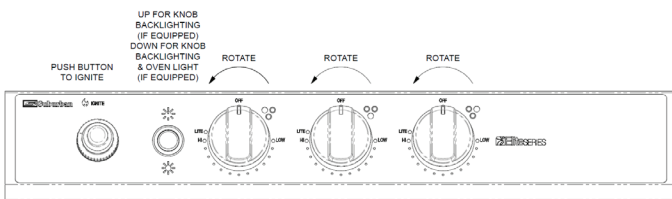

Light Operation

1. To operate the blue knob backlighting only, press the switch to the up position.
2. To operate the blue knob backlighting and oven cavity light, press the switch to the down position.
3. To turn all lights off, return the switch to the center position.

NOTE FROM NEWMAR

If the burners fail to light due to no spark, unscrew the ignitor cap. Check and replace the battery as needed.



Maintenance

1. Make sure all controls are “OFF” and the range cooktop and oven are cool before cleaning.
2. Make sure that all cooktop surfaces, burner grates, and burners are cool before cleaning or disassembling cooktop.
3. Do not use oven cleaners, bleach, or rust removers on the cooktop or burner grates.

4. Clean all surfaces as soon as possible after boilovers or spillovers.
5. Use warm soapy water only to clean the burner grates, cooktops, painted surfaces, porcelain surfaces, stainless steel surfaces and plastic items on your range. Do not use grit or acid-type cleaners. Do not use cleaners with ammonia. Cleaners of these types are corrosive and could damage component parts in the range.
6. Do not use steel wool or abrasive cleaners. They will damage the cooktop and oven finish. Use only non-abrasive plastic scrubbing pads.
7. Do not allow foods containing acids (such as lemon or tomato juice, or vinegar) to remain on porcelain or painted surfaces. Acids may remove the glossy finish.
8. Do not wash warm porcelain surfaces. Allow these areas to cool before cleaning. You could burn yourself or the porcelain could crack.
9. Pitting and discoloration will result if spills are allowed to remain for any length of time on stainless steel.
10. Do not allow spillovers to remain on the burner caps. The caps could be permanently stained if spillovers are not cleaned up promptly.
11. If any of the burner ports or the orifice are clogged, carefully clean with a small wire or needle. Be sure not to enlarge ports. Never use a wire brush for cleaning burner ports or orifices. Never use any brush which may “shed” bristles, which may become lodged in the orifice or burner ports and cause a fire or explosion.

TO REMOVE THE WIRE GRATE AND MAIN TOP FOR SERVICE AND CLEANING

1. Remove the wire grate by raising straight up. Use caution not to dislodge the grommets in the top (one at each corner).
2. Grasp top in the center and raise front up approximately 3”. If your unit has sealed burners, disconnect the piezo wire at each burner.
3. Slide top forward off the two spring clips at rear of top. Lift up top.

TO REINSTALL

1. Reconnect piezo wires to each burner if they were removed.
2. Align slots in rear flange of top with the tabs on the spring clips. Push top in and press front of top down until the spring clip snaps into place.
3. Reinstall wire grate by aligning the four (4) legs on the wire grate with the four (4) grommets in the top. Press wire grate down into each grommet, being careful not to dislodge the grommets.

Source(s): Suburban RV Range and Cooktops Installation, Operation, and Maintenance Manual (All SRN/SRS Models)

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach & #39;s model year.


True Induction 2-Burner Induction Cooktop Operation (Model: TI-2B / S2F3)

This article provides basic operation instructions for a True Induction 2-Burner Induction Cooktop (Model: TI-2B / S2F3).

The counter inset model of the Double Burner Induction Cooktop is not only energy efficient and safe. It also features a sleek glass-ceramic top that fits directly into your counter, maximizing the amount of space that you have to work with. Space is important, especially in an RV. You don't have to worry about losing counter space or storage because the cooktop is nothing more than a flat surface.

⚠ NOTICE

Induction cooktops require pots and pans that are made of ferrous (meaning magnetic) materials. The following are not compatible: heat-resistant glass, ceramic, copper, aluminum pan/pots, round-bottomed cookware, or cookware with a base less than 4.5 inches.

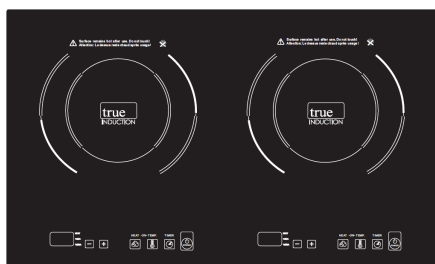

How To Use

Unlike standard stove tops that generate and displace heat in a way that wastes energy and runs the risk of causing injury or being a fire hazard, the counter inset induction cooktop generates heat through a magnetic circuit that connects with ferromagnetic cookware, allowing the heat to be generated by the pot or pan being used. The True Induction cooktop is also easy to use.

1. Plug the power plug into a standard outlet.
2. The Power button will light up and the unit will sound to indicate on.
3. The device will remain in standby mode, awaiting user direction.
4. Place ferromagnetic cookware (with water, oil or food already inside) on the center of the glass-ceramic top center.
5. Now press the Power button on the control panel, this will turn the cooktop on. The power display will blink and sound another indicator.
6. Press the Heat function key once. The pre-set power level "5" is the default selection as the device turns on.
7. Using the +/- keys you can change the settings at any time, ranging from 1-10. This is considered to be the HEAT function.

⚠ CAUTION

Do not place induction cookware on the cooktop burner until operation of cooktop is desired.

Power Invariance Technology

The maximum power of an individual burner level is at setting 10. But, when operating both burners their combined total is level 10 (newer cooktops may have a combined total of a level 14), meaning that when operating the two burners at the same time they'll self adjust levels accordingly:

- When you increase the power of one side, the power output of the other side will reduce automatically.
 - Older cooktops: If one side is at 6, the other burner automatically reduces power to level 4 creating a total of max 10 setting.
 - Newer cooktops: If one side is at 6, the other burner automatically reduces power to level 8 creating a total of max 14 setting.
- If one side of the double burner is using the HEAT function and the other side uses the TEMP settings, the maximum HEAT setting is "5." Newer cooktops may have a maximum heat setting of "9."

Using The Temperature Setting

Using the +/- keys you can change the temperature settings at any time. Settings range from 150-450 degrees Fahrenheit. (Exact temperatures: 150, 180, 210, 240, 270, 300, 330, 360, 390, 420 and 450 F).

Using The Timer Function

- After selecting the HEAT or TEMP mode, press the TIMER button once. The display will show the number "0." Using the +/- keys you can select the operating time in 5-minute intervals (up to max 150 min.) and reducing 1 minute.
- The display will count down the duration in minutes. Once the time is up, the unit sounds and automatically goes into standby mode. To continue cooking, press the Power button and Heat button to restart.
- During the timer operation, you can change the timer duration at any time with the arrow keys. The device's built-in memory maintains the HEAT or TEMP setting previously entered.
- You can also change the HEAT or TEMP settings without affecting the current timer setting.

Built-In Safety Shut Off

- The True Induction cooktop is designed to automatically shut off after 150 minutes of use. This built-in auto shut off is a safety feature.
- This function occurs for both the HEAT and TEMP settings. The panel displays EE code and sounds indicating this auto-off setting.
- In the event your food requires further cooking, the unit can easily be turned back on and re-set to the desired setting.

Turning Off Unit

- When you are finished cooking, simply press the Power button to turn off the machine.

- Upon completion of cooking, the fan may remain on until the unit is cool.

The power light indicators turn on and the unit will immediately begin heating if proper ferromagnetic cookware is used. There are two main heat settings, a quick touch level selection featuring settings 1-10 and an exact temperature setting ranging from 150 to 450 degrees Fahrenheit. The default heat setting is level 5 and the settings can be adjusted by pressing the “+/-” key to achieve the desired heat. The default temperature setting is 270 degrees Fahrenheit and the temperature can be adjusted in 30-degree increments.

Source(s): True Induction Double Burner TI-2B Counter Inset Induction Cooktop Manual

Product(s): True Induction 1800w 2-Burner Induction Black Landscape Electric Cooktop (Model: TI-2B (S2F3), Newmar Part Number: 145601) or True Induction 1800w 2-Burner Induction Black Landscape Electric Cooktop (Model: TI-2B, Newmar Part Number: 124108)



Dishwashers

Fisher Paykel Single DishDrawer Dishwasher Operation (Model: DD24SAX9)

This article provides basic operation instructions for a Fisher Paykel Single DishDrawer Dishwasher (Model: DD24SAX9).

IMPORTANT

For detailed information on the features of your dishwasher, see your ‘User guide’. Before using your dishwasher, make sure you read the full ‘User guide’, with special attention to the ‘Safety and warnings’ section.

Operating Instructions - Starting A Wash

1. Discard scraps. Scrape large food particles off (e.g. bones, fruit stones) and remove any foreign objects (e.g. toothpicks, strings, paper).
2. Load dishes carefully. To help with wash performance, arrange dishes so they are evenly spaced and not nesting.
 - Accommodates plates up to a max height of 280mm (11”) for standard tubs or 310mm (12 1/4”) for tall tubs.
3. Check spray arm(s) are mounted correctly and can rotate fully around. Check the spray arm is mounted correctly by physically rotating it around with your hand. Before a wash, ensure there are no items blocking the spray arm(s) from rotating.
4. Add detergent. Fill the detergent dispenser with powdered detergent and close the dispenser door. If using a tablet or gel pouch, place it in the cutlery basket or at the edge of the base rack. See “Adding Detergent” section for more details.

IMPORTANT

Do not place liquid detergent or tablets in the detergent dispenser.


5. Check rinse aid. If the indicator on its plug glows bright red, refill the rinse aid dispenser with liquid rinse aid. Make sure you then refit the rinse aid plug back into its original position, by rotating the plug back into an upright position.
6. Select wash. Power the dishwasher on then select wash program.
7. Start wash or set Delay start. Ensure drawer is closed.
 - To start wash: Press the Start/Pause button.
 - To set delay start: Press and hold the Start/Pause button to enter delay start, then press and hold the Start/Pause button again to increase the delay start time.

ADDING DETERGENT

POWDERED DISHWASHER DETERGENT

1. Press the latch down to open the dispenser.
2. Check that the dispenser is empty and dry, then add detergent (do not place solid or liquid tablets in the dispenser). No detergent is needed for the Rinse program.
3. Close the dispenser until it clicks shut. The detergent will automatically be released into the drawer during the wash program.

Note: When washing heavily soiled dishes and in very hard water, you may also fill the secondary dispenser with detergent to aid dishwasher performance.

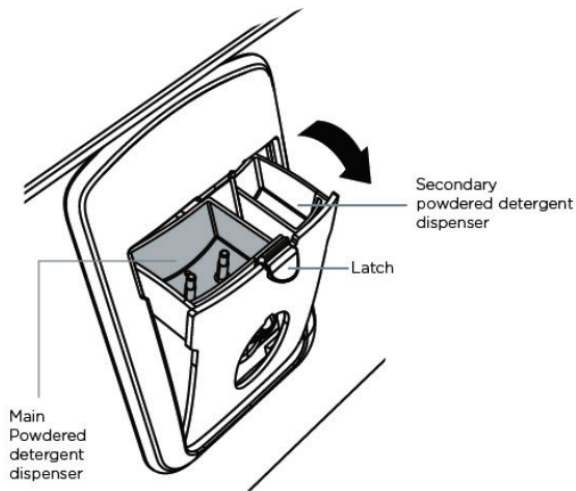


POUCH PACKS OF GEL OR POWDER OR SOLID DISHWASHER TABLETS

Place on tablet tray in the cutlery basket. If the cutlery basket is not being used for a particular load, wedge pack between the racking on the side.

⚠ IMPORTANT

Don't place the pack or tablet on the floor of the drawer, as it may interfere with the spray arm rotation and affect wash performance.

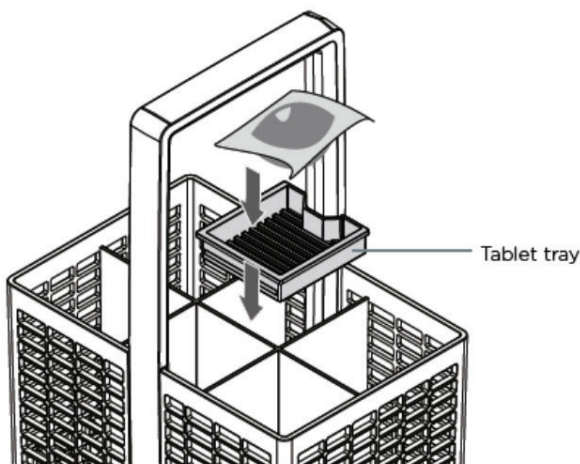

Notes on using tablets:

- If you are using tablets, follow manufacturer instructions on the packet. Some tablets may not be suitable for all wash programs.
- Using tablets could improve wash performance in hard water areas.
- Make sure that tablets never get in direct contact with dishes or cutlery.
- If you are using dishwasher tablets with a built-in rinse aid component, we recommend turning off the rinse aid.

⚠ IMPORTANT

Dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children and infirm persons away from the dishwasher when it is open. Check that the powdered detergent dispenser is empty after completion of the wash program.

UNSUITABLE DETERGENTS

These types of detergent are not suitable and may damage your dishwasher and lead to a service call that is not covered by warranty.

⚠ IMPORTANT


Do NOT use these in your dishwasher:

- Liquid detergents
- Laundry detergents
- Hand washing liquids
- Soaps
- Disinfectants

HOW MUCH DETERGENT TO USE

For powdered detergent... follow the quantities relevant to your location and water hardness level. Use the markings to help you measure the correct quantities. For other types of detergent, follow the manufacturer's recommendations.

Controls and Indicators

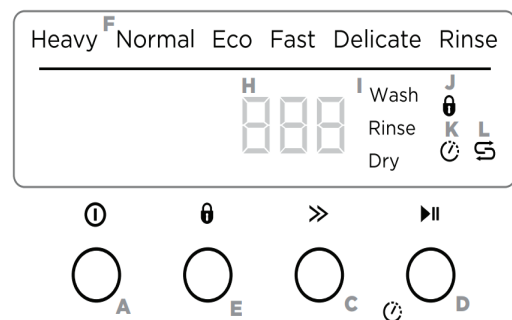

(A) OFF/ON

Press the Power button to turn the dishdrawer on or off. Opening the drawer will automatically turn the dishwasher on.

(C) WASH PROGRAM SELECTOR

Press the Fast Forward button to scroll through wash program options.

(D) START / DELAY START

Press the Play/Pause button to start the wash. To pause: Press the Play/Pause button again. The wash stage indicator will flash.

- Wait for the 3 short and one long tone before opening the drawer. Forcing it open mid-cycle may cause damage or injury.
- If the drawer is not restarted within 7 minutes, it will tone intermittently until it is restarted.

TO DELAY START

- Press and hold until the Play/Pause button until the “1h” appears on the display, then release. You are now in Delay start mode.
- Press the Play/Pause button until the display shows the number of hours you want to delay the start of a wash by (1 to 12 hours). Note: If you scroll past 12 hours, the dishwasher will exit Delay start mode. To re-enter delay start, go back to the previous step.
- The wash will start once the delay time is over, provided the drawer is closed. If the drawer is opened after delay start has been set (for example if you need to load more dishes), delay start will be paused after the drawer is closed.

TO RESTART DELAY START

- Close the drawer. The clock icon will flash.
- Press the Play/Pause button to resume.

CANCEL WASH/CANCEL DELAY START

- Press the Power button to cancel a wash that has already started or to cancel the Delay start setting.
- If there is any water in the drawer, it will automatically drain before the dishwasher turns off.

(E) KEYLOCK

Keylock disables all the buttons – helpful when cleaning the dishwasher.

- To activate: press and hold the Lock button until you hear one tone. The keylock indicator will come on.
- To cancel: press and hold the Lock button until you hear another tone and the keylock indicator stops flashing and goes out.

(E) CHILDLOCK

Childlock disables all the buttons and locks the drawer closed, preventing unauthorized use by children.

- To activate: press and hold the Lock button until you hear a second tone. The keylock indicator will come on.
- To cancel: press and hold the Lock button until you hear another tone and the keylock indicator stops flashing and goes out.

(F) WASH PROGRAM INDICATORS

These show which program is selected.

(H) DISPLAY

- Time remaining (minutes)
- Fault code numbers (see ‘If there is a fault’ in User guide).

(I) WASH STAGE INDICATORS

- (See ‘During and after the wash cycle’).

(J) KEYLOCK/CHILDLOCK INDICATOR

- If lit: keylock or childlock is activated.

(K) DELAYED START INDICATOR

- If lit: delayed start is set.

(L) SALT INDICATOR

- If lit: salt reservoir is empty. (Water softener models only)

Wash Programs

Press the Fast Forward button to scroll through the wash program options.

Wash Program	Description
Heavy	Heavily soiled pots, pans and dishes.
Normal (Default)	Dishes that are quite heavily soiled or food soils that have been left to dry overnight.
Normal Eco	Normally soiled dishes for optimum water and energy usage.
Fast	Lightly soiled dishes.
Delicate	Lightly soiled and heat sensitive crockery.
Rinse	Prevents odors and soils from drying on dishes.

During and After The Wash

As the wash progresses, the display will count down the minutes remaining and show what stage the program is at.

When the program has finished, the display will show 0 and the dishwasher will sound a tone. After 30 seconds the display will go out. You may notice the following noises at the end of the wash. These are all part of normal operation:

- The drying fan may continue to run after a wash program has finished for a set time or until the drawer is opened. The fan assists with drying and uses negligible amounts of energy.

For best drying results, we recommend unloading the dishes once they have cooled.

Before Travel

NOTE FROM NEWMAR

Before traveling, lock the dishwasher drawer in the closed position. It is critical that the dishwasher drawer be locked into place any time the unit is in transit. If it is not, it can extend suddenly without warning, potentially damaging the dishwasher, its contents, the cabinetry, and may become dangerous to anyone standing near it.

Source(s): Fisher & Paykel DishDrawer Dishwasher Quick Start Guide 591149 D (02.19) and Fisher & Paykel DishDrawer Dishwasher User Guide DD60, DD24 Double and Single Models (11.17)

Product(s): Fisher Paykel 24" Stainless Steel Single Drawer Dishwasher (Model: DD24SAX9, Newmar Part Number: 138330)



Fireplaces

Greystone 26" Flat Electric Fireplace Operation (Model: F2655BCFW)

This article provides basic operation instructions for a Greystone 26" Flat Electric Fireplace (Model: F2655BCFW).


Operating Instructions

Ensure that all controls are in the "OFF" position before plugging the appliance in to a properly grounded electrical outlet.

Control Panel

Flame and heater can be presenting separately or at the same time. The fireplace control functions can be access in two ways:

1. Using the touch pad control panel, located on the upper right hand of the fireplace.
2. Using the multi-function remote control functions (same as control panel).

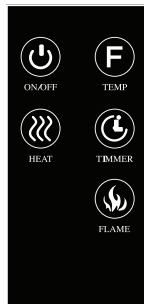

POWER BUTTON

Press the POWER button to turn on the unit. Press again to turn off the unit. As long as the unit is powered on, the log-set will be alight and all functions are access able.

FLAME BUTTON

Flame button controls the brightness of flame effect from the highest to lowest setting. There are five levels of the flame brightness.

- To change the flame color on manual button, hold down the flame button for 3 seconds. The coal bed flame will change from Yellow to Red.
- Hold down the flame button for 3 seconds again. The flame will change from Red to Blue.
- Hold down the flame button for 3 seconds again. The flame will change from Blue to Yellow and Blue.
- Hold down the flame button for a third time for 3 seconds. The flame color will come back to Yellow.

HEATER BUTTON

Press once to activate the low heat setting. Press the button a second time to activate the high heat setting. And a third time to activate the "Auto" function.

TEMP BUTTON

The highest temperature of thermostat is 82°F and the lowest is 62°F. Once the heater is activated, the display screen will display the heater setting in use.

TIMER BUTTON

Press once to activate the TIMER. Use the timer to have the unit turn off automatically after 1 hour, up to 8 hours. The display screen will display the setting shortly.

Zero Clearance Safety Technology

The electric fireplace has zero clearance safety technology. With the advanced zero clearance safety sensor, if there is something covering or closing the slide outs, after about 20 seconds, the appliance will switch off power automatically. Then pull the plug out and let the appliance cool down for three minutes. Plug the power cord in again and the fireplace will begin working again.

Maintenance

⚠ WARNING

Before attempting to perform any maintenance on this appliance, turn all controls to the "OFF" position and unplug. Allow the appliance to be "OFF" for at least 10 minutes before performing any maintenance in order to allow all components to cool properly.

REPLACING REMOTE CONTROL BATTERY

If the remote control stops functioning or operates poorly, the battery should be replaced with a new one (Mode # CR2025).

1. The battery compartment can be found on the back side of the remote control.
2. Press and slide the battery door to open and remove the old battery.
3. Insert a new CR2025 coin battery, making sure that the polarity "+" and "-" matches properly.
4. Close the battery door.

⚠ WARNING

Like any remote control unit, the remote control unit included with your fireplace may unwantedly affect or control other electric products such as TVs. If this occurs, refer to the complete fireplace owner's manual in Newgle for complete troubleshooting information.

- Clean metal surfaces with a clean damp cloth making sure not to push dust or debris into any air intake or exhaust vents.
- Do not use abrasive cleaners or spray liquids on any part of the appliance.
- Periodic cleaning/vacuuming of the fan/heater unit is strongly recommended to ensure that no dirt or foreign objects build up.

CLEANING

- To remove dust from glass window, use clean dry cloth.
- To remove fingerprints or other marks from glass window, use clean damp cloth. Do not spray glass cleaner or other liquids directly onto the window.

Source(s): F2655BCFW Greystone Operating and Troubleshooting Guide

Product(s): Greystone 26" Flat Electric Fireplace (Model: F2655BCFW, Newmar Part Number: 154052)




Microwaves and Convection Ovens

Whirlpool Convection Smart Microwave Operation (Models: WMH78019HZ and WMH78019HB)

This article provides basic operation instructions for a Whirlpool Convection Smart Microwave (Models: WMH78019HZ and WMH78019HB).

Control Panel

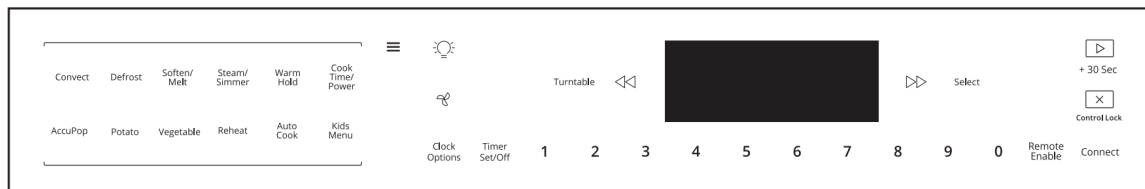

CLOCK/OPTIONS

SET THE CLOCK

1. To set the clock, for example, to 2:25 PM, touch the Menu keypad.
2. Touch CLOCK/OPTIONS.
3. Use the number keypads to enter "2:25."
4. Touch SELECT.
5. Touch "2" to display PM.

REACH OPTIONS MENU

1. Touch CLOCK/OPTIONS.
2. Use the arrow keypads to scroll through options.
3. Touch SELECT to select desired option and follow the prompts.



LIGHT: TURN ON LIGHT

1. Press the Light keypad to turn the light beneath the hood on or off.



FAN: TURN ON FAN

1. Press the Fan keypad to turn the Fan on or off. Press the fan keypad repeatedly to change from low to high.



TIMER (SET/OFF): KITCHEN TIMER

1. Touch TIMER SET/OFF.
2. Touch the number keypads to set the length of time. For example, to set 12 minutes length time, touch TIME SET/OFF.
3. Use the number keypads to enter "12:00."
4. Touch START.
5. If the Cancel keypad is touched, the microwave oven will turn off; however, the Timer can only be turned off using the Timer Set/Off keypad.



START/ADD 30 SEC

Touching the Start/Add 30 Sec keypad when the microwave oven is off will start 30 seconds of cook time at 100% power. If cooking is interrupted by opening the door, touching Start/Add 30 Sec after the door is closed again will resume the preset cycle.

NOTE FROM NEWMAR

The **START** button displays like a **PLAY** button. It functions as both the **START** and the **(+30 Sec) ADD 30 SECONDS** function.



CANCEL

CANCEL COOKING FUNCTION

Touch the Cancel keypad to cancel cooking function. The Cancel keypad stops any microwave oven function except for the Clock, Timer, and Control Lock.

The microwave oven will also turn off when the door is opened. When the door is opened, the element(s) and fan will turn off, but the microwave oven light will remain on. Close the door and touch the Start keypad to resume the preset cycle.

The microwave oven cooling fan may continue to operate even after a microwave oven function has been canceled or completed, depending on the microwave oven temperature.

ACTIVATE CONTROL LOCK

Activate to avoid unintended start. Touch and hold the Cancel keypad for about 3 seconds until two tones sound and the Padlock icon appears in the display. Repeat to unlock control.



LEFT AND RIGHT ARROWS: NAVIGATE MENU

Press the Left or Right Arrow keypad to move through the menu.



SELECT: OPTIONS

Touch SELECT to select options.



TURNTABLE: ON/OFF

By touching the Turntable On/Off keypad, it is possible to switch the turntable on and off during some microwave cycles. The turntable can be turned on or off only during Manual cooking cycles.



REMOTE ENABLE: ENABLE REMOTE APP CONTROL

Remote Enable allows you to start Convection Bake cooking cycle using your mobile phone when you are away from home. Press REMOTE ENABLE to enable the ability to utilize the Whirlpool® app.



CONNECT: WI-FI

Press and hold CONNECT while your router's WPS indicator light is blinking to connect your range to your Wi-Fi network.

Cooking Options and Additional Features

MENU: TURN ON BACKLIT BUTTONS

1. Press the Menu keypad to light up the back-lit buttons.
- Convection: Auto Convection Cooking, Manual Convection Bake, Manual Convection Roast
 - Defrost: Automatic Defrost
 - Soften/Melt: Soften, Melt
 - Steam/Simmer: Auto Steam Cook, Manual Steam Cook, Auto Simmer Cook, Manual Simmer Cook
 - Warm Hold: Keep Food Warm
 - Cook Time/Power: Manual Cooking
 - AccuPop: Popcorn (Sensor)
 - Potato: Potato (Sensor)
 - Vegetable: Vegetable
 - Reheat: Automatic Reheat
 - Auto Cook: Auto Cook
 - Kids Menu: Kids Menu

Convection	Defrost	Soften/ Melt	Steam/ Simmer	Warm Hold	Cook Time/ Power	
AccuPop	Potato	Vegetable	Reheat	Auto Cook	Kids Menu	

For more information about the cooking options and additional features, refer to the "Whirlpool Convection Smart Microwave (WMH78019HZ) User Instruction Manual."


Source(s): Whirlpool Convection Smart Microwave (WMH78019HZ) User Instructions

Product(s): Whirlpool 30" 1.9 Cu Ft 1100w Convection Smart Microwave (Model: WMH78019HZ, Newmar Part Number: 140692) and Whirlpool 30" 19 Cu Ft 1100w Black Convection Microwave (Model: WMH78019HB, Newmar Part Number: 143251)

Whirlpool Convection Microwave with Air Fry Mode Operation (Model: YWMH78519LZ)

This article provides basic operation instructions for a Whirlpool Convection Microwave with Air Fry Mode (Model: YWMH78519LZ).

Operating Your Microwave Oven

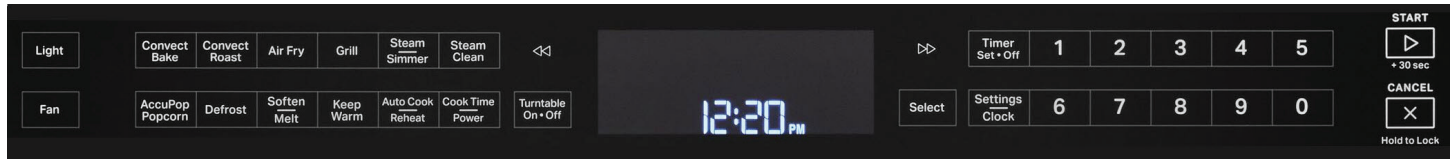

SETTINGS

CLOCK

The Clock is a 12-hour (12:00-11:59) or 24-hour (0:00-23:59) clock. Touch Settings/Clock to reach Clock submenu, and follow the prompts to set the Clock. Clock format (12 hours with AM and PM, 12 hours without AM and PM, or 24 hours) may also be set in the Clock submenu.

TIMER

With the microwave oven in Standby mode, touch the Timer keypad, enter time, and then touch the Timer keypad or the Start keypad. Cook functions may be entered while the Timer is counting down. To cancel timer, touch Timer keypad while the Timer countdown is active in the display.

CONTROL LOCK

Activate to avoid unintended start. Touch and hold the Cancel keypad for about 3 seconds until 2 tones sound and Padlock icon appears in the display. Repeat to unlock control.

SETTINGS/CLOCK

Settings/Clock may be adjusted: Set Clock; Scrolling Speed; Sound; Filter Reset; Fan Timer; Light Timer; Calibrate Temp; Demo Mode; Factory Reset.

SCROLL SPEED

Scroll speed of the text may be adjusted. Touch Settings/Clock to reach the Scroll Speed submenu and follow the prompts to set speed.

SOUND (TONES)

Programming tones and signals. Programming tones may be turned off or all tones (including end-of-function signals) may be turned off. Touch Settings/Clock to reach the Sound submenu, then follow the prompts to turn off or on the programming tones or all tones.

FILTER RESET

If the charcoal filter is used for more than 6 months, from the last time the filter is reset, the 6 month duration will count continuously. If the Filter Alert condition is met, "Change the Charcoal Filter; Reset Alert through Setup or Settings" will shown on the display. Reset the filter status after replacing the charcoal filter. Touch Settings/Clock repeatedly to reach Filter Reset submenu. Touch Select or Start to reset. After reset, another 6 months duration will be resumed.

VENT FAN

Various speeds, ranging from high to low, and off. Comes on automatically as cooling fan during any cook function.

Fan Timer: Set vent fan to run for exactly 30 minutes or to run for only 30 minutes more (off after 30 minutes). The vent fan may be turned off at any time using the Vent Fan keypad. Touch Settings/Clock to reach the Fan Timer submenu and select the setting.

LIGHT TIMER

Set the cooktop light to turn on and off at certain times. Touch Settings/Clock to reach the Light Timer submenu and follow the prompts to set the light On time and light Off time in hours and minutes or to cancel Light Timer.

NOTE: Light Timer uses 12-hour clock only.

CALIBRATION

The actual convection cooking temperature may be calibrated higher or lower than the displayed temperature. For example, if you want the microwave oven to be a bit hotter, you may try setting the calibration to +10°. Touch Settings/Clock to reach the Calibration submenu. Use number keypads to select temperature variations in degrees Fahrenheit: 1 = ±0° (reset to default), 2 = +5° (+2.8°C), 3 = +10° (+5.6°C), 4 = +15° (+8.3°C), 5 = +20° (+11.1°C), 6 = -5° (-2.8°C), 7 = -10° (-5.6°C), 8 = -15° (-8.3°C) and 9 = -20° (-11.1°C).

DEMO MODE

Activate to practice using the keypad without actually turning on the magnetron. Touch Settings/Clock to reach the Demo mode submenu, then follow the prompts to activate. The Demo icon will light up in the display. Repeat to deactivate.

STANDBY MODE

When no functions are working (12-hour clock is displayed or if the clock has not been set), oven will switch to Standby Power mode and dim the LCD brightness after 5 minutes. Press any keypad or open/close the door, and display will return to the normal brightness.

FEATURES

CONVECTION ELEMENT AND FAN

The convection element and fan are embedded in the wall of the microwave oven cavity, behind the metal screen.

GRILL ELEMENT

Depending on your model, the grill element has either one 1,000 W halogen bulb and one 500 W quartz bulb or two 600 W quartz bulbs. The halogen bulb glows very brightly, but the quartz bulb has a very faint glow that might not be visible.

TURNTABLE ON/OFF


Turntable may be turned off for manual cooking only. This is helpful when cooking with plates that are bigger than the turntable or when cooking with plates that are side by side. Turntable cannot be turned off during preset or sensor (on some models) functions.

ACCESSORIES

AIR FRY BASKET

Use the provided air fry basket for air frying and grilling. The air fry basket can be folded when cleaning in the dishwasher or storing.

NOTE: When cooking juicy meats, a microwave-safe, ovenproof dish or pan can be placed on the turntable and under the Air fry basket to catch the drippings.

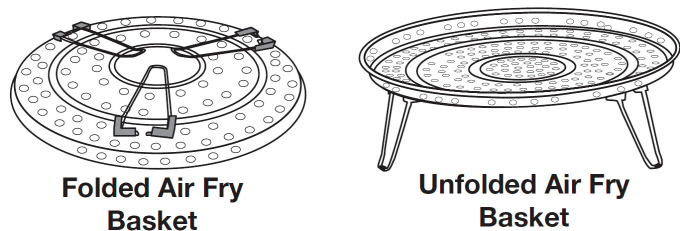


CONVECTION RACK

Use the short convection rack for convection cycles (baking or roasting). Place cookware directly on rack for bake and for some roast functions. Some roast functions require that the food be placed directly on the rack. Use a microwave-safe, ovenproof dish or pan under the rack to catch the drippings.

ACCESSORY CONFIGURATIONS

A	Turntable
B	Air Fry Basket
C	Microwave-Safe, Ovenproof Dish (Not Provided)
D	Convection Rack

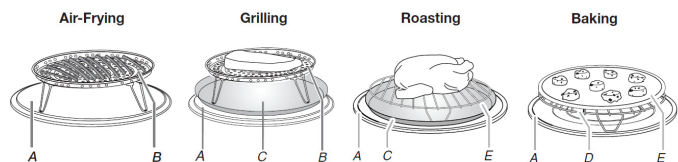

Microwave Oven Use

TO COOK WITH ONLY MICROWAVE POWER

Touch Cook Time/Power, touch number keypads to enter time, touch Cook Time/Power (if not 100%), touch number keypads to enter power level (10-90), then touch the Start keypad.

If programming additional stages (up to three), touch Settings/Clock to enter programming for the next stage, then enter the cook time and cook power of each, then touch the Start keypad.

SENSOR COOKING

A sensor in the microwave oven detects moisture released from food as it heats and adjusts the cooking time accordingly.

Make sure microwave oven has been plugged in for at least 1 minute. Use microwave-safe dish with loose-fitting lid or cover microwave-safe dish with plastic wrap, and vent. For optimal performance, wait at least 30 minutes after convection cooking or grilling (on some models) before sensor cooking.

TO COOK WITH CONVECTION

Use the provided convection rack and a microwave-safe, oven-proof baking dish.

Microwave oven cavity, inside of the door, convection rack, and baking dish will be hot. Use oven mitts to remove the dish and to handle the hot convection rack.

Touch Convection Bake and Select Manual Convection Bake.

Use number keypads to enter a temperature, 250°F (121°C) to 450°F (232°C). Touch Time/Power, and enter time in hours and minutes, up to 4 hours.

Touch Convection Roast and Select Manual Convection Roast.

Use number keypads to enter a temperature, 250°F (121°C) to 450°F (232°C). Touch Time/Power, and enter time in hours and minutes, up to 4 hours. To add microwave power if desired, touch Time/Power, and enter power level, from 10% to 30%.

Touch START to begin preheat. Preheat may be skipped by touching START again. After preheat, place baking dish with food on the convection rack, then touch START to begin cooking.

ADD MORE TIME

At the end of any cycle using less than 100% cook power, “PRESS 0 TO ADD MORE TIME” scrolls in the display. Enter the additional time, if desired, and start the microwave oven. The cook power for all non-sensor cycles will be the same as in the finished cycle but may be changed. If Add More Time is used after a sensor cycle, the cook power will be 100% but may be changed.

DONENESS

Adjust doneness for automatic cooking functions by touching Cook Time/Power repeatedly to scroll through “NORMAL,” “MORE DONE,” or “LESS DONE” within the first 20 seconds of starting the cook cycle. Doneness cannot be adjusted for Defrost functions.

KEEP WARM

WARNING

Food Poisoning Hazard - Do not let food sit in oven more than one hour before or after cooking. Doing so can result in food poisoning or sickness.

Hot cooked food can be kept warm in the microwave oven. The Keep Warm function uses 10% cook power. Keep Warm can be used by itself or can be programmed to follow a cooking cycle. Opening the door during Keep Warm will cancel the function.

Microwave Oven Care

GENERAL CLEANING

IMPORTANT

Before cleaning, make sure all keypads are Off and the microwave oven is cool. Always follow label instructions on cleaning products.

To avoid damage to the microwave oven caused by arcing due to soil buildup, keep cavity, microwave inlet cover, cooking rack supports, and area where the door touches the frame clean.

Clean with mild soap, water, and a soft cloth or sponge or as indicated below.

- Grease filter: Mild soap and water or dishwasher.
- Door and exterior: Mild soap and water, or glass cleaner applied to paper towel.
- Control panel: Sponge or soft cloth and water.
- Stainless steel (on some models): Mild soap and water, then rinse with clean water and dry with soft cloth, or use stainless steel cleaner.
- Turntable: Mild soap and water or dishwasher.
- Rack(s): Mild soap, water, and washcloth. Dishwasher cleaning is not recommended.
- Air fry basket: Mild soap, water and washcloth. It is easy to clean in the dishwasher after folding the legs.
- Steamer vessel: Mild soap, water, and soft brush or dishwasher.

INSTALLING/REPLACING FILTERS AND LIGHT BULBS

NOTICE

A filter status indicator appears in the display when it is time to replace the charcoal filter. See the “Settings” section to reset filter status.

- Grease filters: Grease filters are on the underside of the microwave oven. Clean at least monthly. Slide the filter away from the tab area and drop out the filter. To Install, place end of the filter into the tab area, slide the other end into the opposite tab area.
- Charcoal filters: The Charcoal filters are behind the vent grille at the top front of the microwave oven. The charcoal filters cannot be cleaned and should be replaced every 6 months as prompted on the display. Remove 3 screws on the vent grille, tilt the grille forward, lift it out, and remove filters. To reinstall, place the filters into their slotted area wire mesh side up, replace vent grille, and secure with screws. After replace the charcoal filters. See the “Settings” section to reset filter status.
- Cooktop light: The cooktop light is located on the underside of the microwave oven and is replaceable. Remove bulb cover screw and open the bulb cover. Replace bulb, close bulb cover, and secure with screw.
- Cavity light: The cavity light bulb is located behind the vent grille at the top front of the microwave oven, under the bulb cover, and is replaceable. Remove three screws on the vent grille, tilt the grille forward, and lift it out. Open bulb cover and replace bulb. Close bulb cover, replace vent grille, and secure with screws.

Source(s): Whirlpool Microwave Hood Combination User Guide (REV W11603630B)

Product(s): Whirlpool WMH78519LZ 1.9 Cu. Ft. Microwave with Air Fry Mode (Model: WMH78519LZ, Newmar Part Number: 166325)



Refrigerators, Freezers and Ice Makers

Absorption-Style Refrigerators

This article provides basic operating instructions for an absorption-style refrigerator.

Absorption-style refrigerators are installed on select coaches. The control panel operates via 12 volts supplied by the battery/batteries. The refrigerator operates on 120 volt AC power or LP gas and heats a solution in a closed loop system. As the solution changes state and passes through the absorption stage, it cools the inside of the refrigerator and freezer box by extracting the heat and carrying it away in the solution. It does not use freon and a compressor, so this style of refrigerator takes longer to cool down.

Select models allow you to select the incoming power source of your coach, whether AC current or propane gas. All models are equipped with latches to secure the doors for a tight seal to prevent movement during transit.

Before Operation

1. Verify that the main propane gas valve is in the ON position.
2. The refrigerator is equipped with a energy control system. It can be set to either 120 Volt or propane gas operation, or set automatically select 120 volts when present and automatically change to gas when AC power is not present, if desired.
3. Verify 12 volt supply for control board operation.
4. It is recommended to pre-chill food and beverages before putting them in the refrigerator and freezer. When placing items on the racks and in the bins, leave enough space for air to flow throughout the entire refrigerator cabinet.
5. For models with a built-in ice maker, a pressurized water supply is required. In order for the ice maker to operate, you must have water in the fresh tank and have the water pump turned on, or your coach must be connected to city water supply.

How To Operate The Refrigerator In 120 Volt Mode

1. A 12 volt power supply must be available for the electronic control panel to function. The shore line must be plugged in, or the generator running, to operate in 120 volt mode.
2. To use the 2-Way Auto Mode, push the AUTO/GAS mode selector into the ON position. If 120 volt is available, the AC mode indicator light will be illuminated.

How To Operate The Refrigerator In Propane Gas Mode

1. The main propane gas valve must be open for operation in the propane mode.
2. To start the refrigerator, press the main power ON/OFF button to switch it to the ON position.
3. If 120 volt is not available, the gas mode indicator light will be illuminated. The control system will automatically switch to gas operation.
4. To operate on gas only, push the AUTO/GAS mode selector until the gas indicator light has lit. After 45 seconds the burner should be ignited and operating normally. The initial startup may take longer than 45 seconds in order to allow the air to be purged from the gas line.

For more information about the operation of the refrigerator installed in your coach see the following information that matching the manufacture and model series of your particular refrigerator.

⚠ WARNING

Most propane gas appliances used in recreational vehicles are vented to the outside of the vehicle. When parked close to a gasoline pump, it is possible that the gasoline fumes could enter this type of appliance and ignite the burner flame causing a fire or explosion. Use caution when refueling.

⚠ WARNING

Do not bring or store propane cylinders, gasoline, or other flammable liquids inside of the vehicle. Failure to comply could result in fire or explosion.

⚠ DANGER

All pilot lights, appliances, and their igniters (see operating instructions) shall be turned off before refueling of motor fuel tanks and/or propane containers. Can cause ignition of flammable vapors, which can lead to a fire or explosion and result in death or serious injury.

⚠ DANGER

Éteindre les veilleuses, les appareils et leur dispositif d'allumage (voir les instructions d'utilisation) avant le remplissage des réservoirs de carburant et (ou) des bouteilles de propane. L'avitaillement de carburant peut causer l'inflammation spontanée de vapeurs inflammables, ce qui peut causer un incendie ou une explosion et entraîner des blessures graves ou la mort.

AD-05F

Norcold Four Door Refrigerator with Built-In Ice Maker Operation (Model: 1200 and 1210 Series)

Provides basic operation instructions for a Norcold Four Door Refrigerator with Built-In Ice Maker (Model: 1200 and 1210 Series).

AC Operation

- 120 volts AC: 108 volts min.-132 volts max.
- 12 volts DC - control voltage: 10.5 volts min. - 15.4 volts max.

The refrigerator operates on these energy sources. Operation out of these limits can damage the refrigerator electrical components and will void the warranty.

ON/OFF BUTTON

The ON / OFF button [30] starts and shuts down the refrigerator:

1. To turn on the refrigerator, push and release the ON / OFF button.
2. To turn off the refrigerator, push the ON / OFF button for one second and then release.

SET TEMP BUTTON

The SET TEMP button [32] controls the temperature adjustment of the freezer and the fresh food compartment.


1. Push the SET TEMP button and the temperature setting (the numbers "1-9") show in the center display [33]. The number "9" is the coldest temperature setting.
2. Push and hold the SET TEMP button and the temperature setting changes.
3. Release the SET TEMP button when the temperature setting that you wish appears.
4. After ten seconds, the temperature setting will go out and only a green power ON light remains.

NOTE: Push and release the MODE button to show "AC", the current mode of operation, in the center display for 10 seconds.

5. If 120 volts AC is not available to the refrigerator:
 - The fault codes "no" "AC" shows in the center display and an audible alarm sounds.
6. If 120 volts AC is available to the refrigerator, but is not operating correctly:
 - A fault code shows in the center display, and an audible alarm starts.

Control Panel

The refrigerator control panel is between the freezer compartment and the fresh food compartment. To maintain the operating control functions of the refrigerator, a 12 volt DC power supply is necessary. The refrigerator receives DC power from the 12 volt system of the vehicle; either an auxiliary battery, a converter, or the vehicle engine battery.

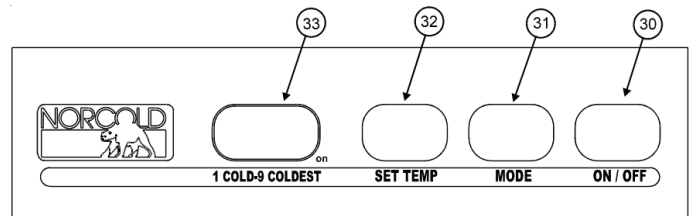

Optional Ice Maker

The ice maker is fully automatic and will operate in ambient temperatures as low as 0° F. To allow operation at temperatures between 0° F and 32° F., the ice maker has a heater on the solenoid water valve and on the water line between the solenoid valve and the ice maker.

When the freezer temperature of the refrigerator is low enough, the ice maker opens the water solenoid valve and fills the mold. The ice maker ejects the frozen ice into a storage bin. As the storage bin fills, the ice raises the shut-off arm until it turns off the ice maker. As you use the ice and lower the ice level in the storage bin, the shut-off arm also lowers. This turns the ice maker ON and begins the process of making ice.

The ice maker operates on:

- Cold potable water at a pressure of 15 psi - 125 psi
- 120 Volts AC: 108 VAC min. - 132 VAC max.

ICE MAKER OPERATION:

1. Make sure the ice maker AC power cord is plugged into a receptacle.
2. Open the water shut off valve of the vehicle.

NOTE: Make sure that the ice maker arm can move freely and does not touch the frozen foods in the freezer.

3. Push the ice maker arm down to the ON position.

CAUTION: If you operate the refrigerator without the proper water supply, make sure the ice maker arm is up in the OFF position.

4. Allow the freezer to cool enough and ice production will begin to fill the storage bin.

NOTE: New plumbing connections and/or impurities in the water supply line after winterizing can cause the first ice to be discolored or have an odd flavor.

1. To stop the ice maker, push the ice maker arm up to the OFF position.


Source(s): Norcold Owner's Manual for 1200ACXX Models

Product(s): Norcold 12 Cu Ft 4 Door Refrigerator w/Ice Maker and Water Dispenser (Model: 1200IM, Newmar Part Number: 96051)

Norcold Refrigerator Operation (Model: N10 Series)

This article provides basic operation instructions for a Norcold Refrigerator (Model: N10 Series).

Operating The Controls

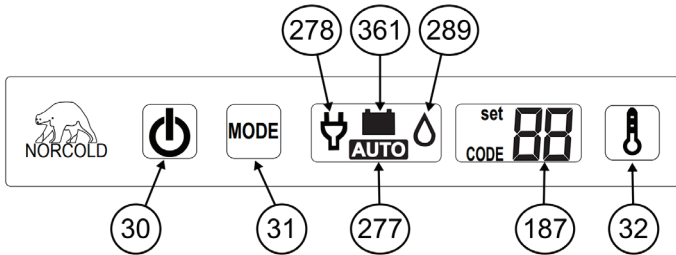

IGNITION AND START UP

- Make sure the air flow in the lower intake vent, through the refrigerator coils and condenser, and out the upper exhaust vent is not blocked or decreased.
- Make sure there are no combustible materials in or around the refrigerator.
- Make sure the DC voltage to the refrigerator is 12.0VDC

AIR IN THE PROPANE GAS SUPPLY LINES

Notice: For safety reasons, the refrigerators electronic controls are designed such that while operating in the LP GAS mode, the trial for ignition (maximum amount of the time the gas valve and igniter can be left on without a flame present) is limited to 30 seconds. When starting the refrigerator for the first time, after storage, or after replacing the propane gas tank, the propane gas supply lines can have air in them.

Due to air in the gas supply lines, the burner may not ignite within the 30 second time limit. In the event this should happen the gas valve and igniter outputs will be turned off, the LP Gas mode will be "locked out", and the appropriate fault code will be shown in the display.

The gas lock out condition can be reset by powering the refrigerator OFF and then back ON, at which time, a new 30 second trial for ignition will commence. It may be necessary to repeat this procedure several times before expelling all the air from the LP gas supply line. If after repeated attempts, a flame is not established, stop and consult your local dealer or Authorized Norcold Service Center.

AUTOMATIC MODE OPERATION:

- Touch and release the ON/OFF button [30] to turn the refrigerator on.
- Touch the TEMP SET button [32] as needed to set the temperature setting.
 - Number one (1) shown in the display [187] is the warmest setting.
 - Number nine (9) shown in the display [187] is the coldest setting.
- If the AUTO icon [277] and AC PLUG icon [278] are lit up, it means that:
 - 120 volt AC power is available to the refrigerator.
 - The refrigerator is operating on AC electric power.
 - After ten seconds, the backlight of the display goes off.
- If the AUTO icon and the FLAME icon [289] are lit up, it means that:
 - 120 volt AC power is not available to the refrigerator.
 - The refrigerator is operating on propane gas.
 - After ten seconds, the backlight of the display goes off.

IF NEITHER 120 VOLTS AC NOR PROPANE GAS ARE AVAILABLE TO THE REFRIGERATOR :

- 2-way refrigerators:
 - The fault codes "no AC" and then "no FL" show in the display and an audible alarm sounds.
 - Refer to the "Fault Codes" section of the refrigerator's manual for any faults displayed.
- 3-way refrigerators only:
 - The Auto icon and the Battery icon [361] are lit up.
 - After ten seconds, the backlight of the display goes off.
 - This means that the refrigerator is operating on DC electric.

IF AN ENERGY SOURCE IS AVAILABLE TO THE REFRIGERATOR BUT IS NOT OPERATING CORRECTLY:

- While operating in the Automatic mode, the refrigerators electronic controls will automatically select the energy source using the following priority scheme:
 - 1st choice: AC Electric
 - 2nd choice: LP GAS
 - When in the Auto mode, if a higher priority choice becomes available (i.e., AC voltage reappplied), the control shall stop using the current mode and switch to the higher priority mode.

MANUAL AC MODE OPERATION

- Touch and release the ON/OFF button [30] to start the refrigerator.
- Touch the MODE button [31] until the AUTO icon goes off and only the AC PLUG icon [278] remains lit.
- Touch the TEMP SET button [32] as needed, to set the temperature setting.
- The AC PLUG icon [278] remains lit until you select a different operating mode or shut down the refrigerator.

MANUAL LP GAS OPERATION

- Touch and release the ON/OFF button [30] to start the refrigerator.
- Touch the MODE button [31] until the AUTO icon goes off and only the FLAME icon [289] remains lit.
- Touch the TEMP SET button [32] as needed, to set the temperature setting.
- The FLAME icon [278] remains lit until you select a different operating mode or shut down the refrigerator.

SHUT DOWN - ALL MODELS:

- To shut down the refrigerator, touch and hold the ON/OFF button [30] for two seconds and release.

Source(s): Norcold Owner's Manual for Polar 10 Series (N10LX and NA10LX models) Refrigerators

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

Residential-Style Refrigerators

This article provides a general overview of how a residential-style refrigerator operates.

Residential-style refrigerators are the most popular option installed in Newmar coaches. The refrigerator operates on 120 volt AC power and uses freon and a compressor to keep your food cold and fresh. The power may be supplied by the electrical hookup at the campsite, generator power or (in most coaches) an inverter with a charged house battery bank.

For models with a built-in ice maker, a pressurized water supply is required. In order for the ice maker to operate, you must have water in the fresh tank and have the water pump turned on, or your coach must be connected to city water supply.

When placing items on the racks and in the bins, leave enough space for air to flow throughout the entire refrigerator cabinet.

All models are equipped with a means to latch and secure the doors for a tight seal and to prevent the doors from opening during transit. Become familiar with the latch operation and always lock prior to traveling.

Whirlpool Residential Refrigerator with Top Freezer Operation (Model: WRT112CZJZ)


This article provides basic operation instructions for a Whirlpool Residential Refrigerator with Top Freezer (Model: WRT112CZJZ).

Operating The Refrigerator

TEMPERATURE CONTROL

For your convenience, the temperature control is preset at the factory. When you first install your refrigerator, make sure the control is still preset as shown.

- Note: Neither compartment will cool when the control is set to OFF.

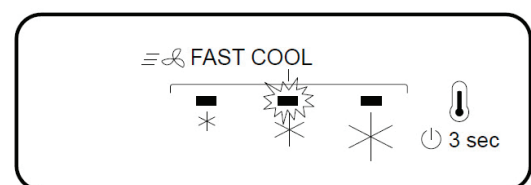

Recommended Setting

ADJUSTING THE TEMPERATURE CONTROL

If you need to adjust the temperature on either the refrigerator or freezer compartment, use the settings listed in the chart below as a guide.


Note: Except when starting the refrigerator, do not adjust the control more than one setting at a time. Wait 24 hours between adjustments for the temperature to stabilize.

- Press the Temp button to toggle among the third LED lights which indicate the temperature setting. Reading from left to right, the LED in the first position is the least cold. The LEDs indicate increasingly colder settings as you continue to the right until all third LEDs are illuminated.

Condition/Reason	Adjustment
Refrigerator too warm	Temperature Control one setting higher
Freezer too warm/too little ice	Temperature Control one setting higher
Refrigerator too cold	Temperature Control one setting lower
Freezer too cold	Temperature Control one setting lower

AIRFLOW CONTROL

The Airflow control is located on the back wall of the freezer. It regulates the amount of air flowing between the freezer and the refrigerator compartments. When you plug in the refrigerator for the first time, turn the Airflow control to the Recommended setting.

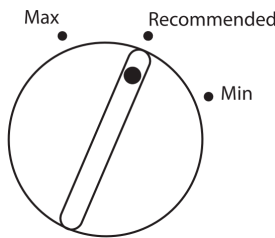

ADJUST THE AIRFLOW CONTROL

If you want to temporarily increase the cold airflow to a specific compartment, adjust the control.


NOTE FROM NEWMAR

Once the performance is achieved, return the Airflow control to the Recommended setting to keep the refrigerator operating at optimum efficiency.

Condition/Reason	Adjustment
Heavy ice use	Max
Hot room temperature	Max - To maintain ice making production rate
Large quantity of groceries	Min - To quickly chill food and beverages

CRISPER HUMIDITY CONTROL (ON SOME MODELS)

You control the amount of humidity in the moisture-sealed crisper. Depending on the produce you are storing, select the desired Humidity Level.

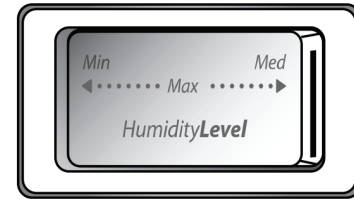

HUMIDITY LEVEL - MIN SETTING

MIN (open) lets moist air out of the crisper for best storage of fruits and vegetables with skins.

- Fruit:** Wash, let dry and store in refrigerator in plastic bag or crisper. Do not wash or cut berries until they are ready to use. Sort and keep berries in original container in crisper, or store in a loosely closed paper bag on a refrigerator shelf.
- Vegetables with skins:** Place in plastic bag or plastic container and store in crisper.

HUMIDITY LEVEL - MAX SETTING

MAX (closed) keeps moist air in the crisper for best storage of fresh, leafy vegetables.

- Leafy vegetables:** Wash in cold water, drain and trim or tear off bruised and discolored areas. Place in plastic bag or plastic container and store in crisper.

Travel Lock Operation

NOTE FROM NEWMAR

The refrigerator is equipped with a travel lock to prevent the doors and drawer from opening during transit.

- To lock the refrigerator, push the lock from right to left.**
- To unlock the refrigerator, push the lock from left to right.**



Source(s): Whirlpool User Guide Top Mount Refrigerator (W11331641B)

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.



Vacuums

RoadVac by InterVac Central Vacuum Operation (Model: CS-RM)

This article provides basic operation instructions for a RoadVac by InterVac Central Vacuum system (Model: CS-RM).

Operating The Vacuum

To operate the vacuum, make sure 120 volt power is being supplied to the vacuum outlet. The vacuum must be plugged in, and the power switch must be in the OFF position when using the remote control on the pistol grip. The vacuum will only turn ON when the Remote Control Pistol Grip button has been pressed or when the switch on the vacuum has been turned ON.

Pressing the Pistol Grip button for less than a second will turn the vacuum ON or OFF. Do not hold down the button, as it will greatly reduce battery life. When the Pistol Grip Transmitter button is held down continuously, it will continue to transmit for 9 seconds, and then turn OFF.

If the performance (range) in which the Pistol Grip functions away from the receiver has reduced, replace the battery to correct the issues.

Note: Replacing the battery may require the Pistol Grip Remote to be reprogrammed. (For more information about the Pistol Grip, refer to the file in Newgle named "Intervac Pistol Grip Remote Control Description, Installation and Programming".)



Replacing The Vacuum Double-Collar Bag

Replacement bag: Part #Y11 high filtration 5-layer fiber bag

1. Remove the front panel on the vacuum cleaner by sliding the latch/lock and removing the front panel with dust bag attached.
2. Remove full bag and discard.
3. Notice: The #Y11 double-sided bag has two openings. The collar which attaches to the back of the vacuum chamber is clearly marked "Push this collar over pipe in the back of the vacuum chamber first."
4. Hold the dust bag by the edges of the cardboard in your hand. Push onto the pipe in the back of the chamber holding at about a 45 degree angle, and then push down the lower part of the collar against the back wall until flush.
5. Push the front cardboard collar of the dust bag all the way over the pipe on the front panel.
6. Slide the front panel into the small slots on the side of the vacuum's frame. Ensure dust bag is completely inside compartment, then push it into the frame until the lock/latch clicks into place.

Changing The Motor Filter

Replacement: Part #Y22

1. Remove the front panel with dust bag.
2. Inside the vacuum chamber, you will see the filter with the arrow pointing towards the back wall. Replace the filter with a new or cleaned filter, with the arrow pointing towards the back wall.
3. If the filter is dirty, you can wash it by hand in a mild soap solution. Do NOT clean in washing machine. Let filter dry completely before reusing.

Source(s): InterVac CS Series Installation and Operating Manual

Product(s): InterVac Central Vac System (Model: CS-RM, Newmar Part Number: 142013)



Washer and Dryer Overview

Overview

Depending on your model, year, and available options, your coach may be equipped with a stackable washer and dryer, or an all-in-one laundry center located in a cabinet. They are built for life on the road, so they are compact to save space, weight, and resources, without sacrificing performance.

Some coach floorplans may also provide the option for washer and dryer hookups, in lieu of the appliances. If a washer and dryer unit is not installed in your coach, it may be prepped at the factory so that a unit can be added later. Coaches not ordered and/or installed by the factory will not be covered by Newmar's warranty.



Operation

The plumbing and other preparations for the installation of a compact washer and dryer are optional features on your coach. The washers and dryers function like those in a home. Most operate on 120 volt electricity; however, some dryers may require 240 volt electricity. Newmar does not recommend using your washer and dryer during transit. For information about your installed washer and dryer, refer to Newgle's product pages, which are specific to the appliance manufacturer and model.

WASHER WASTE WATER DRAINAGE

Before operating the washing machine:

1. Remove the outside drain cap in the exterior water compartment. The drain cover is used to prevent leakage of waste material when not in use.
2. Attach the sewer or macerator hose to the drain outlet. The drain line or macerator hose should be used to direct waste to the dump station for proper disposal. For more information about draining the waste water holding tanks, refer to the Waste Water Disposal article in Newgle.
3. Open the gray tank valve all the way by pulling on the appropriately-labeled T-handle or operating the electric gate valve (if equipped). The tank will start to drain to the drain outlet or macerator hose (if equipped and connected) as soon as the T-handle is pulled or the electric gate valve is operated. Opening the gray tank valve will allow the washing machine water to drain instead of overfilling the waste water tank.

NOTICE

Remove outside drain cap before operating washing machine.

NI-12

DRAIN OUTLET


AD-18

P-Traps

Each of the sink drains, the shower drain, and the washing machine drain (if equipped) has a water trap to prevent holding tank odors from entering the coach. These traps must have water in them in order to trap the odors. While stored, the water may evaporate, allowing an odor to enter the coach. If this occurs, run water from the faucet into the drain, allowing water to fill the trap. Run water into the washing machine. Set the cycle to spin to drain the water to fill the p-trap.

⚠ IMPORTANT


If the outside drain cap is not removed and the gray tank valve is not in the "open" position, the gray tank may overflow.

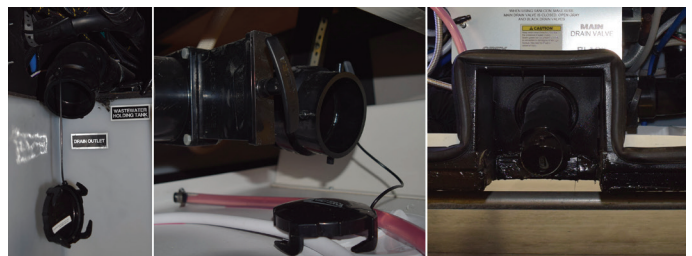

Splendide Front-Loading Washer Operation (Model: WFL1300XD)


This article provides basic operation instructions for a Splendide Front-Loading Washer (Model: WFL1300XD).

Control Panel

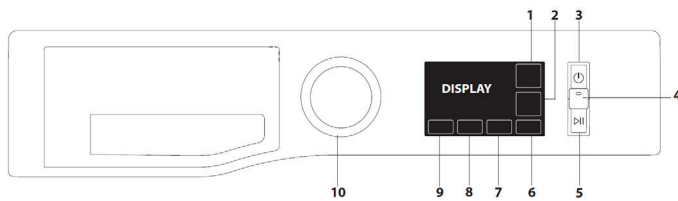

1. SUPER WASH / MUTE button
2. POST CYCLE CARE / KEY LOCK button
3. ON/OFF button
4. PREWASH button and indicator light
5. START/PAUSE button
6. EXTRA RINSE button
7. DELAY START button
8. SPIN button
9. TEMPERATURE button
10. WASH CYCLE SELECTOR KNOB

Detergent Dispenser Drawer

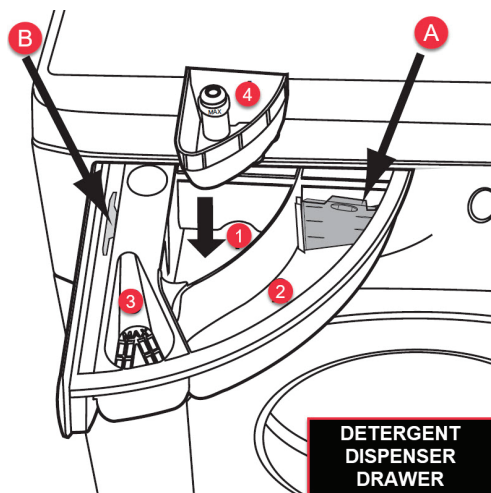

Compartment 1: Pre-wash detergent (powder)

Compartment 2: Detergent for the wash cycle (powder or liquid)

- If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage.
- If powder detergent is used, place the partition into slot B.

Compartment 3: Additives (fabric softeners, etc.)

- The fabric softener should not overflow the grid.

Extra Compartment 4: Bleach


Note: Splendide recommends using 1 to 2 tbsp. of a bio-friendly fabric softener, or similar brand per wash load. These softeners tend to appear light in color and dissolve more quickly in less water, minimizing build-up within your machine.

Note: Use powder detergent for white cotton garments, for pre-washing, and for washing with hot temperatures.

Note: Follow the instructions given on the detergent packaging.

Display

The display is useful when programming the washing machine and provides plenty of information.

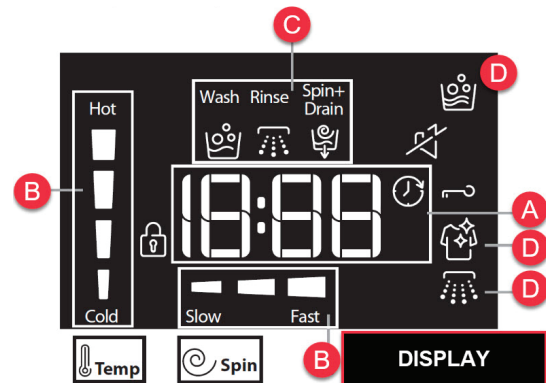

SECTION A

The duration of the available wash cycles and the remaining time of a running cycle appear in section A (Factors such as load size, modifiers, options selected, and water pressure may affect the time shown in the display. Tightly packed loads, unbalanced loads, or excessive suds may cause the washer to lengthen the cycle time as well); if the DELAYED START option has been set, the countdown to the start of the selected wash cycle will appear.

SECTION B

In section B, pressing the corresponding button allows you to view the maximum spin speed and temperature values attained by the machine during the set wash cycle, or the values selected most recently, if these are compatible with the set wash cycle.

SECTION C

The “wash cycle phases” corresponding to the selected wash cycle and the “wash cycle phase” of the running wash cycle appear in section C: Wash, Rinse, Spin + Drain.

SECTION D

References D indicate the wash options available. For a list of these options, refer to Splendide's Instruction Manual.

DELAY START

The "Delay Start" symbol [clock icon], when lit, indicates that the set "delayed start" value has appeared on the display.

MUTE

The "Mute" symbol [speaker icon] indicates the possibility to silence the key tones. While the mute is active, almost all sounds will be turned off. Only the sound signals and the alarms remain active, as well as the sound of the end of cycle. To activate/deactivate, press and hold the mute button.

KEY LOCK

To lock the control panel, press and hold the "Key lock" button for approximately 3 seconds. The symbol will light up on the display to indicate that the control panel has been locked (with the exception of the "ON/OFF" button). This prevents unintentional changes to programs, especially with children near the machine. To unlock the control panel, press and hold the "Key lock" button for approximately 3 seconds.

LOCKED DOOR INDICATOR

When lit, the symbol indicates that the door is locked. To prevent any damage, wait until the symbol turns off before opening the door. To open the door while a cycle is in progress, press the START/PAUSE button; if the LOCK symbol is off, the door can be opened.

First Time Use

Once the appliance has been installed, and before it is used for the first time, run a "Clean Washer" cycle with liquid chlorine bleach and no laundry.

Daily Use

- Press the ON/OFF button.
- Open the door. Load the laundry while making sure not to exceed the maximum load quantity indicated in the wash cycle table.
- Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments, as described in the "DETERGENT DISPENSER DRAWER" section. - Close the door.
- The machine automatically displays the default temperature and spin speed values for the selected cycle, or the most recently used settings for that specific cycle.
- Select the desired wash cycle.
- Select the desired options.
- Press and hold the START/PAUSE button to start the wash.

⚠ IMPORTANT

For more information about wash settings, cleaning and maintenance, and winterization, refer to Splendide's Instruction Manual.


Source(s): WFL1300XD Splendide Washing Machine Instruction Manual

Product(s): Splendide WFL1300XD 24-in Front-Loading Washer (Model: WFL1300XD, Newmar Part Number: 156340)

Splendide Tumble Dryer Operation (Model: DV6500X)

This article provides basic operation instructions for a Splendide Tumble Dryer (Model: DV6500X).

Control Panel

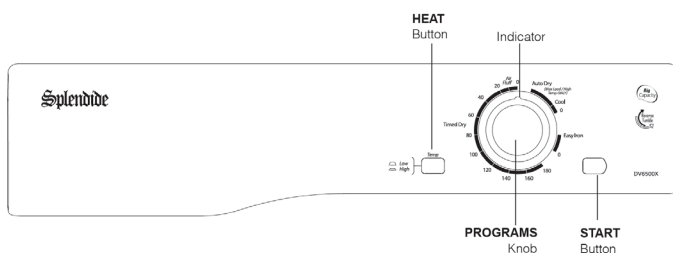

The START button begins drying a selected program.

The HEAT button selects drying temperature:

- IN: HIGH heat.
- OUT: LOW heat.

The Drying Guide allows you to consult a user friendly table of fabric types and load capacities.

The Special Programs Guide gives a guide to the available programs.

The PROGRAMS knob sets the program: rotate it clockwise, never counter-clockwise, until the indicator is pointing to the program you want to select. The programs knob will advance to the '0' position after the program ends.

CHOOSING A PROGRAM

1. Plug dryer into a grounded 3 prong outlet.
2. Sort your laundry according to fabric type.
3. Open the door and make sure the filter is clean and in place.
4. Load the machine and make sure that the items are not in the way of the door seal. Close the door.
5. Choose the drying program by checking the Programs table as well as the indications for each type of fabric. Set the temperature with the HEAT button. Select a program or drying time by rotating the PROGRAMS knob clockwise.

6. Press the START button to begin. During the drying program, you can check on your laundry and take out items that are dry while others continue drying. When you close the door again, press START in order to resume drying.
7. About 10 minutes before the program is completed, it enters the final AIR FLUFF phase (fabrics are cooled), which should always be allowed to complete.
8. Open the door, take your laundry out, clean the filter and replace it.
9. Unplug the dryer.

Laundry

SORTING YOUR LAUNDRY

- Check symbols on clothing labels to make sure that the articles can be tumble dried.
- Sort laundry by fabric type.
- Empty pockets and check buttons.
- Close zippers and hooks and tie loose belts and strings.
- Wring out each item in order to eliminate as much excess water as possible.
- Do not load dripping wet clothes into the dryer.

WHAT NOT TO TUMBLE DRY

- Articles that contain rubber or rubber-like materials or plastic film (pillows, cushions, or PVC rainwear), any other flammable objects, or objects that contain flammable substances (towels soiled with hair spray).
- Glass fibers (certain types of draperies).
- Items that have been dry cleaned.
- Items with the ITCL Code. These can be cleaned with special at-home dry cleaning products. Follow instructions completely.
- Large bulky items (quilts, sleeping bags, pillows, cushions, large bedspreads, etc.). These expand when drying and would prevent airflow through the dryer.

WARNING

No washer can completely remove oil. Do not dry anything that has ever had any type of oil on it (including cooking oils). Do not dry items containing foam, rubber, or plastic in this dryer. Doing so can result in death or fire.

WARNING

Keep flammable materials and vapors, such as gasoline, away from dryer. Do not dry anything that has ever had anything flammable on it (even after washing). Failure to follow these instructions can result in death, explosion, or fire.

MAXIMUM LOAD SIZE

Do not load more than maximum capacity. These numbers refer to dry weight:

- Natural fibres: 6 kg max (13 lb)
- Synthetic fibres: 3 kg max (6.6 lb)

Do not overload the dryer as this could result in reduced drying performance.

Cleaning & Maintenance

WHEN YOU SHOULD SWITCH OFF THE ELECTRICITY

Unplug the dryer when not using it, when cleaning it and during maintenance activities.

CLEAN THE FILTER AFTER EACH CYCLE


The filter is an important part of your dryer: it accumulates lint and fluff that is formed while drying. Small items could also become trapped in the filter. When finished drying, therefore, clean the filter by rinsing it under running water or with your vacuum cleaner. Should the filter become clogged up, the airflow inside the dryer will be seriously compromised: drying times lengthen and you will consume more energy. It may also damage your dryer.

The filter is found in front of the dryer trim.

Removing the filter:

1. Pull the plastic grip of the filter upwards (see diagram).
2. Clean the filter in all its parts, opening it and removing the lint both outside and inside.
3. Properly insert the filter back in place. Ensure the filter is fully located flush into the tumble dryer trim.

Do not use the dryer without replacing the filter.

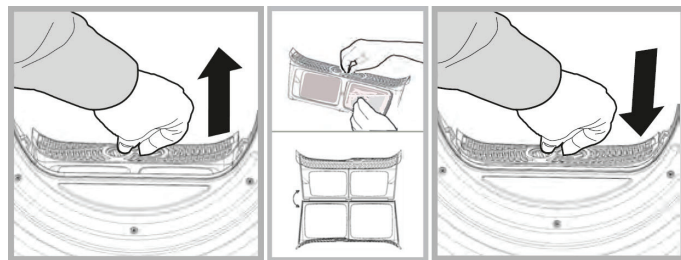

CHECK THE DRUM AFTER EACH CYCLE

Turn the drum manually in order to remove small items (handkerchiefs) that could have been left behind.

CLEANING THE DRUM

Do not use abrasives, steel wool or stainless steel cleaning agents to clean the drum.

A color film may start to appear on the stainless steel drum, this may be caused by a combination of water and, or cleaning agents such as fabric conditioner from the wash. This colored film will not affect the dryer performance.

CLEANING THE DRYER

- External parts in metal or plastic and rubber parts can be cleaned with a damp cloth.
- Periodically check the vent tube and any permanent venting fixture to make sure that there has been no accumulation of fluff or lint, and remove it.
- Remove lint that collects around the filter and the outlet vents.


Do not use solvents or abrasives.

Your dryer uses special bearing components which do not need lubrication.

Have your dryer checked regularly by authorized technicians to ensure electrical and mechanical safety.

Source(s): Splendide Tumble Dryer DV6500X Care, Use, and Installation Booklet

Product(s): Splendide DV6500X 120v Dryer (Model: DV6500X, Newmar Part Number: 162308)

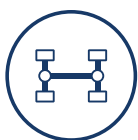

CHASSIS

This chapter provides information from your chassis manufacturer, detailed operating instructions for the fuel, leveling, and steering systems installed in your coach, as well as guidelines for proper use and maintenance of your wheels and tires.

⚠ IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the chassis manufacturer's complete documentation. Refer to your chassis owner's manual for information relating to vehicle identification and safety, dash instruments, controls, and switches, steering and braking systems, driver assistance features, maintenance recommendations, etc.



Freightliner

24/7 Direct: Customer Assistance or Concerns

- Phone: 1-800-FTL-HELP (800.385.4357)
 - For Super C coaches, press option 2; for all other Freightliner chassis, press option 1
- Web: <http://www.fcccrv.com/owners/>
- Email: fcccservice@daimler.com

Chassis Manuals


Refer to Freightliner's Driver and Maintenance Manuals in Newgle for all chassis-related information, including, but not limited to:

- Vehicle Identification
- Dash Instruments, Controls, and Switches
- Steering and Brake Systems
- Driver-Assistance Features
- Emergency Procedures
- Inspection and Maintenance

Freightliner Front-Engine Diesel Steering Wheel and Lighting Controls Operation

This article provides an overview for the steering wheel, rotary-style headlight switch, and wiper controls on select 2024 and newer Freightliner front-engine diesel coaches equipped with an OptiView dash.

Steering Wheel Overview

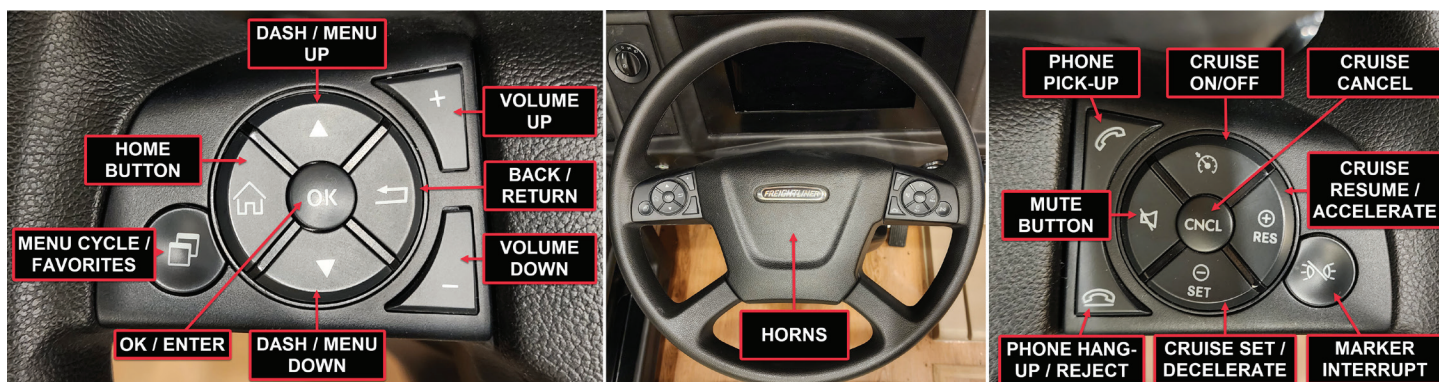

HORN CONTROL

The button for the horn is located in the center of the steering wheel. To sound the horn, press the center of the steering wheel pad.

MENU SWITCH PODS

Navigating through the system menus is done with the buttons on the side of the steering wheel.

- Press the "up" or "down" arrows to highlight a menu, then press the OK button to enter the highlighted menu.

- Press the “back” button to go back to the last menu that was displayed.
- Press the “home” button to return to the menus in their original order.

FAVORITES BUTTON

The Favorites button can be preset to any menu by going to the desired menu, pressing, and holding the Favorites button for five seconds.

BLUETOOTH CONNECTIVITY/PHONE ACCESSIBILITY

Freightliner coaches equipped with Bluetooth connectivity and the OptiView Instrument Panel may have the ability to view incoming phone calls within the driver message display area. The driver may have the ability to answer and/or end a call, or change the call volume, from the steering wheel control pods.

NOTE FROM NEWMAR

The cell phone in use must be connected to Freightliner via Bluetooth for these features to operate.

CRUISE CONTROL

⚠ WARNING

Do not use the cruise control system when driving conditions do not permit maintaining a constant speed, such as in heavy traffic or on roads that are winding, icy, snow-covered, slippery, or roads with a loose driving surface. Failure to follow this precaution could cause a collision or loss of vehicle control, possibly resulting in personal injury or property damage.

⚠ NOTICE

Maximum cruise control speed varies according to vehicle specifications, but cannot exceed 75 mph (121 km/h).

Cruise control allows the driver to automatically control the speed of the vehicle above 32 mph (51 km/h). The buttons that operate the cruise control system are located on the right-hand switch pod of the steering wheel.

- **Cruise On/Off Button**—Press to turn cruise control on or off. When cruise control is on, the ICU message center displays relevant cruise control icons and the set speed. The speed memory will be retained until the cruise control is disabled with the on/off button, or the ignition is turned off.
- **Cruise Accelerate/RES Button**—Press and hold to increase the set cruise speed. Press to resume the set speed.
- **CNCL Button**—Press to pause the cruise control, while retaining the speed setting in memory. The cruise control can also be disengaged, while retaining the speed memory, by depressing the brake pedal.

- **Cruise Decelerate/SET Button**—Press to set the cruise speed while the vehicle is traveling at the desired speed. Press and hold to decrease the set cruise speed.
- To cruise at a particular speed:
 - Press the on/off button to turn cruise control on.
 - Depress the accelerator pedal until the speedometer reaches the desired speed.

⚠ NOTICE

Cruise control is cancelled if the brake pedal is depressed, or vehicle speed drops below the minimum cruise control speed.

- Press the cruise decelerate/SET button to set the desired speed.

⚠ NOTICE

The speed memory is lost whenever the ignition switch is turned to OFF, or cruise control is turned off.

- To disengage the cruise control, do one of the following:
 - Press the CNCL button in the center of the right-hand control pod.
 - Depress the brake pedal.
- To resume a preselected cruise speed:
 - Ensure cruise control is on.
 - Press the cruise accelerate/RES button. Cruise will return to the last set speed.

⚠ NOTICE

If vehicle speed drops below the minimum cruise control speed, cruise control will disengage. To resume to the preselected cruise speed, increase vehicle speed to above minimum cruise control speed and press the cruise accelerate/RES button.

- To increase cruise speed, press the cruise accelerate/RES button until the vehicle accelerates to the desired speed.
- To decrease cruise speed, press the cruise decelerate/SET button until the vehicle decelerates to the desired speed.

Lighting Controls

HAZARD WARNING LIGHTS

To activate the hazard warning lights, push the hazard warning light switch on the right side of the steering column. When the hazard warning lights are activated, all of the turn signal lights and both of the turn signal indicator lights on the instrument panel will flash.

To cancel the warning lights, push the switch in on the right side of the steering column.



AUTOMATIC AMBIENT HEADLIGHT SENSOR

IMPORTANT

This optional feature only activates or deactivates the panel lights, headlights and taillights; there is no high-beam headlight sensing function.

The ambient sensor activates the panel lights, headlights and taillights when the brightness of the ambient light drops below a preset value for three seconds. Once activated, these lights remain on and require either a headlight switch cycle (Off/On/Off), or turning the ignition to the OFF position to deactivate them.

HEADLIGHTS

The headlight switch is a rotary switch located to the left of the steering column.

The headlights automatically turn on if the windshield wipers are on. The headlights can be deactivated by:

- switching the windshield wipers off;
- cycle the headlight switch (Off/On/Off);
- turn the ignition to the OFF position.

SWITCH POSITIONS

1. Fog lights: Activate by pulling the switch out when the marker lights or headlights are on.
2. Automatic Headlights (Optional)
3. Off
4. Marker Lights
5. Headlights

FOG LIGHTS

NOTICE

Some vehicles may be equipped with a rocker switch to activate the fog lights. If so equipped, the rocker switch is installed by the body builder and the location will vary.

To activate the fog lights, do one of the following based on the vehicle controls:

- Pull the rotary switch out when the marker lights or headlights are on.
- Push the rocker switch (not shown).

MARKER LIGHTS

To turn the marker lights on, turn the headlight switch clockwise past the off position.


MARKER INTERRUPT

The marker interrupt switch, located in the right-hand switch pod of the steering wheel, temporarily flashes the marker lights.

HIGH-BEAM HEADLIGHTS

NOTICE

The ignition switch must be on for the high beams to work.

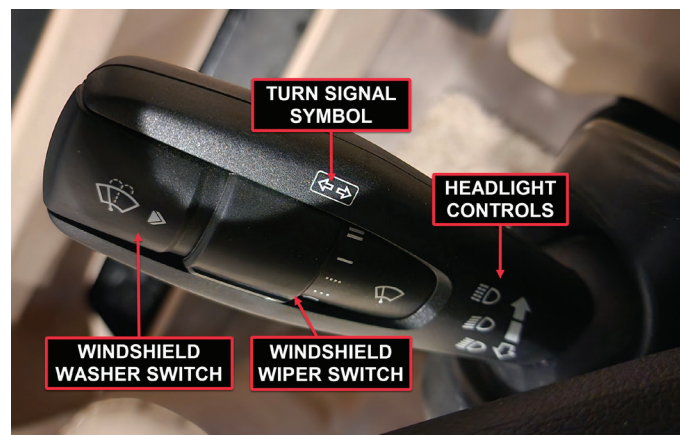

With the low-beam headlights on, push the turn-signal lever away from you to turn on the high-beam headlights. To turn off the high-beam headlights, pull the lever to the middle position.

With the low-beam headlights on, pull the lever towards you to flash the high-beam headlights momentarily.

When the high-beam headlights are on, a blue tell-tale illuminates on the instrument cluster.

TURN SIGNALS

The turn signal lever is mounted on the left-hand side of the steering column. Moving the turn signal lever down activates the left turn signal lights; moving it up activates the right turn signal lights. The lever is a self-canceling combination turn signal, windshield wiper/washer switch, and high-beam headlight control unit.

When a turn signal is activated, a green indicator arrow flashes at the far left or far right of the instrument panel.

The lever automatically returns to the neutral position (self-cancels the switch) when the steering wheel returns to the straight-ahead position after a turn. To cancel the signal manually, move the lever to the neutral position.

WINDSHIELD WIPER CONTROLS

NOTICE

Do not attempt to manually move the windshield wiper arms. Wiper motor damage will occur if the arms are forcibly moved.

The windshield wipers and washer controls are on the multi-function turn signal lever on the left-hand side of the steering column.

The wipers are operated by a rotary switch on the turn signal lever. There are five settings, marked on the dial by symbols for off, two intermittent settings, and two continuous speeds.

Turn the wipers on by rotating the rotary switch up. Rotate the switch further to increase the speed of the wipers through the two intermittent settings, then to low and high speeds. Rotate the switch down to slow the wipers down. Rotate the switch as far down as it will go to turn the wipers off.

The windshield washer button is located at the end of the turn signal lever. Momentarily press the windshield washer button to initiate a single wipe without activating the washer pump. The wipers will swipe one full cycle and return to the inactive position.

To operate the windshield washers, press and hold the button in. After a short delay, the washer will pump windshield washer fluid onto the windshield for as long as the washer button is pressed. The windshield wipers will turn on at low speed while the washer button is pressed. After the button is released, the wipers will continue to operate for one to several wipe cycles, depending on how long the wash button was pressed initially.

AUTOMATED/AUTOMATIC TRANSMISSION MULTIFUNCTION CONTROL

For vehicles equipped with the automatic transmission multifunction control, the control moves in two directions and has two switches. It is used to request manual shifts, change shift mode, set engine brake levels, and control specialty engine brake functions. For more information, refer to your complete Chassis operator's manual.



ENGINE BRAKE SWITCH

Whenever vehicle braking is required on good road conditions, the engine brake may be used in conjunction with the service brakes. There is no time limit for operation of the engine brake. However, an engine brake does not provide the precise control of, and is not a substitute for, service brakes.

The engine brake control is located on the right-hand steering-column-mounted lever. At the top position, the engine brake is off, and at the three lower positions, the brake is on and the intensity (low, medium, high) increases with each step down.

⚠ IMPORTANT

On some vehicles, the engine brake only has off and high intensity options.


⚠ NOTICE

The cruise control system and safety systems may activate the engine brake regardless of the lever position.

STEERING CONTROL (STANDARD TILT/TELESCOPE STEERING)

⚠ WARNING

Never try to tilt or telescope the steering column while driving the vehicle. Doing so could cause loss of vehicle control and result in personal injury, or death, or property damage.

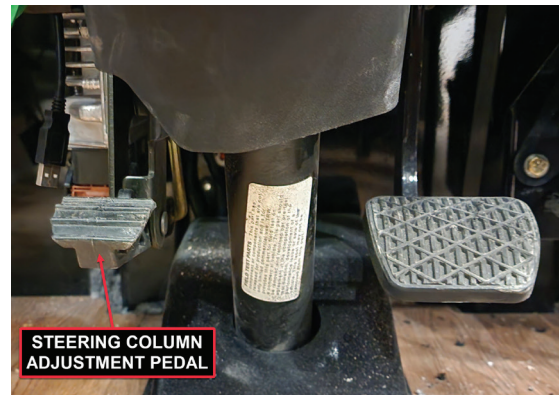

To tilt the steering column or telescope the steering wheel, press down on the foot pedal (located below the steering wheel) to release the steering column lock. Adjust the column and steering wheel to the desired position. Release the foot pedal to lock the steering column and steering wheel in place.

⚠ NOTICE

For safety, the steering column is locked at all times unless the foot pedal is depressed.

Freightliner OptiView Instrument Panel Quick Start Guide

This article provides an overview of the Freightliner OptiView Instrument Panel.

The OptiView instrument panel provides the driver with engine and vehicle information. It is comprised of standard and optional gauges, an audible alarm, a driver message center, information options (menu structured format), and warning and indicator lamps (also known as telltales). Warning and indicator lamps illuminate in red (danger), amber (caution), green (status advisory), or blue (high-beam headlights active).


Use the quick reference guide below to familiarize yourself with your dash indicators and gauges.







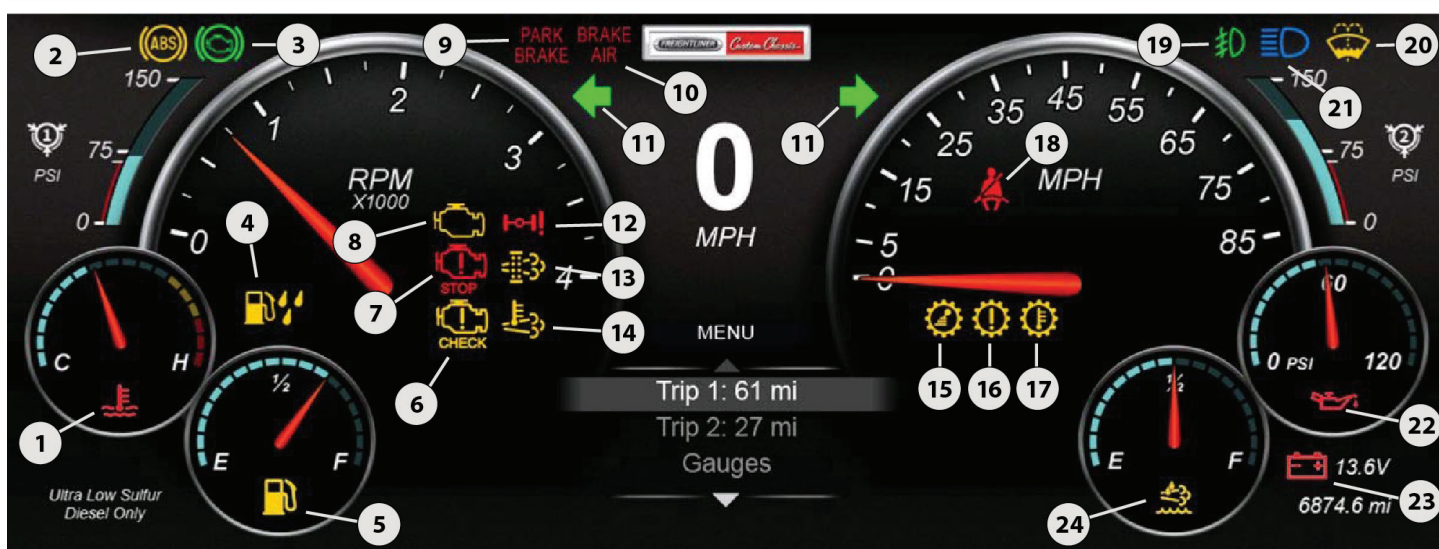

NOTICE









The OptiView instrument panel can be customized by Freightliner and Newmar based on the model and year of coach, as well as the available standard and optional equipment. The location of gauges and icons on the instrument panel may vary from what is shown, but the operation of the instrument panel is the same.









Warning Lamps Quick Reference

WARNING LAMPS




ID	ITEM	DESCRIPTION
1		High Coolant Temperature Warning
2		ABS Warning
3		Engine Brake Indicator
4		Water in Fuel Indicator
5		Low Fuel Indicator
6		Check Engine Warning
7		Stop Engine Warning
8		Malfunction Indicator Lamp (MIL)

ID	ITEM	DESCRIPTION
9		Parking Brake On Warning
10		Air Brake Warning
11		Turn Signal Indicators
12		Steerable Tag Axle Warning
13		Diesel Particulate Filter (DPF) Lamp
14		High Exhaust Temperature (HEST) Lamp
15		Shift Inhibit Indicator
16		Transmission Warning


ID	ITEM	DESCRIPTION
17		Transmission Overheat Warning
18		Fasten Seat Belt Warning
19		Fog Lamp Indicator
20		Low Windshield Washer Fluid Indicator
21		Headlight High-Beam Indicator
22		Low Oil Pressure Warning
23		Low Battery Voltage Warning
24		Low Diesel Exhaust Fluid (DEF) Warning

Typical Instrument Quick Reference

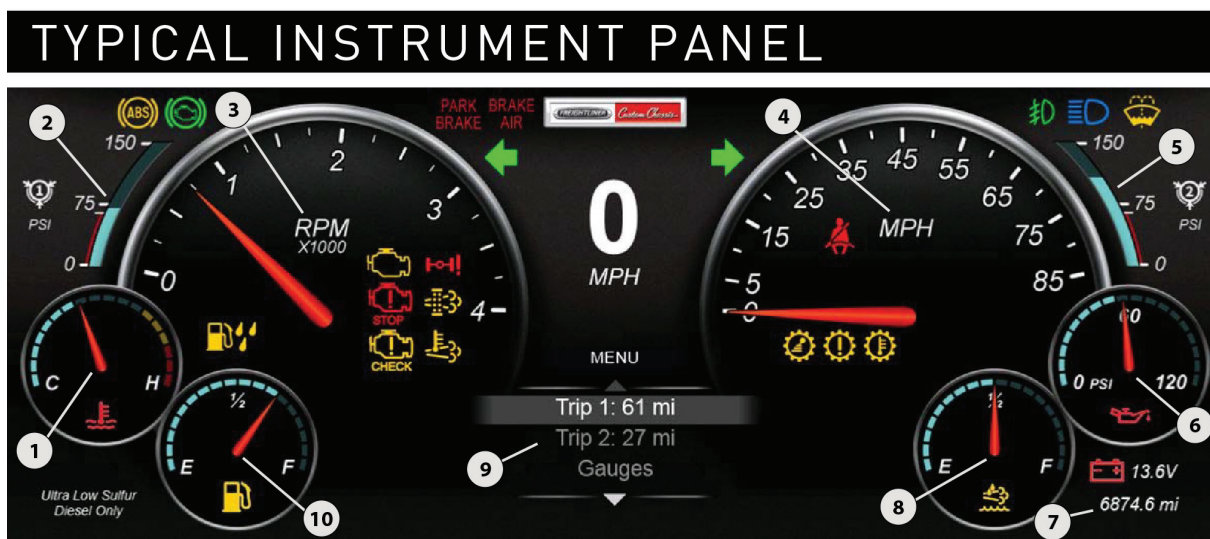

ID	DESCRIPTION
1	Coolant Temperature Gauge
2	Primary Air Pressure Gauge
3	Tachometer
4	Speedometer
5	Secondary Air Pressure Gauge

ID	DESCRIPTION
6	Engine Oil Pressure Gauge
7	Odometer
8	Diesel Exhaust Fluid (DEF) Level Gauge
9	Menu and Driver Message Area
10	Fuel Level Gauge

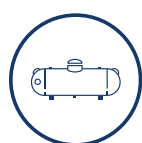

Fuel Systems

Chassis Diesel Engine Fuel

This article provides information regarding the chassis diesel engine fuel, fuel filler cap, and the refueling process.

⚠ IMPORTANT

Consult your chassis manufacturer information about your recommended fuel and fuel blends, additives, and maintenance requirements.

⚠ WARNING

CALIFORNIA Proposition 65: Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

⚠ DANGER

All pilot lights, appliances, and their igniters (see operating instructions) shall be turned off before refueling of motor fuel tanks and/or propane containers. Can cause ignition of flammable vapors, which can lead to a fire or explosion and result in death or serious injury.

⚠ WARNING

Never fill fuel tanks to more than 95 percent of their liquid capacity. This could make them more likely to rupture from impact possibly causing fire and resulting in serious personal injury and death by burning. Do not mix gasoline or alcohol with diesel fuel. This mixture could cause an explosion, possibly resulting in serious personal injury or death. Do not fill the fuel tanks in the presence of sparks, open flames, or intense heat. These could ignite the fuel, possibly causing severe burns.

Refueling/Filling The Tank

The fuel gauge indicates the amount of fuel remaining in the fuel tank. Avoid running out of fuel.

When fueling your vehicle:

1. Put your vehicle in park (P).
2. Switch the engine off.
3. Remove the fuel cap by rotating it in a counterclockwise motion until it spins off.
4. Pull to remove the cap.
5. Select the proper grade of fuel as specified by the engine manufacturer and fill.
 - Reminder: For coaches requiring diesel exhaust fluid (DEF), check the DEF level each time the coach is refueled.



Diesel Exhaust Fluid (DEF) Overview for Class A Diesel Coaches

This article provides an overview about the DEF tank installed on a Class A diesel coach. Diesel exhaust fluid (DEF) is designed for use in diesel engine emissions systems and helps protect the environment from harmful contaminants.

The DEF tank will require filling a minimum of approximately every second diesel refuel depending on the DEF tank capacity. 10, 13, and 15-gallon tank capacities are available. To find out the tank capacity of a coach, please contact the chassis manufacturer, as Newmar does not have this information available.

DEF consumption is approximately 2% of fuel consumption, dependent on vehicle operation. For every 50 gallons of diesel fuel consumed, approximately 1 gallon of DEF will be consumed.

Some vehicles are equipped with a remote DEF fill-port. If so equipped, the remote port is directly opposite the DEF tank on the other side of the vehicle, and has a blue cap over the fill-port. DEF parts, such as the fill cap or tank, are supplied by the chassis manufacturer and are not available via the Newmar Parts Department.



IMPORTANT


DEF consumption varies depending on ambient conditions and vehicle application.

ECI Auxiliary Fuel Station Pump with LED Digital Display Overview (Model: 7071-PM)

This article provides an overview of the ECI Auxiliary Fuel Station Pump with LED Digital Display, including safety information and operational instructions. This system is typically used on Canyon Star coaches beginning mid-model year 2022. Most auxiliary fuel tanks have a maximum capacity of 30 gallons.

Overview and Safety

Among the unique features of select coaches with a garage (toy haulers) is the Fuel Station located in a rear basement storage compartment. This Fueling Station features a fuel tank with a gauge, a conventional fuel fill intake tube for filling the tank, an electric pump, and a fueling nozzle for dispensing the fuel.

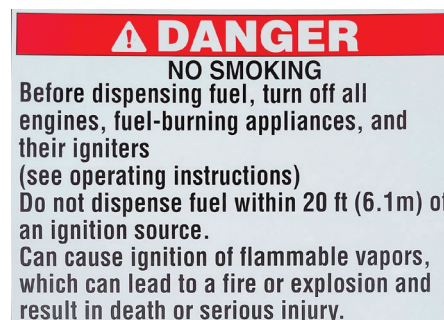

⚠ WARNING

Use only unleaded gasoline in the Fueling Station. Use of other fuels, including diesel, nitro methane, kerosene, or other unusual or performance fuels may lead to damage or failure of the pump and associated hoses, nozzle, and tank. Such damage or failure may present the potential for fire, personal injury, or death.

⚠ WARNING

Read and understand the complete instructions prior to operating the fuel system. Failure to do so may lead to damage, severe injury, or death.


⚠ WARNING

Make sure all possible sources of ignition are removed from the area or extinguished. Before dispensing fuel, turn off all engines, fuel-burning appliances, and their ignitors. Do not dispense fuel within 20 ft. of an ignition source. Can cause ignition of flammable vapors, which can lead to a fire or explosion and result in death or serious injury.

ECI Fuel Station Display and Operation Quick Start Guide

Follow these steps:

1. Locate the fuel station control panel, dispensing hose, and nozzle on the exterior of your RV.
 - After being INACTIVE, the control panel will be in Sleep/Locked Mode.
 - Lights on the control panel are not lit up (sleep mode).
 - ON/OFF buttons are not functional.
2. WAKE control panel, press “ON” or “OFF” button.
 - Control panel will display fuel level(s).
3. UNLOCK control panel: hold “OFF” button down until “ON” button begins to blink.
4. Press “ON” button to activate pump, dispense fuel.
 - Use Hose and Nozzle to dispense fuel.
5. When finished refueling, press “OFF” button.
 - Pump will automatically go into reverse mode for 10 seconds returning un-dispensed fuel in dispensing hose and nozzle to the tank.
6. Control panel will revert to Sleep/Locked Mode after 2 minutes of inactivity.

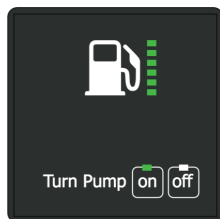

Dispensing Fuel Safely

1. Turn on the master fuel pump switch, which is located inside the garage area and is labeled accordingly.
2. Attach the “bonding jumper wire” (if equipped) to the vehicle to be fueled to help lessen any potential static discharge that may occur during the fueling process.
3. Remove the cap on the vehicle being serviced.
4. Place the nozzle for the Fuel Station in the fuel fill area of the vehicle being serviced.
5. Turn on the fuel pump. The switch for the fuel pump is located on the compartment door on the fuel panel.
6. Dispense the desired amount of fuel into the vehicle being serviced.



⚠ CAUTION

Never leave a fueling vehicle unattended, as the system will not shut off automatically when it is full.

7. Turn the fuel pump off.
8. Remove the nozzle from the fuel fill area, disconnect the bonding jumper wire, and return it to the Fuel Station compartment along with the nozzle.
9. Replace the cap on the vehicle being serviced.

⚠ IMPORTANT

Any spilled fuel should be addressed immediately. Cleaning the spill will be relative to the size of the spill, and the conditions under which it occurs. Each state has its own rules and regulations regarding fuel spills. Be aware of them where you travel, and take extreme care when using the fuel station.

Source(s): ECI Fuel Systems Quick Start Guide Fuel Station (Rev A 08/2020)

Product(s): ECI Auxiliary Fuel Station Pump with LED Digital Display Overview
(Model: 7071-PM, Newmar Part Number: 159123)



Leveling Systems

This section has information about air, electric, and hydraulic leveling systems. Due to a very wide range of operation procedures, refer to the information under the brand and model that applies to your coach.

⚠ WARNING

Do not lift the wheels off of the ground while leveling the coach. The vehicle may drop and/or move forward or backward without warning, which may cause serious injury or death.

⚠ WARNING

Never attempt to move the unit with the leveling jacks deployed. Always visually inspect the jacks prior to moving to ensure they are fully retracted, are in the stored position, and the system is turned OFF.

⚠ WARNING

Never operate any leveling system with a person or pet under the unit. Serious injury or death may result!

⚠ WARNING

Be sure the ground on which you are parked will support the weight of your unit. Often material that seems “safe” to level on will not support the weight at the leveling jack points. Use caution when leveling on hot asphalt, sand, and grass, as the weight of the unit may cause the jacks to sink into the ground. Pads may need to be placed under the jacks to spread the weight over a larger area. Always look under your unit prior to leveling to make sure the jacks are clear of debris and other foreign materials that may interfere with leveling.

Care and Maintenance

⚠ IMPORTANT

The leveling system should be cycled at least once a month to keep the system in operating condition.

Leveling and Full Wall Slideout Sequence of Operation

This article provides step-by-step instructions for leveling the coach and operating the slideouts.

⚠ IMPORTANT

In the past, Newmar has recommended leveling the coach prior to deploying the slideouts. As of 2015, Newmar makes the following recommendation for the extension and retracting of slideouts.

Motorhomes, like all vehicles, flex in travel. Flexing may be different due to terrain and the coach's fulcrums (resting on tires or jacks). As the coach flexes, this movement is more noticeable in the outside reveal on a wider slideout.

Extending The Slideouts and Leveling The Coach

1. Park the coach on a reasonably level campsite.
2. Leave the coach at ride-height with air in the air bags (if equipped with air suspension) or on normal suspension (coaches without air suspension).
3. Plug the coach into shore power (if available) or start the generator to increase the voltage for better slideout operation.



4. Look at the “reveal” or “gap” of the two vertical wall trims around the slideouts to make sure there is plenty of clearance so the trim will not rub when extending the slideout. If the gap looks good, then the slideout can be operated.

- **Note:** Most often the gap will look best when sitting on the tires with the air suspension inflated (at ride-height), and not on the jacks.

⚠ IMPORTANT

In the unlikely occasion that the slideout trim has inadequate clearances, try leveling or repositioning the coach and rechecking the clearances before extending the slideout.

5. Verify that the path of the slideout is unobstructed and free from any surrounding objects, both inside and outside of the coach.
6. Once the appropriate conditions are met, follow the operating instructions posted in your coach to extend the slideouts (image for example only).
7. Dump the air suspension (if equipped). This step is included in the auto-leveling process for most coaches.
8. Deploy the leveling jacks.

Retracting The Jacks and Slideouts

1. Retract the leveling jacks.
2. Start the coach.
3. Allow the coach air suspension to fill and return to ride height (units without air suspension will return to normal suspension).
4. Turn the engine off.
5. Verify that the path of the slideout is unobstructed and free from any surrounding objects, both inside and outside of the coach. This includes any water or debris that may have collected on the slideout roof or the topper awning.

⚠ IMPORTANT

Debris left on the roof or topper may prevent the slideout from sealing properly when retracted, as well as prevent the mechanical lock arms from closing properly when the slideout is extended.

6. For a full wall slideout, visually inspect the front vertical trim for adequate clearance prior to complete retraction (when the slideout trim spacing can be observed). The spacing should look even from top to bottom (see image for reference).

⚠ IMPORTANT

In the unlikely occasion that the slideout trim has inadequate clearances, try leveling, or if necessary, repositioning the coach, and rechecking the clearances before fully retracting the slideout.

7. Retract the slideouts. Inspect all slideouts for complete retraction.
8. If the coach is equipped with manual lock arms, make sure to lock them.
9. Unplug the coach from shore power when you are ready to depart.

Equalizer EQ Smart-Level Hydraulic Leveling System Operation

This article provides the step-by-step instructions for operating an Equalizer EQ Smart-Level leveling system, which began being installed in coaches in production after 5/17/2019.

Panel Indicator LED's

During typical operation, the LED's on the bottom left-hand corner of the keypad should NOT be illuminated. The only LED that should light is the OPERATING LED, which should flash during operation.

Indicator LED	Description
Power	<ul style="list-style-type: none"> ON red when Power is ON OFF when power is OFF SLEEP MODE flashes every 1 second
Jack	<ul style="list-style-type: none"> ON red when jack(s) are deployed OFF when jack(s) are stowed
Operating	<ul style="list-style-type: none"> ON red w/ AUTO LEVEL or ALL RETRACT OFF when keypad is idle or sleeping
Low Voltage	<ul style="list-style-type: none"> ON red when voltage is below 10.5 VDC OFF when voltage is above 10.5 VDC
Engage Park Brake	<ul style="list-style-type: none"> ON red when park brake is not set OFF when park brake is set
Ignition On	<ul style="list-style-type: none"> ON red when ignition is in the ON position OFF when ignition is off
Excess Slope	<ul style="list-style-type: none"> ON red following an AUTO LEVEL attempt if system cannot overcome slope OFF when slope is not excessive



⚠ NOTICE

After an AUTO LEVEL process, the operation light should turn off and the Excess Slope light should be off. This indicates that the system has finished leveling and is within the .5-degree (approx. 7/16 inch over 4 feet) front-to-rear and side-to-side leveling specification.

If the Excess Slope light is on, then the system was not able to complete the process within the .5-degree specification. There are several possibilities to, includ[ing], but not limited to: Low Voltage, jack(s) running out of travel, or system/ component failure.

If the LOW VOLTAGE or EXCESS SLOPE LED's illuminate, you have an error condition that must be corrected prior to operating the jacks.

Auto-Level Operation

1. Push and release the POWER button to engage power.
 - The LED light next to the POWER button should be lit RED when power is on.
 - Also, depending on if the park brake disable is connected and the park brake is released, you may not be able to extend jacks.

NOTE FROM NEWMAR

To extend the jacks, the ignition key must be in the engine run or on position and the park brake must be applied. If the ignition key is not in the run or on position, and/or if the park brake is not set, you will hear a deny tone from the keypad.

2. Press the AUTO LEVEL button and release. The system will send out a continuous series of beeps and the “Operating” LED will be on to let you know AUTO LEVEL is operat[ing] and will automatically level the coach.
 - Do not move around or exit the coach during this operation doing so will fault out the operation or result in an incomplete leveling/stabilization operation.
 - When completed, the Keypad will signal the successful completion with a dual-stage tone.
 - The Keypad may be left on once level has been achieved.
 - The Keypad will enter “sleep mode” after five minutes of inactivity.

⚠ NOTICE

AUTO LEVEL will be denied if the jack indicator lights are on. To clear this, press [ALL RETRACT], and then perform AUTO LEVEL.

SETTING THE NULL

Null is the term used to indicate the “levelness” of the coach. A Null setting should have been performed by the installer [Newmar]. If the coach is not level following an attempt to AUTO LEVEL, you will need to level the coach and reset the null.

1. To set the null, push and release the POWER button on the Keypad to engage power.
 - The LED light next to the POWER button should be lit RED when the power is on.
2. Level the coach by deploying jacks manually, or by simply parking the coach on a level site. You do not need to have the jacks deployed to set the null.
 - Use a bubble level on a flat surface in the center of the coach as a reference.
3. Once the coach is level, turn the power off at the panel.
4. Depress and hold the AUTO LEVEL button and press and release the POWER button and listen for a series of beeps.

5. After the Keypad has beeped 5 to 6 times (the Keypad will continue to beep as long as the AUTO LEVEL button is held), release the AUTO LEVEL button. [Y]ou should get a confirmation beep. The new null has been set and the panel will store/remember this setting.
6. Press and release the ALL RETRACT button to retract the jacks to the stowed position.

Use the ALL RETRACT button to retract the jacks prior to travel. This system does provide the ability to retract the jacks using the UP buttons for each pair of jacks. However, these buttons are not intended to be used for retracting the jacks to their stowed position prior to travel. The Up arrows are to be used only for retracting the jacks to help level the coach. The ALL RETRACT button must be pressed to ensure the system is ready/safe for travel. All jacks should automatically retract and return to [the] stowed position when the ALL RETRACT button is pressed and released. The pump will run in retract for approximately 5 seconds after the last jack has been fully retracted - or until a time limit of 90 seconds has been reached.

⚠ IMPORTANT

It is always the responsibility of the coach operator to visually confirm that the jacks are fully retracted and safe for travel.

HELPFUL HINTS

- Do not allow motion in the coach during the AUTO LEVEL operation (don’t move around in the coach). This could cause the system to fault out or level/stabilize improperly.
- The Auto-Level is a microprocessor-controlled system. Proper and adequate battery voltage and permanent chassis ground are essential.
- Your system is equipped with override ability. Refer to the procedure for proper use of this. It is usually better to review this procedure prior to its actual use, rather than having to learn a new procedure in difficult environments and/or situations. This is designed to get the jacks retracted if there has been a power/control failure. [This information can be found in Newgle in the Equalizer EQ Smart-Level manual.]
- If the system has not been used (with the jacks stowed) for over 24 hours, it is recommended that you engage the ALL RETRACT button prior to travel in order to re-pressurize the system.
- A lubricant, like WD40, may be used to clean and lubricate the cylinder shafts.

Manual Operation

NOTE FROM NEWMAR

To extend the jacks, the ignition key must be in the engine run or on position and the park brake must be applied. If the ignition key is not in the run or on position, and/or if the park brake is not set, you will hear a deny tone from the keypad.


Push and release the Power Keypad button to engage power. All lights will come on, [and] then most will go out. The LED light next to the POWER button should be lit RED when power is on. You will need to have the ignition key switch in the [ON] position to extend the jacks. If you attempt to extend jacks by pressing the Down Keypad buttons or all the jacks with the Auto-Level button, you will hear a “deny” tone from the keypad if the ignition key is in the improper position. Also depending on if the park brake disable is connected, and the park brake is released, you may not be able to extend jacks.

Using the Down Keypad buttons, extend the jacks until they contact the ground (this is referred to as “planting” the jacks). As you extend the jacks, an LED light on the Keypad will indicate the jack(s) is out of the “stowed” position. Jacks may only be operated in pairs using the manual keypad buttons. Use a bubble level on a flat surface in the center of the coach. Level the vehicle by using the Down or Up Keypad buttons until the vehicle is level. Jacks may be operated only in pairs. Press the POWER button to turn off the control panel (Keypad).


To retract, push and release the Power Keypad button to engage power. Press the ALL RETRACT button to retract the jacks prior to travel. This system does provide the ability to retract the jacks using the UP buttons for each pair of jacks. However, these buttons are not intended to be used for retracting the jacks to their stowed position prior to travel. The Up arrows are to be used only for retracting the jacks to help level the coach. The ALL RETRACT button must be pressed to ensure the system is ready/safe for travel. All jacks should automatically retract and return to the stowed position when the ALL RETRACT button is pressed and released. The pump will run in retract for approximately 5 seconds after the last jack has been fully retracted - or until a time limit of 90 seconds has been reached.

EQ Smart-Level Bluetooth Operation


- If the face of your keypad indicates that your controller is compatible with a Bluetooth device, download EQ Smart-Level in the Android or Apple App Store. When downloading the app, make sure your Bluetooth setting is turned on or the app will not connect to your coach. Once the app is downloaded, please follow the instructions to level your coach.
- If your keypad does not indicate compatibility, your Bluetooth connectivity may be through your multiplex system.
- The operation of the system from a smartphone is the same as from the control panel with the exception that you cannot perform the orientation setting or null programming from the Bluetooth.

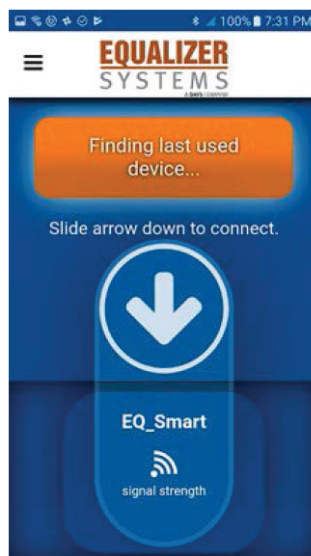

Slide arrow down with finger.

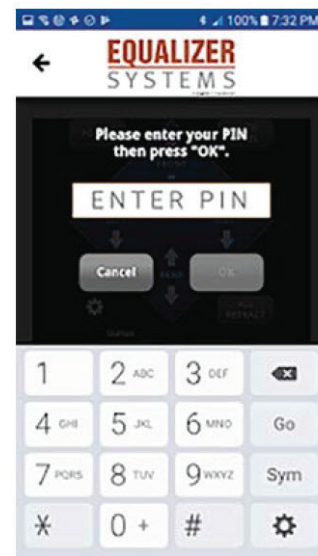

Create your own pin #.

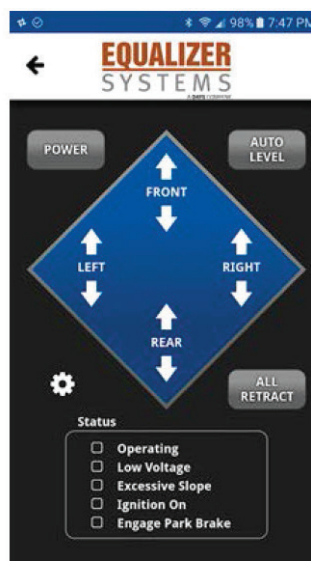

After successful pin creation, you should see this screen.



Power & Jack Down lights are illuminated during and after this process

Source(s): Equalizer Systems EQ Smart-Level Motorized Version Installation/Operation/Warranty Guide (Effective June 2021, EQ021R4)
Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.



Wheels and Tires

Wheels and Tires Size and D.O.T. Code

This article provides basic information about the wheels and tires, including the tire size, inflation, and D.O.T. codes.

Newmar's quality extends to every inch of your coach, right down to the tires and wheels. The durability and longevity of your tires will provide you with the confidence and peace of mind you need to relax and enjoy the ride.

The primary areas of concern are the tire size, inflation, and operational information. The sidewall of the tire contains detailed information about the construction, inflation, and carrying capacity of the tire. Become familiar with this information, and operate the vehicle within the capacity parameters outlined.

WARNING

Proper tire maintenance is critical to the safety, operation, and durability of your coach. Failure to follow and monitor tire pressure guidelines may result in premature tire failure.

Tire Size

The sidewall of the tire contains information that is important to know to ensure proper use of the tire, as well as to maintain long life. Take the time to become familiar with the size, load rating, and pressure information listed on the sidewalls of the tires.



This tire size is 315 / 80 R 22.5. From this size, we can determine the physical dimensions of the tire, as well as its basic construction. The tire size breaks down like this:

- The first number, "315", is the section width of the tire in millimeters. The section width is the measurement of the tire from the outside sidewall to the inside sidewall.
- The second number is the height of the sidewall, expressed as a percentage of the section width. In this case, the number is "80", so the sidewall height accounts for 80 percent of the tire's section width.
- The "R" in the tire size indicates that this tire is "radial" in construction. The belts are wrapped around the tire in a radial design, from bead to bead.
- The final number is "22.5", which is the rim size the tire was designed to fit. This tire fits a 22.5" diameter wheel.

D.O.T. Code

The last four digits on tires manufactured after the year 2000 signify the week and year of manufacture.



The tire in the example picture was made during the 29th week of 2017.

Tire Care and Maintenance

This article provides information about the care and maintenance of your coach tires, including examples of labels and tire pressure charts. To ensure your tires are operating safely, regularly inspecting your tires and checking your tire pressure is absolutely mandatory.

NOTICE

For specific recommendations related to tire pressure, rotation, or replacement, please contact the tire and/or chassis manufacturer.

NOTICE! **CHECK WHEEL LUGS**

On first trip, tighten wheel lugs at start and at 10, 25 and 50 miles. Tighten to manufacturer's specifications.

Thereafter, check wheel lugs before each trip, after excessive braking and following winter storage.

AD-24

Tire Pressure Overview

Tire pressures should be checked and adjusted before and after each trip. Always check and adjust the pressures while the tires are cold. Never add or release pressure from the tires when they are hot (after having driven a mile or more).

For safe operation and maximum weight carrying capacity, it is imperative that the tires be inflated to and maintained at the listed tire pressures on the Federal ID Tag. This tag is affixed to the interior wall just behind the driver's seat in your coach.

⚠ WARNING

Failure to follow proper inflation guidelines may result in tire failure, which can cause loss of vehicle control or accidents resulting in property damage, bodily injury, or death.

⚠ IMPORTANT

The tire pressure settings can change depending on whether they are used in single or dual tire situations.


⚠ IMPORTANT

Make sure the tire pressures are the same across an axle, while never exceeding the maximum air pressure limit stamped on the wheels or tires, or leaving a tire below the minimum pressure listed on your tire inflation chart.

If you are operating your coach while staying significantly under the maximum weight carrying capacity, you may experience an unnecessarily firm ride. To correct this condition, it is recommended for you to weigh the coach when it is fully loaded as you would travel, with full fuel, water, and LP tanks, all travelers, and your belongings, as well as any towed equipment. Weigh each axle end separately, and use the heaviest end weight to determine the axle's cold inflation tire pressure.

For units operating significantly under maximum weight carrying capacity experiencing an unnecessarily firm ride. We recommend for you to weigh the coach loaded as you will be traveling with fuel, water, Lp, belongings, persons and weight of towed equipment, weighing each axle end separately and using the heaviest end weight to determine the axle's cold inflation tire pressure use the inflation chart provided by the tire manufacture for you specific brand, series,& size and load range of tire use the dual and single weight charts according to the tire configuration you are inflating.

Make sure tire pressures are the same across an axle, while NEVER exceeding the maximum air pressure limit stamped on the wheels or tires nor under inflating a tire below the lowest pressure on the tires inflation chart. For more detailed information refer to the tire inflation pressure article in Newgle.

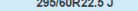295/60R22.5 J													
													
	PSI	85	90	95	100	105	110	115	120	125	130		
	kPa	590	620	660	690	720	760	790	830	860	900	Maximum load & pressure on sidewall	
LBS	Single	5260	5505	5750	5990	6230	6465	6700	6930	7160	7390	S	7390 LBS at 130 PSI
	Dual	9650	10100	10550	10990	11430	11860	12290	12720	13140	13560	D	6780 LBS at 130 PSI
KG	Single	2385	2495	2610	2715	2825	2930	3040	3145	3230	3350	S	3350 KG at 900 kPa
	Dual	4375	4580	4785	4985	5185	5380	5575	5770	5960	6150	D	3075 KG at 900 kPa

Example of a Tire Inflation Chart


Use the inflation chart provided by your specific tire manufacturer according to brand, series, size, and load range. Also, pay attention to the chart when referring to dual or single tire configurations, as they will change based upon which tire you are inflating.

⚠ IMPORTANT

Do not use the example to find your recommended tire pressures. Refer to your tire manufacturer's owner's manual and specific tire inflation guidelines.

⚠ NOTICE

Exact tire inflation charts will not be provided by Newmar. Each tire manufacturer provides this information, as it changes by brand, make, tire series, tire size, as well as if it is used in a single or dual setup. For more information about your tires and the inflation specifications, please refer to the Item Home Page of your tire manufacturer.

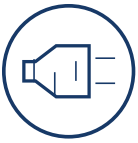

ELECTRICAL

This chapter includes overviews of the 12 volt and 120 volt electrical systems, as well as information about electrical equipment that may be installed in your coach, including, but not limited to fuse panels, lighting, EMS, generators, inverters, converters, solar panels, transfer switches, etc.

⚠ WARNING

Due to the risk of electrical shock, service should be performed by a qualified electrician or authorized service technician. The electrical system may have multiple 120/240 volt power sources. All power sources must be turned off, and any auto generator start features must be disabled prior to servicing.

⚠ IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the manufacturer's complete documentation. Refer to Newgle for more information about electrical components offered for your coach's model year.



12 Volt Electrical System

This article provides general information about the components and functions of the 12 Volt Electrical System (DC) in Newmar coaches.

Power Sources

The 12 Volt Electrical System allows certain components to maintain a low voltage from the battery bank. The battery bank is controlled by the coach charging system, which consists of a charge bridge solenoid, a bi-directional isolator relay delay (BIRD), or a battery isolation manager (BIM). When the coach engine is running, the alternator charges the chassis batteries and may assist in charging the house batteries through the BIM, BIRD, or Charge Bridge.

When the coach is connected to shore power or when the coach generator is in use (when shore power is unavailable), the converter or inverter/converter combination recharges the house batteries, and with the assistance of a BIM, BIRD, or Charge Bridge, it can also charge the chassis batteries.

In addition to the alternator and converter, the coach may also be equipped with solar panels to provide an additional option for charging your house batteries.

THIS CONNECTION IS FOR
LOW-VOLTAGE BATTERY OR
DIRECT CURRENT ONLY. DO
NOT CONNECT TO 120 OR
240 VOLTS AC. AD-06

ALTERNATOR

The alternator is a belt-driven component attached to the coach engine and is supplied by the chassis manufacturer. The alternator supplies power for chassis components such as batteries, lights, wipers, dash HVAC, and power seats, as well as all of the driver controls located in the cockpit. The alternator charges the chassis batteries, but with the addition of a BIM, BIRD, or Charge Bridge, it may also assist in charging the coach's house batteries.

GENERATOR

When shore power is unavailable, the generator takes mechanical energy and converts it into alternating current to supply 120 volts to the coach and charge the coach's house via the converter or inverter/converter and the chassis batteries via BIRD, BIM, or charge bridge.

The generator is typically located in the front of the unit between the frame rails on diesel coaches. On gas units, the generator may be located anywhere between the mid and rear section of the coach. Generators can be powered by gas, liquid propane, or diesel fuel.

CONVERTER AND INVERTER/ CONVERTER COMBINATION

All Newmar coaches are equipped with a converter or inverter/converter combination. A converter transforms alternating current or shore line power 120 Volts to low-voltage direct current to provide power to the coach's 12 Volt house and chassis batteries. On the other hand, an inverter transforms direct current to alternating current to provide power to specified appliances and entertainment systems.

SOLAR PANEL

Some Newmar units are equipped with a 10 Watt solar panel wired to the chassis batteries. Prior models may have a five or 10 Watt solar panel and may be wired to the chassis-side KIB panel.

BATTERIES

Please refer to the Battery Basics article for more information.

Power Distribution

BATTERY DISCONNECT

Newmar uses an Intellitec disconnect relay connected to the battery bank to disconnect certain loads when placing the coach in storage. Keep in mind that not all loads are disconnected. This is very important to remember when a coach is put into storage and is not plugged into shore power. Before placing the battery disconnect in the “off” position, make sure the inverter (if equipped) is turned off.



When an older coach is stored while plugged into shore power, do not use the battery disconnect. If the battery disconnect is used, the chassis batteries will not receive a charge from the converter or inverter/converter combination. This is due to the coach battery wire being disconnected, meaning the BIM or the BIRD will not engage.

Some coach models have a manual rotary key switch to disconnect power, which is located in the overhead above the entry door. Most other coaches have a single lighted switch located in the front overhead that turns off the house voltage.

⚠ IMPORTANT

When the battery disconnect is ‘off’, meaning you have disconnected components from the batteries, there are still some loads on the batteries connected to the hot side of the Battery Disconnect Relay. Some of these loads may be Radio Memory, Entry Steps, and LP Detector. These will draw from the batteries, even when the disconnect is ‘off’. Pull the fuse for each of the ‘HOT’ circuits to stop the batteries from being drained.

To learn more, visit the Battery Disconnect home page in Newgle.


BI-DIRECTIONAL ISOLATOR RELAY DELAY (BIRD)

Current gas coaches and some older diesel coaches, use an Intellitec Bi-Directional Isolator Relay Delay (BIRD) with a separate solenoid. The BIRD monitors both the chassis and house battery and is the only place in the coach where they both merge. The BIRD only functions when the engine or generator is running or when the coach is connected to shore power.



To learn more, visit the Bi-Directional Isolator Relay Delay home page in Newgle.

BATTERY ISOLATION MANAGER (BIM)

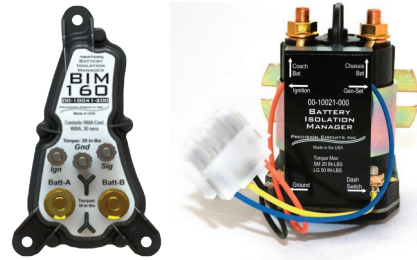


All current Kountry Star, Super Star, Dutch Star, and Ventana diesel coaches use a Precision Circuits all-in-one Battery Isolation Manager (BIM). The BIM monitors both the chassis and house battery and is the only place in the coach where they both merge. The BIM only functions when the engine or generator is running or when the coach is connected to shore power.

To learn more, visit the Battery Isolation Manager home page in Newgle.

CHARGE BRIDGE SOLENOID

All current model New Aire, Supreme Aire, Mountain Aire, London Aire, Essex, and King Aire coaches use Silverleaf, a computerized coach management system.

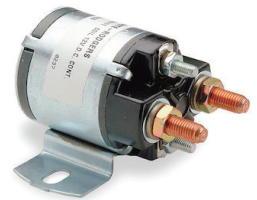




One of its many functions is to control the battery charging through the Charge Bridge Solenoid. The TM102 module monitors the battery state and senses the house and chassis battery voltage. When the parameters are met, the TM102 module activates the solenoid, causing it to bridge or connect the chassis and house battery banks.

For more information on your coach's TM102 module, refer to the SilverLeaf Functional Guide in Newgle.

FUSE BLOCKS AND MINI-BREAKERS

When a 12 Volt wire is ran, most of the circuits are protected with fuses or mini-breakers. These can be located at various areas in the coach but are typically located near the main breaker panel. The following photos are examples only. However, they may also be found in areas such as:

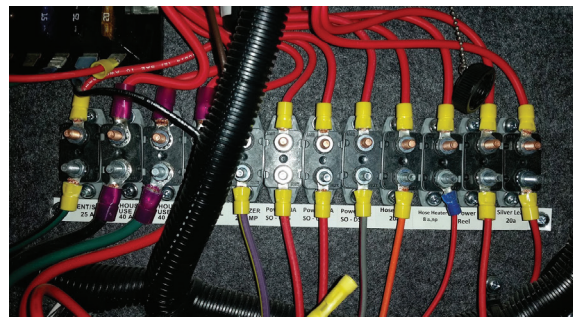

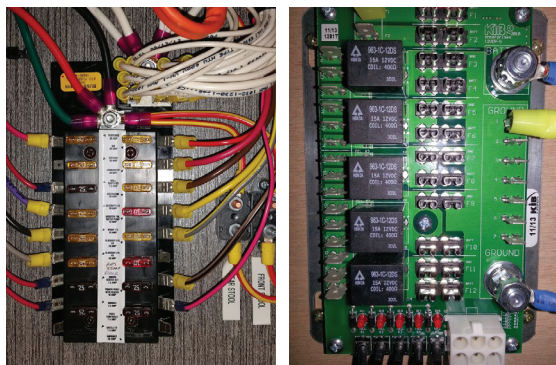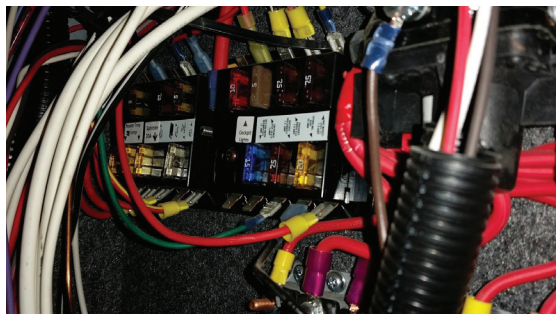

INTERIOR

- Rear bedroom
- Rear bathroom
- Closet
- Front Overhead Cabinet

EXTERIOR

- Power cord compartment
- Left, front electrical compartment (located beneath the driver window)
- Front firewall (gas coaches)

There are also some circuits that are protected with an inline fuse. Some fuse blocks have fixed relays integrated on a board. The board below is located in the cord compartment.



120 Volt Electrical System


This article provides general information about the components and functions of the 120 Volt Electrical System (AC) in Newmar coaches.

Power Sources

There are three types of alternating current (AC) power sources available to the coach: shore power, generator power, and inverter power. Shore power is provided by the RV park or by home service outlets and should be used whenever possible. Generator power should mainly be used when shore power is not available, specifically while traveling, when 120 Volt power is necessary to run high amperage loads, or when dry camping requires 120 Volt for battery charging. Inverted power is mainly used for light 120 Volt loads when shore power is not available and generator power is not desired.

Basic 12 Volt Power Flow

Since a battery is only an electrical storage component, 120 Volt power must be present to charge the batteries from the converter or inverter/converter combination unit. It is necessary to have 12 Volt power supplied from the coach's house battery bank in order to operate the interior lights and other 12 Volt loads such as slideout control systems, water pumps, vent fans, monitoring systems, etc.

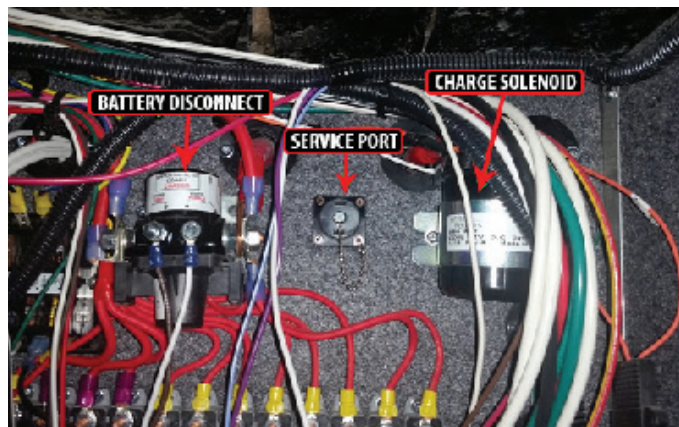


Most of this power flows through the battery disconnect to the fuse block or mini-breakers, which prevents overloading the circuit prior to progressing to the 12 Volt load. There are some 12 Volt circuits that do not go through the house battery disconnect; however, these loads still pass through a fuse or mini-breaker before progressing to the load.

IMPORTANT

When a 12 Volt load or component is not working, both 12 Volt power (+) and 12 Volt ground (-) are needed for the load to complete the 12 Volt circuit.


GENERATOR POWER

Generator power is produced within the generator and is output through the main wiring to the transfer switch. From the transfer switch, the power moves to the main breaker box where it is dispersed to individual circuits (outlets) and hard-wired components such as a water heater or boiler. From the inverted circuits, generator power will then travel through the inverter's internal transfer switch and back to the inverted subpanel to be dispersed through the individual breakers to the outlets or appliances.

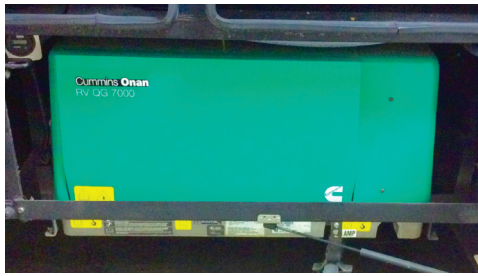

INVERTER POWER

This type of power starts at the battery bank. The battery bank supplies 12 Volt power through cables to the inverter, which uses the 12 Volt direct current to produce 120 Volt alternating current. The inverter performs this action by using a transformer to increase the voltage and modify the higher voltage into a useable alternating current power. Power then goes to the inverted sub panel, which is dispersed through the individual breakers to the outlets or appliances.

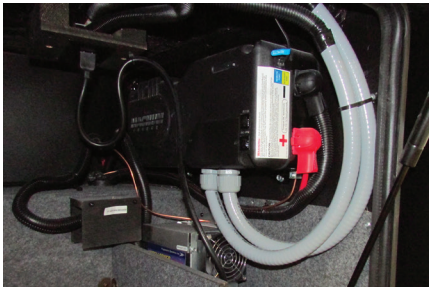

The inverter may provide battery charging while 120 Volts is supplied via the generator or shore power. The inverter performs this action by using the transformer to decrease the voltage and rectify the alternating current into useable direct current voltage. This is regulated by internal sensing circuitry based upon the battery bank's state of charge and several other factors, depending on the coach's particular inverter brand and type.

SHORE POWER

Most RV parks provide 30 Amp, 120 Volt at the site; however, many parks also provide 50 Amp, 240 Volt service to accommodate the electrical needs of newer and larger coaches. Shore power is supplied to the coach via a power cord. Two sizes of power cords are found in Newmar coaches: 50 Amp and 30 Amp. The 50 Amp cords are made up of four conductors #8 stranded wire and a molded plug. The 30 Amp cords are made up of three conductors #10 stranded wire and a molded plug.



Shore power enters through the 30 or 50 Amp power cord to the power cord reel (if equipped). From the power cord reel, it travels to the transfer switch and then to the main breaker box where it is dispersed to the individual circuits to supply power to hard-wired components such as air conditioners, water heaters, etc. and then to the inverter (if equipped).

The inverted circuits move from the inverter's internal transfer switch to the inverter subpanel (a smaller breaker box). From the subpanel, the power circulates to the individual breakers and to the electrical outlets and appliances.

SHORE POWER ADAPTERS

⚠ IMPORTANT

Newmar Corporation does not recommend use of adapter, cheater, or dog-bone style connectors that will modify the existing shore power cord to a different style of outlet. Use of this type of adapter will greatly reduce the amount of available current in the unit, as well as create the potential for electrical failure and/or fire.

If an adapter is used, there are three common sizes of power cord adapters available to adjust to a smaller amperage outlet:

1. 30 amp to 20 amp
2. 50 amp to 20 amp
3. 50 amp to 30 amp



It is important to understand the risks involved and the possible effects of using adapters in conjunction with your coach. Some of these risks and possible effects include:

- Melted or damaged adapters causing poor connection (or no connection at all)
- Melted or damaged 30 or 50 Amp plugs causing fluctuations in voltage that may damage electronics
- Insufficient amperage causing the tripping of a breaker at the post or a limited use of appliances

Low voltage can also be caused by use of adapters, long extension cords, or extension cords with an insufficient wire size.

⚠ IMPORTANT

Newmar Corporation cannot assume liability for failures occurring to the RV, its electrical system, or any of its components from the use of any electrical adapter.

AUTOMATIC TRANSFER SWITCH

Current coaches with a generator will also have a transfer switch installed in the cord compartment. An automatic transfer switch converts two inputs and connects them to a single common output.




The shore power cord is connected to one of the inputs, while the generator is connected to the transfer switch's second input.

Automatic transfer switches are logic-controlled to convert under a given set of conditions. The transfer switches used in RVs are typically generator priority switches which connect to shore power under normal use. As soon as the transfer switch detects the presence of 120 Volt power on the generator input lines, it will switch over to the generator's inputs and drop the connection to shore power.

Transfer switches are designed so that only one input can be connected at a time in order to prevent any back feeding of electrical power. In addition, RV transfer switches generally have a built-in delay allowing the generator to warm up and speed up before actually switching the load. This prevents stalling or stumbling while the engine is still cold and not producing full power.

MAIN SERVICE PANEL BREAKER BOX

The main service panel or 120 Volt breaker box is typically located inside a bathroom, bedroom, or front overhead cabinet depending on the coach model and floor plan. The breaker box contains the main 50 Amp (or 30 Amp if equipped) breaker and the individual breakers protecting each circuit from overload conditions. Any unit equipped with two air conditioners or more must have 50 Amp service. The task of the breaker is to "trip" if the current exceeds the amperage rating on the breaker to prevent damage to the wiring of the circuit.

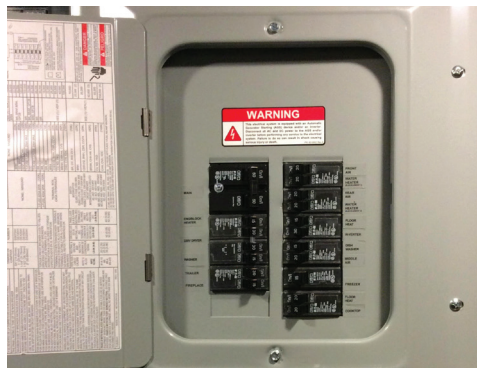

The breakers are resettable by simply flipping the breaker to the 'off' position, and then back to the 'on' position once the overload condition is removed. All 120 Volt circuit breakers are located in the main service panel unless the coach is equipped with an inverter/charger. These units are also equipped with a subpanel.

⚠ IMPORTANT

Breakers positioned next to each other are on different poles in a 50 Amp panel. If only part of the electrical circuits are working, you may have a poor connection at shore power. In this instance, power is most likely only being provided to one pole or leg.


SUBPANEL

The subpanel is a smaller 120 Volt breaker box containing the breakers for the circuits which the inverter is wired to power. It is typically located near the main breaker box unless the coach is equipped with an Energy Management System (EMS). In this case, the subpanel is often located within the EMS panel. The subpanel is installed to limit the AC power use to specific circuits when the electricity is supplied by the inverter. Some inverters may be used to power a specific circuit. In this case, a subpanel is not used.



AUTOMATIC GENERATOR START (AGS)

On coaches equipped with AGS, the generator will start and provide 120 Volt power if the incoming shore power voltage is not present and startup parameters are met.

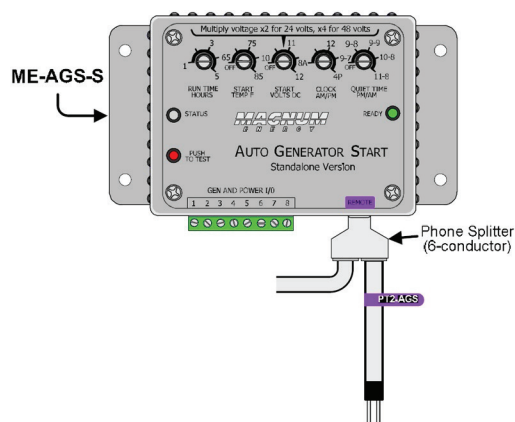

⚠ IMPORTANT

This function must be enabled in order for the AGS to function properly.

The AGS may be controlled via the ME-AGS or SilverLeaf.


ME-PT2 can be used in conjunction with the Dometic Duo-Therm kit and Comfort Control Center (CCC II Thermostat) or KIB L-Panel to connect the t-stat output of the A/C directly to the AGS. This allows the AGS to start on demand from the A/C for either heat (heat pump only) or cool.

1. Follow Comfort Control Center or KIB L-Panel instructions for proper zones, heat, cool and AGS settings.
2. The ME-AGS-S will now start on demand from the Comfort Control Center or KIB L-Panel.

For more information about AGS operation via the SilverLeaf system, refer the year/model-specific SilverLeaf Touchscreen Guide in Newgle.

50 AMP ENERGY MANAGEMENT SYSTEM (EMS)

The 50 Amp Precision Circuits Energy Management System is currently offered as standard or optional equipment on all coaches not equipped with a SilverLeaf Coach Management System. Its function is to provide power management for certain 120 Volt loads and as a system of energy management to minimize the overloading and tripping of circuit breakers. The EMS contains a main distribution panel with a self-contained control module and a remote display panel, which is typically located in the dash overhead electrical control cabinet.

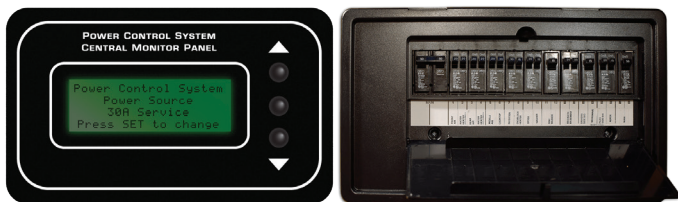

The EMS control module automatically senses the available power being supplied to the coach. The module determines whether it is connected to a 50 Amp (240 Volt) or the generator. On 120 Volt service, it is unable to determine if the source is providing 30, 20 or 15 Amp shore power. Depending on available power, it can control up to seven loads.

The EMS controls air conditioner loads using low-voltage switching and other 120 Volt, heavy-load appliances, such as block heaters, water heating elements, and air conditioners. The EMS will also control the 2012 Magnum inverter charge rate or switch to invert depending on the charging status. The charger will only reduce once it is in float status.

The current-sensing relay will display the amperage on each leg. The EMS will start shedding loads and look at the AC current when it sheds a load, determining when it has enough current available to turn on the load again.

When the EMS sheds a load, it only looks at one leg to see how much of a load was shed. For coaches equipped with the SilverLeaf system, refer to the SilverLeaf Functional Guide for more information on your EMS.

CONVERTERS

All Newmar coaches are equipped with a converter or an inverter/converter combination. Converters are used to transform alternating current power (120 Volt AC) to direct current power (12 Volt DC). Converters supply the coach with 12 Volt power to operate systems in the coach and provide battery charging.



Newmar currently uses three sizes of converters: 45, 60, and 80 Amp models. Previous units may have a 55 or 75 Amp converter or two 45 Amp converters with a total of 90 Amps available. When replacing a converter, it is necessary to use the same size converter to ensure sufficient wiring and breakers for the converter's input and output ratings.

Possible causes of converter failure:

- Overheating caused by cooling fan malfunction or inadequate ventilation causing damage to the converter
- Blown fuses

INVERTERS

An inverter changes 12 Volt DC power to 120 Volt AC power. Coaches with an inverter only typically use it for powering the entertainment equipment like the TV, DVD, and Blu-ray players. The inverters used for this purpose are usually 600 watt to 1000 watt (1000 Watt inverters may also power a small refrigerator) and do not have battery charging capability.



The inverters are usually located in a basement compartment of the coach. Some inverters have a remote panel for an on/off switch in the overhead driver area or above the entry door. When power is supplied by either the generator or shore power, the inverter merely allows the power to “pass through” and will then stop pulling power from the batteries to try and supply 120 Volt power. There is a protective breaker on the inverter to prevent circuit overload.

Possible causes for inverter failure:

- Overheating caused by inadequate ventilation causing damage to the inverter
- Overloading the circuit causing “tripped” breakers

INVERTER/CONVERTER COMBINATIONS

Many Newmar coaches are equipped with inverter/charger combination units, sometimes referred to as an inverter/converter unit. These units range from 1200 to 3000 Watt and serve as a three stage charger and an inverter. Coaches equipped with this option will also be equipped with a 120 Volt subpanel.



The subpanel is used to limit the circuits powered by the inverter(s). This is necessary to avoid draining the batteries by supplying inverted power to all circuits. The subpanel is located next to the main service panel. On units equipped with an EMS, the subpanel is located in the same breaker box but is separated in the interior of main panel. The coach battery bank supplies the inverter 12 Volt power and has a high amp fuse link on the positive lead from the batteries and is located near the battery bank.

The inverter/charger can be controlled by a remote panel, from another system like SilverLeaf, or at the inverter itself. The remote panel is typically located in the front overhead compartment or above the entry door and is used to control the inverter and the battery charging functions. If a remote panel is connected to the inverter, then the remote panel takes priority.

THREE-STAGE CHARGING PROCESS

The charging cycle uses three states: bulk, absorption, and float. During the initial bulk stage, the inverter charges at near its full current ability. This causing the battery voltage to rise over time. After the battery voltage reaches the bulk voltage setting, the charger starts the absorption stage.

During this phase, the charge rate is gradually reduced while the battery voltage is held near the bulk voltage setting. This insures that the battery is fully charged. The float stage is initiated when the battery has been held at the bulk voltage setting for the absorption period. At this point the battery voltage is allowed to fall to the float voltage setting, where it is maintained until another charge cycle is initiated. This reduces gassing of the battery and keeps it fully charged. A new three stage charging cycle is initiated after an AC source is reapplied to the AC input terminals.

GROUND FAULT CIRCUIT INTERRUPT (GFCI) OUTLETS

The Ground Fault Circuit Interrupt (GFCI) outlets protect the user from ground faults between a hot wire and ground. The 120 Volt electrical outlets in the kitchen and bath area are GFCI protected receptacles. The electrical outlets located in the Slideouts are wired through the kitchen GFCI. The exterior electrical outlets are wired through the bathroom GFCI. On units equipped with the floor heat option, a separate GFCI is installed in the bathroom or near the main breaker box. Units with the holding tank heat pad option will have an additional GFCI located in the basement area; however, the exact location varies.



The GFCI outlets should be tested at least once a month. The 120 Volt electrical system must be energized in order to test the GFCI. The reset button needs to be pressed before starting the test. Then push the test button, which will cause the reset button to pop out, confirming the protected circuits have been disconnected. Push the reset button again until a click is heard to reactivate the protected circuit. If the GFCI is working properly, the reset button will remain in the “IN” position. If an item plugged into a Slideout or outside receptacle is not working, check for a tripped GFCI in the kitchen or bathroom. Likewise, if the floor heat or holding tank heat pads are not working, check the GFCI for that circuit.

WARNING

The GFCI will not reduce the shock hazard if the short is between a neutral and hot wire or two hot load wires.

120 VOLT OUTLETS

Several 120 volt receptacles are located throughout the interior of the unit. These receptacles require three-pin plugs that provide proper grounding to protect you from electrical shock. The breaker for the outlets are usually located in the breaker box. If the breakers are on the inverted circuitry, they will be located in the subpanel near the main breaker box.



⚠ IMPORTANT

Do not use an adapter, cheater, or extension cord that breaks the continuity of the ground circuit to the ground pin. Never remove the ground pin from a plug in order to connect it to a two-pronged ungrounded outlet.

Electrical Typical Amp Draw List

This article provides a basic overview of the typical amp draw of electrical components and appliances in a coach.

Knowing and understanding the electrical terminology, as well as the average amperage (current draw) of all the electrical appliances in your coach, can help you manage electrical use and prevent the inconvenience of tripping a breaker.

Amp Draw

Do you know how many Amps you are using at any single moment? It is surprising how quickly the current draw (Amps) of your appliances can add up for your coach's 30 or 50 Amp system. Knowing and understanding the electrical terminology, as well as the average amperage (current draw) of all the electrical appliances in your coach, can help you manage electrical use and prevent the inconvenience of tripping a breaker.

Below is a list of the typical appliances used and the approximate amps required to operate them.

- V = volt; volt is the measurement of electrical pressure
- A = amp; amp is the measurement of electrical current (volume) used by an electrical device.
- W = watt; watt is the measurement of how much electrical work is being done.

Appliance	Required Amps
Air Conditioner (depending on brand, BTU rating and options)	14.0 to 16.0 Amps
Inverter (depending on wattage rating, brand, and model)	9.0 to 18.0 Amps
Converter with continuous 12 volt power supply (depending on amp rating and brand)	11 to 17 Amps
Refrigerator (residential compressor-type)	8.5 to 12.0 Amps
RV Refrigerator (Absorption)	2.7 to 6.4 Amps
Microwave Oven	11.3 to 14.2 Amps
Washer and Dryer (2-piece)	16.0 Amps
Television (depending on size, brand, and type)	1.0 to 3.0 amps
Central Vacuum Cleaner	11.3 Amps
Electric Hot Water Heater (depending on brand and type)	11.7 to 12.5 Amps
Food Processor	6.0 Amps
Ice Maker	4.0 Amps
Electric Freezer (Compressor)	6.4 Amps
Hair Dryer (1500w)	12.5 Amps
Electric Coffee Pot	9.0 Amps
Iron	10.0 Amps
Radio	0.8 Amps
Toaster	8.0 Amps
Electric Frying Pan	10.0 Amps
Coffee Maker	10.0 Amps

Conversions

You can look at at your electrical appliances, find the label that contains amperage or wattage ratings and calculate exact usage by using the formulas below.

- Watts/Volts = Amps
- Amps x Volts = Watts
- Watts/Amps = Volts

EXAMPLE

Most products requiring electricity provide how many amps or watts it typically utilizes. If your electric hot water heater is always in use (~12.5 amps), and you start your air conditioner (~15.0 Amps) and put on a pot of coffee (~9.0 amps) and make some toast (~8.0 amps) while watching TV (~ 2.0 amps), you have far exceeded the 30 amp service, resulting in a tripped breaker.



Batteries

Battery Basics

Introduction

As with anything technical, greater knowledge of the basics may help you increase performance, reliability, and longevity, as well as prevent future problems with your batteries. This article will provide information regarding your coach batteries; however, this is only one aspect of your coach's electrical system. To learn more about your batteries' role within the system, please refer to the 12 Volt Electrical article.

Commercial lead acid batteries have been used for over 150 years. The same chemical principal used to store energy now was also used many generations ago. Present day chassis battery power requirements are tremendous, considering today's vehicles and all of the electrical devices that must be supplied. All of these electronics require a reliable power source, and poor battery condition may lead to expensive electronic component failure. A battery is like a piggy bank - it stores energy, but cannot produce it. If you continue to withdraw without making any deposits, you will soon have nothing left.

Life Span of A Battery

Not long ago, motor homes only used a single 12 Volt house battery. Today, however, it is standard to have at least two batteries, and up to 16 total in some Newmar coaches, powering inverters up to 3000 watts. As energy requirements increase, the average battery life decreases. The life span of a deep cycle battery will vary considerably with how it is used, how it is maintained and charged, temperature, and other factors. The life span is dependent upon usage but often ranges between six months to 48 months. Only 30 percent of all batteries actually reach the 48 month mark.

It is best practice to change the complete battery bank when a new battery becomes necessary, as the battery bank is only as good as the weakest cell. One simple way to extend battery life is to hook it up to a solar charger during the off months.

Many people don't take into consideration how much power may be used by the inverters charging circuits mostly because they are working automatically in the background. 50 amp service has two 50 amp power legs, providing a total service of 100 amps.

Common Battery Terms

Ampere (Amp) - A unit that defines the flow rate of electricity (current) in a circuit.

Amp Hour (AH) - Measurement of electrical storage capacity on a deep cycle battery. The standard amp rating is taken for 20 hours. Example: A 100 AH rated battery is determined like this: Draw from the battery for 20 hours provides a total of 100 amp hours, translating to about five amps an hour (5 amps x 20 hours = 100 AH). However, it is important to know that the total time of discharge and load applied is not a linear relationship. As your load increases, your realized capacity decreases. This means if you discharged that same 100 AH battery by a 100 amp load, it will not give you one hour of runtime. On the contrary, the perceived capacity of the battery will be about 64 AH.

Cold Cranking Amps (CCA) - Measures the number of amps a battery can deliver at 0° F for 30 seconds without dropping below 7.2 Volts (1.2 Volts per cell). A high CCA battery rating is especially important in engine-starting battery applications and in cold weather. This measurement is not particularly important in deep cycle batteries, though it is the most commonly known battery measurement.

Cranking Amps (CA) - Measures available current at 32° F and is also called marine cranking amps (MCA).

Depth of Discharge (DOD) - Measures the percent of rated capacity to which a cell or battery is discharged. It is the reciprocal of a battery's state of charge. Example: A battery that has a depth of discharge of 45 percent has a state of charge of 55 percent.

Reserve Capacity (RC) - Measures the number of minutes a fully charged battery can continuously deliver 25 amps at 80 ° F before the voltage drops below 10.5 Volts. This measurement represents the amount of time the battery can operate if a charging system failure occurs.

Electrolyte Specific Gravity (battery test) - Unit of measure which compares the weight of the electrolyte solution to the weight of water. This test is performed with a hydrometer or a refractometer that is made for testing batteries. This type of test is used to determine the battery's state of charge; however, it cannot be used on sealed batteries.

Battery Types

LIQUID LEAD ACID / FLOODED

The Lead Acid battery consists of a plastic container with cells molded into it. Each cell contains plates, lead, and lead oxide (various other elements are used to change density, hardness, porosity, etc.) with 35 percent sulfuric acid and a 65 percent water solution. This solution is called an electrolyte, which causes a chemical reaction that releases electrons.

When testing a battery with a hydrometer, the amount of sulfuric acid in the electrolyte is measured. If the reading is low, the chemistry that makes electrons is lacking. The sulfur is now resting on the battery plates and will remain there until the battery is recharged and the sulfur returns to the electrolyte.

⚠ CAUTION

Use only distilled water to fill flooded / liquid lead acid batteries.

ABSORBED GLASS MAT (AGM) / DRY CELL

The Absorbed Glass Mat battery is just like a flooded battery, except the electricity is maintained in the glass mats, as opposed to freely flooding the plates. Very thin fibers are woven into a mat to increase the surface area to hold sufficient electrolyte on the cells for their lifetime. The construction allows the electrolyte to remain suspended in close proximity with the plate's active material, enhancing both the discharge and recharge efficiency.

When Deep Cycle AGM batteries are not discharged more than 60 percent, the cycle life could be approximately a few hundred cycles. If you do not use or operate your equipment daily, AGM batteries will hold their charge better than most other types. In most cases AGM batteries will provide a greater life span and cycle life than a Wet Cell battery.

AGM batteries are also often referred to as Sealed Regulated Valve, Dry Cell, Non-Spillable, and Valve-Regulated Lead Acid batteries.

⚠ CAUTION

Follow battery manufacturer instructions. Do not add any liquid to AGM batteries.

GEL CELL BATTERIES

The Gel Cell is similar to the AGM battery because the electrolyte is suspended; however, the AGM battery is still considered to be a wet cell. The electrolyte in a Gel Cell has a silica additive that causes it to set (gel) or stiffen. The recharge voltage on this type of cell is lower than the other types of lead acid batteries, due to the likelihood of an adverse reaction to over-voltage charging. Gel Cell batteries are best used in very deep cycle applications and may last longer in hot weather applications.

⚠ CAUTION

Follow battery manufacturer instructions. Do not add any liquid to gel cell batteries.

For more information about Battery Inspection, Safety, Care, and Maintenance, refer to Newgle.

LITHIUM BATTERIES

Lithium batteries are made differently and have several different characteristics from AGM, gel cell, or lead-acid batteries. They charge at different rates, discharge differently, and are affected by temperature differently. For more information on lithium batteries installed in Newmar coaches, refer to the corresponding year and model "Lithium Battery Quick Start Guide" in Newgle. If the coach was not originally equipped with a lithium battery system, Newmar does not recommend, condone, or offer suggestions for battery replacement using lithium batteries.

⚠ IMPORTANT

Newmar coaches are set up, configured, and tested to operate properly with the battery system that was installed at the time of production. Modifications to the battery system may cause charging, electrical system and/or multiplex communication issues. If the coach is not equipped with a lithium battery system, and if you choose to install lithium batteries, Newmar will not warranty or aid in the diagnosis of electrical, battery, multiplex, and/or charging system issues.

Battery Bank Wiring

PARALLEL BATTERY WIRING

Parallel battery wiring refers to two or more batteries with all positive (+) terminals hooked together and all negative (-) terminals hooked together. This results in a battery voltage similar to that of the individual batteries, typically 12 Volt, to boost battery capacity. Two identical batteries wired parallel will provide twice the electrical storage capacity of one battery, without increasing voltage.

SERIES BATTERY WIRING

Series wiring refers to two or more batteries hooked together, with opposite terminals connected. The positive (+) terminal of the first battery should be connected to the negative (-) terminal of the second battery. The resulting voltage is the sum of the individual batteries. For example, if two six Volt batteries are hooked together, the resulting voltage will be 12 Volts.

SERIES/PARALLEL WIRING

Series/ Parallel battery wiring is used on Newmar units when four or more 6 Volt batteries are used for the house battery bank. Since 12 Volts is the desired working voltage from the battery bank, the batteries are connected to provide 12 Volts with more capacity. Two 6 volt batteries wired together in a series create a 12 Volt battery bank.

Two or more of the 12 Volt battery banks can be connected together in a parallel format to provide more capacity.

In situations where multiple batteries are connected in a series, parallel or series/parallel, replacement batteries should be the same size, type, and manufacturer (if possible). Age and usage level should be the same as the companion batteries.

Battery Cycle Vs. Battery Life

A battery cycle is one complete discharge and recharge cycle (100 percent to 20 percent, and then back to 100 percent). Battery life is directly related to how deep the battery is cycled each time. The most common cycles are 10, 20, and 50 percent. Be cautious of ratings that list the number of cycles, unless it also states how low the battery is being discharged.

For example, telephone type (float service) batteries have been advertised as having a 20-year life. However, the rating only stands true at five percent depth of discharge (DOD), and the life span is much less when used in an application where the batteries are cycled deeper on a regular basis. Those same batteries are rated at less than five years if cycled to 50 percent.

If a battery is discharged to 50 percent every day, it will last about twice as long as if it is cycled to 80 percent DOD. If cycled only 10 percent DOD, it will last about five times as long as one cycled to 50 percent. The most practical number to use is 50 percent DOD on a regular basis for the best use of effective storage and cost.

House and Chassis Battery Bank Overview

This article provides a brief overview of the two different battery banks in a Newmar coach: House and Chassis.

Chassis Battery Bank

The Chassis Battery Bank supplies power to everything a customer requires to drive the unit. Currently, Newmar's chassis batteries are all Liquid Lead Acid. Spartan and Ford chassis have serviceable batteries and Freightliner chassis batteries are sealed. The type and brand of chassis battery may vary depending on coach year, make, and model. Chassis batteries may need to be disconnected and removed from the coach to maintain proper electrolyte levels or perform routine battery maintenance. House batteries may be either serviceable Liquid Lead Acid/Flooded or AGM/Sealed Cell.



Chassis Battery Bank Example

The chassis batteries on your motorhome are installed and warranted by the chassis manufacturer. The coach (or house) batteries on your motorhome are installed by Newmar Corporation, but warranted by the battery manufacturer. These batteries are used to operate the

In addition, there is an upper limit. A battery that is continually cycled down five percent or less will usually not last as long as one cycled down 10 percent. At very shallow cycles, lead dioxide tends to build up in clumps on the positive plates rather than in an even layer.

Battery State/Voltage Chart

State of Charge	Specific Gravity	12 Volt	6 Volt
100%	1.265	12.7	6.3
75%	1.225	12.4	6.2
50%	1.190	12.2	6.1
25%	1.155	12.0	6.0
Discharged	1.120	11.9	6.0

⚠ IMPORTANT

This battery state voltage chart is used as an example. Your specific battery manufacturer's chart may vary.

Note: Both voltage and specific gravity tests should be performed with no load on the batteries and without any supplied charging. Turn off all draws and charging. Allow the batteries to stabilize, and then proceed with the test.

12 volt items that are not a direct part of the chassis. Depending on the coach, the batteries may be located in the front of the coach under the front cap or on a pull out tray in an outside compartment.

⚠ CAUTION

Do not use the motorhome with the coach batteries disconnected.

The chassis batteries are recharged by the vehicle's electrical system whenever the engine is running, with added BIRD, BIM, or Charge bridge solenoids the vehicle's charging system will also charge house batteries if parameters are met. A decline in the coach battery voltage may be noticed while the chassis batteries are being charged.

The converter will automatically charge the coach batteries when the unit is connected to a 120 volt outside power source. The chassis batteries are isolated from the coach batteries, however with certain parameters met the BIRD, BIM, or Charge bridge will activate and allow charge to the chassis battery also. This prevents the chassis batteries from being drained by the interior 12 volt equipment, allowing ample voltage for engine ignition.

House Battery Bank

The House Battery Bank is necessary to operate everything a customer may require in order to live in the coach. These batteries can be either 6 Volt deep cycle (all diesel coaches except coaches equipped with a lithium battery bank) or 12 Volt deep cycle, depending on the model and brand of the coach. Newmar house batteries may be serviceable or sealed. For more information about the lithium battery system, refer to Newgle.



AMG House Battery Bank Example

Battery Boost (Emergency Engine Start) Switch Overview

This article provides the Newmar-recommended instructions for operating the battery boost switch. This switch is sometimes referenced in Newmar's sales materials as the "Emergency Engine Start Switch."

Single Position Battery Boost Switch

The Battery Boost switch is located on the dash and, when pressed, momentarily connects the house batteries to the chassis batteries via the solenoid. This allows the chassis batteries to obtain power from the house batteries to assist in starting the engine.



If the chassis batteries cannot turn the engine over, hold down the Battery Boost switch and attempt ignition. By using the Battery Boost switch while trying to start the chassis engine, the house battery bank supplies a battery voltage boost to the chassis batteries if the house battery bank voltage is higher than the chassis battery bank.

If the battery boost switch is required to start the engine on a regular basis, ask your dealer to check the chassis batteries and charging system.

Dual Position Battery Boost Switch

2019 and newer diesel pusher coaches may have a dual position battery boost switch. This simply allows the chassis battery to be boosted from the house battery bank or the house battery bank boosted from the chassis battery, allowing the solenoid to operate from either source that has power to engage the boost solenoid. Once a click is heard, the solenoid has been energized and the battery voltage will be able to flow from the battery bank with the higher voltage to the battery bank with the lower voltage.



If you're in a situation where battery boost is necessary, press and hold down the switch while trying to start the coach. If the coach still does not start, try holding the switch in the opposite direction, and try again. If this is also unsuccessful in starting the coach, refer to the "Charging House and/or Chassis Batteries" article in Newgle for additional information prior to contacting Newmar for assistance.


Freightliner Front Engine Diesel Chassis Battery Overview

This article provides an overview of the Freightliner chassis battery bank on a front engine diesel coach.

Freightliner chassis batteries are sealed, non-serviceable batteries. They are provided with the chassis and warranted through the chassis manufacturer (Freightliner). The type and brand of chassis battery may vary depending on coach year, make, and model. Chassis batteries may need to be disconnected and removed from the coach to perform routine battery maintenance.

The chassis batteries are recharged by the vehicle's electrical system whenever the engine is running. With an added BIRD, BIM, or charge bridge solenoid, the vehicle's charging system will also charge the house batteries if the parameters are met.

The inverter charger will automatically charge the coach batteries when the coach is connected to a 120 volt outside power source or if the generator is running. The chassis batteries are isolated from the coach batteries; however, when certain parameters are met, the BIRD, BIM, or charge bridge will activate and allow charge to the chassis battery. This prevents the chassis batteries from being drained by the interior 12 volt equipment, allowing ample voltage for engine ignition.

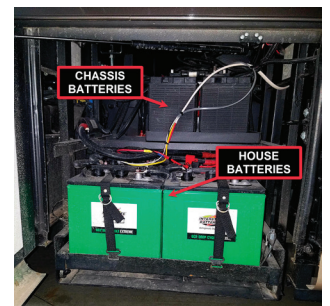


Freightliner Class A Front-Engine Diesel Chassis Battery Disconnect (High Amp Fuse) Overview

This article provides basic operation instructions for a Freightliner Class A Front-Engine Diesel Chassis Battery Disconnect/High Amp Fuse. This information is relevant to front-engine diesel coaches beginning in 2021.

The Chassis Disconnect Switch is located in the driver's side battery compartment. There is a blue button on a Freightliner chassis high amp fuse, and when pressed, it will release the yellow lever and disconnect most of the chassis battery loads.

When the battery disconnect is disengaged (turned off), the ignition key and most dash components will not operate. When placing the coach in storage or when working on the coach engine, turn off the disconnect to disable starting of the engine.

To reset or engage (turn on) the high amp fuse/battery disconnect, press the yellow lever until it latches and stays in place.

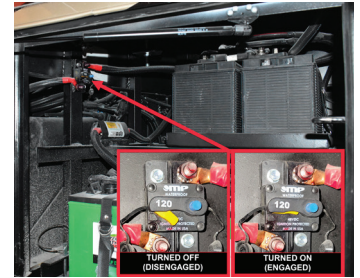

House Battery Disconnect Overview for Front Engine Diesel Coaches

This article provides information about the battery disconnect switch installed in a front engine diesel coach.

The House Battery Disconnect Switch is used to control the disconnect relay connected to the battery bank and is typically located in the front overhead control panel. This switch disconnects most loads when placing the coach in storage or when the coach is not in use. This is done to prevent the coach batteries from being drained during storage.

Not all loads are disconnected, and, depending on the coach and its options, some systems may have memory circuits purposely not wired to the disconnect solenoid, including, but not limited to, the LP detector (if equipped), driver memory controls, and other memory-based features.

Some switches have a shield on the sides to help prevent accidental battery shutdown when trying to operate the baggage door lock switch.

To operate the battery disconnect:

1. Press up on the rocker switch to turn on the disconnect and reconnect the batteries. This will make the 12 volt system ready for use. When the battery disconnect is turned on, the indicator light will illuminate.
2. Press down on the rocker switch to turn off the battery disconnect and disconnect the batteries. When the battery disconnect is turned off, the indicator light will also turn off.



Battery Inspection, Safety, Care, and Maintenance

This article provides information regarding the inspection, care, and maintenance for coach batteries. Battery maintenance is an important issue often overlooked by many RV owners and technicians. As batteries age, their maintenance requirements change. This means longer charging time and/or higher finish rate (higher amperage at the end of the charge). Usually older, serviceable (unsealed) flooded batteries need to be watered more often, as their capacity decreases over time.

Safety Guidelines

WARNING

Prior to handling or working with a lead-acid battery, consult your battery owners' manual for instructions and safety precautions.

CAUTION

Disconnect the 120 volt electrical power cord and the negative terminal from the coach batteries, and make sure all power sources are disable (ignition, generator, shore power, inverter) before working on the electrical system.

⚠ WARNING

Remove rings, metal watch bands, and other metal jewelry before working around batteries. Use caution when using metal tools. If a tool contacts a battery terminal or metal connected to it, a short circuit could occur, which could cause personal injury, explosion, or fire.

Lead-acid batteries contain hydrogen-oxygen gases that may be explosive and sulfuric acid that may cause severe burns. To avoid injury, observe these precautions when handling or working with a lead-acid battery:

- Wear ANSI (American National Standards Institute) approved safety glasses or goggles, as well as a face shield.
- Wear proper clothing to protect your face, hands, and body.
- Work in a well-ventilated area.
- Never lean over a battery while boosting, testing, or charging.
- Keep all ignition sources away from the battery. Cigarettes, flames, or sparks could cause a battery to explode.
- Always shield eyes and face from the battery.
- Do not charge or use booster cables or adjust post connections without proper instructions and training.
- Keep vent caps tight and level.
- In the event of an accident, flush eyes or skin with water, and call a physician immediately.
- Keep out of reach of children.

Common Causes Of Premature Battery Failure

- Deep discharges (leaving your lights on)
- Misapplication
- Replacement using an undersized battery not meeting Newmar's OEM specifications
- Loss of electrolyte due to overheating or overcharging
- Undercharging or loose alternator belt
- Excessive vibration (due to loose clamp or hold down on battery)
- Corrosion
- Freezing (A fully-charged vehicle battery will not freeze until the temperature is -75° F. Frozen batteries are not warrantable.)
- Failure to charge a battery during a period of six months or more (Inactivity can be extremely harmful to all lead acid batteries.)

Storing The Batteries

Remember that when batteries are not used for an extended period of time, they may lose their charge. Periodic charging of the batteries during storage of the unit will increase the life of the battery. Check the external condition of the battery periodically. Look for cracks in the cover.

The batteries should be removed and stored in a warm place when not using your motorhome for an extended period of time. This will prevent unnecessary drain and corrosion of the batteries. The coach batteries are 6 volt RV/Marine deep cycle batteries. Mark the cables, positive and negative, for easy identification. Batteries are not to be stored on concrete floors.

Preventing Corrosion

Newmar sprays the battery connections once they are tightened with a battery protector and sealer to help prevent corrosion. When performing battery maintenance, you should reseal the battery terminal connections. The following measures may also prevent future corrosion:

Use a small bead of silicone sealer at the base of the post where it meets the battery case. Place a felt battery washer over the post and into the bead of silicone. Coat the washer with high temperature grease or petroleum jelly (Vaseline), then place the cable on the post and tighten. Coat the exposed cable end with the grease. The gas condensation on metal parts of the battery cause most corrosion issues.

Cleaning The Batteries

Check the vent plugs and replace them if they are cracked or broken. Keep the battery clean. Accumulations of acid film and dirt may permit current flow between the terminals, which could drain the battery.

To clean, wash the batteries with a diluted solution of baking soda and water to neutralize any acid present. This should be a mixture of a couple of tablespoons of baking soda per pint of water. Rinse thoroughly with clean water. Foaming around the terminals or on top of the battery is a sign that acid is being neutralized. Avoid getting the baking soda solution in the battery. Secure all vent caps.


Both house and chassis battery cable connections need to be cleaned and tightened, as battery problems are often caused by dirty and loose connections. Dry the battery cables and terminals to prevent corrosion. Do not use grease on the bare metal inside the cable terminals. Grease can act as an insulator, and electricity will not flow through it. A plastic ignition spray will protect the terminals after they have been cleaned.

⚠ WARNING

Do not allow the battery fluid to contact your skin, eyes, fabric, or painted surfaces. The fluid could cause serious personal injury or property damage. Wear eye protection when working with any battery.

Checking The Fluid Level and Adding Fluid

A serviceable battery needs to have the fluid level checked, as they consume water and must be filled periodically. Please be sure to check the battery water level on a regular basis.

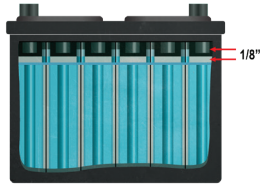

1. A serviceable battery needs to have the fluid level checked. AGM batteries do not require additional fluid. If the battery has removable vent caps, they can be twisted or pried off with a flat-head screwdriver. Once removed, the individual vent wells can be seen. Look down into each individual cell to make sure that the water is covering the lead plates and is at the proper level.

2. Add water to any cells that are low on water. Ideally, the water level should be 1/8" below the bottom of the tubes (there are six tubes in a 12 Volt battery) that go down into the battery. To avoid damage to the battery, make sure the fluid level never drops below the tops of the lead plates in each of the cells. Always use distilled water to fill the battery to prevent battery contamination.
3. Do not overfill battery cells. Adding too much water may result in acid overflow and damage around the battery. In addition, warmer weather may cause natural fluid expansion, forcing excess electrolytes from the battery.


⚠ CAUTION

Use only distilled water to fill flooded / liquid lead acid batteries. Non-serviceable (AGM, Gel Cell) batteries do NOT require the addition of ANY liquid. Adding liquid to non-serviceable AGM or Gel Cell batteries will result in damage to the batteries and will not be covered under warranty.

Battery Replacement Recommendations

This article provides information about general battery location and replacement recommendations.

On diesel coaches, the house batteries are normally located in one of the lower compartments. The chassis batteries are normally on the passenger side in the rear compartment on diesel pushers and under the driver's side cab on the front engine on Super C coaches. On coaches built on a Ford chassis, batteries are normally located in the front of the coach and can be accessed by opening the hood.

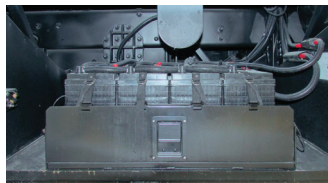

A battery wiring label is located inside the battery compartment and shows how the batteries are wired together. Replacement batteries must be wired according to the diagram shown. Replacement batteries should be of the same brand and capacity as the originals.

Newmar has used several brands and sizes of batteries over the years. For specifics about your coach's batteries, check the labels on the batteries for brand and amp hour ratings.

Any time one battery is replaced, it is important to test the rest of the batteries in the system to make sure they are still functioning properly and efficiently. If one defective battery is replaced, while leaving another weak or defective battery, lowered performance, or ultimately damaging the new or good batteries, may result.

⚠ IMPORTANT


Newmar coaches are set up, configured, and tested to operate properly with the battery system that was installed at the time of production. Modifications to the battery system may cause charging, electrical system and/or multiplex communication issues. For example, if the coach is not equipped with a lithium battery system, and if you choose to install lithium batteries, Newmar will not warranty or aid in the diagnosis of electrical, battery, multiplex, and/or charging system issues.

⚠ IMPORTANT

Serviceable Lead Acid Batteries Only: Charging batteries release gasses as the fluids inside boil, so it is critical to check the battery fluid levels regularly, particularly after extended periods of heavy use. Be sure to top off any battery that is showing signs of depleted fluid levels.

For More Information

For more information about coach battery basics, as well as other inspection, safety, and care and maintenance recommendations, refer to other articles in Newgle.

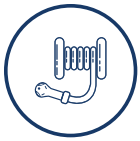

Shore Power Cord and Cord Reels

Shore Power Cord Overview

This article provides a functional and operational overview of the shore power cord as part of the coach's 120 volt power system.

Overview

Most RV parks provide 30 Amp, 120 Volt at the site; however, many parks also provide 50 Amp, 240 Volt service to accommodate the electrical needs of newer and larger coaches. Shore power is supplied to the coach via a power cord. Two sizes of power cords are found in Newmar coaches: 50 Amp and 30 Amp. The 50 Amp cords are made up of four conductors #8 stranded wire and a molded plug. The 30 Amp cords are made up of three conductors #10 stranded wire and a molded plug.

Shore power enters through the 30 or 50 Amp power cord to the power cord reel (if equipped). From the power cord reel, it travels to the transfer switch and then to the main breaker box where it is dispersed to the individual circuits to supply power to hard-wired components such as air conditioners, water heaters, etc., and then to the inverter (if equipped).

Operation

Pull out the power cord, and plug it into an appropriately-rated electrical outlet. Make sure the power source is providing the correct voltage before plugging in the shore cord.

To store the cord, disconnect it from the power source outlet. Remove the cord from the channel in the compartment and roll it up as necessary.



Energy Management Systems

Energy Management System Overview

This article provides an overview of the energy management systems used by Newmar.

The energy management and auto generator start systems work behind the scenes to monitor the power supply and demand within the coach. The system is designed to minimize the occurrence of tripped breakers for shore power and the generator while heavy loads are being used. The system turns off other loads temporarily while heavier loads are in use and restores power when heavy loads are turned back off.

When 50 amp service is available, no action is required; however, 30 amp service (or less) requires setting the value of incoming power to be selected.

Auto generator features may vary by coach model and options. Most AGS systems start the generator if shore power is unavailable and the HVAC system signals for air conditioner operation. Many systems will also start automatically if battery levels reach the preset values.

⚠ NOTICE

Whenever possible, connect coaches equipped with 50 amp shore power cord to 50 amp service, and connect coaches with 30 amp shore power cords to 30 amp service accordingly. It is the best practice to avoid using adapters and cheater cord devices.

For more information about the energy management system, refer to the SilverLeaf Coach Management or Precision Circuits Power Control System documentation found in Newgle, depending on which system is installed in the coach.


Precision Circuits Power Control System Monitor Panel Operation (Model: 00-10019-050)

This article provides basic operation instructions for a Precision Circuits Power Control System Monitor Panel (Model: 00-10019-050).

Monitor Panel

The PCS Monitor displays pertinent Power Control System status information. The UP and DOWN buttons are used to step through each individual Screen of information. Pressing & releasing either the UP or Down button will step to either the Previous or Next Display Screen. Once all the Screens have been seen, the next press of the Button will wrap back around through all the Display Screens once again. The SET Button only functions when the Service Type screen is displayed, to Select between 30A Service and 20A Service.

(Note: 50A Service or Generator Service overrides the SET Button.) If there have not been any key presses for awhile, the PCS monitor turns off the backlighting to save on power. The first press of any key will only turn on the back lighting.

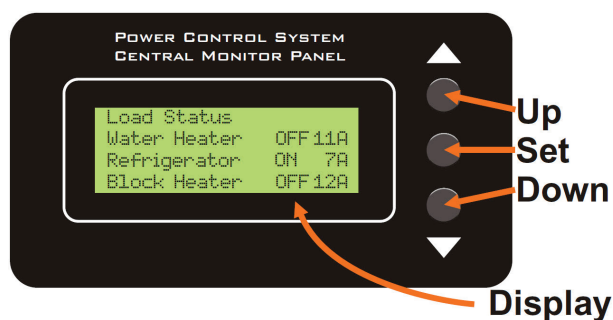

Service Type

- No Service: PCS has 12V Battery power to run the electronics, however, it does not sense any 120/240VAC Power.
- 50-amp Service: PCS senses 240/208VAC between L1 and L2 to determine this mode of operation. PCS controls the loads so that the current does not exceed L1 limit of 50amps, L2 limit of 50amps, and a combined limit of 100 amps.
- 30-amp Service: PCS senses 0VAC between L1 and L2. PCS adds the current of the two sensors and controls the loads so that the current does not exceed 30 amps.
- 20-amp Service: PCS senses 0VAC between L1 and L2, and the owner selects 20A on the Central Monitor Panel. PCS adds the current of the two sensors and controls the loads so that the current does not exceed 20 amps.
- Generator: PCS senses power to the Gen Hour Meter to determine this mode of operation. PCS controls the loads so that the current does not exceed the ratings of the installed Generator, for example L1 limit of 35amps, L2 limit of 35amps, and a combined Limit of 63 amps.

Operation Mode

This Screen gives the general information about Load Status.

The First Line shows the Status of the Magnum Battery Charger. It will either be: Bat Charge Normal, under complete Magnum Control, or Bat Charge Reduced, which means an Owner activated appliance would have caused a circuit breaker to trip but instead the Bat Charger Rate has been reduced. Reducing the Battery will be the 1st thing that PCS will attempt in order to reduce overall RV Power. Battery Charge may not be reduced if the Battery is Low, or the Magnum Inverter is on Line 1 Circuit Breaker and the Overload is on Line 2 only.

- The Second Line show the Status of the Magnum Inverter. It will either show Inverter Normal, under complete Magnum Control.
- Inverter Assist, PCS is requesting that the Magnum Inverter assist by temporarily generating 120VAC power from the batteries.
- Inverter Assist 12A, the end of this line shows the amount of 120VAC current that the Inverter is supplying.
- Inverter Assist Deny, means the Magnum Inverter can not Assist at this time, for one of many Magnum Inverter reasons, i.e. Battery Low, Over-current, etc. (See Magnum Owner's Manual).
- The Last Line shows if any Loads have been Shed to prevent circuit breaker tripping. Load(s) Shed = 7, depending on the model RV, there can be up to 7 Loads that PCS can control.

Line Status

PCS not only monitors total RV current but also has two built in Volt Meters, and monitors the voltage on each of the Lines.

L1 121Volts 15Amps, indicates that Line 1 has 121 Voltsrms and is presently drawing 15 amps.

! Brown Out !, if the display indicates Brown Out, the Display will hold the lowest captured voltage that may have occurred while the RV owner is away. Pressing any switch clears the display, and resumes displaying the present readings.

Wiring Status

Similar to an Outlet Tester that is plugged into outlets in your home to test for proper wiring, PCS monitors the wiring status of the Camp Ground Outlets you may plug into.

WARNING, IF THE DISPLAY EVER INDICATES “Wiring Status Error,” IMMEDIATELY, unplug the RV from the outlet, and have the outlet inspected by a qualified technician.

The other lines on the Display to the right indicate proper wiring for 50A Service. For 30A Service L1=L2.

Power Management

When the current exceeds the limit, because possibly the owner has turned on the Microwave, the PCS will independently limit the current on each line by performing the following in order: Reduce Magnum Battery Charge Rate, Inverter Assist, Load Shed. (If the Magnum Inverter is wired to the opposite leg, only Load Shedding will occur.

As each appliance is shed, PCS learns the current for that specific appliance, to ensure that there will be sufficient headroom to turn the appliance back on and be under the current limit. To ensure that Air Conditioner compressor pressure is bled, and to reduce quick cycling, there is a 2 minute delay from the time a Load has been shed, to the time power is restored.

Once the total RV current has dropped, for example because an owner operated appliance has been turned off, the PCS will reverse the above procedure, returning power to appliances whose operation was not immediately critical.

Load Status

Where the last Screen gave general information about all the controlled Loads, these next two screens gives detailed information about the status of each Load under PCS control.


Water Heater OFF 11A, indicates that the Water Heater power has been temporarily turned OFF, and the current at the instant the Water Heater was turned off last was 11 amps.

Refrigerator ON 7A, indicates that the Refrigerator has power. Again the 7amps of current is NOT the present current draw, but rather the current at the instant the Refrigerator was turned off last. A/C #2 ON, indicates that the A/C #2 has power. Since there is no current displayed, that only indicates that this load has not been turned OFF even once since the Battery has been reconnected and 12V power applied to PCS. PCS has never had a chance to “Learn” the current. The Current Displayed, is re-learned each and every time that the Load is turned OFF.

Looking at the list, it appears that PCS does not turn off Loads in Order Preference. PCS will always start shedding loads from the top of the list when PCS in 30A or 20A Service. However, in 50A Service, or running on the Generator there are two Main Breaker, Line 1 & Line 2. PCS will only shed loads if there is an overload detected on its associated Line. In other words, if shedding the Load will not help, skip it and move on. If then sometime in the future an overload is detected on the other Line, PCS will start at the top of the list again. The same is true with Magnum Battery Charge Reduction and Inverter Assist. Magnum can only help on the Line it is wired to, so if it will not help to Assist, don't bother.

Source(s): Precision Circuits Power Control System 50A (Rev052207)

Product(s): Precision Circuit Energy Management System Remote Display (Model: 00-10019-050, Newmar Part Number: 127558)

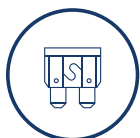

Fuse Panels

Front Engine Diesel Class A Fuse Panel Overview


This article provides an overview of a front engine diesel chassis battery disconnect and fuse panel.

The battery disconnect and fuse panel on coaches built on a Freightliner front engine diesel class A chassis are located under the front hood on the fire wall (on coaches built prior to 8/12/2022). On coaches built after this date, these fuses are located in the inverter/converter compartment (typically the first compartment on the driver's side). The fuse panel contains fuses, circuit breakers, the battery disconnect relay, and the B.I.R.D relay.

Remove the cover by rotating the retainer clips. The fuse labels are attached to the cover and contain the fuse size. To reinstall the cover, place it over the panel, and rotate the retainer clips to hold it in place.



There are also fuse panels located in the bathroom cabinet, as well as by the driver's side console.

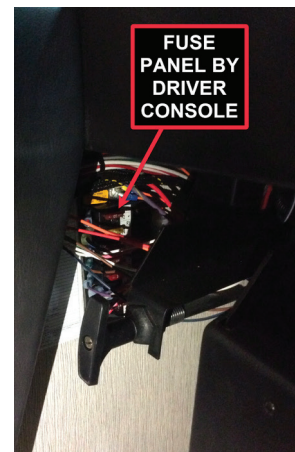



Generators

Generator Compartment Overview

This article provides an overview of the generator compartment.

Do not place anything in and/or around the generator; placing items in the generator may cause generator issues and/or overheating. Always disconnect or disable remote start wiring before attempting service work.

WARNING

This compartment is not to be used as a storage area. Storage of combustible materials or containers on or near any appliance in this compartment may create a fire hazard. Do not store such materials or containers in this compartment.

WARNING

This compartment is not to be used as a storage area. Storage of combustible materials or containers on or near any appliance in this compartment may create a fire hazard. Do not store such materials or containers in this compartment.

DD-67

Generator and GenStart/Stop Switch Overview for Diesel Coaches

This article provides basic operation instructions for a generator and GenStart/GenStop switch on a diesel coach.

The generator is wired into the Automatic Transfer Switch and will power all of the 120 volt circuits in your coach. Your generator may be located in a side compartment or in the front of the coach in between the frame rails of the chassis. Some generators are mounted on slides for easy access and may need to be unlocked before free movement is allowed. The main breakers for the output legs are located on the generator start panel.

Operation

The generator can be started from the rocker switch on the dash, from other remote start switches (if equipped), from the start switch on the generator itself, or from the SilverLeaf touchscreen (if equipped).

The generator in your coach runs on the same diesel fuel as your main engine. The diesel fuel is drawn through a separate supply tube that is positioned in the tank in a manner that will not allow the generator to draw fuel and run if the tank level dips below the $\frac{1}{4}$ level.

Depending on the ambient temperatures, the generator may pre-heat prior to cranking. This pre-heat condition is noted by flashing the light on the generator start switch until the cycle is complete (up to 15 seconds). Once it has pre-heated sufficiently, the starter will engage and the engine will start.



DIESEL FUEL ONLY

WARNING

It is critical that the AGS system be turned off any time the generator is going to be serviced. Failure to deactivate the AGS system may result in damage, injury, or death if the Genset should start unexpectedly. Also, if the AGS system is set and the generator is turned off at any switch, it will clear the AGS settings.

BEFORE STARTING THE GENERATOR:

1. Turn off the air conditioners and any other large electrical loads, as recommended by the generator manufacturer.
2. If the generator previously ran out of fuel, add fuel to the tank.
3. Prime the generator by holding the generator switch in the stop position.

TO START THE GENERATOR:

1. Press and hold the generator start switch in the "Start/Preheat" position. It will automatically delay and pre-heat.
2. The indicator light will flash rapidly while pre-heating, and the generator will crank and start.
3. When the generator starts, release the switch.
4. The indicator light will stay illuminated while the generator is running.

TO STOP THE GENERATOR:

1. Press the generator switch in the “Stop” position.
2. Release the switch.
3. The indicator light will turn off when the generator stops.

Service Required Indicator:

1. The generator switch indicator light may flash in a series of three quick flashes, followed by a short pause, and then quickly flash three more times. These flashes indicate that service is required.
2. Refer to the owner’s manual for your specific generator for more in-depth descriptions of flashing codes.

⚠ IMPORTANT

Excessive cranking can damage the starter motor. Do not crank the generator more than 30 seconds at a time, and allow at least two minutes before trying again if the first attempt fails.

⚠ CAUTION

Failure to turn off the 120 volt appliances when starting or stopping the generator may damage the transfer switch and/or electrical appliances.

⚠ NOTICE

If your coach contains an Energy Management System, 8kw generator, and three roof air conditioners, the combined load may exceed the capabilities of the generator. Please remember to turn off one of the air conditioners as the 8kw generator is not intended to run all three roof air conditioners at the same time.

⚠ DANGER

Vehicles and equipment powered by internal combustion engines and placed in recreational vehicles can cause carbon monoxide poisoning or asphyxiation, which could result in death or serious injury.
The flammable liquids used to power these items can cause a fire or explosion, which can result in death or serious injury.
To reduce risk:
a) Do not ride in the vehicle storage area when vehicles are present.
b) Do not sleep in the vehicle storage area when vehicles are present.
c) Close doors and windows in walls of separation (if installed) when any vehicle is present.
d) Run fuel out of engines of stored vehicles after shutting off fuel at the tank.
e) Do not store, transport, or dispense fuel inside this vehicle.
f) Open the windows, openings, or air ventilation systems provided for venting the transportation area when vehicles are present.
g) Do not operate propane appliances, pilot lights, or electrical equipment when motorized vehicles are present.

⚠ DANGER

Les véhicules et l'équipement propulsé par un moteur à combustion interne placé dans un véhicule de camping peuvent causer un empoisonnement au monoxyde de carbone ou l'asphyxie, ce qui pourrait entraîner des blessures graves ou la mort.
Les liquides inflammables utilisés pour propulser ces machines peuvent causer un incendie ou une explosion, ce qui peut entraîner des blessures graves ou la mort.
Pour réduire le risque:
a) Ne pas circuler dans l'aire de rangement du véhicule si des véhicules s'y trouvent.
b) Ne pas dormir dans l'aire de rangement du véhicule si des véhicules s'y trouvent.
c) Fermer les portes et fenêtres qui se trouvent dans les cloisons (le cas échéant) si au moins un véhicule est entreposé.
d) Épuiser le carburant contenu dans les moteurs des véhicules entreposés après avoir coupé l'alimentation en carburant au réservoir.
e) Ne pas entreposer, transporter ou distribuer de carburant à l'intérieur de ce véhicule.
f) Ouvrir les fenêtres, ouvertures ou systèmes de ventilation d'air fournis pour ventiler la zone de transport lorsque des véhicules s'y trouvent.
g) Ne pas faire fonctionner d'appareils au propane, de veilleuses ou d'équipement électrique en présence de véhicules motorisés.

Automatic Generator Start “AGS” via KIB 10.1” Central Monitor Capacitive Touch Panel

The AGS icon on the KIB 10.1” Central Monitor Capacitive Touch Panel displays the Automatic Generator Start pages to view and/or control the system statuses, quiet time feature, and generator run time for charging the house and chassis batteries.

⚠ IMPORTANT

The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.

NOTE FROM NEWMAR

Once the AGS function is enabled to allow the generator to start based on the voltage parameters being met and/or the demand for air conditioning, the generator will start to provide 120 volt AC power. If the generator is manually started or stopped by a switch at any time after the AGS is enabled, it will disable the AGS system. In order for the AGS system to function again automatically, it will need to be enabled again.


AGS is a control system that automatically starts the generator-based demands.

- HVAC requires AC voltage to operate.
- House or Chassis Battery is below set voltage and needs charged.

There are four different screens to control the AGS:

1. Status Page
2. Quiet Time Page
3. House Battery Page
4. Chassis Battery Page

Status Page

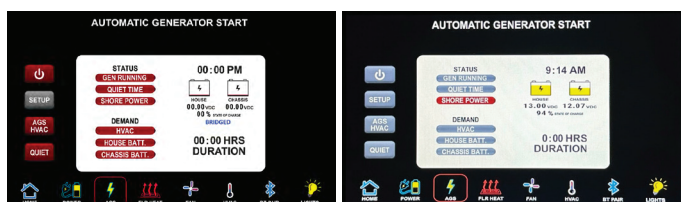

USER BUTTONS/ICONS

- Power Button: Turns the AGS system ON/OFF.
- Setup Button: Jump to the AGS Setup pages.
- AGS HVAC Button: When enabled, the HVAC can request the generator to run.
- Quiet Button: When enabled, the AGS will not start during “QUIET TIME.”
- Home Icon: Jump to the Home page. This icon is on every LCD page.

STATUS INDICATORS

The Status Indicators report that the AGS is operating or what is disabling AGS operation.

- Running: Generator is running.
- Quiet Time: Generator (AGS) is disabled because of “QUIET TIME.”

DEMAND INDICATORS


The Demand Indicators report what items are currently requesting the Generator to start.

- HVAC: HVAC has demand for the generator to run.
- House & Chassis Batteries: Low Battery has demand for the generator to run.
- House & Chassis Voltage Readout: Displays the current battery voltages.
- Duration: Displays how long the generator has been running (generator run time).

Setup Pages

QUIET TIME PAGE


The purpose is to prevent the generator from automatically starting at specific times.

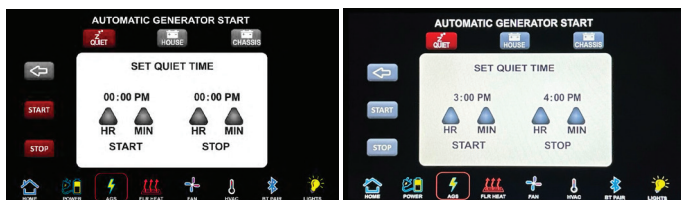

- Start: Time after which the AGS will not be allowed to start. Use “HR” & “MIN” buttons to set the “START” time of “QUIET TIME.”
- Stop: Time after which the AGS will be allowed to start. Use “HR” & “MIN” buttons to set the “STOP” time of “QUIET TIME.”

Note: The time of day is set in the HVAC section and must be set for operation. For example, RV parks have posted times when generators are not to run, and the user simply enters those times and enables the “QUIET” button on the status page. During this time, the generator will not run.

HOUSE BATTERY & CHASSIS BATTERY PAGES

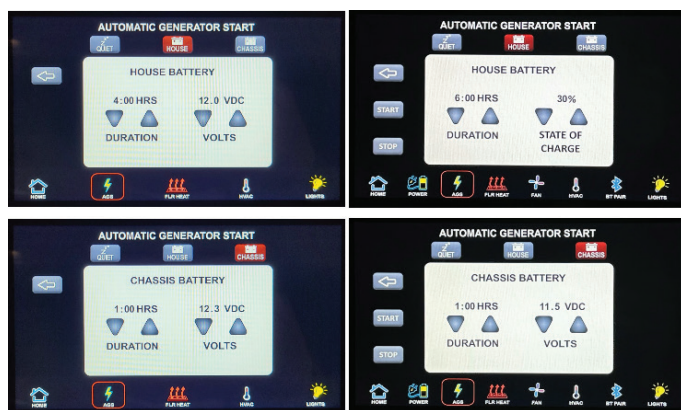

- Duration: Time the AGS is to run the generator after a low battery demand occurs. Use “HR” & “MIN” buttons to set the amount of time the generator will run while charging the house or chassis batteries.
- Volts: Low Battery Voltage selected setting for the generator to start. Use the up and down triangles to adjust the low voltage set point.

Example: If the house battery volts is “11.0 VDC” and the duration is “2:00 HRS,” when the house battery voltage is less than 11.0VDC, there will be a demand for the generator to start and run for 2:00 HRS. The chassis battery works the same way but with its own settings.


Notes: When there is a demand for the generator to run or stop, there can be up to two minutes of delay. During this time, the AGS is checking if there are any other demands.

Generator Maintenance

Before starting your generator for the first time each day, and subsequently after each eight-hour run cycle, perform the following checks to make sure it is ready to be used.

1. Make sure the carbon monoxide detectors in your unit are working.
2. Check for signs of fuel or exhaust leaks.
3. Make sure there is adequate clearance around the generator for proper ventilation. Also check for sloping ground or any other obstructions that may have occurred. Tall grass or other items that come in contact with the generator may interfere with ventilation or cause a fire.
4. Check the oil and coolant levels, and inspect for leaks.
5. Check the battery connections to make sure they are tight and clear of corrosion.
6. Inspect the generator compartment for road debris or damage that might affect the performance or safety.
7. Turn off major appliances (such as air conditioners, televisions, and other electronics that may excessively load the generator or may be sensitive to initial voltage surges).

The hour meter installed on the generator calculates the number of running hours of the generator motor. This is used for maintenance schedules. Regular oil changes and other maintenance performed at the prescribed intervals will greatly extend the life of your generator.

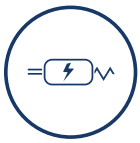

Inverters and Converters

Inverter and Converter Overview

This article provides basic information about the role and operation of inverters, converters, and inverter/converter combination units.

Inverters

The inverter modifies direct current to alternating current to provide power to specified appliances and entertainment systems. The inverter performs this action by using a transformer to increase the voltage and modify the higher voltage into a useable alternating current power. For this function to occur, the inverter must be powered, set up, and turned on. A variety of inverters are used by Newmar; however, most have a control panel located in the overhead cabinet with other switches and controls.

Converters

A converter transforms alternating current or shore line power 120 volts; to low-voltage direct current to provide power to the coach's 12 volt house and chassis batteries. This function occurs automatically when 120 volts are supplied to the converter. Converters are usually located in the cord compartment of coaches that do not have a inverter/converter combination unit.

Inverter/Converter Combination Units

The inverter/converter combination provides battery charging and allows the 120 volt power from shore power or the generator to pass through the inverter. The inverter performs this charging action by using the transformer to decrease the voltage and rectify the alternating current into useable direct current voltage. This is regulated by internal-sensing circuitry based upon the battery bank's state of charge and several other factors, depending on the coach's particular inverter brand and type.

This type of unit also performs the inverter function. For this function to occur, the inverter must be powered, setup and turned on. A variety of combination units are used by Newmar; however, most have a control panel located in the overhead cabinet with other switches and controls.

Progressive Dynamics Intelli-Power Converter Operation (Models: PD9100 and PD9200 Series)

This article provides basic operation instructions for a Progressive Dynamics Intelli-Power Converter (Models: PD9100 and PD9200 Series).

General Operation

The INTELI-POWER series converter will supply “clean” power from input voltages that range from 90-130 VAC.

The INTELI-POWER series of converters are primarily designed for use with a battery, however, the output of the INTELI-POWER converters are a regulated, filtered DC voltage that can power sensitive electronics without the need for a battery or other filtering.

At normal input voltages the full load rated capacity is available. At input voltages less than 105 VAC the converter may not supply full rated output capacity.

9100

The full rated load is available for load, battery charging or both. When functioning as a regulated battery charger the converter has a nominal voltage output of 13.6 VDC for 12 volt models. The system is designed to sense voltage on the battery and will taper the charging current as the battery becomes charged.

When the vehicle is to be stored for extended periods of time it is recommended that the batteries be disconnected, unless a TCMS Charge Wizard is attached to the TCMS interface. Reconnect battery once a month to maintain a full charge.

9200

The full rated load is available for load, battery charging or both. When functioning as a regulated battery charger the converter has a nominal voltage output of 13.6 VDC for 12 volt models. The system is designed to sense voltage on the battery and automatically selects one of three operating modes (normal, boost and storage) to provide the correct charge level to the batteries.

BOOST MODE

If the converter senses that the battery voltage has dropped below a preset level the output voltage is increased to approximately 14.4 VDC to rapidly recharge the battery.

NORMAL MODE

Output voltage set at approximately 13.6 VDC.

STORAGE MODE

When the converter senses that there has been no significant battery usage for 30 hours the output voltage is reduced to 13.2 VDC for minimal water usage. When in storage mode the microprocessor automatically increases the output voltage to 14.4 VDC for approximately 15 minutes every 21 hours to help prevent sulfation of the battery plates.

⚠ CAUTION

It is important that the fluid level of any connected batteries be checked on a regular basis. All batteries will “gas” and lose some fluids when continuously connected to any charging source.

TCMS Charge Wizard

Your INTELI-POWER converter is equipped with a TCMS interface. The TCMS Charge Wizard pendant plugs into the TCMS interface to provide computer control and monitoring of your batteries charge state. The Charge Wizard automatically determines which operating mode is best suited to recharge or maintain optimum battery condition. The Charge Wizard Pendant (if equipped) allows for manual override and has an indicator light to indicate the mode of operation.

BOOST MODE

Indicated by green LED remaining on.

NORMAL MODE

When the battery is between 50% and 90% charged, the green LED will flash once per second. When the battery has reached 90% of full charge the green LED will flash 2 - 3 times per second.

STORAGE MODE

Indicated by green LED flashing every 6 - 8 seconds.

MANUAL BUTTON

The manual button has been provided to allow the operator to temporarily override the converter (not recommended) or to verify the converter is operating properly. For manual operation, press and hold the button. The indicator light will soon remain “ON” indicating Boost Mode. Continue to hold the button and the light will blink rapidly indicating the converter is in the Normal Mode. Continue to hold the button until the light blinks slowly indicating the converter is now in the Storage Mode. After the manual button is released the converter will stay in the selected mode. When the battery charge status changes, the converter will return to the automatic mode of operation to prevent damage to the battery.


Source(s): Intelli-Power PD9100/9200 Series Power Converter Owner's Manual

Product(s): Progressive Dynamics 45 Amp Converter w/Built-in Charge Wizard (Model: PD9245C, Newmar Part Number: 118449) and Progressive Dynamics 60 Amp Converter w/Built-in Charge Wizard (Model: PD9260C, Newmar Part Number: 118450)


Xantrex Freedom X 1200 and 2000 Watt Sine Wave Inverter Operation (Models: XC Series)

This article provides basic operation instructions for a Xantrex Freedom X 1200 and 2000 Watt Sine Wave Inverter (Models: XC Series). Coaches requiring two or more 1200 watt inverters (Newmar option) will automatically be upgraded to a single Xantrex 2000 watt inverter with charger (Model 2080).

LCD Screen or Remote Panel

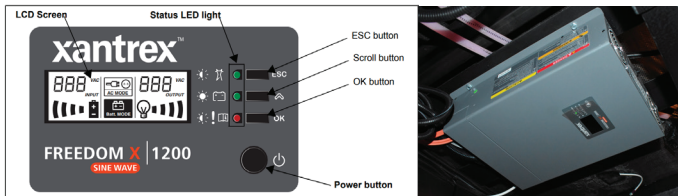

The LCD Screen changes depending on the operating mode of the inverter.

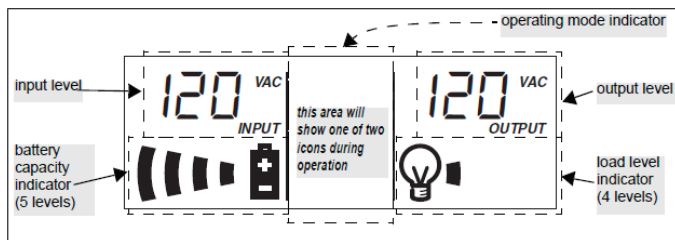


LCD Screen Icons and LED Light Indicators

Icon	Definition
	Appears in all modes. Indicates ~ 75–100% battery capacity.
	Appears in all modes. Indicates ~ 50–75% battery capacity.
	Appears in all modes. Indicates ~ 25–50% battery capacity.
	Appears in all modes. Indicates ~ 1–25% battery capacity.
	Appears in all modes. Indicates 0% battery capacity.
	Appears in AC mode only and sometimes in Fault mode. Indicates ~ 75–100% load capacity.
	Appears in AC mode only and sometimes in Fault mode. Indicates ~ 50–75% load capacity.
	Appears in AC mode only and sometimes in Fault mode. Indicates ~ 25–50% load capacity.
	Appears in AC mode only and sometimes in Fault mode. Indicates ~ 0–25% load capacity.
	Indicates AC mode in which shore power is available and passing through to the loads.
	Indicates Battery mode (Inverter mode) in which the inverter is running and supplying power to the loads from the battery.

Indicator	Definition
	Indicates AC mode in which shore power is available and passing through to the loads.
	Indicates Battery mode (Inverter mode) in which the inverter is running and supplying power to the loads from the battery.
	Indicates Fault mode and is accompanied by an error code displayed on the LCD screen.
	Indicates a Warning condition and is accompanied by an error code and a sounding alarm.

AC Mode

AC Mode is when AC shore power is available as input and the power is passing through as output. The display may look similar to this:

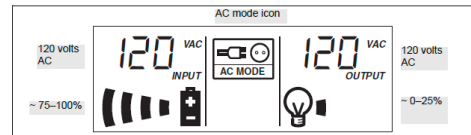


OPERATING IN AC MODE

The Freedom X operates in AC mode when an AC source (a generator or utility power) is present at the AC input terminals. When the AC source is within operating range (meaning the voltage is, the Freedom X unit bypasses inverter mode and powers the appliances connected to the unit. The green status LED lights up to indicate the Freedom X is using utility (or generator) power.


When shore power is present, AC power automatically passes through the Freedom X. Pressing the inverter Power button on the display panel does not interrupt the supply of shore power. AC Mode supersedes inverter operation.

When the Freedom X's inverter Power button is turned ON and the AC source is outside the operating range or is disconnected, the transfer switch automatically switches to Battery Mode.

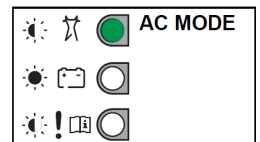

Battery Mode

In Battery Mode (also called Inverter Mode), the AC output power comes from the battery. The LCD Screen switches to displaying battery mode information such as:

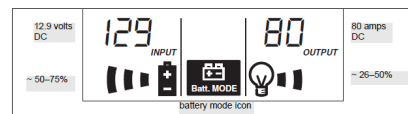


OPERATING IN BATTERY MODE

The Freedom X is in Battery Mode (also called Inverter Mode) when all the following conditions exist:

- inverter power button is ON (down position) or ignition auto-on is activated
- shore power is not presently available
- battery has sufficient power

Inverter operation means that DC battery power is presently being converted to utility grade AC power, powering equipment and appliances connected to the AC output terminal of the unit.

The green status LED lights up to indicate the Freedom X is using the battery to power the equipment and appliances.

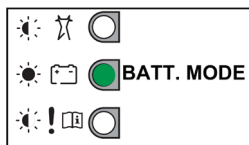


VIEWING INFORMATION DURING BATTERY MODE

The LCD screen displays Inverter information as well as feature settings in coordination with the LED lights alongside the screen.


- Press the Scroll UP button to toggle between the following basic information:

INPUT VOLTAGE/OUTPUT VOLTAGE

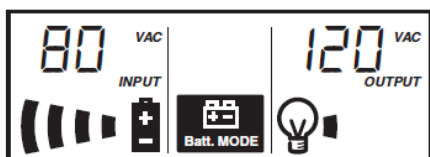


- Default screen
- Shore power voltage = 80V
- Output voltage = 120V

BATTERY VOLTAGE/BATTERY DISCHARGE CURRENT

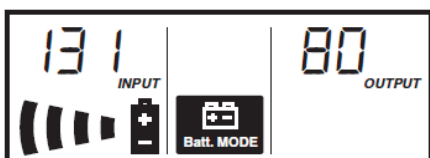


- Battery voltage = 13.1V
- Battery discharge current = 80A

LOAD PERCENT

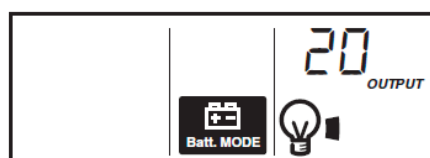

- Load = 20%


WARNING/FAULT

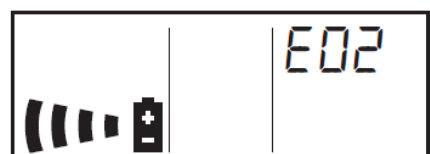

- If a fault or warning is detected, this screen becomes the default screen.
- Error code = E02 "DC Input Over Voltage shutdown"

Idle Mode

When there is no AC output such as when an error or fault condition is detected, the Idle Mode is displayed on the LCD Screen. An example is shown below:

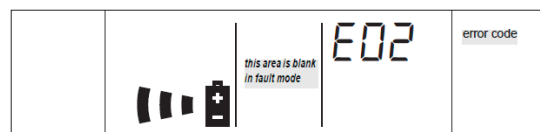

For definitions on battery capacity, load level, and error code indicators, refer to the "LCD Screen Icons" section.

Turning Inverter Operation On and Off

There are two ways to operate the Freedom X's inverter.

- Press the inverter Power button to a down position (it is Off in the up position).
- When the inverter's Ignition Control feature is set to Auto-on, and the Ignition Control switch is enabled and, a +12VDC signal is present.

WARNING

ELECTRICAL SHOCK HAZARD: Turning the inverter Power button off does not disconnect DC battery power from the Freedom X. You must disconnect both AC and DC power before working on any circuits connected to the unit. Failure to follow these instructions can result in death or serious injury.

To prevent unnecessary battery discharge, press the inverter Power button to turn it off when you are not using the Freedom X.

Checking Battery Status

During inverter operation (in battery mode), you can check the battery status by observing the battery capacity indicator on the LCD screen. The battery voltage appears in the left side of LCD screen. The normal operating battery voltage range is between 11 and 15 volts.

Checking Output Power

When the inverter is in operation (in battery mode), you can check how much power (displayed in Amps) the Freedom X is supplying to the connected loads by observing the load capacity indicator on the LCD screen. The battery discharge amperage appears in the right side of the LCD screen.

Operating Several Loads At Once

If you are going to operate several loads from the Freedom X, turn them on one at a time after you have turned the inverter on. Turning loads on separately helps to ensure that the inverter does not have to deliver the starting current for all the loads at once, and will help prevent an overload shutdown.

Turning The Audible Alarm On or Off


The Freedom X's audible alarm can be silenced. Any warnings such as fault conditions or imminent shutdown are both displayed on the LCD screen and sounded on the alarm speakers. It is not possible to turn OFF the screen and prevent it from displaying error codes but it is possible to turn OFF the audible alarm.

To reset the alarm:

- Press the inverter Power button to turn it Off (from a down position to up) and press again to turn it On to reset an active alarm and clear the fault.

Resetting AC Output

The 15 amp resettable breaker is located on the inverter near the outlet.

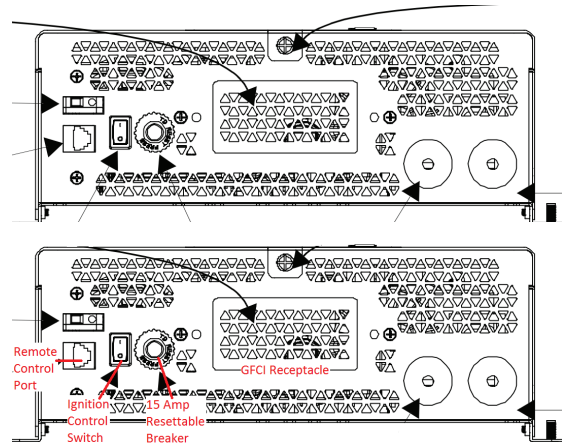

Source(s): Xantrex Freedom XC Series Inverter Charger Owner's Guide

Product(s): Xantrex 1200 watt Pure Sine Freedom Inverter (Model: 806-1212, Newmar Part Number: 144620) and Xantrex True Sine 2000 Watt Inverter (Model: 817-2080, Newmar Part Number: 145171)



Lighting

Interior and Exterior Lights

Provides basic information about operation, maintenance, and replacement of interior and exterior lights.

Interior Lights

A Newmar coach's electrical and lighting system is designed for maximum reliability, functionality, and style. Your coach may feature traditional on/off switches or multi-switch touch panel light and accessory switch panels. Located throughout the unit, these switching devices are used to turn lights on and off, as well as to operate power shades and window treatments. Many coach models boast LED accent lights and LED wall sconces custom-designed for Newmar.

Flip the switch or touch the switch panel to operate the light or accessory you desire. Some lights may also have dimming features, allowing you to adjust the interior lighting for mood or comfort. For more details about the interior lights, refer to the documentation in Newgle.

Many of these bulbs are made as both filament and LED. Most LED bulbs are polarity-sensitive unlike filament bulbs. When attempting to replace filament-type bulbs with LED-type bulbs, it is possible for the light fixture to be wired in reverse polarity for the LED replacement bulbs. Switching to a different type of bulb may require a wiring change. Newmar recommends any wiring modifications be performed by an authorized service technician.

Turn off the lights to avoid possible short circuits, blown fuses, and burns while removing and replacing bulbs or lights. Depending on the year and model of your coach, it may be equipped with LED light fixtures with the lights embedded into the light housing.

Many of the LED light fixtures have integrated LED assemblies that are non-serviceable and non-replaceable. When LED light bulbs burn out in this type of fixture, the complete light must be replaced. Replacement bulbs or light fixtures are available for purchase through the Newmar Parts Department.

⚠ IMPORTANT

When replacing halogen bulbs, do not touch the bulb, as the oil from your hands will reduce the bulb's life.

⚠ WARNING

Do not substitute bulbs just because they will fit, as it may cause overheating, back feed, or damage to the light fixture or lens.

Exterior Lights

Replace any exterior light bulbs or fixtures as needed to maintain DOT safety requirements. When servicing interior or exterior lights, make sure you replace any light bulb with the same bulb number (normally stamped on the base of the bulb or printed on the bulb). Replacing the bulb with the identical part number will ensure the wattage and base are the same.

The coach may have headlights installed that are atmospherically vented, so condensation may occur in these headlight assemblies. Under normal driving conditions with the headlights turned on, the condensation will dissipate, allowing it to escape through the vent.

⚠ IMPORTANT

Always check the operation of all headlights, turn signals, and clearance lights prior to traveling.

It is necessary to keep exterior lights clean, as dirty lights have diminished output and reduced visibility. To clean your exterior lights, use a mild soap designed for automotive car washing. Avoid using harsh cleaners, abrasive products, and petroleum-based products or other chemicals.

Lighting Operation via KIB Backlit Multiplex Switch

This article provides brief operating instructions for KIB backlit multiplex switches.


Operation

The KIB multiplex switch panel controls the lights, water pump, floor heat, and fans when wired to the corresponding switch label. The switch panels will vary by coach model and floorplan.

Press the switch labeled with the circuit you wish to operate. The green LED indicator will illuminate on the KIB switch panel when the circuit is activated. Pressing the switch again will turn the circuit off and the indicator will change to blue when it is turned off.

Buttons and Functions

Some of the buttons and functions displayed on the KIB multiplex switch panels include, but are not limited to: CEILING, KIT/ LRM, DRESSER, ACCENT, HI/LOW, WALL, RH RD, LH RD, W. PUMP, DINETTE, SEATING, KIT OVH, BKLTG, VANITY.

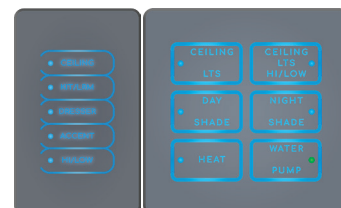


Lighting Operation via KIB 10.1" Central Monitor Capacitive Touch Panel

The Lights icon on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the controls for the lighting settings for each area, such as outdoor, living room, kitchen, bedroom, and bathroom(s).

Based on the coach model and floor plan, the following rooms, lights, and light switches will vary. The main/master light switch panel on the right side of the screen does not change based on the room selection. However, the panel on the left changes based on what lights may be controlled in the selected space, such as the living room, bedroom, kitchen, etc.

The following may appear:

- O/DR = Outdoor
- LVRM = Living Room
- KITCHEN
- BATH = Full Bath
- BDRM = Bedroom
- STLRM = Stool Room or 1/2 Bath

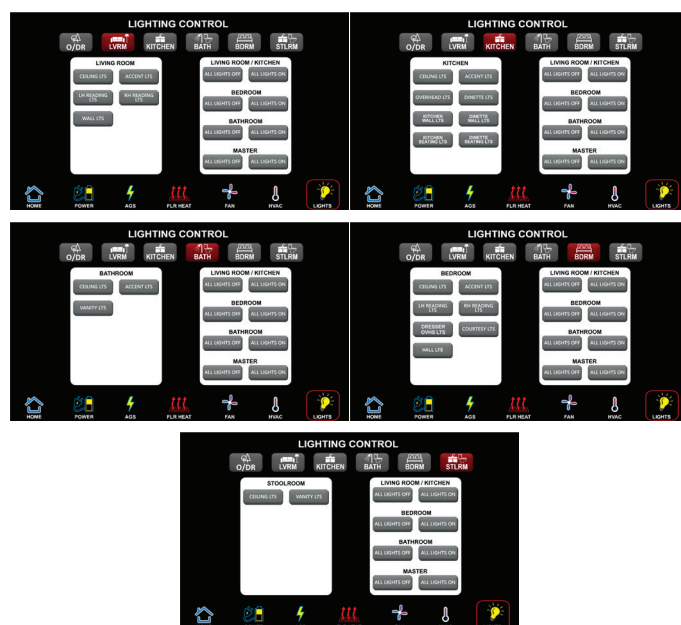**⚠ IMPORTANT**

The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.

Simply touch the desired light button to turn the light on or off.



Receptacles and Accessory Chargers

120 Volt Outlets

This article provides information about the 120 Volt outlets located throughout the interior of the coach.

Several 120 volt receptacles are located throughout the interior of the unit. These receptacles require three-pin plugs that provide proper grounding to protect you from electrical shock. The breaker for the outlets are usually located in the breaker box. If the breakers are on the inverted circuitry, they will be located in the subpanel near the main breaker box.



⚠ IMPORTANT

Do not use an adapter, cheater, or extension cord that breaks the continuity of the ground circuit to the ground pin. Never remove the ground pin from a plug in order to connect it to a two-pronged ungrounded outlet.

Ground Fault Circuit Interrupt Outlets (GFCI)


This article provides an overview of the purpose and function of a GFCI outlet.

The Ground Fault Circuit Interrupt (GFCI) outlets protect the user from ground faults between a hot wire and ground. The 120 volt electrical outlets in the kitchen and bath area are GFCI-protected receptacles.



⚠ IMPORTANT

This information is generic in nature and IS NOT specific to your coach. The exact location of GFCI outlets vary by year, model, and floorplan and/or component options. The following location descriptions and images are for example use only.

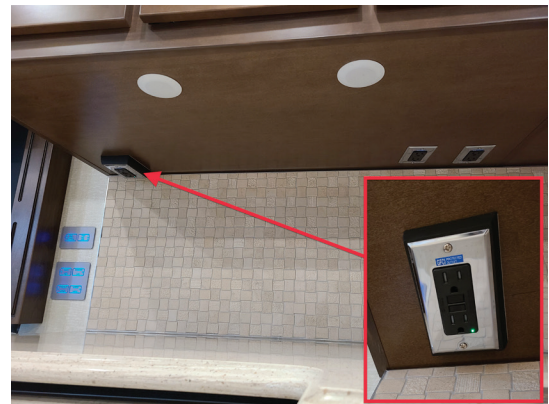

Location Tips and Examples

The electrical outlets located in the slideouts are typically wired through the kitchen GFCI. The exterior electrical outlets are typically wired through a bathroom GFCI. On coaches equipped with the floor heat option, separate GFCI(s) are installed in a bathroom, cabinet, or closet and/or near the main breaker box. Some may be difficult to find and may require using a flashlight while looking inside cabinets.

Coaches with the holding tank heat pad option will have an additional GFCI located in the basement area; however, the exact location varies.

Note: Any component that gets plugged into a GFCI-protected circuit will not operate if the GFCI has tripped. In some cases, this may include other components and/or options installed, such as powered theater seating.

⚠ IMPORTANT

Newmar recommends checking and resetting all GFCI outlets and 120 volt breakers, as well as replacing any blown 12 volt fuses when component(s) are inoperable.

Testing The GFCI Outlets

The GFCI outlets should be tested at least once a month. The reset button needs to be pressed before starting the test.

1. The GFCI outlet must be supplied with 120V power for testing and general use.
2. Pressing the Test button on the GFCI outlet will trip and cease to supply power to the outlets on the GFCI, as well as any other outlets that are hooked up downstream of the GFCI outlet.

3. Pressing the Reset button will reset the GFCI outlet and all outlets downstream of the outlet. Some GFCI outlets may have a LED light as a visual indicator of the power status.
4. If a tripped GFCI outlet will not reset, disconnect everything plugged into them or hooked up downstream; then try resetting the GFCI again.
5. If all loads are disconnected and 120V power is present to the GFCI outlet and the GFCI outlet will still not reset, it may require service or replacement by a qualified technician.

If the GFCI is working properly, the reset button will remain in the “IN” position. If an item plugged into a slideout or outside receptacle is not working, check for a tripped GFCI in the kitchen or bathroom. Likewise, if the floor heat or holding tank heat pads are not working, check the GFCI for that circuit.

WARNING

The GFCI will not reduce the shock hazard if the short is between a neutral and hot wire or two hot load wires.

BrandMotion FreedomCharge MAX Qi Wireless Dash Charger (Model: FDMC-1312)

This article provides an overview of the BrandMotion Dash Wireless Charging Station (Models: FDMC-1312), which may be built-in to the dash or cockpit area.

Charging your phone has never been easier.

FreedomCharge uses the wireless charging standard, Qi, to keep your phone going without the hassle of plugging it in. This type of charging has taken off with use in homes, but not until recently have you been able to get this convenient and easy to use technology in your vehicle. Some coaches may have more than one wireless charging station installed; however, the size and shape of the charging area may vary. Some chargers may be mat-style (flat on a driver or passenger side console), and some may be vertically installed as a bucket-style.

Operation

The wireless charging stations typically turn on at the same time as the battery disconnect. Dash-mounted chargers are powered from the fuse panel in the shore cord compartment (usually the USB F18 fuse). Some early production 2021 coaches may have used the Radio/AutoGenStart F13 fuse.

It works by using inductive charging technology to allow your smartphone to charge without connecting a charger. No longer will you have to search for your charger and orient it the correct way just to plug in your phone. Add a new level of convenience to your car and keep your eyes on the road, instead of fumbling with a tangled mess of cords. When a compatible device is placed on top of the charger, the audible tone sounds as the charger begins to charge phone, and the phone will also indicate it is charging. The updated triple coil allows charging through most thick cases, including Otterbox.



IMPORTANT

To find out if your cell phone is Qi compatible, refer to your phone's user guide or contact your network service provider.

Features

- Utilizes the wireless charging standard, Qi to charge your phones without cables
- Does not interfere with your vehicle's Bluetooth functionality while using your infotainment system.
- Charge's your phone to 100% battery and tapers off to avoid overcharging.
- Uses an initial audible tone to indicate charging when the phone starts charging.
- Easy cut-to-fit design converts most any vehicle phone storage tray into a seamless factory-look charging tray without unsightly cables.
- The non-slip charging mat holds your phone securely in place while driving.

Source(s): BrandMotion FDMC-1310 Landing Page

Product(s): BrandMotion Wireless Charging Unit (Model: FDMC-1312, Newmar Part Number: 153213)

USB Outlet, Auxiliary Input, and 12 Volt Receptacle Overview

This article provides a functional overview of the USB outlet, auxiliary input, and 12 volt receptacles in a coach.

Standard USB and/or USB-C Outlets

USB outlets may be located in various places throughout the coach. The number of ports may vary. The USB and/or USB-C outlets are for charging only and are not connected to any entertainment equipment. They simply provide convenient accessory charging without filling your 120 volt outlets with chargers. The round USB/USB-C outlets typically work from the 12 volt electrical system; depending on the location, they may be powered from the house or the chassis 12 volt system.



The electrical outlet-style outlets with USB ports or the outlet-style 4-port USB outlets require 120 volt power when located outside of the cockpit area of the coach. Some outlets may also have an LED indicator light.



Auxiliary Inputs

USB ports labeled with auxiliary input are normally connected to the dash radio and allow input to the radio via USB and or 3.5 mm cable. Refer to the radio's operating manual for information about selecting auxiliary inputs.



12 Volt Receptacles

Your coach may be equipped with one or more 12 volt receptacles conveniently located in the dash area. These 12 volt receptacles allow you to plug in a variety of 12 volt DC accessories, including cell phone battery chargers, camera battery chargers, etc. These are fused at 20 amps.




Block Heater Outlet

Diesel coaches may have an outlet designed for use with the engine block heater. It may be located in the engine compartment or in one of the rear compartment bays.

This outlet may be controlled by the block heater button on coaches equipped with a SilverLeaf touchscreen. Coaches without SilverLeaf may have a switch in the overhead cabinet to turn the power to the outlet on or off, while others may be wired directly from the breaker box.

Coaches equipped with energy management systems operating on shore power of 30 amps or less may have power shed to the block heater if the other loads exceed the amperage set on the energy management system.

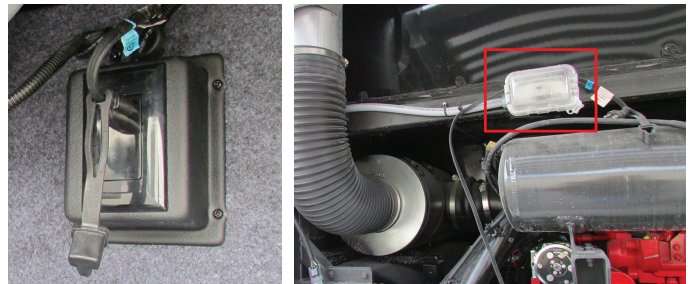




Solar Power

Dometic GoPower! 10-Watt Solar Panel Overview for Front-Engine Diesel Coaches (Model: Flex-10-HB)

This article provides basic information about Dometic GoPower! 10-watt solar panels that began being installed on select front-engine diesel coaches during the 2023 model year. If installed, this 10-watt solar panel will trickle charge the chassis batteries when exposed to sunlight.

The solar panel is protected by a fuse normally located in the front compartment on the passenger side of the vehicle. The fuse is often marked with a label noting the solar panel.

The panel does not have an indicator or regulator since it is only a trickle charge and is not capable of producing enough voltage to damage batteries.

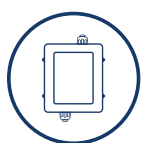

Transfer Switches and Surge Protectors

Transfer Switch and Surge Protector Overview

This article provides an overview of the transfer switch and the integrated surge protector.

The transfer switch allows your coach to be powered by more than one power source, while only allowing one active power source connection at a time. When the generator is turned on, this switch automatically transfers to generator power.

Surge protection was used on select coaches to protect the coach from power surges during storms and poor shore power conditions from the incoming shore power connection. Today, most transfer switches have integrated surge protection.

There will be a slight delay between the start of the generator and the electrical connection. This delay allows the generator to reach normal operating speed without needing to supply a required load. When the unit is plugged into shore power, an audible click will be heard in the transfer switch box. The sound is normal and indicates that the relay inside the transfer switch is engaging the outside power source.

WARNING

Due to the risk of electrical shock, service should be performed by a qualified electrician or authorized service technician. The electrical system may have multiple 120/240 volt power sources. All power sources must be turned off, and any auto generator start features must be disabled prior to servicing.

NOTE FROM NEWMAR

After market surge protection placed at the shore power supply source is an optional product, which provides an increased layer of surge protection. However, it is not required or installed by Newmar.

Product(s): This information is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

Southwire 50 Amp Automatic Transfer Switch (Model: 40101-001)

This article provides basic operation instructions for a Southwire 50 Amp Automatic Transfer Switch (Model: 40101).

Testing Operation

Plug the shore power cord into a good shore power source and, after a short delay, shore power should be transferred through and available for use. If the generator is started after approximately 40 seconds, the transfer switch should transfer power from shore power to generator power. Turn the generator off and, after a short delay, the transfer switch should switch back to the shore power. (Source: Doc 505-00175a)

This transfer switch has two visual indicators designed to give the user a quick indication of power conditions that need to be corrected before using the coach.

Open Ground Indicator Illuminated: Unplug shore power. Use a voltmeter to check ground and neutral. Voltage should read -0-. If not, finding another power source is recommended.

Reverse Polarity Indicator Illuminated: Unplug shore power. Use a voltmeter to check ground and neutral. Voltage should read -0-. If not, finding another power source is recommended.



Source(s): Southwire Automatic Transfer Switch Troubleshooting Guide (Models 40100, 40101, 40140, 41300, 41301)

Product(s): Southwire 50 Amp Automatic Transfer Switch (Model: 40101, Newmar Part Number: 157536)

Southwire 50 Amp Automatic Transfer Switch (Model: 40450RVC)

This article provides basic operation instructions for a Southwire Surge Guard 50 Amp Automatic Transfer Switch (Model: 40450RVC).

NOTE FROM NEWMAR

These brief operation instructions are for quick reference only and should not take the place of the complete Operation Manual provided by this item's manufacturer. Refer to the corresponding product's links and files in Newgle for more details about your product.

The 40450 series automatic transfer switch (ATS) has many different protective features to protect your coach from low quality power. Included in these are protection against high voltage, low voltage, and an incorrectly connected chassis ground. If one of these fault conditions is encountered, the ATS will open both contactors in order to protect the coach. Once the fault condition goes away, the ATS will delay for approximately 2.5 minutes before trying to close the appropriate contactor again. A remote power monitor may be installed in select coaches and allows for continuous visual indication of



source voltage and load current or diagnostics.

If the ATS fails to close the contactor or transfer when expected, check the 40450 display to see if an error message is displayed. The screen will flash an error message for that failure such as "Loss of Ground", "High Volt", or "Reverse Polarity". The error condition must be corrected in order for the transfer switch to function correctly. Refer to the table on the following page for help in troubleshooting these conditions.

If there is no error message and the display instead reads "Delay Active" this means that the fault condition has cleared and that the switch is going through a 2.5 minute delay before it will attempt to close the contactor again. Wait until this delay is over to see if the ATS correctly closes its contactor.

If no display is available, check the level of the input voltage to ensure it is within the proper operating limits. Also check that the ATS is correctly connected to chassis ground and that the neutral conductor is correctly connected to ground at the power pedestal. Wait 2.5 minutes to check if the fault condition was temporary and has cleared. If so, the contactor will pull in at the end of the 2.5 minute period.

Test Procedure

1. Plug RV's shore power cord into utility power source.
2. Wait for the time delay, then observe remote display of shore power status.***
3. Turn on RV's generator (generator power source is dominant over shore power). A 30 second delay will occur.
4. Observe remote display for generator output status (Volts/Amps).

5. Switch off generator, observe remote display of transfer "Delay Active-Shore Power."
6. Shore power activated, observe remote display (Voltage/Amps). ***Acceptable shore and/or generator power range is 100-135 Volts. Load (Amperes) 0-50 Amps.

Note: During generator (only) power-up, the monitor display will be blank for approximately 30 seconds for generator warm-up.

Source(s): Southwire Surge Guard Installation and Operating Instructions Model 40450RVC/ Southwire Surge Guard Model 40450 RVC Troubleshooting Guide

Product(s): Southwire Surge Guard 50 Amp Automatic Transfer Switch (Model: 40450RVC, Newmar Part Number: 152216)


Surge Guard Automatic Transfer Switch Remote LCD Display Operation (Model: 40299)

This article provides basic operation instructions for a Surge Guard Automatic Transfer Switch Remote LCD Display (Model: 40299).

The optional Remote LCD Display is intended for use with Automatic Transfer Switch (ATS) unit 40350-RVC or 41390-RVC.

The Remote Power Control allows you to see detailed information such as voltages for Line 1 and Line 2, (typically 110-120VAC), current draws (0 to 50Amps), and status and conditions of the ATS, including time and date. Electrical faults, such as low voltage or an open ground connection, that cause the ATS to shut off power are shown on the remote display, allowing you to retrieve via the joystick a log of fault conditions kept by the ATS of electrical power at your location.

This is a helpful diagnostic tool that allows you to comprehend and correct problems with your RV's power. The display also features a right/left navigation lever allowing navigation through the various screens.

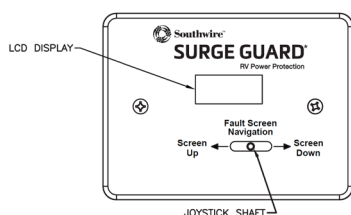

Features and Displayed Information

MAIN SCREEN

- Display of normal operating voltages and currents, for example 120V 25Amps for each Line (240V system). Shore power or generator power.
- Display of faulty power conditions responded to by ATS such as low voltages, high voltages, open ground, open neutral, reverse polarity, high frequency, etc.
- Display of delay condition when recovering from faulty conditions.

L1/L2 VOLT AND CURRENT SCREENS

Displays line 1/2 voltage or current. This is handy as it allows you to view the voltage or current when there is a fault condition being displayed on the main screen.

FAULTS SCREEN

Allows you to view a history of up to 50 faults which have been logged by the ATS. Each fault that has been logged contains the fault, the voltages and currents at the time of the fault, and the time and date when it occurred.

TIME/DATE SCREEN

Displays the current time and date and allows you to set the current time and date on the ATS unit.

JOYSTICK LEVER

To navigate through screens and set the time and date.

Operating Instructions

SCREEN NAVIGATION USING THE BUTTON/LEVER

There are several information screens associated with the Remote Display which can be selected via the lever on the front of the unit. Pushing the lever to the RIGHT repeatedly will access the screens in the following order. Pushing the lever to the LEFT accesses the screens in the reverse order.

When the VIEW FAULTS screen is displayed, momentarily pushing the lever in accesses a log of faults which have been stored by the ATS unit. Viewing the fault log data will be explained in more detail below.

DISPLAY FOR NORMAL OPERATION

During normal operation, the Remote Display screen reads the status of the RV electrical power, showing continuous voltages and currents for power lines 1 and 2 coming into the RV on the main screen. A secondary screen showing SHORE or GEN will momentarily display approximately every 8 seconds, indicating whether your RV is running on power for your shore connection or whether the ATS has transferred you over to generator power.

DISPLAY DURING FAULT CONDITIONS

If there are any faults or problems with your electrical power, the Remote Display will show the particular faults on the LCD screen with a 3 second interval between each item. The faults displayed can be any combination of the ATS fault codes.

DISPLAY DURING DELAY STATE

When the ATS is powered up, the Remote Display will display "Delay" and the elapsed time in seconds until it reaches 128 seconds. After the delay is completed, if shore power is good the ATS will connect power to the RV, and the unit will go to the normal operating screen showing voltages and currents as described above.

L1 VOLT | L2 VOLT SCREENS

These screens are useful for viewing the line voltages when the main screen is in delay or when L1 or L2 have a fault (line voltage that is too low or too high). The main screen will display line voltage between 102 and 132 volts; otherwise it will show that the line has a fault. The L1 VOLT and L2 VOLT screens however display a greater range, from 90 to 140 Volts. The L2 VOLT screen is only shown when using a 50 Amp ATS.

L1 CURR | L2 CURR

These screens are useful for viewing the line currents in amps when the Main Screen is in Delay or when it shows that L1 or L2 have a fault. The L2 CURR screen is only shown when using a 50 Amp ATS.

TIME/DATE SCREEN

View and/or set the current time and date on the ATS. To get to the TIME/DATE screen from the main screen, push the front lever right or left repeatedly until you see the time and date. To set, press the lever IN once quickly. You will see a blinking cursor. Push the lever left until the cursor is over the minutes digit. (Do not try to set the seconds - they reset to zero.) Once you have the correct setting for the minutes, continue on with setting the hour, date, month, year and so on by pushing the lever to the left.

Once you have entered the correct time and date, press and HOLD the lever IN for 3 seconds. You will see "TIME IS SET" once complete. You can now release the lever.

When you are on the TIME DATE screen and the cursor is not blinking, you can navigate to the other top level screens such as the main screen, or the L1 volts screen, etc.

VIEW FAULTS SCREEN

This allows you to view the faults recorded whenever the ATS detected a fault with electrical power. To view, momentarily push the front lever DOWN or IN. The screen will display fault 1, which is the most recent fault that occurred and was detected by the ATS. The screen will scroll through the following items for fault 1 every 3 seconds:

1. MODE- State of ATS when fault occurred (MODE SHORE = shore power; MODEGEN = transferring to Gen power, etc.)
2. FAULT CODE (L1 LO, L2 LO, etc.)
3. L1/L2 Volts and Currents at the time of the fault.
4. Frequency of Line 2
5. Time of Fault
6. Date of Fault

To see the next fault, push lever right, showing fault 2. Keep pushing the lever right to see up to 50 faults. Pushing the lever left goes backwards through the faults.

If no faults have occurred, you will still see fault number headings, but the information will be zeroed out. Voltages/currents will be zero, time will be 00:00:00 and date will be 00-00-00; or you may have only 5 faults and the other 45 fault numbers will be zeroed out as described, etc.

To exit the fault screens, push the lever DOWN/IN momentarily, returning to VIEW FAULTS screen from which you can navigate as previously described.

L1 LO	Line 1 voltage is low (below 102 VAC)
L1 HI	Line 1 voltage is high (above 132 VAC)
L2 LO	Line 2 voltage is low (below 102 VAC)
L2 HI	Line 2 voltage is high (above 132 VAC)
REV POL	Reverse polarity condition (hot wire and neutral are swapped)
OPEN NEUTRAL	Neutral wire connection is missing or mis-wired
L1 OPEN	Line 1 connection missing or mis-wired
L2 OPEN	Line 2 connection missing or mis-wired
SHORE	RV connected to Shore Power
GEN	RV connected to Generator Power
DELAY	Delay mode waiting for power to come back on
SINGLPHA	Connection at 110V instead of 220V
POWER REM	Power has been removed due to fault
OPEN GND	Open ground fault condition (ground wire missing or miswired)
HI FREQ	AC line frequency high (more than 60Hz)
LO FREQ	AC line frequency low (less than 60Hz)

Source(s): Southwire Surge Guard Remote Power Control Monitor LCD Display with Navigation Installation and Operating Instructions

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.



ELECTRONICS

This chapter provides operational instructions for the electronic systems installed in the coach, including camera and video, holding tank monitoring, multiplex systems, navigation, security and keyless entry, as well as WiFi.

⚠ NOTICE

NOTE: Audio-Visual (AV) equipment information is located in the Entertainment Systems category.

⚠ IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the manufacturer's complete documentation. Refer to Newgle for more information about electronics offered for your coach's model year.

Dash Infotainment Systems

Xite G4 Infotainment System with Dual 9" Touchscreens Operation (Model: XSG4NA-X4S)

This article provides basic operation instructions for a Xite G4 Infotainment System with Dual 9" Touchscreens (Model: XSG4NA-X4S).

Features



- Dual Touch Screens - Let your passenger program the day's route from their own in-dash LCD screen.
- RV GPS from NavNGo - Take control of your adventures using NavNGo navigation with online updates.
- House Mode - Control and listen to SiriusXM Satellite Radio from your outside entertainment area.
- HDMI - Connect compatible devices through HDMI and mirror to your G4.
- Media Center - Play back from your USB device or simply copy to the G4 on-board media center. Always have your music, movies and pictures with you.

This Quick Start Guide is intended to provide basic instructions to begin using your Infotainment Center. Failure to properly focus on the operation of your motor vehicle can result in death, serious injury and property damage. The Infotainment Center should never be used at a time or in a manner that distracts you from properly focusing on operation of the motor vehicle in which it is installed.

⚠ IMPORTANT

Please review all disclaimers, warnings and detailed operating instruction in your Xite Owner's Manual prior to using your Infotainment Center.

Main Touchscreen Monitor

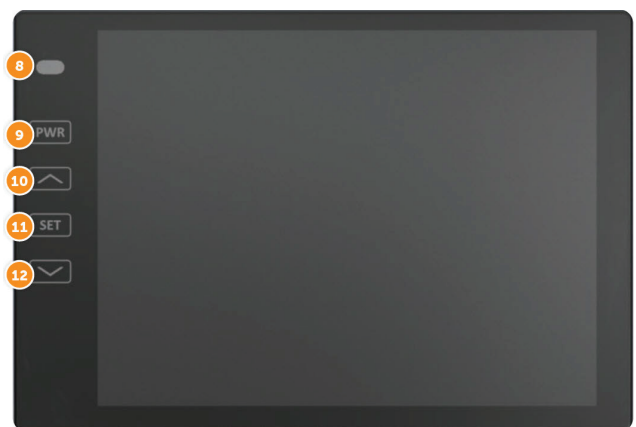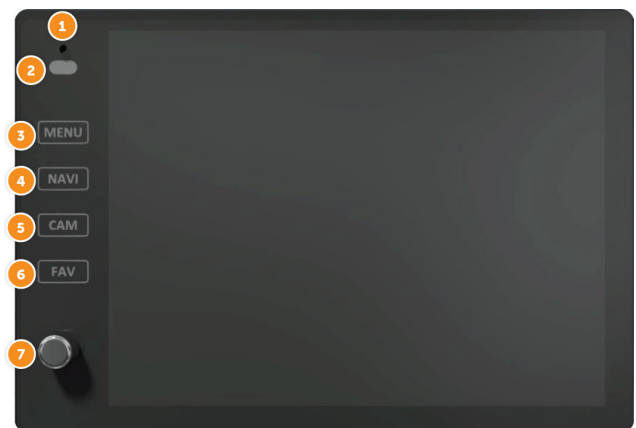

	Function	Description
1	Bluetooth Microphone	
2	LDR (Light Dependent Resistor) and IR (Infra-red Receiver)	<ul style="list-style-type: none"> LDR is used for the dimming of the display and is active when Auto dim in System Settings is set to Sensor. IR receiver is used with remote control operations.
3	Menu	<ul style="list-style-type: none"> Tap MENU button once to go to the Main Menu (or Home Page). When in the Main Menu, you can either use the touch screen to select the desired icon (source) or you can keep tapping the Menu button to select different icons on the screen. When icon is highlighted for more than 1 second, the system will automatically open that icon. You can also access the Main Menu from any screen by tapping the function icon in the top left corner of the current screen. Note: When viewing video in full screen, touch the screen once to bring up the icon header which will display the function icon. Tap the icon to return to the Main Menu.
4	Navi	<ul style="list-style-type: none"> Press the NAVI button once to go to the navigation system. While viewing the navigation press the NAVI button to return to the active source (Radio, or SXM, etc.). If the navigation route is running, navigation audio voice prompts will continue to be heard over the speakers according to the Navigation audio settings you have selected in the Settings menu. To hear only the navigation audio voice prompts, press and hold NAVI button for 2 (two) seconds. This will mute the active source until you leave the navigation screen.
5	Cam	<ul style="list-style-type: none"> Press CAM button to directly go to Camera Control page.
6	Fav	<ul style="list-style-type: none"> Your Infotainment Center is equipped with a favorite source hotkey. Press the FAV button once to directly access your favorite audio source. Favorite audio source is defaulted to Sirius XM, and it can be changed by going to Setup -> System -> Favorite Mode.
7	Volume/Power Rotary Button	<ul style="list-style-type: none"> Turn on the ignition to power up the Infotainment Center. When powered up, it will immediately go to the last mode (memory on playback) before it was turned off. In order to put the unit in standby mode, press and hold the rotary button once. During standby, your vehicles graphics together with date and time will be displayed. Press and hold the rotary button again to turn the unit on. Turn the rotary button left / right to adjust the volume to the desired level. A short press of the rotary button will Mute the audio. Note: When in standby mode, Infotainment Center consumes power. To completely turn the system on, remove the ignition key and / or ensure any auxiliary battery power to the system is turned off.
8	LDR (Light Dependent Resistor) and IR (Infra-red Receiver)	<ul style="list-style-type: none"> LDR is used for the dimming of the display and is active when Auto dim in System Settings is set to Sensor.
9	Power Button	<ul style="list-style-type: none"> Turns the Monitor On or Off.
10	Up Arrow	<ul style="list-style-type: none"> Adjust settings up.

11	Set Button	<ul style="list-style-type: none"> Press SET button to adjust screen display. Use this button in combination with arrow buttons. Available options are: Brightness (-10 to +10), Contrast (-10 to +10), Tint (-10 to +10), and Touch Adjustment for touchscreen calibration.
12	Down Arrow	<ul style="list-style-type: none"> Adjusts settings down.

7" Secondary (Passenger) Monitor

⚠ NOTICE

This monitor is an optional component and is not installed in all coaches with the XSG4 system.



	Function	Description
1	Status LED	<ul style="list-style-type: none"> No light means power to the monitor is off. Red Light indicates that unit is in sleep mode. Green Light indicates that unit is powered on and working.
2	PWR	<ul style="list-style-type: none"> If the status LED is red, press the PWR button once to turn the monitor on. If the status LED is green, press and hold PWR to turn the monitor off.
3	SRC	<ul style="list-style-type: none"> Press SRC button to change the video source displayed on monitor.
4	DIM	<ul style="list-style-type: none"> Press DIM to change the brightness of the screen (1 to 5). Set to SYNC for the brightness to be controlled by the Main Monitor.
5	NAVI	<ul style="list-style-type: none"> Press NAVI button to enter / exit Navigation Menu.
6	CAM	<ul style="list-style-type: none"> Press CAM button to directly go to camera view.
7	Up Arrow	<ul style="list-style-type: none"> Up and Down Arrows work in combination with SET button.
8	SET	<ul style="list-style-type: none"> Press SET button to adjust screen display. Use this button in combination with arrow buttons. Available options are: <ul style="list-style-type: none"> Brightness (-10 to +10) Contrast (-10 to +10) Tint (-10 to +10) Touch Adjustment for touchscreen calibration
9	Down Arrow	<ul style="list-style-type: none"> Up and Down Arrows work in combination with SET button.
10	IR Receiver	<ul style="list-style-type: none"> IR receiver is used with remote control operations (optional).

Main Menu



	Function	Description
1	Information Bar	<ul style="list-style-type: none"> The top area of the screen is the source information bar. It displays the current source together with temperature, compass, and time information as well as the Bluetooth connection status. Note: One needs to select a source to be able to see all the information mentioned above.
2	Main Menu	<ul style="list-style-type: none"> Infotainment Center is designed for simple maneuvering. The screen shown on the left is the MAIN MENU screen. From here, you can choose what source to access by tapping the appropriate icon on the touch screen. For more information on how to navigate through the Main Menu, please see the Function 3 in the page 5 of the Xite G4 D10 + A7 + SDHD CAM General Information & Setup Guide.
3	AUX Zone	<ul style="list-style-type: none"> Allows you to select what output is displayed on the Passenger monitor. This is the same as using the SRC button on that monitor.
4	House Mode	<ul style="list-style-type: none"> This option is only accessible when parking brake is engaged. When active, House Mode sends current source audio and/or video to other areas of the coach. <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p align="center">NOTE FROM NEWMAR</p> <p>Newmar only sends current source audio (not video) to the exterior entertainment center.</p> </div> <ul style="list-style-type: none"> After 15 seconds of no input to the touch screen, the LCD displays will enter into sleep. Touch the screen to wake. House Mode is cancelled when selected again, park brake disengaged or power cycle is performed. Tap once to enter the House Mode. Tap once to exit the House Mode.

Settings

Access the Settings by selecting the Setup icon in the Main Menu. There are three Settings that can be changed and these are System, Video, and Audio. In addition, there are Settings for Radio, Sirius XM, Bluetooth and DVD, and to access these, you must go to the setup icon while one of these sources is active. To exit the Settings menu at any time, press the Settings icon in the top left of the screen.

SYSTEM SETUP

By touching the SYSTEM button, the settings for the system part of the Infotainment Center can be changed.

- Auto Dim
- Dim (Day Time)
- Dim (Night Time)
- Beep Tone
- Standby Screen
- Temperature
- Compass Display

- Time Set
- Favorite Mode
- Coach Warning
- Language
- Factory Set
- WiFi Settings

VIDEO SETUP

By touching the VIDEO button, the settings for the video part of the Infotainment Center can be changed.

- Brightness
- Contrast

AUDIO SETUP

- Treble Gain
- Mid Gain
- Bass Gain
- Equalizer
- Fader
- Balance
- Center/Woofer Volume
- Loudness
- NAV Volume: Sets the gain of navigation volume (-10 to +10). 0 is the center. This feature will help balance the navigation audio prompts with the system volume level according to the individual user preference.
- NAV Audio Mix: This option allows setting the way of navigation voice behavior in relation to the normal audio playback. The following options are available:
 - OFF: Navigation voice will not be audible.
 - MIX: Navigation voice will mix through normal audio.
 - FULL: Normal audio will be muted on the front speakers during navigation voice instructions.
 - Note: Navigation voice prompts can only be heard on front speakers.

For More Information

Refer to the G4 D10 + A7 + SDHD CAM General Information & Setup Guide for more information about your Radio Operation, Media Center, Bluetooth Operation, SiriusXM, iPod & iPhone AV Interface, HDMI, Split Screen, Camera, Navigation, House Mode, and Customer Feedback and Product Registration.

CONTACT XITESOLUTIONS NORTH AMERICA INC.

- Website: www.xsna.ca
- Email: support@xsna.ca

CONTACT RIVERPARK INC.

- Website: www.riverparkinc.com
- Email: navi@riverparkinc.com
- Toll Free: (800) 442-7717

Source(s): G4 D10 + A7 + SDHD CAM General Information & Setup Guide (Version 210427.01)

Product(s): Xite XSG4NA Dual 9" Touch Screen Infotainment Navigation System (Model: XS90116CKT11, Newmar Part Number: 155705)

Apple CarPlay Operation via Xite Infotainment System

This article provides basic operation instructions for Apple CarPlay via the Xite Infotainment System. This applies to 9-inch and 10.4-inch touchscreens for Xite XSG4NA models beginning in 2023.

IMPORTANT

Apple CarPlay is only available on Xite Systems installed in 2023 and newer coaches. This feature is not available aftermarket or for retrofitting coaches built prior to the 2023 model year.

Apple CarPlay Operation

WARNING

Use of third party maps within CarPlay does not take into consideration your vehicle dimensions and restrictions. Use of these navigation systems is at your own risk.

Connecting your iPhone to CarPlay will allow you to get turn-by-turn directions, make phone calls, listen to music, check your calendar, and more—all from your vehicle's display. Ensure that Siri is enabled on iPhone.

If Siri is not enabled on your iPhone, go to Settings > Siri & Search, then turn on one of the following:

- Press Side Button for Siri (on an iPhone with Face ID)
- Press Home for Siri (on other iPhone models)

Set up CarPlay by connecting your CarPlay Compatible iPhone to your vehicle using your vehicle's USB port using an Apple-approved Lightning to USB cable.

The USB port is labeled with the CarPlay logo on the front of the core device.



NOTE FROM NEWMAR

The core device is hidden inside the dash on most coaches. Newmar runs a line from the core to the driver's side console (or the center console on Super C coaches), which is where the owner can connect the appropriate USB cable to their phone to enable Apple CarPlay. This input is typically marked "USB/Auxiliary Inputs" on the cover.



ASK SIRI ON CARPLAY

To activate Siri, do one of the following:

- Press the voice command button on the main display.
- Touch the CarPlay Home Button on the touch screen while displaying CarPlay.


When active the Siri icon will appear, as seen in the lower image.

Ask Siri a question or to do something, as you normally would on your iPhone.

Contents of the CarPlay menu will depend on which CarPlay enabled apps are installed on your iPhone.

To view the different apps, simply swipe left or right on the touch screen.

To return to general operation of the Xite device, press the Xite Logo on the main CarPlay screen, or by pressing the Menu button.

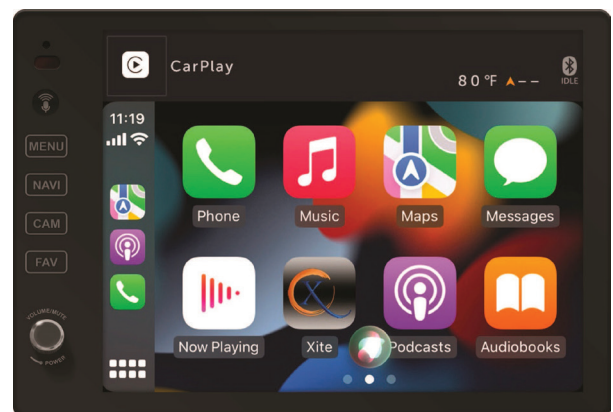


Source(s): CarPlay Setup & General Use Manual V220105.01
Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

SiriusXM Satellite Radio Capability via Xite XSG4 Infotainment Center Overview

This article provides a brief operational overview of an optional SiriusXM satellite radio subscription via the Xite XSG4 infotainment center. This option may only be available on coaches equipped with SiriusXM capability and the necessary antenna and/or tuner.

A SiriusXM Vehicle Tuner (may be available for purchase through the Newmar Parts Department) and Subscription are required. For more information, visit: www.siriusxm.com.

When a SiriusXM Vehicle Connect Tuner is connected, press the SiriusXM icon in the Main Menu. SiriusXM mode can be left any time by pressing the SiriusXM icon at the top left of the screen.

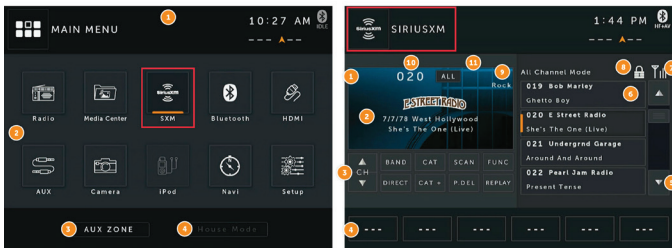

These images are for example only; Xite screens may vary based on installed equipment

Subscribing to SiriusXM Satellite Radio

This section describes the features and functions of the SiriusXM Satellite Radio. Before using the optional SiriusXM Satellite radio, you need to subscribe to the SIRIUSXM service either by phone or via the Internet. To subscribe to the SiriusXM Satellite Radio service, follow these steps:

1. After installing your SiriusXM Connect Vehicle Tuner and antenna, power on your radio and select SiriusXM mode. You should be able to hear the SiriusXM preview channel on Channel 1.
2. After you can hear the Preview channel, tune to Channel 0 to find the Radio ID of your tuner. You will need this number to activate your subscription. Write the number down for reference. Note that the SiriusXM Radio ID does not include the letters I, O, S or F.

In the USA, you can activate online or by calling SiriusXM Listener care:

- Visit <http://www.siriusxm.com/activatenow>
- Call SiriusXM Listener Care at 1-866-635-2349

For Canadian Subscriptions, please contact:

- Visit www.siriusxm.ca/activatexm
- Call XM customer Care at 1-877-438-9677

As part of the activation process, the SiriusXM satellites will send an activation message to your tuner. When your radio detects that the tuner has received the activation

message, your radio will display: "Subscription Updated". Once subscribed, you can tune to channels in your subscription plan. Note, the activation process usually takes 10 to 15 minutes, but may take up to an hour. Your radio will need to be powered on and receiving the SiriusXM signal to receive the activation message.

Operating SiriusXM Satellite Radio

The display for the SiriusXM mode is laid out to provide you with the required information and icons to allow maximum enjoyment of your SiriusXM subscription.

Lock Code

The Infotainment Center is delivered with a default Lock Code of "0000".

Please [refer to your complete Xite user manual] to learn how to edit your lock code. Please remember your lock code. It will be required to access locked channels or change the Mature Channel Lock setting. If you have forgotten your lock code and require a reset please [refer to your complete Xite user manual] for Factory Reset information.

Lock Mode/Unlock Mode

The Infotainment Center is delivered with a default Lock Your Infotainment Center will automatically start up with SiriusXM in Lock Mode. This will prevent accidental tuning to channels that have been automatically locked under the optional Mature Channel Locking feature or user-applied locked channels. To enter Unlock Mode:

Press the LOCK button (which may require holding it down). When the keypad is displayed, input your lock code and press Enter.

Artist and Song Alerts

While listening to SiriusXM Satellite Radio, you can be alerted when your favorite songs or artists are playing on other channels. You can store up to 50 of your favorite Artists and 50 favorite songs.

The Infotainment Center will display an Alert message when a matching artist or song is found on another channel or you can choose either My Artists or My Songs categories to have access to all channels that have current alerts playing. When a new alert notification occurs you can choose to tune directly to it or ignore and continue listening on your current channel.

Replay

The Replay feature allows you to pause, rewind, and replay up to 60 minutes of live SiriusXM Satellite Radio.

The status bar shows you the current buffer capacity. Once full, the oldest track will be removed allowing the newest live track to be added. If you have paused playback and the paused track is about to be erased, the XSG4 will notify you with an audible beep. Playback will resume from the next track in the buffer.

SiriusXM Settings Menu

There are many features that can be changed to customize your SiriusXM Radio experience. To enter the SiriusXM settings menu you must currently have SiriusXM selected. From there go to the Main Menu, and from there select SETUP icon. In addition to SYSTEM, VIDEO, and AUDIO options, there will be SXM option. Selecting this button will display page 1 of 2 for SiriusXM settings.

RV and Coach Technical Support:

For Technical and Warranty questions, please contact RiverPark's Technical Department:

BY PHONE:

From the U.S. 1-800-442-7717

All others: 1-574-522-7781

OR EMAIL:

support@riverparkinc.com

Source(s): Xite Solutions XSG4NA Infotainment User Manual (Rev. 210427.01)
Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.



Cameras and Video Monitoring Systems

Camera and Video Monitoring System Overview

This article provides an overview of the camera and video monitoring system.

The video system features cameras mounted on the exterior of your coach and is connected to the in-dash video screen. This system comes on automatically when you put the transmission in reverse to allow you to see behind your unit when backing up. Additionally, it can be manually turned on in transit to allow you to monitor your towed vehicle or for additional assistance in passing maneuvers.

Rear View Cameras


Installed as a standard feature, the rear view monitor system assists the driver in the backing and parking of the vehicle. This system consists of a camera mounted on the rear cap and a monitor located on the dash.

Side View Cameras

As an option for the rear vision system, your unit may be equipped with "side view" cameras. These cameras are tied into the rear vision system and are activated by the turn signals. When a turn signal is activated, the monitor will switch to display that side of the unit. Once the turn signal cycle is complete, the display will revert back to the previous camera for the Voyager system and Xite system. In some Xite systems, the camera selection may default back to the rear camera.

Camera Selection

If the rear vision monitor is turned on manually, you can toggle through the cameras by using the "Source" button on the Voyager system, or the "Menu" button followed by the "Camera Select" icon on the Xite system, allowing you to stay on any given camera that you choose unless a reverse or turn signal is detected. Select Xite systems may have a "CAM" button that serves as a shortcut to the camera settings. Xite systems with a "360 Camera Select" switch allows the user to toggle through and select multiple camera views.

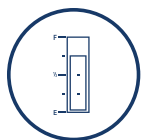


Holding Tank Monitoring Systems

Tank Monitoring via KIB 10.1" Central Monitor Capacitive Touch Panel

The Home screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays settings for tank heat, as well as the tank capacities for the fresh, grey, black, and LP tanks (if equipped).

IMPORTANT

The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.

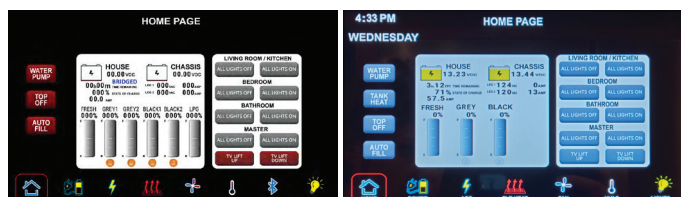

Tank Monitoring

This area shows the different tank levels. The Graph displays from 0%-100% with 5% increments.

- Fresh tank = Blue fill
- LPG tank = Orange fill (Optional)
- Grey tank = Grey fill
- Black2 tank = Black fill (Optional)
- Black tank = Black fill
- Grey2 tank = Grey fill (Optional)

Note: Percent vs Gallons is not guaranteed in the 0%-100% display. There are factors outside of the system which makes this imperfect.

Tank Heat

The tank heat icon will only appear on coaches equipped with tank heat pads installed on the coach. This will allow the power to be activated to the tank heat pads.



Navigation System

Navigation System Overview

Your coach may be equipped with a GPS based Navigation system. This system uses GPS technology to guide you through maps and information for traveling assistance. It features voice prompts and touchscreen technology to make scrolling through the menus and getting information incredibly easy.

The navigation feature is intended to assist you with guidance to your destination. The system may need software and map updates. Updates are not warrantable issues, as roadways change over time and construction takes place, the maps and/or systems may become obsolete.

WARNING

The navigation system is NOT intended to replace, supersede, or take precedence over any traffic signs, street signs, hazard signs, etc.

CAUTION

It is the driver's responsibility to make sure the roads are safe and appropriately navigated and roadway weight limits and clearances are rated for the vehicle you are driving.

NavNGo Navigation System Operation via Xite Infotainment System

This article provides basic operation instructions for the NavNGo Navigation System via Xite Infotainment System (Model: XSG4NA).

Getting Started

The XSG4NA range of infotainment systems come with an on-board Navigation program. This Navigation program is pre-loaded to the internal memory of the XSG4NA product. In order to provide the best possible user experience, the XSG4NA comes with a range of Connected Services to make the usage of the product as easy as possible.

NOTE FROM NEWMAR

To use any of the connected services, the user must have the Xite system connected to the internet via an active connection.

These Connected Services are:

ONLINE TRAFFIC

This feature will automatically download and analyze real-time traffic information and provide you with Route alternatives if you are already on the road and heading to a traffic event. Or the Online traffic will calculate around traffic when you start your new route.

ONLINE WEATHER

The Online weather service information can be used to view weather at your destination or along your current route.

ONLINE POI SEARCH

The Online POI search option is an extension of the pre-loaded database. The online POI's will provide you update to date Points of Interest with the latest available information.

OVER THE AIR UPDATES

Over the Air updates will allow you to update your maps, POI database and the Navigation program itself via an internet connection. You will be automatically notified when new updates are available and can download them when it is most convenient for you.

⚠ IMPORTANT

Map updates can be large (3GB+ of data), so it is advisable to perform these updates when connected to a Wi-Fi connection and not perform the update via a phone tether.

When you start using the product, you can download updates, at no cost, for the next 3 years.

Additionally, the XSG4NA is pre-loaded with the "Truck Attribute Map data". This additional map data contains additional road information in relation to road attributes. Items such as weight restrictions, bridge heights, limitation of the number of axles, tunnel restrictions, etc. This additional map data is of great relevance to RV owners to ensure that the roads suggested by the Navigation program are suitable for the specific RV.

⚠ IMPORTANT

The suggested routes to your destination are only as good as the information provided to the program to calculate with. Make sure to set up the vehicle settings correctly and accurately to ensure that the routes suggested by the Navigation program are suitable for your vehicle. Failure to do so accurately may lead you down roads that are unsuitable for your vehicle resulting in damages to your vehicle, the roads, or violation of traffic laws.

Warnings and Safety Information

The navigation system helps you find your way to your destination based on GPS positioning. The XSG4NA does not transmit your GPS position; others cannot track you.

It is important to look at the display only when it is safe to do so. If you are the driver of the vehicle, it is recommended that you plan and review your route before you start your journey. Plan the route before your departure and stop if you need to change the route.

Always follow traffic rules at all times. If you deviate from the planned route, the program will recalculate and change the instructions accordingly.

INITIAL SET-UP

When using the navigation program for the first time, an initial set-up process starts automatically. This Initial setup is also repeated when the "Factory Reset" is done in the Navigation program setup menu.

1. Select your preferred language, then tap SELECT to confirm your selection. Later you can change it in Regional settings.
2. After accepting the End User License Agreement, the Configuration Wizard starts. Tap the NEXT button to continue.
3. Select the language and speaker used for voice guidance messages. You can also change it later in the "Regional settings". Select your preference and tap NEXT to continue.

4. If needed, modify the time format and unit settings. You can also change it later in the “Regional settings”. Tap NEXT to continue.
5. In this step, you can adjust the routing preferences. Please take care to accurately insert all your vehicle parameters. The Navigation program will take this information into account to provide you with a route that avoids any roads that contain obstacles that should be avoided (low bridges, weight restrictions, etc.) If the information entered is incorrect, the program cannot take these vehicle-specific restrictions into account. You can also change it later in the “Route Preferences”. Tap NEXT to continue.
6. The initial set-up is now complete, tap Finish to enter the Navigation view.

SCREEN CONTROLS

The following sections describe the functionality and use of buttons, sliders, and other screen controls in the Navigation program.

USING BUTTONS AND OTHER CONTROLS

Type	Description	Function
Button	Opens a new screen where you can set a parameter.	Tap it once.
Button with Value	Displays the current value of a field or setting where the value can be changed. After the change, the new value is shown on the button.	Tap it once.
Icon	Provides additional information, for example traffic summary or itinerary.	Tap it once to open a screen with additional information or options.
List	Shows multiple options.	Grab the list anywhere and slide your finger up or down. Depending on the speed of sliding, the list scrolls fast or slow, only a bit or till the end. Alternatively, move between items in a list with the arrows and tap the value that you want to select.
Switch	Shows whether a feature is enabled when there are only two choices.	Tap it to turn the switch on or off.
Slider	When a feature can be set to different values in a range, the program shows an indicator on a gauge that displays and sets the value.	Drag the handle to move the slider to its new position. Tap the slider where you want the handle to appear.
Virtual Keyboard	Used to enter text and numbers.	Each key is a touch screen button.


The Navigation menu contain several menu items on one or more pages.

The UP ARROW button is always present in the top left corner of the screen. Pressing this button will bring you back to the Map view immediately regardless of where in the sub menu you are.

NAVIGATION VIEW


The navigation view is the main screen that shows the planned route on a map. The program works with digital maps which are not simply the computerized versions of traditional paper maps. Similar to paper road maps, the 2D mode of digital maps shows you streets and roads. Elevation is also illustrated in color.

The navigation view displays the following screen buttons, data fields, and route information on the map during navigation:

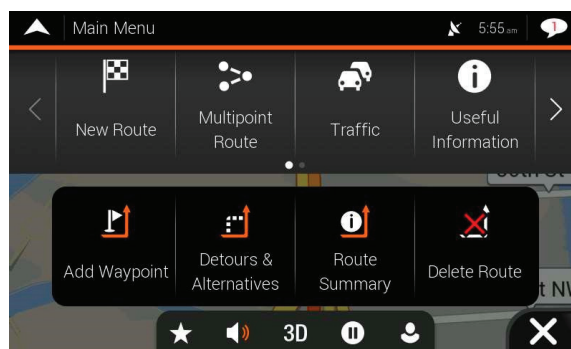

NOTICE

Some buttons, fields, or icons may not be available in your product version.

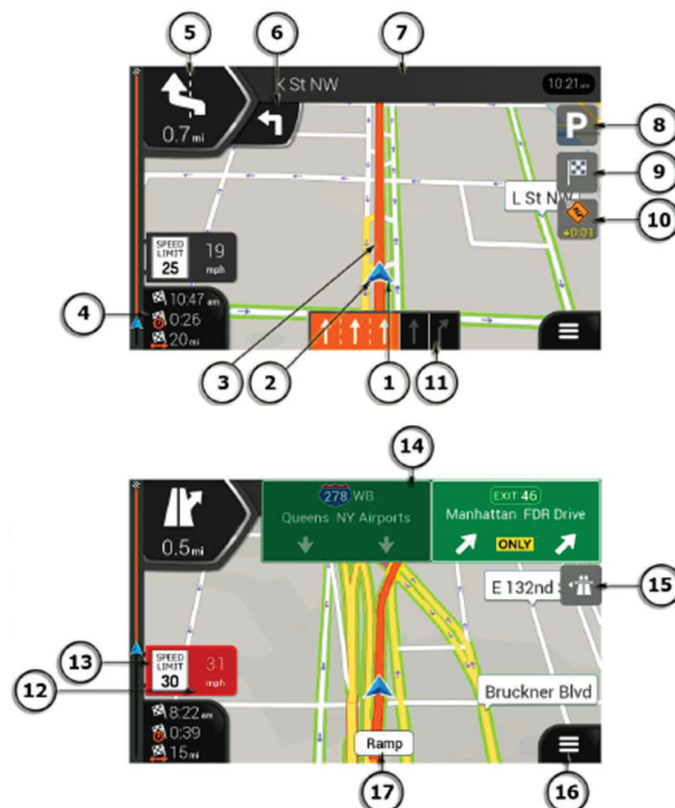

Number	Name	Description
1	Current Position Marker	The current position is displayed as a blue arrow by default. When there is no GPS position, the current position marker is transparent and it shows your last known position.
2	GPS Position	The dot near the arrow shows the GPS position as perceived by the GPS receiver.
3	Planned Route	The planned route is displayed as an orange line.
4	Data Fields	Three data fields show the following information: <ul style="list-style-type: none"> The estimated time of the arrival at the destination. The remaining time of the trip. The remaining distance to the destination. You can change the default values in Settings or by tapping and holding the area where the data fields appear. If you have not selected a destination, you can see your heading instead of the three data fields.
5	Next Turn Preview	It shows the type of the next maneuver and its distance.
6	Second Next Turn Preview	It shows the type of the second next maneuver if it is near the first one.
7	Next Street	It displays the name of the next street. If you have not selected a route destination, you can see nearby house numbers, if they are available.
8	Parking Around Destination	It appears near the destination. By tapping it, you can check the available parking facilities around your destination.
9	Destination Menu	It appears near the destination. By tapping it, you can check the trip summary, find Places around your final destination, save the current location, or suspend the navigation.
10	Traffic	It shows traffic-related information.
11	Lane Information	On multi-lane roads, it shows the lanes ahead and their directions. The highlighted arrows represent the lanes and direction you need to take.
12	Alert Point Warning	It shows the type of the alert points when approaching a road safety camera or other Alert Points like school zones or railroad crossings. You must make sure that using this feature is legal in the country where you intend to use it.
13	Speed Limit Warning	It shows the current speed and the speed limit when speeding.
14	Signpost	It shows the available destinations and the road numbers.
15	Freeway Services	By tapping it, you can check the details of the next few service stations (gas stations, restaurants) when traveling on a freeway.
16	Navigation Menu	By tapping it, you can open the Navigation menu, where you can reach other parts of the program.
17	Street Name	It shows the current street name. By tapping it, you can open the Where Am I screen.

Settings Menu

You can configure the navigation settings, and modify the behavior of the program, by tapping the MENU button (3 horizontal lines), followed by the SETTINGS button.

⚠ NOTICE

Changing some of these settings may not have an effect in your current region if the map data do not contain the required information.

The Settings menu provides the following options:

BUTTON	FUNCTION
Route Preferences	Select the type of vehicle you are driving, the road types used in route planning, and the route planning method.
Sound	Adjust the different sound volumes.

Warnings	Enable and set up warnings for speed limit, Alert Points (such as speed cameras).
Navigation View	Fine-tune the appearance of the Navigation view or adjust how the program helps you navigate with different kinds of route-related information on the Navigation view.
Regional	Change the voice guidance language, set the time zone, the measurement units, the time and date formats, and customize the application for your local language.
Display	Enable or disable menu animations.
Traffic	Enable or disable traffic information and modify detour settings.
Weather	Enable the online weather forecast and the automatic download of weather information.
Online Services	Enable or disable services that require Internet connection.

ROUTE PREFERENCES SETTINGS

The following settings determine how routes are calculated:

BUTTON	FUNCTION
Vehicle	Set the type of vehicle you want to use to navigate the route. Based on this setting, some of the road types can be excluded from the route, or some of the restrictions may not be taken into account in route calculation.
Route Planning Method	Optimize the route calculation for different situations and vehicle types by changing the planning method.
Navigation Mode (On-Road)	Select on-road or off-road navigation.
Road Types	Select your preferred road types for the route.

VEHICLE TYPE SELECTION

Press this option to open the vehicle type selection menu. The following option are available per default:

BUTTON	FUNCTION
Car	Maneuver restrictions and directional constraints are taken into account when planning a route. Roads are used only if access for cars is allowed. Private roads and resident-only roads are used only if they are inevitable to reach the destination. Walkways are excluded from routes.
Bus	Maneuver restrictions and one-way streets are taken into account when planning a route. Roads are used only if access for buses is allowed. Private roads, resident-only roads and walkways are excluded from routes.
Class A RV	The Class A RV vehicle profile is set with default values for a generic Class A RV. Maneuver restrictions and one-way streets are taken into account when planning a route. Private roads, resident-only roads and walkways are excluded from routes. If the map contains data on dimension, weight, number of axles they can also be taken into account when planning a route.
Class B RV	The Class B RV vehicle profile is set with default values for a generic Class B RV. Maneuver restrictions and one-way streets are taken into account when planning a route. Private roads, resident-only roads and walkways are excluded from routes. If the map contains data on dimension, weight and freight restrictions, they can also be taken into account when planning a route.
Class C RV	The Class C RV vehicle profile is set with default values for a generic Class C RV. Maneuver restrictions and one-way streets are taken into account. Roads are used only if access for buses is allowed. Private roads, resident-only roads and walkways are excluded from routes. If the map contains data on dimension, weight and freight restrictions, they can also be taken into account when planning a route.
Truck	Maneuver restrictions and one-way streets are taken into account when planning a route. Roads are used only if access for trucks is allowed. Private roads, resident-only roads and walkways are excluded from routes. U-turns are excluded from routes (turning back on a divided road is not considered as a U-turn). If the map contains data on dimension, weight and freight restrictions, they can also be taken into account when planning a route.
Add New Vehicle	With this option you can add your own vehicle profile.

MODIFYING VEHICLE PROFILES

In vehicle profile selection screen, press the UP ARROW and then the EDIT button to access the vehicle profile settings to adjust for your specific vehicle parameter. In Edit mode, you will see the symbol behind each vehicle type. Tap the symbol to access and select the details of the vehicle profile. Here the following basic options can be changed:


- Name (Allows you to rename the vehicle profile if desired)
- Vehicle type
- Maximum speed of the vehicle
- Fuel consumption in cities
- Fuel consumption on highways
- Engine type




Fuel consumption and engine type information is used to calculate and estimate amount of fuel needed as well as the approximate of CO2 produced. Also changeable for larger vehicle profile types are the “Extended Vehicle Settings.”

EXTENDED VEHICLE SETTINGS

The extended vehicle settings allow drivers to further specify their vehicle parameters to allow the program to offer the best available route for their vehicle type. Please make sure that all the specifics of your vehicle (height, weight, axles, etc.) are correctly entered into the vehicle profile settings. Incorrect settings will result in incorrect routes.

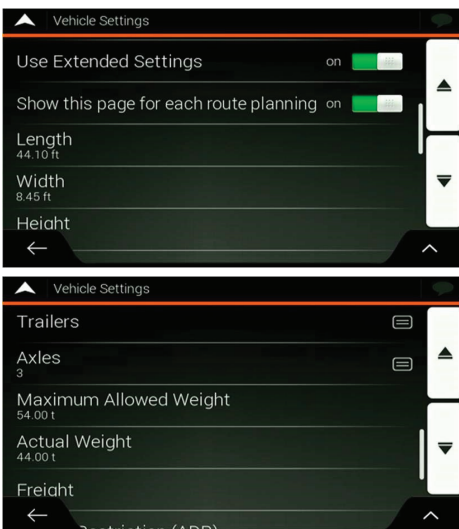

By default the option “Show this page for each route planning” is enabled. This option will prompt you to confirm that the vehicle profile specification is still accurate.

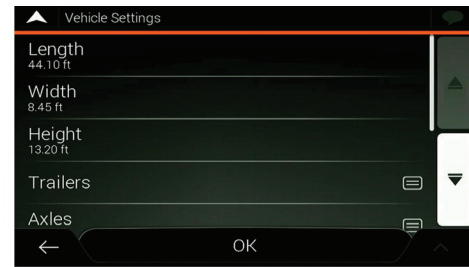

Warnings Settings

SPEED LIMIT

The program is able to warn you if you exceed the current speed limit. This information may not be available in your region, or may not be fully correct for all roads on the map. This setting lets you decide whether you wish to receive visible and/or audible warnings. The following warning types are available:

- Visual warning: the current speed limit is shown on the map when you exceed it.
- Audio and Visual warning: besides the current speed limit being shown on the map, you also receive a verbal warning when you exceed the speed limit with the set percentage.

If you prefer to see the speed limit sign on the map all the time (normally, it is shown only if you exceed the limit), you can set it here. You can also set the relative speed above which the application initiates the warning by adjusting a slider. The value can be different within and outside Cities.

DISABLING THE SPEED LIMIT WARNING

Issue: The speed limit warning is signaling even when the actual speed limit is kept.

Cause: The speed limit in the digital map data might differ from the actual speed limit of your current location.

Solution: Disable the speed warning by performing the following steps.

1. Tap the MENU button (3 horizontal lines).
2. Tap the SETTINGS button.
3. Tap the WARNINGS button.
4. Tap the Speed Limit button.
5. Tap the Warn When Speeding (Audio and Visual) button
6. Tap the Disabled option.

ALERT POINTS

Tap it to receive a warning when approaching a road safety camera or other Alert Points like school zones or railroad crossings. You must make sure that using this feature is legal in the country where you intend to use it. You can set the warning type for the different Alert Point categories (alert types) individually. The following warning types are available:

- Visual warning: the type of the Alert Point, its distance, and the related speed limit appear on the Navigation view while you are approaching one of these locations.
- Audio and Visual warning: besides the visual alert, beeps are played (when using a natural voice) or the type of the alert is announced (in case of a TTS voice) while you are approaching one of these points, and an extra alert warns you if you exceed the given speed limit while approaching.


For some of the Alert Points, the enforced or expected speed limit is available. For these points, the audio alert can be different if you are below or above the given speed limit.

- Only when speeding: The audio warning is only played when you exceed the given speed limit.
- When approaching: The audio warning is always played when approaching one of these Alert Points. In order to draw your attention, the audio alert is different when you exceed the speed limit.

Factory Reset or Reset All Settings

A factory reset can be done to restore all the factory default settings. The factory reset will also erase all user content (Search History, Routes, etc.).

1. Tap the MENU button (3 horizontal lines).
2. Tap the SETTINGS button.
3. Tap the UP ARROW to open the menu options.
4. Select either “Reset All Settings” or “Factory reset” to restore to the original default state. The application will prompt to confirm your selection. The application will restart to apply the changes.

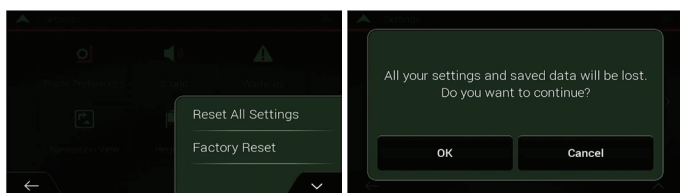

Updates


The XSG4NA is set up to only allow Over the Air updates. This means that the program will allow you to update new maps/POI databases or the program itself via an active internet connection.

When the program detects an active internet connection, it will automatically check whether updates are available for you to download.

UPDATES AVAILABILITY

There are 2 ways that the program will let you know an update is available.

- Via the message icon in the top right of the screen
- Press the MENU button (3 horizontal lines), followed by the SETTINGS button, and the SHOP button.

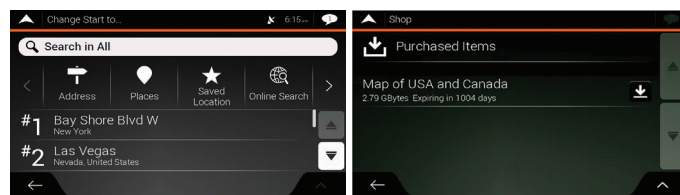


UPDATE INSTALLATION

If updates are available and you wish to install them, please make sure that you are connected to the correct WiFi Access point before starting up the update.


IMPORTANT

Updates can be very large and when connected over a cellular network via your phone, data transfer costs can occur. Do not switch off or restart the system during the download and installation of an update.


To start the update, press the DOWNLOAD button in the line of the update you wish to install. The update will start momentarily, and a status update will show the progress:

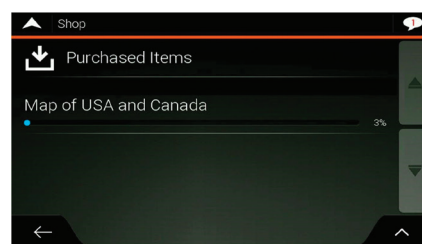

After the download and installation is completed, the program will prompt you to install the update:

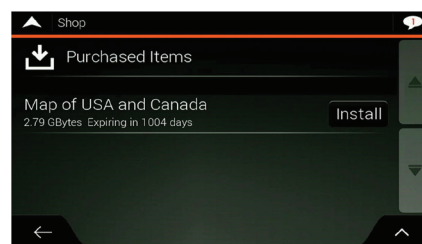

After the install, the program will prompt to restart and apply the updated portions:

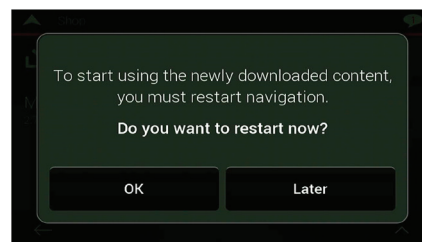

Select “OK” and the program will restart and is updated.

Source(s): Xite Solutions North America XSG4NA User Manual Version 032221.01
Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

How to Update Vehicle Profile Settings on an Xite G4 NavNGo Navigation System


This article provides a quick step-by-step guide on how to select the appropriate vehicle profile in the [Xite G4 NavNGo] Navigation software to ensure the correct routing.

- System: XSG4NA generation
- System OS: All
- Navigation: NNG


The first time the Navigation software is used, it will present a setup wizard to guide you through the basic settings:

Configuration Wizard


1. Select the appropriate language for the user interface. When the correct language is highlighted, press the “Select” button at the bottom of the page to continue to the next step.

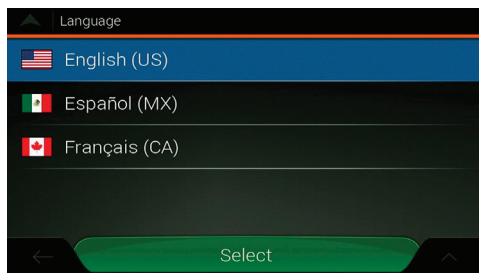

2. Accept the license agreement by pressing “Accept.”

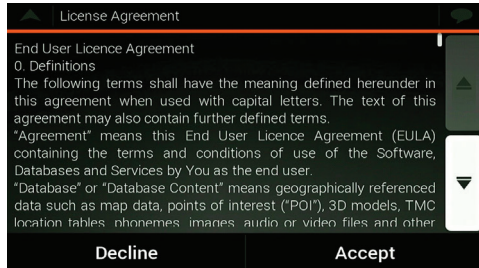


3. Proceed to the configuration wizard by pressing the “Next” button at the bottom of the page.

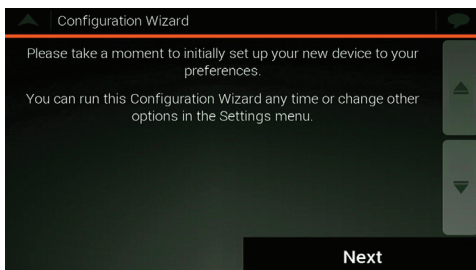



4. Select the desired voice profiles. When the selection is made and highlighted, press “Next.” Note that during this step, the normal audio from the G4 will be suppressed.




5. This page will allow you to change the units and formats used by the Navigation software to show you that information. By pressing the icon at the end of the line, you can change that specific setting.

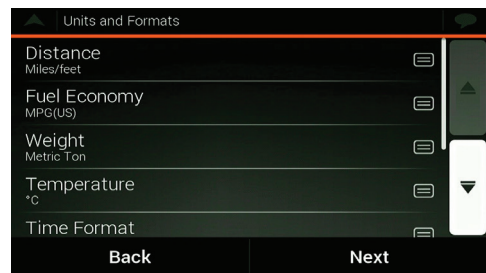


6. In the route preferences, you can change the options for the actual routing. Make sure that the Vehicle profile line shows the RV class that the system is being used in. You can change that by pressing on that line in the page and select the required vehicle profile. When the correct vehicle profile is highlighted, press the “Back” button, and it will show your selection in the overview page of the Route preferences.

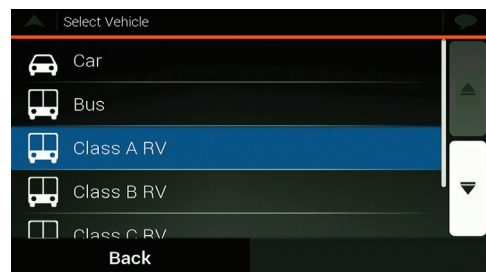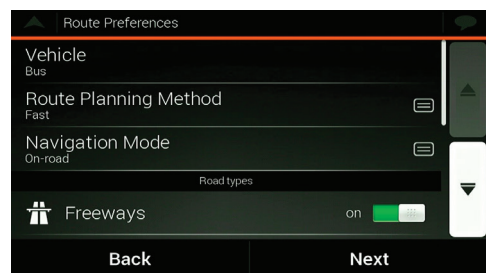

- When completed, press the “Next” button to proceed.

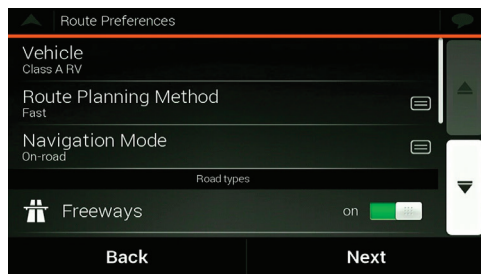


- The configuration wizard is completed. Press the “Finish” button to complete the configuration and start the navigation program with your selected settings and options.

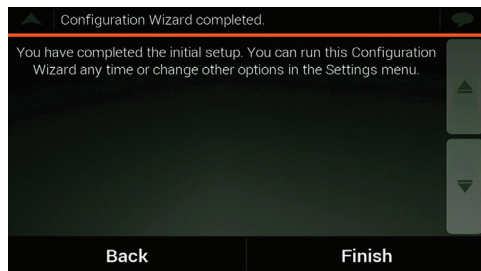

MANUAL CHANGES

Changes can be made later on as well, if needed, to update the routing preferences or the vehicle specific variables.


- Open the main menu and select the “Settings” page. When in the settings page, select the “Route Preferences” option.

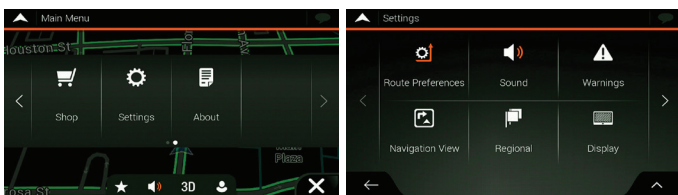


- In the Route Preferences menu, you can select the Vehicle line to access the vehicle profile selections.




- When in the vehicle selection list, press the Arrow up icon in the bottom right corner to access the “Edit” function.

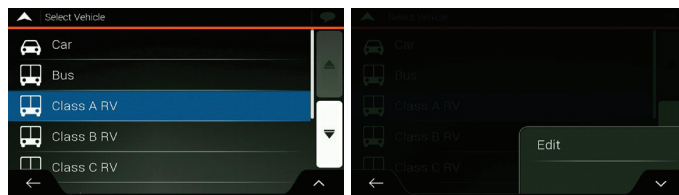


- Select which vehicle profile you would like to edit by tapping the icon behind the vehicle profile name, and select the “Modify Vehicle” option to access the specifics of the selected vehicle profile.

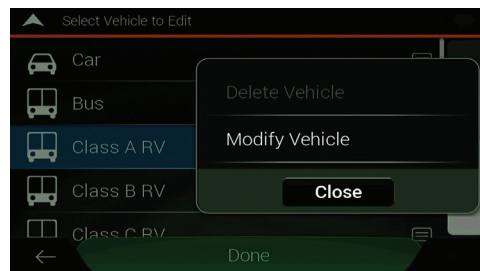

- Change the vehicle profile variables you want to change here (length, weight, height, etc.). Scroll through the list to see all options.

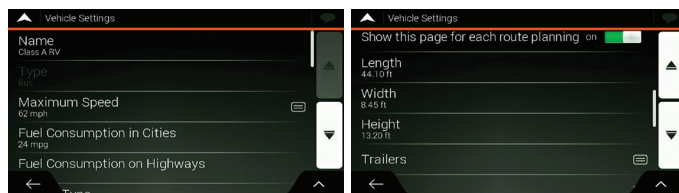

- When all the changes are completed, press the back arrow to return to the vehicle profile list, and press “Done” to finish the modifications to the vehicle profiles.

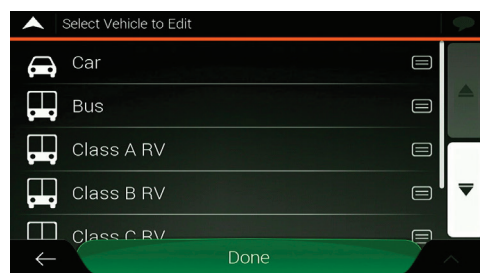

Source(s): Xite G4 Navigation Vehicle Profile Settings (April 2021)

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

Coach Management/Multiplex Systems



KIB Multiplex Systems

KIB Multiplex Switch Panel Operation

This article provides brief operating instructions for KIB backlit multiplex switches.

Operation

The KIB multiplex switch panel controls the lights, water pump, floor heat, and fans when wired to the corresponding switch label. The switch panels will vary by coach model and floorplan.

Press the switch labeled with the circuit you wish to operate. The green LED indicator will illuminate on the KIB switch panel when the circuit is activated. Pressing the switch again will turn the circuit off and the indicator will change to blue when it is turned off.


Buttons and Functions

Some of the buttons and functions displayed on the KIB multiplex switch panels include, but are not limited to: CEILING, KIT/LRM, DRESSER, ACCENT, HI/LOW, WALL, RH RD, LH RD, W. PUMP, DINETTE, SEATING, KIT OVH, BKLTG, VANITY



2024 KIB 10.1" Central Monitor Capacitive Touch Panel Guide

This article provides basic operation instructions for a KIB 10.1" Central Monitor Capacitive Touch Panel installed in select coaches.

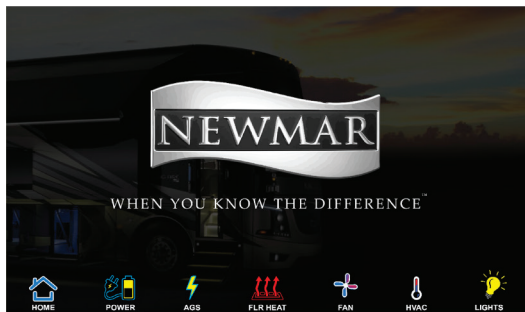

Overview

The KIB 10.1" PANEL is a centralized "V-BUS" LCD interface to the following:

- KIB Tank Monitoring System Control (TMSC-100)
- Dometic Roof Top Units through the KIB (HVAC-GEN1)
- KIB Auto Generator Start "AGS" system (if equipped)
- Tank Heat (if equipped)
- Ventilation Fan Control (if equipped)
- Floor Heat Control (if equipped)
- Lithium Power Display (if equipped)

IMPORTANT

The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.

This guide provides information about the features and settings within the KIB 10.1" Central Monitor Capacitive Touch Panel for the 2024 model year. Refer to the associated article in Newgle to view graphics and an explanation for each screen shown in the KIB display.

Article Name and Link	Article Summary
Splash Screen	The Splash screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the Newmar logo, as well as the user icons to access the Home, Power, AGS, Floor Heat, Fans, HVAC, and Lights screens.
Home	The Home screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the Tank and Voltage Monitoring, Main Lighting Controls, and water-related switches, as well as the main icons at the bottom of the screen: Power, AGS, Floor Heat, Fans, HVAC, and Lights.
Water Pump and Auto Fill	The Home screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays water-related switches for controlling the water pump, as well as the settings for top off and auto fill.
Tank Monitoring and Heat	The Home screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays settings for tank heat, as well as the tank capacities for the fresh, grey, black, and LP tanks (if equipped).
TV Lift	The Home screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the television (television lift) controls.
Power	The Power icon on the KIB 10.1" Central Monitor Capacitive Touch Panel will display the Energy Management page to provide the user with access to the Gen Start and Stop buttons to start or stop the generator. This feature is only available on coaches equipped with a factory-installed lithium package.
Energy Management	The Power icon on the KIB 10.1" Central Monitor Capacitive Touch Panel will display the Battery Management System page. Press the EMS button to access the Energy Management System page. This feature is only available on coaches equipped with a factory-installed lithium package. This system can shed various A/C loads, including the Oasis system electric elements, air conditioners, block heater, and floor heat.

Article Name and Link	Article Summary
AGS	The AGS icon on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the Automatic Generator Start pages to view and/or control the system statuses, quiet time feature, and generator run time for charging the house and chassis batteries.
Floor Heat	The Floor Heat icon on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the floor heat controls and settings for floor heat in the front, mid, and rear zones of the coach.
Fans	The Fans icon on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the Exhaust Fan Control page to turn the fans and rain sensor override on or off and control the fan speed.
HVAC	The HVAC icon on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the controls for the rooftop air conditioners, furnace or Oasis heating system, and provides access to the HVAC and Oasis settings for the entire coach.
BT Pair	The BT Pair (Bluetooth) icon on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the Bluetooth Pair page, which provides steps for pairing your smartphone or tablet to the touch panel using the Connected Solutions app.
Lights	The Lights icon on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the controls for the lighting settings for each area, such as outdoor, living room, kitchen, bedroom, and bathroom(s).
Bluetooth App	This article provides a video overview for the KIB Connected Solutions Bluetooth App used in conjunction with the KIB 10.1" Central Monitor Capacitive Touch Panel.

****Note:** Portions of this guide were sourced from L-Panel 2A-4.3" User Guide RevD02 (6/27/2019)


KIB 10.1" Central Monitor Capacitive Touch Panel: Home

The Home screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the Tank and Voltage Monitoring, Main Lighting Controls, and water-related switches, as well as the main icons at the bottom of the screen: Power, AGS, Floor Heat, Fans, HVAC, BT Pair, and Lights.

⚠ IMPORTANT

The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.

Home

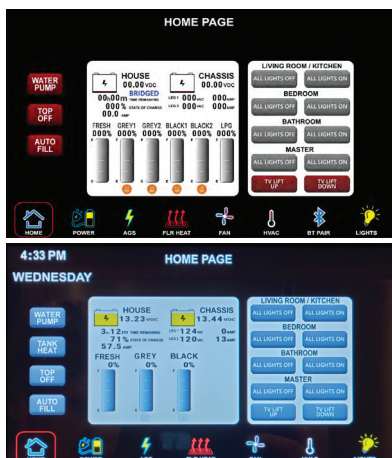

USER ICONS

- **POWER:** Page jump to the LITHIUM POWER control page (must have factory-installed lithium battery option for this icon to appear).
- **AGS:** Page jump to the AGS control page.
- **FLOOR HEAT:** Page jump to the FLOOR HEAT control page.
- **FAN:** Page jump to the FAN control page.
- **HVAC:** Page jump to HVAC control page.
- **BT PAIR:** Page jump to BLUETOOTH control page.
- **LIGHTS:** Page jump to the LIGHTS control page.

Note: Information displayed on the screen above between the house and chassis battery and the tank levels will not appear on coaches not equipped with a factory-installed lithium battery package.


KIB 10.1" Central Monitor Capacitive Touch Panel

Guide: Splash Screen

The Splash screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the Newmar logo, as well as the user icons to access the Home, Power, AGS, Floor Heat, Fans, HVAC, and Lights screens.

Sleep

While on the home page the LCD will go to sleep after two minutes of inactivity. Touching the sleeping LCD screen anywhere will wake it up.

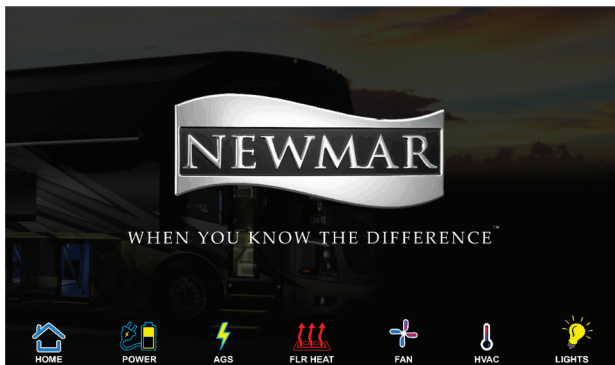

⚠ IMPORTANT

The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.


KIB 10.1" Central Monitor Capacitive Touch Panel

Guide: BT Pair

The BT Pair (Bluetooth) screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays steps for pairing your smartphone or tablet to the touch panel using the Connected Solutions app.

Connected Solutions App

Follow the onscreen instructions to connect your smart device using the Connected Solutions App, which will need to be downloaded from the App store, and Bluetooth will need to be enabled.

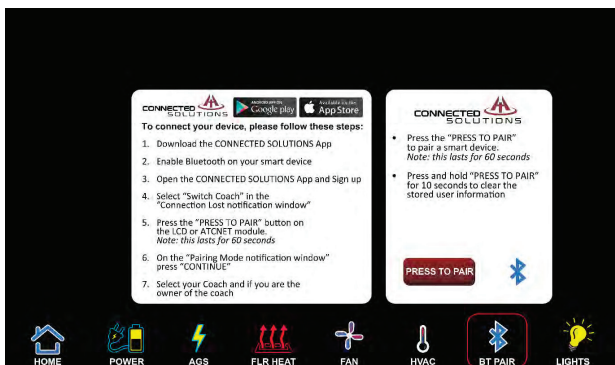

⚠ IMPORTANT

The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.



WiFi Systems

Due to the ever-growing demand of internet connectivity, a WiFi system in your coach can mean the difference between using costly mobile data and being able to access free WiFi wherever your travels may take you. Your coach may be equipped with one of the many options WiFi systems Newmar offers.

WiFi Ranger Converge LTE Indoor/Outdoor Router Operation

This article provides an operational overview of the WiFi Ranger Converge LTE Indoor/Outdoor Router (Model: Teton/ Poplar Combo, Denali/Spruce Combo, and Aspen/Everest Combo). This information only applies to coaches equipped with an optional WiFi Ranger Converge Router.

Components

Get the most out of a WiFi Ranger system with an indoor & outdoor pack [...] for more network versatility and functionality when compared to a standalone unit. All of the long-range WiFi, LAN ports, USB tethering, and upgradability features unite in these Packs. Furthermore, you will enjoy maximum wireless coverage, performance, and reliability when using a Pack.

INDOOR ROUTERS

- **Poplar:** WiFiRanger Poplar is an entry-level mobile router with 2.4GHz WiFi, a USB port for LTE tethering, 100Mbps LAN ports, and an integrated LTE modem (optional).
- **Spruce:** WiFiRanger Spruce is a mid-performance mobile router with 2.4GHz / 5.8GHz WiFi, a USB port for LTE tethering, and 1000Mbps LAN ports.
- **Aspen:** WiFiRanger Aspen is a high-performance indoor mobile router with Gigabit LAN, 2.4GHz / 5.8GHz WiFi, USB 3.0 LTE Tethering, and LTE Modem (optional).

OUTDOOR ROUTERS

- **Teton:** WiFiRanger Teton is an entry-level outdoor router with 2.4GHz WiFi, 1mi range, a 100Mbps LAN port, and an integrated LTE modem (optional).
- **Denali:** WiFiRanger Denali is a mid-performance outdoor router with 2.4GHz WiFi, 1.5mi range, a 100Mbps LAN port, and an integrated LTE modem (optional).
- **Everest:** WiFiRanger Everest is a high-performance outdoor mobile router with Gigabit LAN, 2mi Max Range, 2.4GHz / 5.8GHz WiFi, and LTE Modem(s) (optional).

INDOOR ROUTER UNIT (IDU)



OUTDOOR ROUTER UNIT (ODU)




Quick Start Guide

1. Power up your WiFi Ranger(s). Follow steps from Rooftop Installation and Interior Installation in order to power up unit(s), then wait 5 minutes.



2. Wirelessly connect your device to your WiFi Ranger. Network names vary depending on which WiFi Ranger model(s) you have. Note that the blank space need to be filled in with the 4 unique digits of your WiFi Ranger(s).
 - Pvt. WFR__Teton.___ __ __ __
 - Pvt. WFR__Denali.___ __ __ __
 - Pvt. WFR__Everest.___ __ __ __
 - Pvt. WFR__Poplar.___ __ __ __
 - Pvt. WFR__Spruce.___ __ __ __
 - Pvt. WFR__Aspen.___ __ __ __


SMARTPHONE VIEW

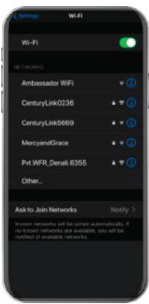


PC VIEW




MAC VIEW

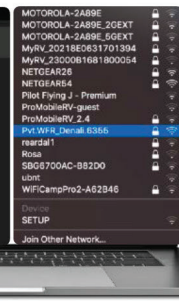

- Enter Password: changemenow _____. Enter password in lower case with no spaces. Note that the blank spaces need to be filled in with the 4 unique digits of your WiFiRanger(s).

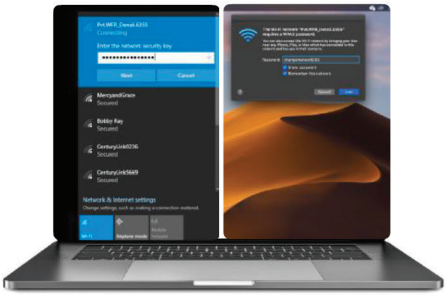

- Visit mywifiranger.com. This brings up the WiFiRanger Control Panel which can be bookmarked for future access.
- Click Connect on WiFi network or Cellular device. For filtered WiFi networks, proceed to the captive portal or login page and enter the necessary credentials or terms of service.

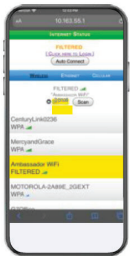

LTE Activation

WiFiRanger is pleased to provide LTE solutions that are not locked into a specific cellular carrier. This approach gives the customer increased flexibility over other competing offerings which are tied to singular carriers or data plans. The WiFiRanger LTE solution gives you the freedom to find the perfect plan for you. The cellular landscape is always evolving and advancing, so our goal is to assist you in making the most of the myriad of data options available. The following advice is to help you navigate the data plan and activation topics that are applicable to our LTE solutions. The LTE solutions offered by WiFiRanger are subject to change based on the evolving cellular landscape.

IMPORTANT CONSIDERATIONS

A. Data Plan Availability Varies by Region

- Some cellular carriers offer certain data plans by region. As such, you may find that the data plan that you desire is available through a cellular reseller or representative in another area while your local representative has more limited options. Check around or call a representative in another region if you can't find what you want locally.

B. SIM Card Type May Affect Data Plan Options

- WiFiRanger provides standard consumer SIM cards with their LTE modems. These SIM cards may not work on business data plans, but should support most consumer data plans. It is important to ask your cellular carrier if the SIM card you provide them is the right kind to meet your data needs.

C. Ease of Modem Activation Varies by Reseller / Carrier

- In some cases, it can be difficult to activate the WiFiRanger LTE modem and SIM card depending on the representative you speak with. Some representatives work for a cellular reseller that does not have the offerings you desire, or you may need a more knowledgeable representative to handle your request. Ask different cellular stores, resellers, or a direct Carrier representative until you find the right person to activate your modem and SIM card on the desired plan.

D. Data Plan Pricing Depends on Your Cellular Account

- In large part, the price of data plans for the WiFiRanger LTE modem are affected by your cellular account type and other data plan(s) on your account. In some cases, the WiFiRanger LTE modem will require having a data-only plan that is separate from the data plan attached to your smartphones or other devices. Checking with your carrier on costs will help you to understand how the carrier will handle the WiFiRanger LTE modem pricing and data amounts available.

E. Upgrading from Non-LTE WiFiRanger to LTE Modem May Require Additional Steps

- If you are upgrading from a non-LTE WiFiRanger router to an embedded LTE modem, please be sure to click Check for Updates on the WiFiRanger Control Panel after installing the modem or upgrade kit. If you are experiencing problems or have questions about the new LTE modem, contact WiFiRanger to assist in getting your WiFiRanger configured to support the new modem. Our contact info is listed on the bottom of this guide.

F. Changing Cellular Carriers Should Only be Done After Verifying Supported Bands

- If you plan on changing cellular carriers, ensure that your modem supports the necessary bands. Supported bands listed below:

Bands	Category 4 Modem	Category 6 Modem
	Quectel EC25-AF	Quectel EP06-A
	2/4/5/12/13/14/66/71	2/4/5/7/12/13/25/26/29/30/66

Identify modem model on Setup tab of Control Panel under Cellular settings.

ACTIVATION CONTACT INFORMATION

CARRIER	CONSUMER PHONE	BUSINESS PHONE	WEBSITE
AT&T	888.333.6651	888.444.4410	att.wifiranger.com
VERIZON	**Official Support Coming Soon (we cannot guarantee Verizon data plans at this time)*		
MILLENICOM	800.996.1285	800.996.1285	millenicom.wifiranger.com

LTE Setup

ACCESSING CELLULAR SETTINGS


- Power up the WiFiRanger system with embedded LTE modem(s).
- Connect over ethernet or wirelessly to the WiFiRanger's network.
- Access Control Panel of the WiFiRanger and select the "Setup" tab.
- Expand modem settings by clicking the appropriate gear icon:
 - Standalone WiFiRanger (indoor or outdoor unit):
 - Click "Cellular" gear icon.
 - Pack WiFiRangers (indoor and outdoor units):
 - Click "Cellular" gear icon to access indoor unit modem.
 - Click "WFRControl" gear icon to access outdoor unit modem.

VIEWING SIM & IMEI NUMBERS

If you need the SIM or IMEI numbers for Cellular plan activation or support, then follow the steps below:

- Follow steps for "Accessing Cellular Settings."
- View SIM & IMEI numbers after expanding the modem settings.

Converge Routers & Modems Only Support Standard SIM Size. Be sure that SIM card is Standard size as Nano and Micro sizes will not fit properly within Converge routers or LTE modems. A SIM card size adapter kit may be used to resize the SIM.

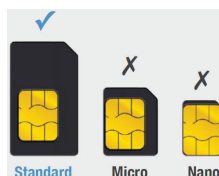

REFRESHING SIM NUMBER

If you've changed the SIM card in your WiFiRanger modem and need to refresh the SIM number, follow the steps below:

- Follow steps for "Accessing Cellular Settings."
- Click on "Clear SIM Details" then wait 30 seconds.
- Click on "Reboot Cellular" then wait 60 seconds.
- Reload the Control Panel and verify the new SIM number appears.


MANUALLY SETTING AN APN

(This is usually unnecessary on latest firmware since APN is automatically detected.) If you are unable to connect to the internet using the WiFiRanger modem even though your data plan is active, then there may be an issue with the modem's APN. An APN is a password used by the modem for authenticating with your cellular Carrier. To change the APN, follow the steps below:

- Follow steps for "Accessing Cellular Settings."
- Enter correct APN into the APN field:
 - Default APN shown in this table (most common)

Carrier	Default APN
Verizon	vzwinternet
AT&T	broadband
T-Mobile / Millenicom	fast.t-mobile.com

- Unique APN on your Cellular account (only if applicable)
- Click "Save Changes."

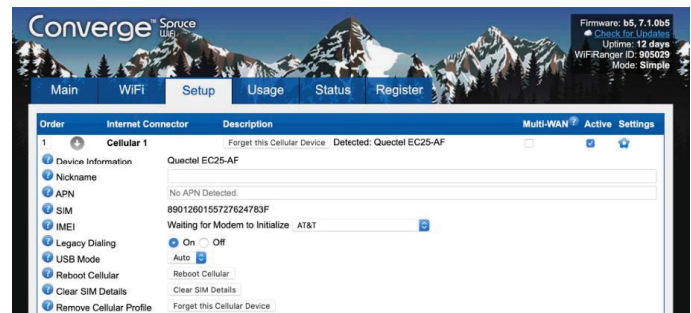

Source(s): WiFi Ranger Converge Indoor/Outdoor Routers Owners Manual (2020)
 Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

Coach WiFi Security Alert - Changing Your Newmar Network Password(s)

Newmar Corporation has determined that the potential exists for unauthorized persons to gain unauthorized access to certain WiFi-connected components on some Newmar products via factory-installed WiFi routers which utilize factory password settings. The factory password setting is unique to each coach and there are no known instances of any such unauthorized access having ever occurred on any Newmar product. However, if an unauthorized person were to gain access to the factory-installed WiFi system there is a potential on some products for the unauthorized person to gain access to the WiFi-connected systems in the coach including certain televisions, sound equipment, cameras, and some coach management systems.

In order to protect against the potential for such unauthorized access to occur on Newmar products, Newmar Corporation highly recommends that customers owning the subject coaches change the factory password settings on the WiFi router to new passwords that have been chosen by the customer by following the directions provided below. Changing the factory passwords on the WiFi router will eliminate the potential for unauthorized persons to gain access to Newmar products via the factory password settings.

Note that changing the factory passwords to new passwords selected by the customer will cause a loss of pairing or connectivity between existing WiFi devices in the coach and the WiFi router. It will then be necessary to update the passwords on each of the individual WiFi-connected devices in the coach to have the same new password as the router in order to re-establish the pairing and connectivity between each of those WiFi devices and the router.

Please refer to the manufacturer's operation manual for pairing instructions for each WiFi-enabled component.

If the passwords are not updated on the WiFi devices in the coach after the WiFi router password has been changed, the devices will still function on their individual remote controls and on their individual in-coach control panels but those devices will no longer have any internet functionality or remote connectivity functionality until their passwords are updated to match the new WiFi router password.

If a customer is not able to make the recommended password changes to the factory-installed WiFi router immediately, the potential for unauthorized users to gain access to the coach WiFi systems can be easily blocked by simply turning off or unplugging the WiFi router until such time as the passwords can be reset.

Overview

Your Newmar coach's WiFi router has been preset to a unique factory password in order to ensure that all coach WiFi-enabled components were properly tested during the production process.

To better secure this network once you become the owner of the coach, it is highly recommended that you read and perform the following instructions for "Changing the Coach WiFi Router Password."

If your coach is a New Aire, Mountain Aire, London Aire, Supreme Aire, Essex, or King Aire equipped with the SilverLeaf coach management system, it is highly recommended that you read and perform the instructions for "Changing the SilverLeaf LR125 Password" to provide full functionality of the coach management system.

CAUTION

Failure to change these passwords poses a potential security risk to you and your coach.

Passwords should be at least 12 characters long. The longer the password is, the harder and longer it takes to crack.

- Include upper case letters, lower case letters, and special characters (i.e., #, !, &).
- Never use the exact same password for all your systems.
- Recommend a passphrase that contains a series of unrated words.
 - Passphrases greatly increase the difficulty of this type of software. To create a passphrase think up a short, silly story: "The buffalo drove the truck to the store." To create a passphrase from this, you simply select words and string them together, and make a few substitutions: BuffaloTruckStOre! While it may seem silly, it is incredibly easy to remember, so long as you remember the story. Your stories can be anything you want, just make sure it's something easy to visualize and sticks in your head."

Changing The WiFi Router Password

CONNECT TO THE COACH NETWORK

NOTICE

These instructions are intended for WiFi Ranger (WFR) GO2 and CONVERGE (Teton/Poplar, Denali/Spruce, and Everest/Aspen) Products. To change the Guest WiFi password, please refer to the user guide by typing "WiFi Ranger User Guide" (including the quotation marks) in the Newgle search bar.



1. Search for the 'Newmar Network' in the coach when scanning for network connections.
 - a. It is identified by "NewmarXXYY." Pick the network that has the identifier that matches the sticker on the indoor router.
 - b. Each coach model has an identifier for the password, as seen below.
2. Enter the password according to the coach identifier.

EXAMPLE COACH INFO:

WFR ID #: 778XXX

Model: King Aire Diesel Bus

Serial #: 530XXX

Customer WiFi Signal	
Example ID	778XXX
SSID Broadcast	NewmarXXYY
WPA Key (Password)	KGDB530XXX


RELEVANT COACHES

COACH MODEL	YEARS EQUIPPED	SSID XXYY = LAST 4 of WFR ID#	PASSWORD ModelCoach#
King Aire	2014+	NewmarXXYY	KGDB530XXX
Essex	2015+	NewmarXXYY	EXDP801XXX
London Aire	2018+	NewmarXXYY	LADP501XXX
Mountain Aire	2018+	NewmarXXYY	MADP904XXX
Supreme Aire	2020+	NewmarXXYY	SACC270XXX
New Aire	2018+	NewmarXXYY	NADP710XXX
Dutch Star	2018+	NewmarXXYY	DSDP604XXX
Ventana	2018+	NewmarXXYY	VTDP413XXX
Ventana LE	2018+	NewmarXXYY	VLDP413XXX
Super Star	2020+	NewmarXXYY	SSCC230XXX
Kountry Star	2018+	NewmarXXYY	KSDP750XXX
Canyon Star	2018+	NewmarXXYY	CSCA160XXX
Canyon Star Front Diesel	2021+	NewmarXXYY	CSFD162XXX
Bay Star	2018+	NewmarXXYY	BSCA140XXX
Bay Star Sport	2018+	NewmarXXYY	BTCA110XXX

3. After connecting to the coach network, open an internet browser and type in 'MYWIFIRANGER.COM' in the address bar to connect to the WiFi Ranger control panel.




4. In the address bar of the internet browser, remove any text following ":8080" and then type in '/admin' after the ':8080'.
 - a. Example: 10.189.90.1:8080/admin
 - b. This will go to a username and password screen for the admin credentials.

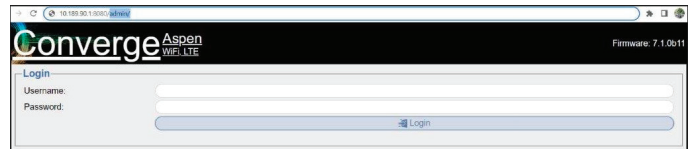

5. Enter USERNAME: admin
6. Enter PASSWORD: wfradmin



7. In the WPA KEY setting, change password to one decided by the customer.
 - a. After the password is changed click 'SAVE CHANGES'.

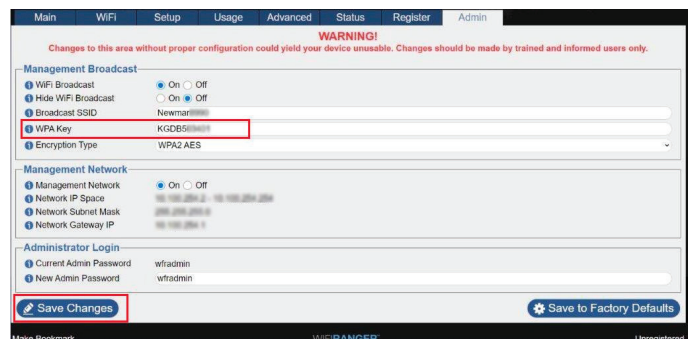

- A banner will show up when the changes are being made. When the password is changed, the banner should show:




- Once the settings have been changed, reconnect to the network using the new password.
- Set up is complete!


Changing The WiFi Ranger Control Panel Password

For more security in the WiFi Ranger (WFR), it is suggested to make a change in the Control Panel that will require a USERNAME and PASSWORD when trying to get access to the WFR Control Panel. Complete the following procedure to further enhance the security.

- Enter the control panel by first connecting to the Newmar Network in the coach as explained previously in the “Connect to the Coach Network” section.
- When connected, go to the SETUP tab and make sure the HIDE ADVANCED FEATURES selection is turned off.
 - If it is ON, select OFF, and click SAVE CHANGES.

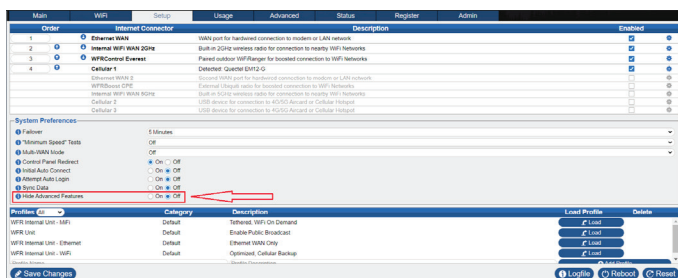

- From there, click the ADVANCED tab.
- In the last box labeled ADMIN ACCESS, choose “ON.”
- Change the USERNAME and PASSWORD to something different.
 - To make this as safe and secure as possible, do not share this password.

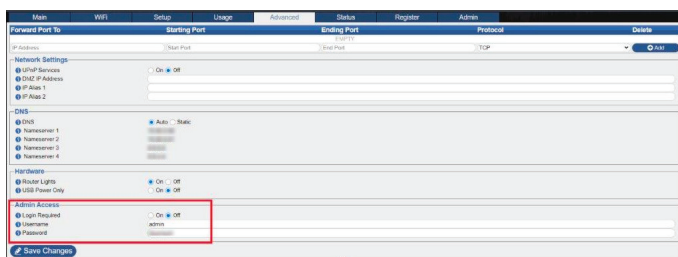

- Click SAVE CHANGES.
 - The next time you try and enter the Control Panel, you will need this username and password to gain access.

- Passwords to WiFi-enabled devices like televisions, cameras, and sound bars (i.e.: Bose 700 sound bar used on select Mountain Aire, London Aire, Supreme Aire, Essex, and King Aire coaches) will also need to be updated to have the same new password as the router in order to re-establish the pairing and connectivity between each of those WiFi devices and the router. Please refer to the manufacturer’s operation manual for pairing instructions for each WiFi-enabled component.


- Setup is complete!

Changing The SilverLeaf LR125 Password


⚠ IMPORTANT

DO NOT change the SilverLeaf password unless you have FIRST changed the password on the WiFi Ranger.


- Start on the SilverLeaf Home screen.
- Press the CONFIG button on the lower right-hand side of the Home screen.

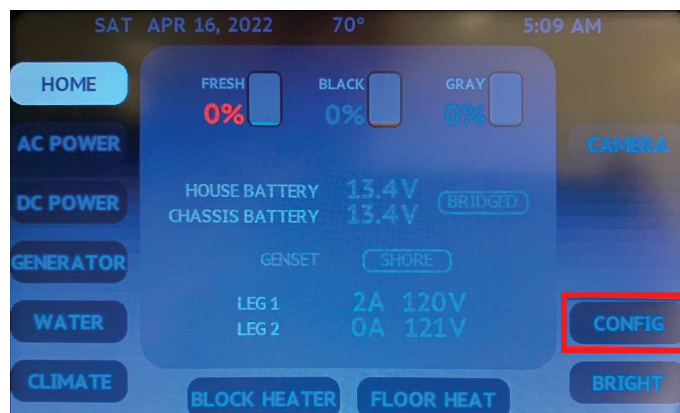


- Scroll to the last page using the down arrow on the lower right-hand side of the CONFIG screen.

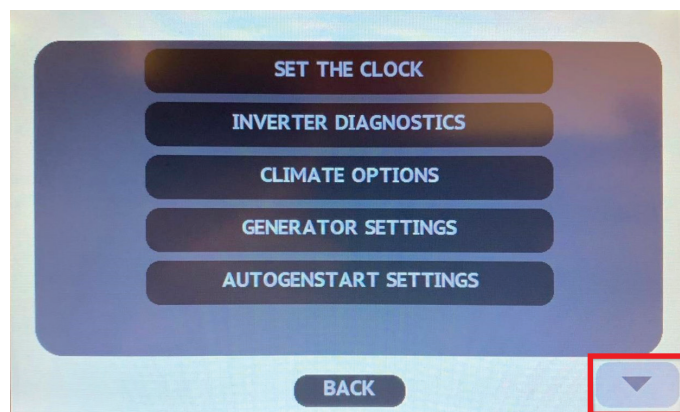


- Change SETTINGS LOCK CODE using the up or down arrows, setting this number to “42.”

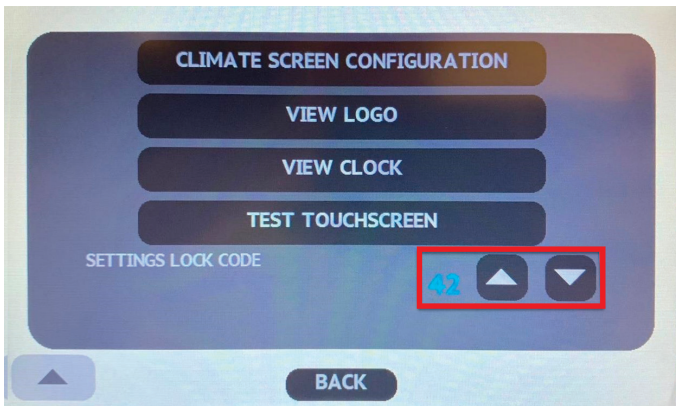


5. Scroll up twice using the navigation arrow and select TABLET WIFI / ROZIE SETTINGS.

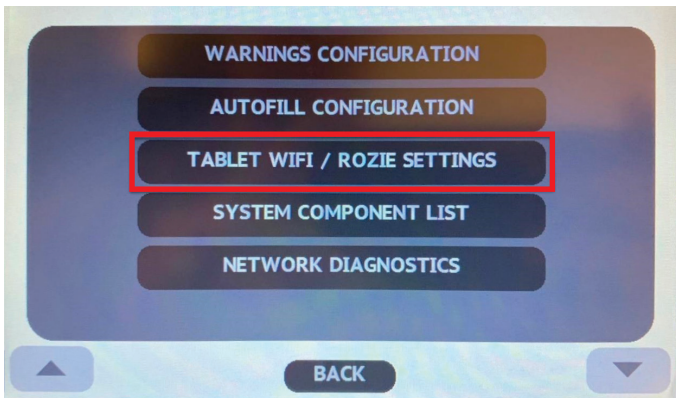


6. Scroll down once to the Router Password, and press the CHANGE button.

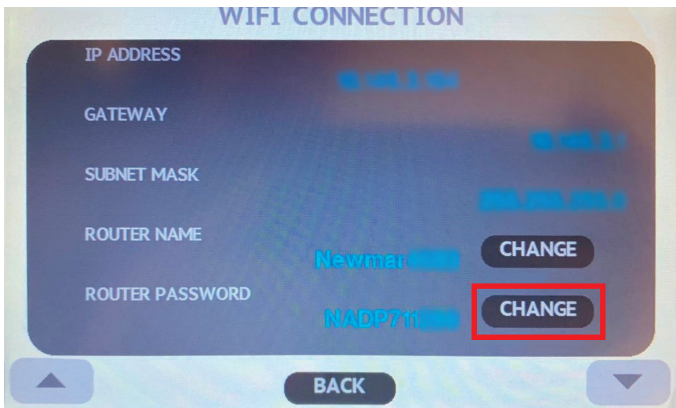


7. Enter your new password using the keypad, and select ACCEPT once your password is complete.

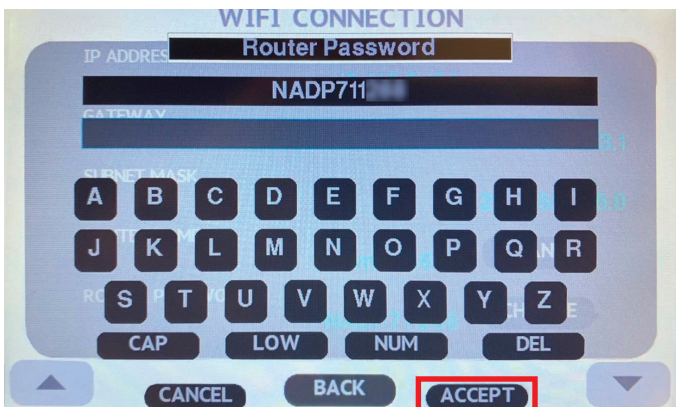


8. Select the BACK button to return from the TABLET WIFI / ROZIE SETTINGS screen to the CONFIG screen.

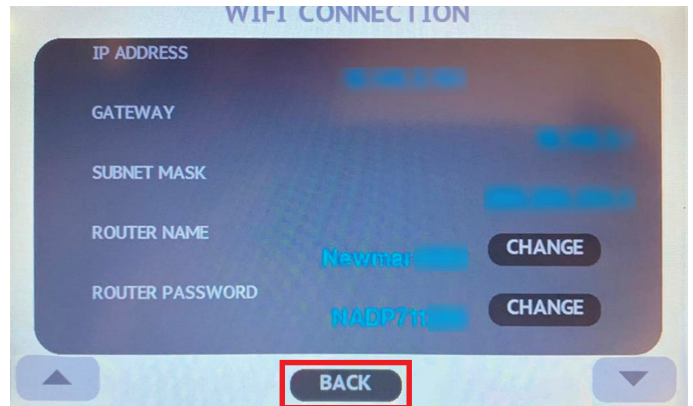

9. Select MONITOR CONFIGURATION from the options.

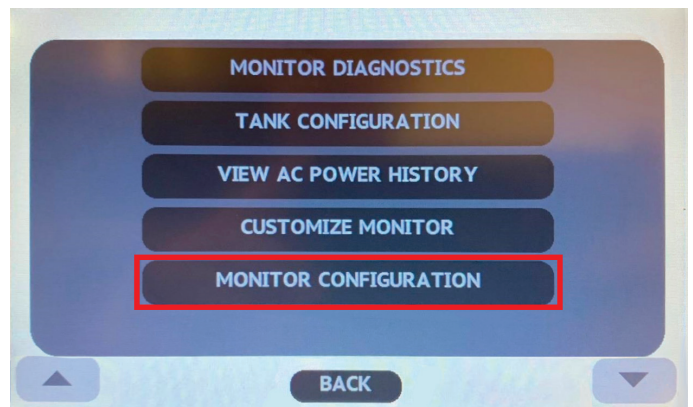

10. Using the down arrow, scroll to the last page of the MONITOR CONFIGURATION screen. Then select the REBOOT button.

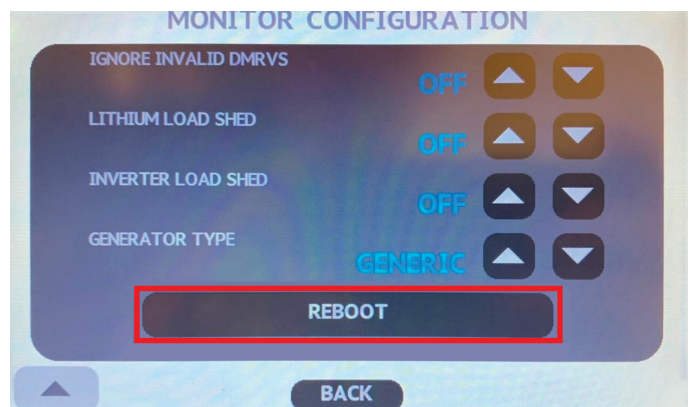

After REBOOT is selected, the SilverLeaf monitor will return to the HOME screen, and your new password is saved.



ENTERTAINMENT SYSTEMS

This chapter provides information on entertainment components, including televisions, dash-mounted audio equipment, multi-disc players, home theater systems, and satellite antennas. Such components may be located within your coach's living room, bedroom, cargo area, or even outside the coach in an optional exterior entertainment center.

IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the manufacturer's complete documentation. Refer to Newgle for more information about entertainment components offered for your coach's model year.



Antennas, Cable, and Satellite Systems

Antennas and Cable Overview

This article provides an overview of the antenna and cable system in the coach. Your coach may be equipped with an exterior antenna jack and interior antenna jacks or wiring at each television location. Depending on your coach year, model, and options, several antennas have been used.

Antenna Power Booster

An antenna with a power booster may be installed in your coach and is designed for reception of all local color and black-and-white channels. The antenna may be automatic, stationary, or manual lift. The power booster supplies voltage to the antenna when using over-the-air signal. However, it transfers the connection from the antenna to park cable when it is available and connected.

To operate the power booster for the television signal, press the switch on the booster plate to illuminate the green LED light. This will supply power to the antenna and boost the television signal.

When using park cable, the booster must be turned off to allow the signal to bypass the antenna and connect to the television or selector switch through the same coax cable. The green LED light should not be illuminated.

A 12 volt outlet is also provided for 12 volt accessories. Do not use this outlet for a cigarette lighter.

Over-The-Air Signal

If the reception is poor, make sure the power switch for the power booster is in the "ON" position and all of the coax connections are tight. This switch is usually located beside the passenger chair or on the video selector box (select units only).

On coaches with a Rayzar automatic TV antenna, this switch is integrated into the power on/off switch typically located in the overhead control center. After traveling, it may be necessary to auto-program your televisions to pick up local stations.

Cable Connection


An exterior cable jack and receptacle may be available on your coach. If installed, they may be located in an outside storage compartment, usually near the power cord.

When using park cable, it is necessary to turn the antenna booster off in order to allow the signal to travel to the television or selector switch (if equipped). This switch is usually located beside the passenger chair; it can also be the power button on the video selector box (select units only).

On coaches with a Rayzar automatic TV antenna, this switch is integrated into the power on/off switch typically located in the overhead control center.

IMPORTANT

Failure to turn off the power booster switch to the antenna while using the park cable system may cause poor picture quality.

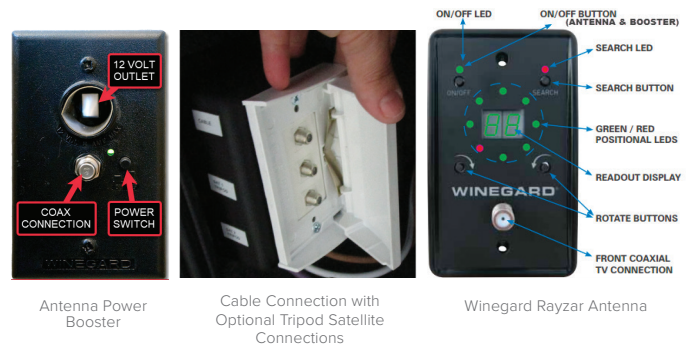

Antenna Power Booster

Cable Connection with Optional Tripod Satellite Connections

Winegard Rayzar Antenna

Basic Troubleshooting

If you have poor reception, try these simple solutions:

1. Make sure the power booster or Rayzar antenna system is turned off.

2. Make sure the coax cable from the park cable hookup to the basement of the coach is in good, working condition and does not have a shorted shield wire.

3. Each TV will need to be set for cable and auto programmed at each new campsite location.
4. Any further troubleshooting and diagnosis should be performed by an authorized service technician.

Winegard Rayzar Automatic Antenna Operation (Models: RZ-7500, RZ-7535, RZ-8500, RZ-8535)

This article provides information about the control panel, cable and antenna mode, and the automatic search function of a Winegard Rayzar Automatic Antenna (Models: RZ-7500, RZ-7535, RZ-8500, RZ-8535).

Control Panel

Coaches equipped with a Rayzar Automatic Antenna will also be equipped with a control panel in the overhead cabinet.

Cable Mode

When the control panel is powered off, park cable signals will be passed to the TV. In this mode all LEDs are turned off.

⚠ IMPORTANT

Failure to turn off the power booster switch to the antenna while using the park cable system may cause poor picture quality.

Antenna Mode

When the Control panel is powered on by pressing the On/Off button, the LEDs will flash and begin its power on process. At this time the antenna amplifier is powered on and TV antenna signals will be passed. Initially, GREEN "Positional LED(s)" will be lit to indicate the direction the antenna is positioned.



Automatic Search Function

The system does not move until the Search button is pressed. Channels will be received whenever the system is powered on.

To begin a new search, press the Search button. The antenna will go through its initialization process and begin searching for TV frequencies. A typical search will take 2-3 minutes. A RED LED will quickly cycle through the positional LED position to indicate the antenna is moving and direction it is moving. After the search is complete, the antenna will automatically go to the position which results in the most watchable TV channels. The 2-digit display will show the number of frequencies seen at that position, and both the GREEN and RED LED(s) will be lit to indicate the successful search location.

Additional RED LEDs will also light to show any other channels found at alternate positions. Pressing the Search button again will move the antenna to the next best location. Continuing to press Search again will cycle through other positions that provided additional channels, until returning to the main search location. To clear search results and initiate a new search, press and hold the Search button for 2 seconds. The system will also clear all search results each time it is powered off.

Source(s): Winegard Rayzar Automatic Antenna User Guide

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

Winegard Sensor Manual Antenna Operation

This article provides instructions for raising, lowering, and rotating the Winegard Sensor Manual Antenna, as well as information about the booster switch and cable mode.

Newmar is currently using Winegard antennas. Depending on your coach model, year, and available options, your coach may be equipped with either a manual or an automatic TV antenna.

Operation

RAISING THE ANTENNA

Turn elevating crank (clockwise) in "UP" direction about 13 turns or until some resistance to turning is noted. AMPLIFIED MODELS ONLY Turn power supply ON to use either front or rear TV outlet. Neither outlet will work unless power supply switch is ON.



LOWERING THE ANTENNA

Rotate antenna until pointer on directional handle aligns with pointer on ceiling plate. Turn elevating crank (counter clockwise) in “DOWN” direction about 13 turns or until resistance is noted. Antenna is now locked in travel position.

⚠ CAUTION

Under no circumstances should you lower the antenna in any position except the travel position.


ROTATING THE ANTENNA FOR BEST PICTURE

Make sure antenna is in “UP” position. Pull down with both hands to disengage ceiling plate. Rotate for best picture.

Winegard RoadTrip T4 Automatic In-Motion Satellite Operation (Model: RTT-20B/RT2000T)

This article provides basic operation instructions for a Winegard RoadTrip T4 Automatic In-Motion Satellite (Model: RTT-20B/RT2000T).

Operating The Roadtrip® T4 Antenna

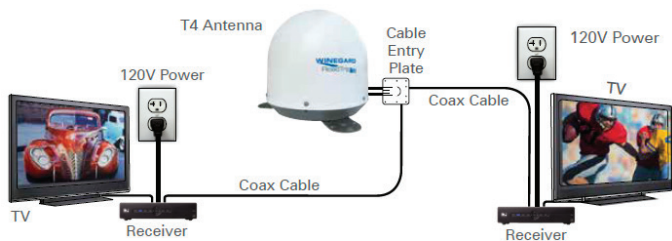

1. Turn on receiver and television set. The RoadTrip® T4 antenna must be connected to a receiver plugged into 120VAC.
2. Verify that you are getting the receiver's menu screens on the television. These screens are available with or without the dish finding the signal.
3. Ensure receiver is properly configured for your provider.
4. Turn the power switch on for the antenna. Within 10–15 seconds, the dish will begin moving and should make one or two revolutions during startup. During this process, it is normal to hear a slight grinding sound as the unit checks its rotational limits. This does not harm the unit. The system will pause to acquire GPS.
5. Once the dish begins its search, it pauses on signals long enough to determine which satellite it has found. The antenna may move off the signal in an effort to verify the signal and should return shortly.

TIP: Because the T4 antenna uses information from the last location where it was on signal, satellite acquisition may take longer if the dish is inactive over long distance traveling.

Booster Switch

On coaches equipped with a manual antenna, the booster switch is typically located beside the passenger seat on the wall near the floor (left photo).

Cable Mode

When the control panel is powered off, park cable signals will be passed to the television. In this mode, the LED indicator light is off.



Source: Winegard Sensor Antennas Installation/Operation Manual (All Models)

6. After the T4 has verified the correct satellite, it will continue to track the signal. The unit will go into “Sleep Mode” if the vehicle is stationary for 6 minutes. This involves a quick verification process where signal may be lost, then return to the signal and be silent. If the vehicle begins moving greater than 10 MPH, the in-motion T4 will resume tracking mode. For smoother operation, use your on-screen guide to locate your channel rather than “channel surfing.”
- **NOTE** There are certain areas within the U.S. where the T4 antenna may experience limited or no coverage of the 129° satellite for HD programming. DISH home coverage has the same limitations. Problem areas include Washington, Oregon and California, but limited coverage may extend past these areas. Contact DISH for additional coverage questions (1-888-825-2557).
 - **ALSO** when the T4 dome is blocked (example: while going through a tunnel, under a bridge, by a building, etc.) programming will not be available. Once the block is removed, the programming will return.

DirecTV®

The RoadTrip® T4 antenna switch settings are preset for DIRECTV. If you have a DISH or Bell TV receiver, you must change the numbered switches found on the electronics box under the dome.

RECEIVER SETUP


Connect the receiver to a power source, and complete receiver setup. Check out online receiver setup guides for your antenna at www.winegard.com/support.

RECEIVER RECOMMENDATIONS



The RoadTrip® T4 antenna will operate with most DIRECTV receivers. Winegard does not recommend using receivers with hard drives, as they are not intended for mobile applications. Winegard does not recommend using an HD receiver since HD programming will not be available. SWM only receivers require a SWM-840 kit.

SATELLITE COVERAGE

The antenna will locate and toggle between satellites 101° and 119°. The RoadTrip® T4 antenna will not operate in all areas where satellites 101° and 119° are available. The T4 antenna is not compatible with 110° or KA-band satellites 99° and 103°. Satellite coverage maps are based on level, stationary operation. Reception interruption may also occur during adverse weather conditions.

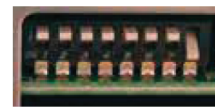

(factory preset for DIRECTV)

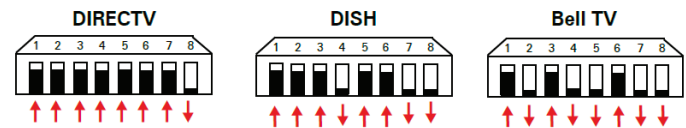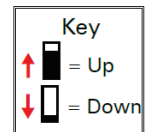

Maintenance

The RoadTrip® T4 antenna is designed to be maintenance free. However, it is a good idea to clean the dome from time to time with a soft cloth, water, and dish soap.


Source(s): Winegard RoadTrip T4 Automatic In-Motion Roof-Mounted Satellite TV Antenna User Guide

Product(s): Winegard T4 RoadTrip In-Motion Satellite (Model: RTT-20B, Newmar Part Number: 135606P)

Winegard RoadTrip P4 Automatic Stationary Satellite Operation (Model: RTS-20B)

This article provides basic operation instructions for a Winegard RoadTrip P4 Automatic Stationary Satellite (Model: RTS-20B).

Operating The Roadtrip® P4 Antenna

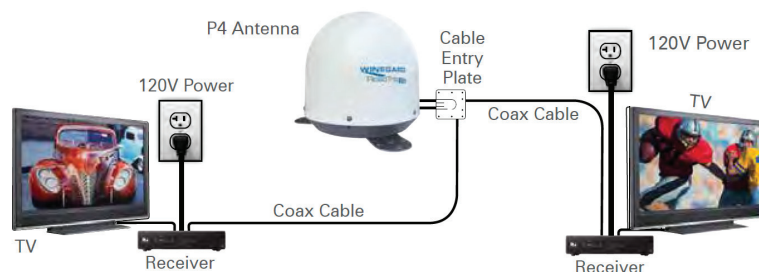

1. Turn on receiver and television set. The RoadTrip® P4 antenna must be connected to a receiver plugged into 120VAC.
 2. Verify that you are getting the receiver's menu screens on the television. These screens are available with or without the dish finding the signal.
 3. Ensure receiver is properly configured for your provider.
 4. Turn the power switch on for the antenna. Within 10–15 seconds, the dish will begin moving and should make one or two revolutions during startup. During this process, it is normal to hear a slight grinding sound as the unit checks its rotational limits. This does not harm the unit. The system will pause to acquire GPS.
 5. Once the dish begins its search, it pauses on signals long enough to determine which satellite it has found. The antenna may move off the signal in an effort to verify the signal and should return shortly.
- TIP: Because the P4 antenna uses information from the last location where it was on signal, satellite acquisition may take longer if the dish is inactive over long distance traveling.
 - NOTE There are certain areas within the U.S. where the P4 antenna may experience limited or no coverage of the 129° satellite for HD programming. DISH home coverage has the same limitations. Problem areas include Washington, Oregon and California, but limited coverage may extend past these areas. Contact DISH for additional coverage questions (1-888-825-2557).
 - ALSO when the P4 dome is blocked (example: while going through a tunnel, under a bridge, by a building, etc.) programming will not be available. Once the block is removed, the programming will return.

DirecTV®

The RoadTrip® P4 antenna switch settings are preset for DIRECTV. If you have a DISH or Bell TV receiver, you must change the numbered switches found on the electronics box under the dome.

RECEIVER SETUP

Connect the receiver to a power source, and complete receiver setup. Check out online receiver setup guides for your antenna at www.winegard.com/support.

RECEIVER RECOMMENDATIONS





The RoadTrip® P4 antenna will operate with most DIRECTV receivers. Winegard does not recommend using receivers with hard drives, as they are not intended for mobile applications. Winegard does not recommend using an HD receiver since HD programming will not be available. SWM only receivers require a SWM-840 kit.

SATELLITE COVERAGE

The antenna will locate and toggle between satellites 101° and 119°. The RoadTrip® P4 antenna will not operate in all areas where satellites 101° and 119° are available. The P4 antenna is not compatible with 110° or KA-band satellites 99° and 103°. Satellite coverage maps are based on level, stationary operation. Reception interruption may also occur during adverse weather conditions.



(factory preset
for DIRECTV)

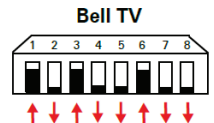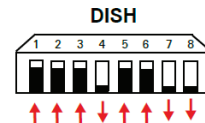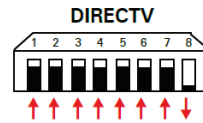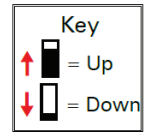

Maintenance

The RoadTrip® P4 antenna is designed to be maintenance free. However, it is a good idea to clean the dome from time to time with a soft cloth, water, and dish soap.

Source(s): Winegard RoadTrip P4 Automatic Stationary Roof-Mounted Satellite TV Antenna

Product(s): Winegard RoadTrip Automatic Stationary Roof-Mounted Satellite TV Antenna (Model: RTS-20B, Newmar Part Number: 135607)

Winegard Trav'ler Pro Automatic Multi-Satellite TV Antenna Operation (Models: SK2-100/SK2DISH and SK2-300/SK2SWM3)

This article provides basic operation instructions for a Winegard Trav'ler Pro Automatic Multi-Satellite TV Antenna (Models: SK2-100/SK2DISH and SK2-300/SK2SWM3).

IDU Operation

The already simple Winegard® Trav'ler® operation is even easier and can now be done from your smartphone with the Winegard-Connected app. To take advantage of advanced features and over-the-air updates, please download the Winegard-Connected app from the Google Play or the App Store. Simply plug in the 48 VDC power cable to power on the interface box (IDU) and start enjoying the Winegard Trav'ler Pro.

1. The IDU will power on as soon as the 48 VDC power cord is plugged into the IDU. This will not raise the antenna.
2. Upon power up, the IDU will display current hardware and software versions. If connected to an internet source (WiFi configuration requires the Winegard-Connected app), the IDU will check to see if any updates are available to download. NOTE: When downloading a software update, make sure you have a good, reliable internet source and connection .
3. Once the IDU has loaded and is in the ready state, press and hold the Search button to perform a search.

4. To stow the antenna press and hold the Stow button until the satellite antenna starts the stow process.

The IDU includes advanced features as well as system information within the Settings Menu. To access the Settings Menu press and hold the Power button for five seconds until the Settings Menu options appear. Press Search to scroll up and Stow scroll down. An asterisk icon shows which menu item is currently selected. Press the Power button to confirm your selection. To exit a selected Power Mode, press and hold the Power button for five seconds and select the desired mode.



Smart Phone Operation and Features

To pair your smartphone with the IDU, open the Winegard-Connected app and log in to your account.

NOTE: Account creation is required to proceed. If you need to create an account press “Don’t have an account? Create one” under “SIGN IN” and complete the prompted fields. Once submitted, you will receive a confirmation link sent via email. If the email is not in your [email inbox] be sure to check your spam/junk folder. Once the link has been confirmed, you can now sign in to your account.

App Functions

The Main Menu shows all the additional features of the Winegard-Connected app. Available functions include: Power Modes, Search Mode, Stow Mode, Setting up WiFi, Disconnect and Reconnect to IDU, and Settings.

For more information about available functions and settings (antenna type, search mode, raise antenna, adjust antenna, WiFi network, EL calibration), refer to the complete operation manual.

SUPPORT

Download the product manual through the Winegard-Connected App. The app will prompt you to select a product. Once selected, press “GET MANUAL” to start the download process.

SYSTEM INFORMATION

The System Information option provides specific details about your Trav’ler Pro antenna, including its hardware version, software version, WiFi MAC address, SSID, and Bluetooth® MAC address.

To exit, scroll through the information screens until Exit Info is shown, then press and hold “Power”. The same information is available in the Winegard-Connected app and can be accessed through the System Info tab in the Trav’ler Pro Main Menu.

Update Software

Software updates require a reliable internet source and connection. Having a weak connection may create issues with the software download. When a software update is available, there will be an exclamation mark within the cloud icon on the IDU display. In the Winegard-Connected app there will also be a red circle with an exclamation mark within the messaging portion of the Trav’ler Pro Main Menu indicating a software update is available.

WARNING

It is highly recommended that the unit is stowed before performing any updates.

NOTE: When first setting up the Winegard Trav’ler Pro, it is recommended to connect to an internet source and check for software updates.

For more information about software updates, refer to the complete operation manual.

Miscellaneous

EMERGENCY POWER OFF

The antenna comes with an emergency power off feature. If you need to stop the Trav’ler Pro antenna at any time during a Search or Stow sequence, press “Search”, or “Stow” again (i.e. repeat the same command) to stop the antenna. The antenna will stop in its current position and power will be disconnected from the ODU. Once the antenna has stopped, the ODU will automatically reboot and wait for the next command. If the emergency power off feature is used, the antenna may not be in a safe position for travel. Do not move the vehicle until the unit is stowed.

In addition to the Emergency Power Off, you can also perform an Emergency Reset. To do this you need to press all three buttons (Power, Search, and Stow) at the same time. This will immediately cycle power to the IDU and force a restart. Once the IDU restarts, it will come to the ready state and wait for a request.

EMERGENCY MANUAL STOW

If unable to stow the Trav’ler Pro antenna, it may be necessary to manually stow the antenna in order to travel. Emergency Manual Stow is meant to be used as a last resort and is not meant for common usage.

1. To perform the Emergency Manual Stow, make sure the power to the IDU is disconnected.
2. Once disconnected, proceed to the roof and remove the six Phillips screws and housing from the turret.
3. Disconnect the motor assembly cable from the motor and three 9/64” Allen screws to remove the motor from the turret.
4. To lower the antenna, use a 12mm 6-point socket on the elevation motor’s square shaft and turn the shaft clockwise to lower the antenna.
5. Once lowered to the stow position, reconnect the motor assembly cable prior reinstalling the motor.
6. Once the assembly cable is connected, be sure the motor coupler is aligned with the shaft.
7. After aligning the motor, install the three 9/64” Allen screws (Torque – 25 in-lbs).
8. Verify the seal of the gasket prior to aligning the plastic housing over the screw holes, and seat the housing on the gasket.
9. Reinstall the six Phillips screws. Do not use a drill, as you can strip the base.

⚠ NOTICE

Before lowering the antenna be sure to antenna will stow towards the back of the vehicle. On the mount base, the transition plate is marked “FRONT” and “BACK.” If the antenna is not in a position to stow towards the back of the vehicle, remove the AZ motor assembly cable from the top of the motor and rotate the antenna by hand until the antenna is aligned with “BACK” on the transition plate. Once aligned, reconnect the AZ motor assembly cable and lower the antenna.

MANAGE DEVICES

Managing devices can be done from the Device Selection/Add New Device page by pressing the Menu button (3 bars top left) and selecting Manage Devices under My Tools. The Manage Devices screen gives you the ability to register a new device, remove a device, and manage authorized users for devices.

To register a new device, press the green plus sign next to Register New Device at the bottom of the page. To remove a device, press the trash icon.

Source(s): Winegard Trav'ler Pro Automatic Multi-Satellite TV Antenna Operation Manual Rev5-21 (Models: SK2DISH, SK2SWM3)

Product(s): Winegard Trav'ler Pro Automatic Multi-Satellite TV Antenna (Models: SK2-100/SK2DISH, Newmar Part Number: 161392)

Winegard Trav'ler Pro Automatic Multi-Satellite TV Antenna (Models: SK2-300/SK2SWM3, Newmar Part Number: 161393)

Winegard Trav'ler Pro Satellite TV Antenna AutoStow Operation

This article provides important information about the Winegard Trav'ler Pro Satellite TV Antenna AutoStow feature available in select coaches (beginning with the 2024 model year).

NOTE FROM NEWMAR

Be aware! Since the Trav'ler Pro controller is 120-volt-operated, Winegard's AutoStow feature will only operate properly when the control box is powered by 120-volt power. In Newmar coaches, this means the coach must be plugged into shore power, the generator running, or the inverter on and supplying 120 volts to provide the necessary voltage. It is possible that if the antenna is raised while the coach is plugged into shore power, and then unplugged from shore power without the inverter or generator on, the dash antenna up warning indicator may not activate, and the antenna may NOT AutoStow when the coach's park brake is released.

Theory of AutoStow Operation for Newmar Coaches

TERMINOLOGY

- Gnd - The brake is being pressed and ground is being applied to J7 Pin 4 on rear panel of the IDU.
- Buzzer – The internal IDU buzzer.
- Dash Indicator - J7 Pin 1 is pulled low, which will illuminate the RV dash indicator.

MODES**NORMAL MODE**

1. Stowed Position: When Gnd is applied, nothing happens. (No dash indicator, no buzzer, and the unit stays stowed.)
 - If Search or Stow is pressed on the IDU and Gnd is present: The IDU displays “Back-Panel LOCKED”, the buzzer turns on and dash indicator turns on for ~2 seconds. Same thing happens when Stow, Search, Install Antenna, or Adjust Antenna is activated from the App.
2. Search in Progress: When Gnd is applied, the search stops, buzzer turns on, dash indicator turns on, and the unit stows. Once stow is complete, the buzzer and dash indicator turn off.
3. Search Completed: When Gnd is applied, the buzzer turns on, dash indicator turns on, and the unit stows. Once stow is complete, the buzzer and dash indicator turn off.

SERVICE MODE

1. In Service Mode, the antenna is raised to 70 degrees elevation. When Gnd is applied, the buzzer turns on and the dash indicator turns on until the Gnd is removed. The unit doesn't stow as a safety precaution. If the unit is in Service Mode, there are situations where someone could be on the RV roof

working on the unit and someone else turns on the ignition key or taps the brake; in this condition, it wouldn't be safe to move the antenna.

TRAVEL MODE

1. In Travel Mode, the unit is automatically stowed, so when Gnd is applied, the unit remains stowed with no buzzer or dash indicator.


LOW-POWER MODE

1. Not stowed: When Gnd is applied, the buzzer turns on, dash indicator turns on, and the unit stows. Once stow is complete, the buzzer and dash indicator turn off.
2. Stowed: When Gnd is applied, nothing happens. (No dash indicator, no buzzer, and unit stays stowed.)

ADDITIONAL CONDITIONS

1. If a Stow is started from the IDU front panel or App, then Gnd is applied, the buzzer turns on and dash indicator turns on. The stow that was already started continues without interruption. When stow is complete, the buzzer and dash indicator turn off.
2. Not Stowed: If Gnd is applied, the buzzer turns on, dash indicator turns on, and the unit starts to stow. If Stow is pressed on the IDU front panel or App before the stow is complete, the stow is interrupted and re-started. Once the stow is complete, the buzzer and dash indicator turn off.

Source(s): Trav'ler Pro AutoStow Customer Interface Theory of Operation (Provided by Winegard; Version 8/29/2022)

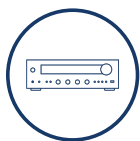

Audio Systems

Bose TV Speaker Operation (Model: 838309-1100)

This article provides basic operation instructions for a Bose TV Speaker (Model: 838309-1100).


Remote Control

POWER

On the remote, press the Power button to power the speaker on/off. When powered on, the speaker defaults to the last active source.

- When you plug the speaker into an AC (mains) outlet, the speaker automatically powers on.
- The first time the speaker is powered on, the speaker defaults to the TV source.
- If the speaker is connected to the TV using an HDMI cable, the speaker changes to the TV source whenever the TV is powered on.

AUTO-WAKE


You can set the speaker to power on whenever a sound signal is received from an optical or analog cable. On the remote press and hold the Power button  until you hear a tone and the TV and Bluetooth lights on the speaker blink amber 3 times to switch between auto-wake and default power settings.

VOLUME

Volume Up: Press +. NOTE: To quickly increase the volume, press and hold +.

Volume Down: Press -. NOTE: To quickly decrease the volume, press and hold -.

Mute/Unmute: Press the Mute button. When audio is muted, the light on the speaker of the current source (TV or Bluetooth) pulses white until audio resumes. TIP: You can also press + to resume audio.

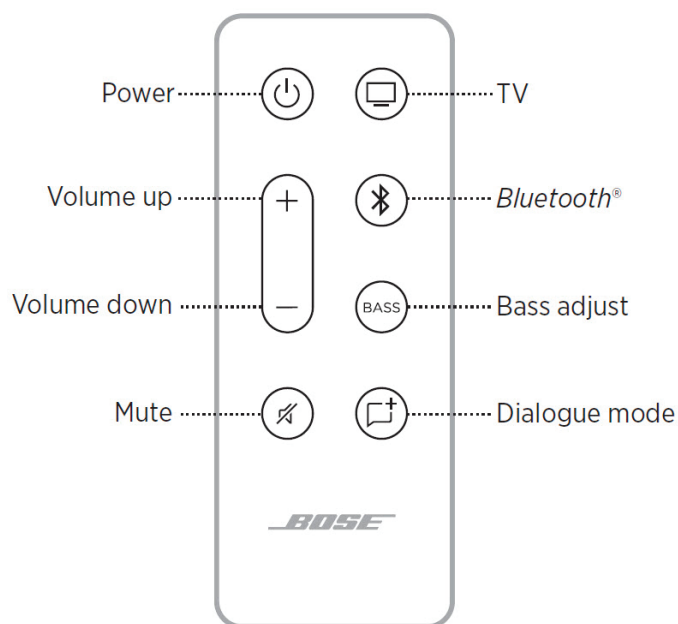

SOURCES

You can control your TV and Bluetooth connections using your remote. To control a source, press the TV button or Bluetooth button on the remote for the source you want to control.

DIALOGUE MODE

Dialogue mode improves the clarity of dialogue and vocals in movies, TV programs, and podcasts by adjusting the audio balance of the system. On the remote, press the Dialogue mode button to switch between Dialogue mode and your default audio settings. When Dialogue mode is enabled, the light for the current source glows green.

Note: When you enable Dialogue mode, it stays enabled for your current source even if you switch to another source or turn off the speaker. To disable Dialogue mode for a source, press the Dialogue mode button again.

ADJUST THE BASS

1. On the remote, press BASS. On the speaker, the TV and Bluetooth lights blink white 3 times.
2. Adjust the bass by doing one of the following:
 - Press Volume up (+) to increase the bass.
 - Press Volume down (-) to decrease the bass.

The TV and Bluetooth lights on the speaker glow to show the current bass setting.


3. Press BASS. The speaker saves the current bass setting.








RESET THE BASS

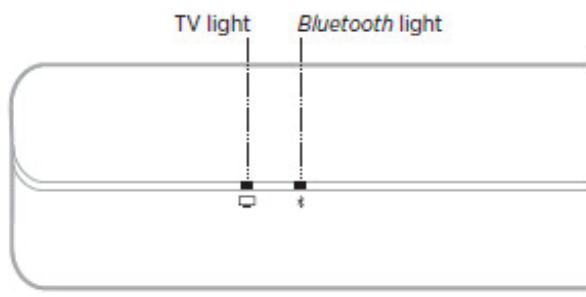On the remote, press and hold BASS until the TV and Bluetooth lights on the speaker blink 3 times. The bass settings reset to original factory settings.

BLUETOOTH

1. On the remote, press the Bluetooth button. The Bluetooth light slowly pulses blue.
2. On your mobile device, enable the Bluetooth feature.
TIP: The Bluetooth menu is usually found in the Settings menu.
3. Select Bose TV Speaker from the device list. Once connected, you hear a tone. The Bluetooth light glows solid white. Bose TV Speaker appears in the mobile device list.



LIGHT ACTIVITY			SYSTEM STATE
Bluetooth light slowly pulses blue			Ready to connect
Bluetooth light blinks white			Connecting
Bluetooth light glows white			Connected

Speaker Status

The LED lights located on the front of speaker show the speaker status. The lights display the current sources highest priority status.

Media Playback and Volume Status

LIGHT ACTIVITY	SYSTEM STATE
TV light is solid white	Power on TV
Bluetooth light is solid white	Connected to a Bluetooth device
TV light is solid green	Dialogue mode enabled for TV
Bluetooth light is solid green	Dialogue mode enabled for Bluetooth-connected device
TV light blinks white	Changing volume for TV
Bluetooth light blinks white	Changing volume for Bluetooth-connected device
TV light blinks green	Changing volume in Dialogue mode for TV
Bluetooth light blinks green	Changing volume in Dialogue mode for Bluetooth-connected device
TV light slowly pulses white	Mute enabled for TV
Bluetooth light slowly pulses white	Mute enabled for Bluetooth-connected device
TV light slowly pulses green	Mute enabled in Dialogue mode for TV
Bluetooth light slowly pulses green	Mute enabled in Dialogue mode for Bluetooth-connected device
TV light blinks red	Speaker error - disconnect from power then reconnect. If error persists, contact Bose customer service.

Source(s): Bose TV Speaker Start Guide

Product(s): Bose TV Speaker (Model: 838309-1100, Newmar Part Number: 155172)

Jensen Bluetooth AM/FM/DVD Radio Operation (Model: JWM62A)

This article provides basic operation instructions for a Jensen Bluetooth AM/FM/DVD Radio (Model: JWM62A).



Basic Operation

- **POWER:** Push to turn ON or OFF.
- **BACK:** Press to exit any menu.
- **VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease volume.
- **AM:** Press to change the source to AM radio mode.
- **FM:** Press to change the source to FM radio mode.
- **DISC:** Press to change the source to Disc mode.
- **BT:** Press to change the source to BLUETOOTH mode.
- **USB:** Press to change the source to USB mode.

Liquid Crystal Display (LCD)

The liquid crystal display (LCD) panel displays the frequency, time and activated functions.

Press the BRIGHT UP button to increase the LCD brightness and press the BRIGHT DOWN button to decrease the LCD brightness from "LEVEL 0 (off)" to "LEVEL 9" (brightest).


NOTICE

When subjected to cold temperatures for an extended period of time, LCD panels will take longer to illuminate and the display visibility may slightly decrease. Optimal LCD operation will return to normal when the temperature increases to a normal range.

Remote Control Operation

REF	Description	Tuner	Bluetooth	CD/MP3/USB	DVD
1	Power	Turn radio on/standby mode.	Turn radio on/standby mode.	Turn radio on/standby mode.	Turn radio on/standby mode.
2	VOL +/-	Adjust volume Up/down. Press for Audio Control Setup menu.	Adjust volume Up/down. Press for Audio Control Setup menu.	Adjust volume Up/down. Press for Audio Control Setup menu.	Adjust volume Up/down. Press for Audio Control Setup menu.
3	TUNE +	Tune to higher station			
4	TUNE -	Tune to lower station			
5	ENTER			Confirm menu selection	Confirm menu selection
6	ALARM	Turn the alarm feature on/off.	Turn the alarm feature on/off.	Turn the alarm feature on/off.	Turn the alarm feature on/off.
7	PROG			Display Program Play Menu	Display Program Play Menu
8	LANG			Display MONO/L, MONO/R or STEREO.	Select alternate audio language, if available.

- **AUX:** Press to change the source to AUX mode.
- **ZONE OUTPUT:** Press any zone button (A, B or C) to control corresponding speaker output from the stereo. SPK A, SPK B, SPK C will appear on the display.
- **AUDIO:** Press to bring up AUDIO ADJUSTMENT options:
 - BASS
 - TREBLE
 - BALANCE (left to right)
 - FADE (front to back).
- **LOUDNESS:** Push to turn LOUDNESS ON or OFF.
- **SETTINGS:** Press to bring up MENU options:
 - BEEP
 - ADJUST LCD BRIGHTNESS
 - TUNING REGION
 - ADJUST RCA OUT
 - BLUETOOTH (ON/OFF)
 - PRESET VOLUME
 - RESET VOLUME KNOB will adjust each MENU option except for 'RESET'.
- **RESET:** Use a ball point pen or thin metal object to press the reset buttons.
- **AUX IN:** Insert 3.5mm cable from your portable media device.

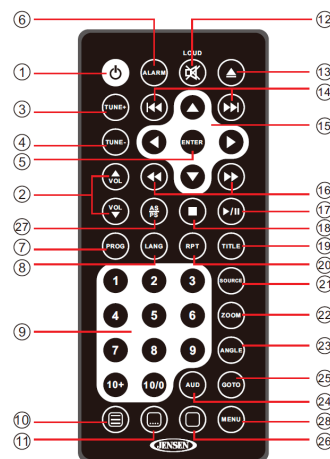

9	Numeric Keyboard	Use 1-6 to access preset stations.		Enter track number to access track directly. For track Number > 10, use 10+ followed by second digit.	Enter track number to access track directly. For track Number > 10, use 10+ followed by second digit.
10	Setup			View SETUP menu.	View SETUP menu.
11	Subtitle				Choose subtitle language, if available.
12	Mute/LOUD	Silence Audio output. Press and hold to turn LOUDNESS feature on/off.	Silence Audio output. Press and hold to turn LOUDNESS feature on/off.	Silence Audio output. Press and hold to turn LOUDNESS feature on/off.	Silence Audio output. Press and hold to turn LOUDNESS feature on/off.
13	Eject	Eject Disc.	Eject Disc.	Eject Disc.	Eject Disc.
14	Previous/Next		Select next/previous track.	Select next/previous track.	Select next/previous track.
15	Directional Buttons			Move to desired menu item and then press ENTER to confirm.	Use with DVD menu to move to desired menu item and then press ENTER to confirm
16	Fast Reverse/Forward			Fast Forward 2X, 4X, 8X, 20X. Fast Reverse 2X, 4X, 8X, 20X.	Fast Forward 2X, 4X, 8X, 20X. Fast Reverse 2X, 4X, 8X, 20X.
17	Play/Pause Stop		Pause/resume playback	Pause/resume playback	Pause/resume playback
18	TITLE			Stop playback	Stop playback
19	TITLE				Press to view title menu. Use directional arrows and play button to play selected title. May not be supported by all discs.
20	RPT			Repeat track	Repeat chapter
21	SOURCE	Select source for playback	Select source for playback	Select source for playback	Select source for playback
22	ZOOM				Zoom picture or press repeatedly to change magnification level.
23	ANGLE				Select alternate viewing angle, if available.
24	AUD	Access Audio Menu options.	Access Audio Menu options.	Access Audio Menu options.	Access Audio Menu options.
25	GOTO			Select exact time, track or chapter for playback.	Select exact time, track or chapter for playback.
26	Display			Display current playback information on the screen.	Display current playback information on the screen.
27	AS/PS	Browse preset stations (10 sec. interval). Press and hold to scan/store stations.			
28	MENU	Access system MENU.	Access system MENU.	Access system MENU.	Press to access system MENU. Press and hold to access DVD MENU.

Source(s): Jensen JWM62A Mobile Audio System Installation and Owner's Manual

Product(s): Jensen AM/FM/DVD/BT Radio (Model: JWM62A, Newmar Part Number: 152805)



Televisions

This article provides an overview of the televisions and related equipment installed in the coach. Your coach may be cable ready, and (depending on your floorplan) may have multiple flat screen televisions installed throughout the unit. The televisions are powered by 120 volt electricity, and the coach must be plugged into shore power, using the inverter (if equipped) or have the generator running in order for the televisions to function. The television operation is similar to most televisions used in the home.

The LED television(s) in your coach may be HD (High Definition) compatible, meaning they are capable of displaying the resolution and clarity of High Definition broadcasts and video sources.

Your coach may also be pre-wired for a satellite system and may be equipped with one interior television jack and an exterior television jack located on the passenger side of the coach. Choose the television source by selecting the input mode (air, cable, HDMI, etc.). The DVD player and satellite, if equipped, provides input to the front television(s) and exterior entertainment center. The bedroom DVD and satellite receiver, if equipped, provides input to the bedroom television.

Note: 2022 and newer models may not be equipped with DVD or Blu-Ray players installed at the factory.


IMPORTANT

The television in the front overhead cabinet will not operate while in transit. Federal regulations require this television to be inoperative while the vehicle is in use, so the power supply is switched off automatically when the ignition is turned on.

Samsung 4K UHD 6 Series Television Operation (Models: M4500, NU6900B, and NU7100)

This article provides basic operation instructions for a Samsung 4K UHD 6 Series Television (Models: M4500, NU6900B, and NU7100).

Remote Control Operation

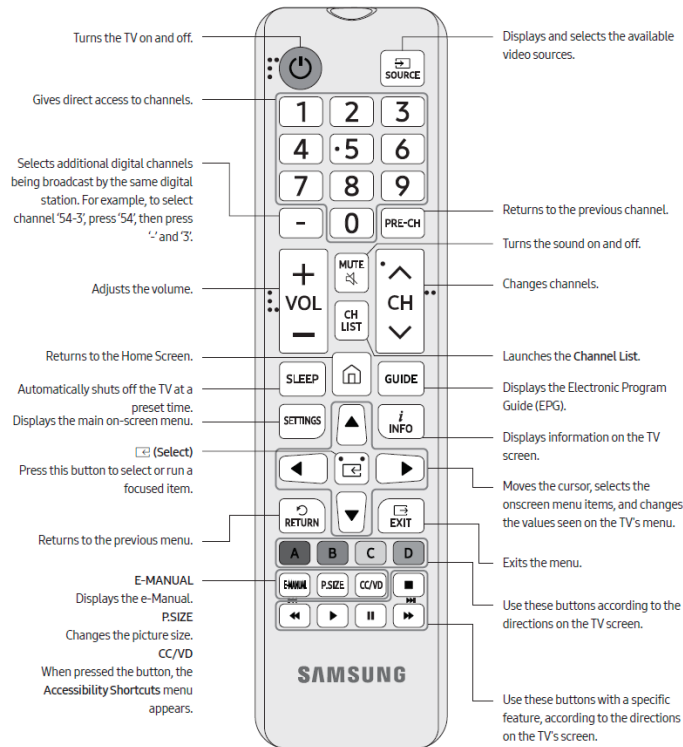


Accessing Samsung's E-Manual

You can view the embedded e-Manual containing information about your TV's key features. Press the menu button on the standard remote control to open the menu. Alternatively, press the button to open Smart Hub, press the left arrow until you reach settings, and then press Select.

Use the up and down arrows to move within this menu. Move to the Support option, select the e-Manual option, and then press Select to open it. The e-Manual contains two rows of buttons. Use the up and down arrows to move between rows and the left and right arrows to move within a row. Press Select to open the section you want to read.

Caring for the TV

- If a sticker was attached to the TV screen, some debris can remain after you remove the sticker. Please clean the debris off before watching TV.
- The exterior and screen of the TV can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches.
- Do not spray water or any liquid directly onto the TV. Any liquid that goes into the product may cause a failure, fire, or electric shock.
- To clean the screen, turn off the TV, then gently wipe away smudges and fingerprints on the panel with a micro-fiber cloth. Clean the body or panel of the TV with a micro-fiber cloth dampened with a small amount of water. After that, remove the moisture with a dry cloth. While cleaning, do not apply strong force to the surface of the panel because it can damage the panel. Never use flammable liquids (benzene, thinner, etc.) or a cleaning agent. For stubborn smudges, spray a small amount of screen cleaner on a micro-fiber cloth, and then use the cloth to wipe away the smudges.

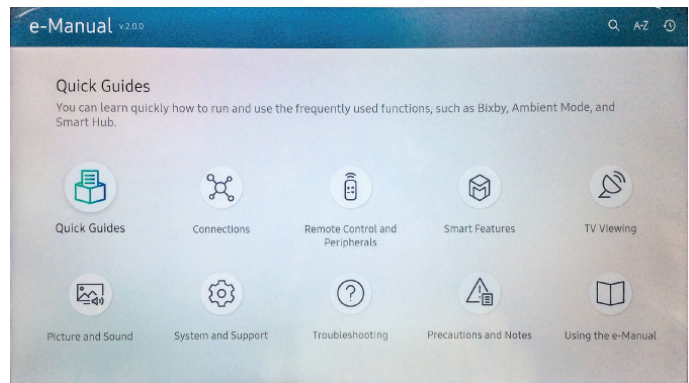

IMPORTANT

The Samsung e-Manual may contain features not applicable to your television.

Source(s): Samsung 2018 UHD TV NU6900 User Manual, Samsung 2018 UHD TV NU7100 User Manual, and Samsung 2017 LED Smart TV M4500 User Manual

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.


Samsung 4K UHD 7 Series Television Operation (Model: TU7000)

This article provides basic operation instructions for a Samsung 4K Crystal UHD 7 Series Television (Model: TU7000).

Remote Control Operation

ABOUT THE BUTTONS ON THE REMOTE CONTROL

- The images, buttons, and functions of the remote control may differ depending on the model.
- The remote control has Braille points on the Power, Channel, Volume, and Select buttons and can be used by visually impaired persons.
- If you use the remote control that comes with your TV to control another TV, some functions may not operate normally.

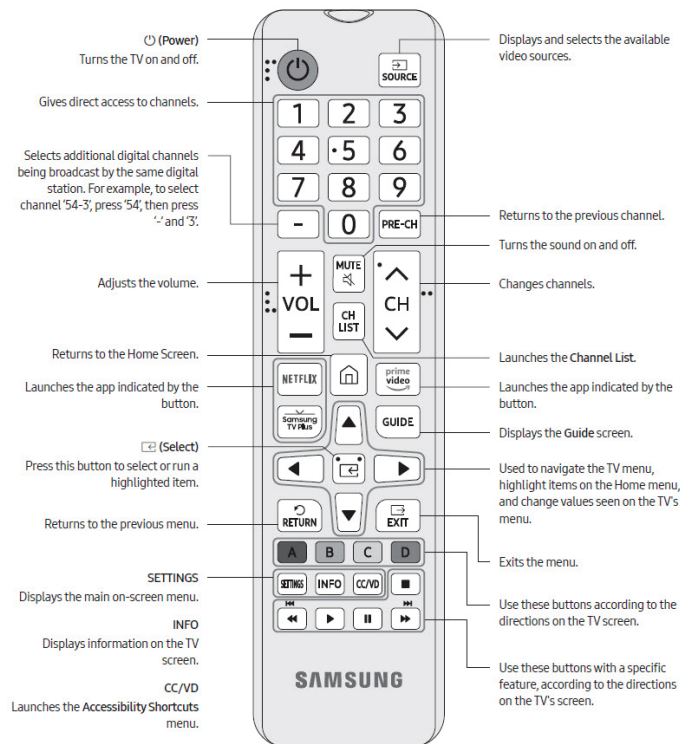

INSTALLING BATTERIES INTO THE REMOTE CONTROL

Match the polarity of the batteries to the symbols in the battery compartment.


- Use the remote control within 23 feet (7 m) of the TV.
- Bright light may affect the performance of the remote control. Avoid using near bright fluorescent lights or neon signs.
- The color and shape of the remote may vary depending on the model.

Accessing Samsung's E-Manual

You can view the embedded e-Manual containing information about your TV's key features. Press the menu button on the standard remote control to open the menu. Alternatively, press the button to open Smart Hub, press the left arrow until you reach settings, and then press Select.

Use the up and down arrows to move within this menu. Move to the Support option, select the e-Manual option, and then press Select to open it.

The e-Manual contains two rows of buttons. Use the up and down arrows to move between rows and the left and right arrows to move within a row. Press Select to open the section you want to read.

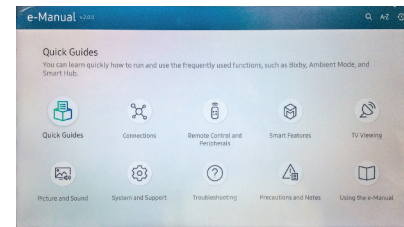

⚠ IMPORTANT

The Samsung e-Manual may contain features not applicable to your television.

Caring for the TV

- If a sticker was attached to the TV screen, some debris can remain after you remove the sticker. Please clean the debris off before watching TV.
- The exterior and screen of the TV can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches.
- Do not spray water or any liquid directly onto the TV. Any liquid that goes into the product may cause a failure, fire, or electric shock.
- To clean the screen, turn off the TV, then gently wipe away smudges and fingerprints on the panel with a micro-fiber cloth. Clean the body or panel of the TV with a micro-fiber cloth dampened with a small amount of water. After that, remove the moisture with a dry cloth. While cleaning, do not apply strong force to the surface of the panel because it can damage the panel. Never use flammable liquids (benzene, thinner, etc.) or a cleaning agent. For stubborn smudges, spray a small amount of screen cleaner on a micro-fiber cloth, and then use the cloth to wipe away the smudges.

Source(s): Samsung Crystal UHD 7 Series 4K Smart TV User Manual

Product(s): Samsung UHD 7 Series UN43TU7000 43-in Crystal UHD 4K Smart TV (Model: UN43TU7000 Newmar Part Number: 154965)

Samsung Television Care and Maintenance

This article provides basic care and maintenance instructions for a Samsung television.

Clean Your Samsung TV

There's nothing worse than straining to watch a show or movie because the screen is smudged or covered in dust. If you don't clean your TV [...] occasionally, dust and fingerprint smudges can build up. Periodically clean your TV [...] so it keeps looking brand new and you can keep seeing the picture clearly.

⚠ IMPORTANT

Never use any type of window cleaner, soap, scouring powder, wax, or any cleanser with solvents such as alcohol, benzene, ammonia, or acetone. Never use abrasive pads or paper towels. If you do, you can scratch the screen or strip the anti-glare coating off the screen and cause permanent damage. Never spray water directly onto the TV. Make sure to wipe the TV as gently as possible. TV screens are fragile and can be damaged when pressed too hard.

How To Clean Your Samsung TV

1. Turn the TV off and let it cool down for a few minutes before unplugging it.
2. To clean the frame and screen, gently wipe it with a microfiber cleaning cloth. Make sure to wipe the TV frame and screen as gently as possible. TV screens are fragile and can be damaged when pressed too hard.
3. If you don't see results, spray distilled water onto your microfiber cleaning cloth, and gently wipe the frame and screen.
4. Let the TV dry completely before you plug the TV back in.


Source(s): <https://www.samsung.com/us/support/> (2023.03.16)

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.


Samsung Air TV Programming

This article provides the basic programming instructions for Samsung Air TV.


1. If there is no signal after turning on the television, push the Home button on the remote.

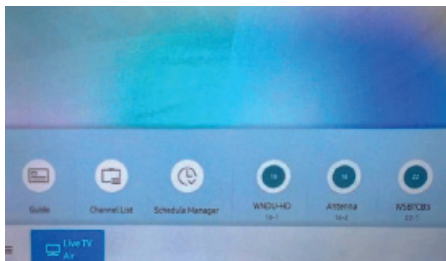


2. Use the left arrows until "Settings" appears on screen. Push "Select."

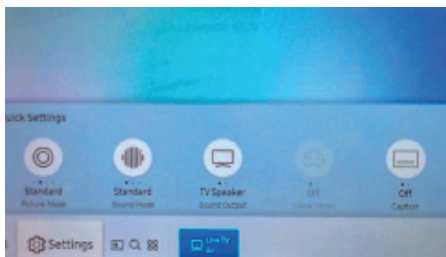


3. Scroll down to "Broadcasting," and push "Select."

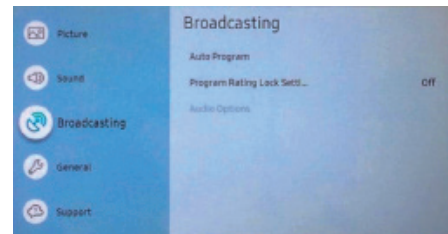

4. When "Auto Program" is highlighted, push "Select."

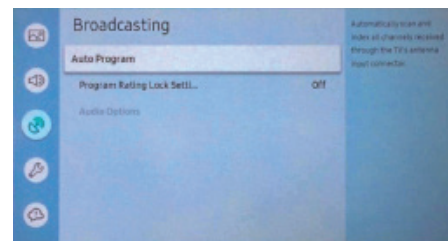


5. Highlight "Start," and push "Select." The TV will search for local channels and store them.

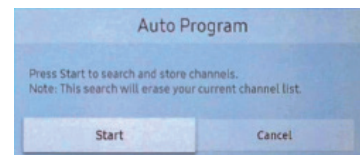

⚠ NOTICE

These steps will need to be completed each time the coach is moved to a new location.

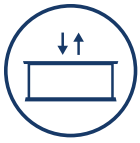

Television Lifts

Television Lift Operation via KIB V-Bus Switch Panel

This article provides basic operation instructions for a television lift (televator) via a KIB V-Bus switch panel.


Operation

1. Press and release the TV Lift Up button to raise the TV.
2. Press and release the TV Lift Down button to lower the TV.
3. The lift will continue in the selected direction until it reaches the end of travel. If you need to stop it at any time during the travel process, press the switch again in either direction.
4. Under normal operation, the user will raise the televator to watch the TV, then lower it before traveling. However, when raising the televator and then immediately lowering it, the switch may need to be pressed a second time, as the control circuit timer may still be active.

NOTICE

Televator control switches and touchscreen buttons should be pressed and immediately released. Do not continue to hold the UP or DOWN switch or button, as this may cause the television lift to enter into programming mode.

Note: If programming mode is reached, refer to the re-calibration article in Newgle for more information.

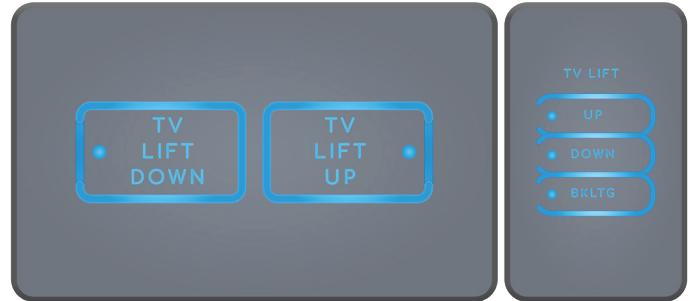

Televator During Travel

IMPORTANT

Lower the television lift completely for travel to prevent damage to the television and surrounding equipment.

**Lower TV
while coach
is in motion**

Television Lift Operation via KIB 10.1" Central Monitor Capacitive Touch Panel

This article provides an operational overview for coaches equipped with a KIB 10.1" Central Monitor Capacitive Touch Panel and a TV lift. The Home screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the televator (television lift) controls.

NOTICE

This information is generic in nature and may not be specific to your exact coach model and/or year.


From the Home screen on the 10.1" touch panel, control the TV lift using the up and down buttons.

1. Press and release the TV Lift Up button to raise the TV.
2. Press and release the TV Lift Down button to lower the TV.
3. The lift will continue in the selected direction until it reaches the end of travel. If you need to stop it at any time during the travel process, press the switch again in either direction.

4. Under normal operation, the user will raise the televator to watch the TV, then lower it before traveling. However, when raising the televator and then immediately lowering it, the switch may need to be pressed a second time, as the control circuit timer may still be active.

IMPORTANT

Stow the television in the lowered position prior to travel.

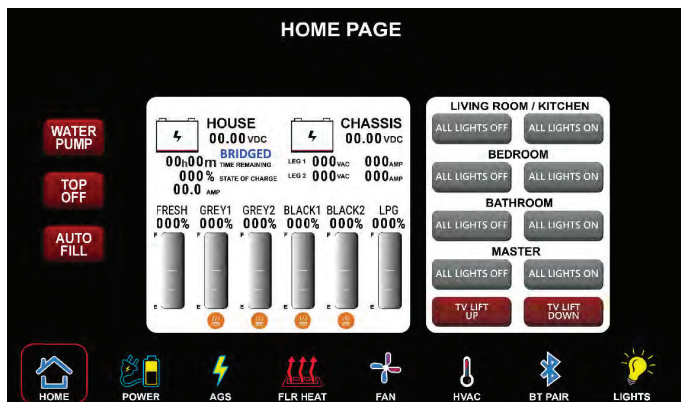

**Lower TV
while coach
is in motion**




EXTERIOR

This chapter provides information regarding the coach's exterior components, such as awnings, compartments, doors, steps, and the overall exterior construction of the coach. If applicable to the model, this chapter also contains information for components installed in handicap-accessible coaches and toy haulers.

⚠ IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the manufacturer's complete documentation. Refer to Newgle for more information about exterior components offered for your coach's model year.

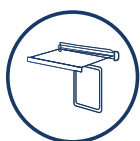

Awnings

Awnings are a standard feature on your coach. Newmar offers a variety of brands and types of awnings, depending on the year and model of your coach, as well as the available options that were selected at the time of your coach's manufacture. Select models may feature slideout toppers, entrance door, and/or window awnings.

Awning and Slideout Topper Overview

This article provides a brief operational and maintenance overview of the awnings and slideout toppers.

Slideout Toppers

Slideout toppers operate as the slideouts are extended and retracted. Check the slideout topper for debris (leaves, branches, ice, snow, etc.) prior to retracting the slideout.

⚠ CAUTION

Slideout toppers should be retracted when snow, heavy rain, wind, and severe weather conditions are expected. Never leave slideout toppers open or unattended during severe weather and/or accumulating rain.

Awnings



Awnings are a standard feature on your coach. Newmar offers a variety of brands and types of awnings, depending on the year and model of your coach, as well as the available options that were selected at the time of your coach's manufacture. Select models may feature entrance door, window awnings, and/or patio awnings.

The patio awning is the larger-sized awning on the coach and is the main awning. These awnings connect at or near the roof, providing shade and light rain protection on the passenger side of the coach. Awnings with LED strips may also provide lighting when desired.

The powered patio, window, and door awnings (if equipped) on your coach can be operated with ease using the appropriate switch(es) to extend or retract the awnings as desired.

The switch is typically located in the overhead control panel. If they are not at this location, check above the passenger window, as it may be hidden by the window shade. Some coach awnings may also operate via remote control or the SilverLeaf touchscreen (if equipped).

⚠ CAUTION

Awnings should be retracted during accumulating rains. Pooling water on the awning can result in damage to the awning hardware and/or fabric.

⚠ CAUTION

Awnings should be retracted when snow, heavy rain, wind, and severe weather conditions are expected. Never leave awnings open or unattended during severe weather and/or accumulating rain.

⚠ IMPORTANT

Prior to extending any of your coach awnings, check for any obstructions that may prevent the awnings from deploying properly. Inspect the area around your unit where the awning will extend to ensure proper clearance.

⚠ CAUTION

Awnings should be retracted during accumulating rains. Pooling water on the awning can result in damage to the awning hardware and/or fabric.

NI-132

⚠ NOTICE

Damage to your awnings as a result of weather is not covered by warranty.

Carefree Ascent Slideout Topper Maintenance

This article provides care and maintenance recommendations for a Carefree Ascent Slideout Topper.

Maintaining the Carefree Ascent is easy. Just follow these basic steps:

- Periodically check that the fasteners are tight. Tighten if necessary.
- Keep the awning fabric clean.

Fabric Care

⚠ NOTICE

Do not use oil based cleaners or any caustic, granulated, or abrasive type cleaners on your Carefree product.

1. One of the best ways to keep the fabric looking good and to delay the need for deep or vigorous cleanings is to hose fabrics off on a monthly basis with clear water. This practice will help prevent dirt from becoming deeply embedded in the fabric. In most environments, a thorough cleaning is only required every two to three years.
2. When it's time for a thorough cleaning, the fabric can be cleaned while still on the coach.
 - For Vinyl Fabric – Use a soft brush and warm water with soap.
 - For Acrylic Fabric – Use a stiff brush and warm water with soap.
3. When cleaning the fabric, it is important to observe the following:
 - Always use a natural soap, never detergent.
 - Water should be cold to lukewarm, never more than 100°F.
 - Air-dry only. Never apply heat to the fabric.
 - Always allow the fabric to dry thoroughly before rolling up the awning.

Mildew

Mildew is a fungus growth that looks like dirt. Vinyl coated polyester fabrics are mildew resistant because of a chemical biocide in the vinyl coating. Under ordinary conditions, mildew will not appear. However, in areas where high temperature and humidity are common, mildew can be a problem and requires the material to be cleaned more often. Thoroughly rinse the fabric with clean water and allow to air dry completely before rolling up the fabric.

Pooling

When water collects on the top of the fabric, this is known as “pooling”. This can occur during inclement weather or if a running air conditioner discharges over the awning. The water is dumped when the awning is retracted. It is recommended that if water accumulates on the top; retract the awning in increments of 8”-12” to dump the water. This will help prevent the fabric from stretching or distorting.

⚠ IMPORTANT

If the room must be closed during wet weather (rain), close the room in increments (approximately 8-12”). This is to allow water to run off while the room is closing and prevent sudden pooling.

Source(s): Ascent Owner Information

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

Carefree 2-Stage Patio Awning Control System Operation with Direct Response (Model: Apex DR110)

This article provides basic operation instructions for a Carefree 2-Stage Patio Awning Control System with Direct Response (Model: Apex DR110).

Operation

IGNITION LOCKOUT

When the Carefree EL ignition lockout is connected, the system will disable the extend function when the vehicle ignition key is in the ON position.

- When the Carefree RTL ignition lockout is connected, the system will retract the awning and disable the extend function when the vehicle ignition key is in the ON position.
- Functions return to normal operation when the ignition key is turned OFF.
- Contact your coach manufacturer or awning installer to find out which ignition lockout system is used with your vehicle.

AWNING MOTOR

The awning motor is equipped with a thermal protection circuit to protect the motor from overheating. Operating the awning repeatedly over a short time period may cause the circuit to sense a overheat condition and shut off the motor. If this occurs, wait approximately 15 minutes to allow the motor to cool then operate the awning in normal fashion.


Individual Awning Control

EXTENDING THE AWNING

Press and release the EXTEND switch. The awning will open completely. To interrupt the awning extension, press and release the EXTEND OR RETRACT switch. The awning will stop.

RETRACTING THE AWNING

Press and release the RETRACT switch. The awning will close completely. To interrupt the awning retraction, press and release the RETRACT OR EXTEND switch. The awning will stop.

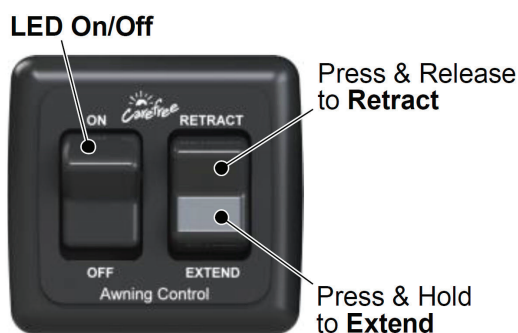

The Auto-Retract System

The system is active when the awning power is on and disabled when the power is shut off.

⚠ NOTICE

The Carefree DR110 System is a premier electronic auto-retract system that provides protection against adverse elements; but no auto-retract system is a guarantee against severe or destructive weather; the effects of wind and rain on an awning are unpredictable and may cause severe damage to the awning and/or vehicle. If wind or extended periods of rain are expected, roll up the awning.

The DR110 system detects awning motion caused by windy conditions. The motion sensor is located in the lead rail. The system operates by gauging the vertical motion of the awning's leading edge. When persistent motion exceeds the factory preset threshold, the system retracts the awning. The factory default is set at a medium sensitivity for the basic system.

When active, the mobile app provides user select sensitivity values (threshold values). You may have to experiment to find the best setting for your preferences.

IMPORTANT NOTE FOR MULTIPLE AWNING CONFIGURATIONS: Each awning has a separate motion sensor. During windy conditions, the awnings may not retract concurrently.

The Connects 110 Mobile App

The Connects 110 Mobile App allows you to interact with your awning(s) from your mobile device. The app provides access to enhanced features and additional options. The mobile app may be used on any device that supports current iOS or Android operating systems and Bluetooth low energy technology.

For personalized operation controls visit your app store for your smart phone or tablet and download the free Carefree Connects 110 Mobile App.


The DR110 Mobile App provides programmable controls and status readings for:

- Real-time open and close with the touch of a button.
- Individual controls for each awning as well as allowing multiple awnings and lights to be grouped to operate simultaneously.
- Power your LED lights ON or OFF and adjust the LED brightness.
- Control the color of your lights (RGB LED's).
- View the health of your awning and review status notifications.

- Name your awning(s). Avoid confusion by having each awning identified with a unique name.
- Adjust the motion sensitivity level for wind retraction.
- Multiple mobile devices (smartphone or tablet) can be paired to the DR110 system but only 1 can be active at a time.

Manual Override

1. The bypass is located inside the case, near the end cap. To access, remove the large rubber plug on top of the awning located toward the rear of the case on the motor side.
2. Chuck the supplied 7mm hex key into a 3/8" battery powered drill.
3. Insert the hex key into the manual override on the awning.
4. Operate the drill in the direction shown to open and close the awning.
5. When done, reinsert the rubber plug.

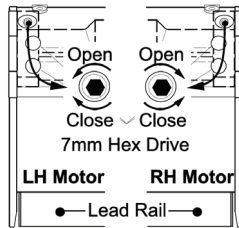

1. One of the best ways to keep the fabric looking good and to delay the need for deep or vigorous cleanings is to hose fabrics off on a monthly basis with clear water. This practice will help prevent dirt from becoming deeply imbedded in the fabric. In most environments, a thorough cleaning will be needed every two to three years.
2. When it's time for a thorough cleaning, the fabric can be cleaned while still on the awning frame.
 - For Acrylic Fabric – Use a stiff brush and warm water with soap.
3. When cleaning the fabric, it is important to observe the following:
 - Always use a natural soap, never detergent.
 - Water should be cold to lukewarm, never more than 100°F.
 - Air-dry only. Never apply heat to the fabric.
 - Always allow the fabric to dry thoroughly before retracting the awning.

POOLING

When water collects on the top of the fabric, this is known as “pooling”. This can occur during inclement weather or if a running air conditioner discharges over the awning. The water is dumped when the awning is retracted. It is recommended that if water accumulates on the top; retract the awning in steps (8”-12”) to dump the water. This will help prevent the fabric from stretching or distorting.

The effects of wind and rain on an awning are unpredictable. Severe damage to the awning and the vehicle may result. If wind or extended periods of rain are expected, retract the awning and secure.

Source(s): Carefree RV Apex 2-Stage with DR110 Awning Control System Owner's Manual (January 2020)

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

Awning Care

Maintaining a Carefree Awning is easy. Just follow these basic steps:

1. Always operate the awning according to the instructions.
2. Periodically check that the fasteners are tight. Tighten if necessary.
3. Keep the awning fabric and arms clean.

FABRIC CARE

⚠ NOTICE

Do not use oil based cleaners or any caustic, granulated, or abrasive type cleaners on your Carefree product.

Carefree Connects 110 Mobile App Overview for DRC Series Awning Systems

This article provides an overview for the Carefree Connects 110 Mobile App for DRC Series Awning Systems.

Getting Started

DOWNLOAD THE APP

Depending on the type of device you have, search for the app in either the App Store or the Google Play store.

Tap on the app to begin downloading. When finished, close out of your app store and locate the Carefree Connects 110 icon on your Home screen. Tap on the icon to launch the app.

MOBILE DEVICE SETTINGS

To begin controlling your awning(s) using the mobile app, you must first:

- Ensure Bluetooth is turned ON in the settings page for your mobile device.
- Allow Carefree Connects 110 Mobile App to access your location while using the app.


Navigating Your App

HOME SCREEN

This page displays all of the connected DRC devices in your RV coach including awnings, awning lights, and groups of devices.

NAVIGATION BUTTONS

The About Page icon on the home screen resembles a square grid and will take you to the About page when pressed. This is where you can pair your mobile device to your RV coach to begin controlling your DRC system awnings and lights. See the next section of this manual for additional information.

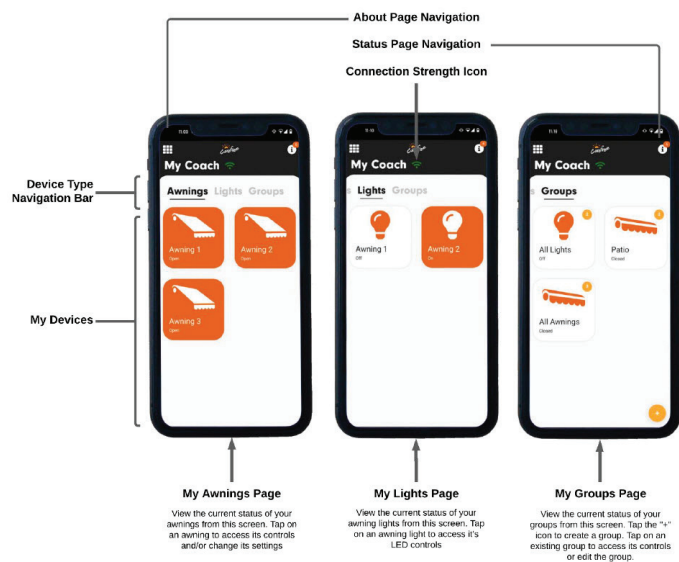

Pressing the information icon will provide access to the following status information: App version, device errors and warnings, and status logs. You can also update the device firmware, upload new configurations, and reset your devices to default settings.

The awning icon will show you the current status of your awning by displaying either an extended or retracted awning. Pressing the icon allows you to access its controls and/or change its settings.

The light icon will indicate the status of your awning lights. An orange icon represents ON status and a white icon represents OFF status. Pressing the icon allows you to access the controls for the awning lights including ON/OFF, brightness, and color selection (if your RV configuration includes RGB LEDs)

Pressing the plus sign icon on the Groups page of the Home screen allows you to create a group of either awnings or awning lights that can be controlled together.

MY DEVICES DISPLAY AREA

This area displays your RV awnings, awning lights, or grouped devices depending on the device type selected on the navigation bar.

Each icon will indicate the current status of the device. Awning icons will display either an extended or retracted icon. Light icons will indicate whether or not that awning's LEDs are powered ON or OFF. Group icons will specify the device type (either awning group or light group), group status (extended/retracted or ON/OFF depending on device type), and display a number indicating the number of devices in the group.

Tap on a device icon to launch its control page.

NOTE FROM NEWMAR

For more information about awning setup within the Carefree Connects 110 Mobile App, refer to the complete Mobile App manual located in Newgle.

Quick Reference Guide For Awning Operation

EXTENDING YOUR AWNING

Once your device(s) have been paired to your RV coach, you can begin to operate your awnings. The awning can be extended using its physical switch or the DRC Connects 110 app on your mobile device or DRCPad.

If using the app, first select the awning you wish to operate. If your awning is a multi-stage awning, select the desired extension stage or press the Extend button to extend to the next stage.

If you wish to extend a group of awnings at the same time, select Groups from the Home screen navigation bar. Tap on the group of awnings you wish to control, and press Extend.

RETRACTING YOUR AWNING

If you wish to retract an awning, you can do so using the physical switch or mobile app from your mobile device or DRCPad. Again, select the awning you wish to retract and press the Retract button.

If you wish to retract a group of awnings at the same time, select Groups from the Home screen navigation bar. Tap on the group of awnings you wish to control, and press Retract.



CONTROLLING YOUR AWNING LED LIGHTS

POWER, BRIGHTNESS, AND COLOR SELECTION



Your awning LED power can be controlled via the awning light's physical switch or via the DRC Connects 110 app. For expanded control capabilities, use the DRC Connects 110 app on your mobile device (or DRCPad). In addition to powering your awning lights ON and OFF, the app offers brightness control, and LED color selection for RGB LED strips (if your RV configuration allows).

Navigate to these controls on the app by selecting Lights from the Home screen navigation and select the awning light you wish to operate. Select either the basic tab to control all of the selected awning's lights or the advanced tab if your awning has multiple LED strips. The Advanced tab allows you to control each LED strip on the selected awning individually.

Turn your white light(s) on or off by moving the white brightness slider. Slide it up to 100% for the brightest setting or down for dimmer lighting, 0% being OFF.

If your particular RV configuration includes RGB LEDs then a color selector will also be available. Tap anywhere on the color wheel to change the color of your awning lights. A brightness slider below the color wheel controls brightness settings of the RGB light strip(s). Slide right for brighter light or left for dimmer light.

Another way to operate your awning lights is through the Awning itself. Select Awnings from the Home page navigation and tap on the awning you wish to operate. Tap the light icon and the same brightness slider(s) and/or color wheel will be available.

If you wish to operate a group of awning LEDs across different awnings, select Groups from the Home screen navigation. Select the group of lights you wish to control. The white brightness slider will adjust all white LEDs within the group, and the color wheel and associated brightness slider will adjust all RGB LEDs within the group.

ADJUST THE POSITION OF YOUR LED LIGHTS


⚠ NOTICE

This feature is only available for roll tube awnings, and only LEDs on the roll bar can be repositioned.

Upon extending your awning, the LED lights will automatically position themselves at approximately a 45° angle toward your coach. If you wish to point them in a different direction or at a different angle, you can use the mobile app to reposition the roll bar. Open your mobile app and extend your awning.

Once the awning is fully extended and has settled into the default rollback position, press the rollback adjustment buttons at the bottom of the Home screen until you reach the desired position. Tapping the left button will slightly retract the awning while tapping the right button will slightly extend it.

Once you have found the position you like, retract the awning to save the position. Now, every future extension should rollback to your saved position.

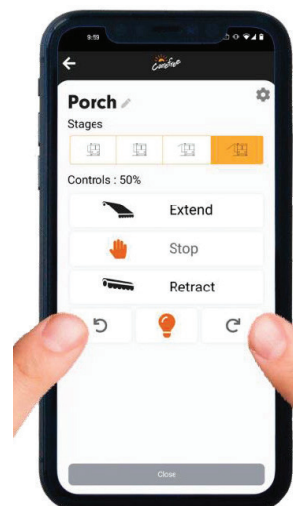


⚠ NOTICE

Awnings will only save a rollback position within a certain range. Awnings will not save positions that allow rain to pool up against the roller tube, or positions that wrap the LED up into the awning. You can adjust outside of this range temporarily, but the position will not be saved. The awning will save a position as close to the desired as is safe.

Source(s): Carefree Connects 110 Mobile App User's Guide

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

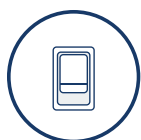

Compartments

Storage compartments are located on the exterior sides of your unit. These compartments provide additional space for your belongings while you are traveling. Select coach models feature optional manual slide trays and standard lighting, while others may feature compartments complete with power slide trays, dual side access, and automatic LED lighting throughout the storage area.

IMPORTANT

Before traveling, perform a pre-trip inspection that includes checking each baggage door to ensure each one is latched and locked securely.



CAUTION


Use caution when packing the storage areas. Do not pack items around water heaters, refrigerators, furnaces, hydronic heating units, or any other heat-producing appliances.

Hood Release Operation on a Core Diesel Coach

This article provides instructions for opening and closing the front hood on a core diesel coach. This information relates primarily to Kountry Star, Ventana, Ventana LE, Dutch Star, and New Aire coaches (various model years).

To Open The Front Hood:

1. Pull the t-handle hood release typically located in the front compartment on the driver's side.
2. Pull the hood open, and lift up from the outside.
3. Release the prop rod from the clip, and place it over the striker or insert it into the cavity in the front cap to hold the hood in place.

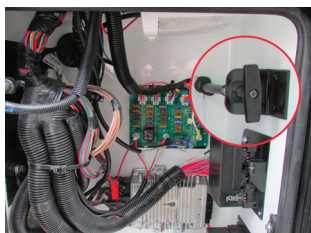

To Close The Front Hood:

1. Lift the front hood, and remove the prop rod from the striker bolt or from the cavity in the front cap.
2. Place the prop rod in the holder clip.
3. Lower the hood, and release it just before it is closed. Do not allow the hood to slam closed.
4. Make sure the latch is securely fastened before travel.



Doors, Handles, and Chimes

Doors, Handles, and Chimes Overview

This article provides basic information about the doors, handles, and chimes installed in a Newmar coach. The front entrance door is equipped with a dead bolt lock for added security, and select coach models may have a power flush step well cover.

For your safety and convenience, all current models feature a grab handle at the entrance door to assist you in entering and exiting the coach. Select models may incorporate the keyless entry system, and many have a doorbell button integrated into the grab handle as well.

When the door is opened fully, the door has a “door check” feature that will automatically hold the door open. To close the door, simply pull to release the detent, then close and latch the door. Center entry doors may incorporate a gas strut to hold the door open.

Entry and Screen Door Overview

This article provides an operational overview of the entry and screen door.

Deadbolt Operation

1. From the inside of the coach, operate the dead bolt by first making sure the door is closed securely in the second stage latch. Rotate the dead bolt lever clockwise.
2. From the outside of the coach, use the key and rotate it counter-clockwise to engage the dead bolt.

⚠ NOTICE

This information is generic in nature and may not be specific to your exact coach model and/or year.

3. To lock the door without using the deadbolt, press and hold the number one key on the keyless entry touch pad (if equipped).
4. Flip the red lever before shutting the door, and use the key fob (if equipped).


Entry Screen Door Operation

1. Store the entry screen door's top screen for travel by pulling down in the center and unlatching the two hooks at the bottom.
2. Allow the screen to retract gently while continuing to hold the bottom of screen.
3. When not traveling, pull the screen down in the center, and latch the screen using the hooks at the bottom.



⚠ NOTICE

Do not extend the deadbolt before closing the door, as damage may occur.

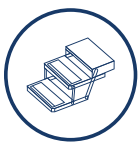

Entrance Steps

Electric Exterior Entrance Steps Overview


This article provides an operational overview of the electric exterior entrance steps installed on select coach models.

Operation

With the **Entrance Step switch** in the overhead cabinet flipped in the operational position, the entrance step will operate each time the entrance door is opened or closed.

If the door is closed when the **Entrance Step switch** is flipped opposite of the operational position, the step will extend one time. If the door is open when the Entrance Step switch is flipped opposite of the operational position, the step will stay extended.

The step will remain in the extended position unless the ignition signal is activated, which overrides the **Entrance Step switch**. In this case, the step will extend or retract when the door is opened or closed.

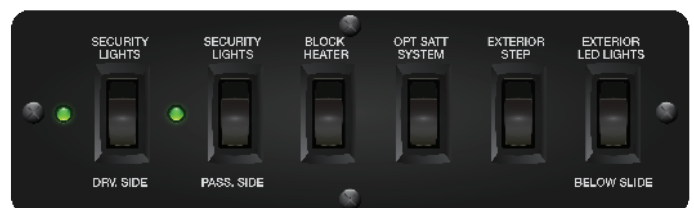

Kwikee Electric Entrance Step Operation (Model: 22-40 Series)

This article provides basic operation instructions for a Kwikee Electric Entrance Step (Model: 22-40 Series).

Operation

1. Close the door. The step should retract and lock in the UP position.
2. Open the door. The step should extend and lock in the DOWN position with the under step light illuminated.
3. The under step light operation is as follows:
 - The light is on when the step is extended.
 - The light is off when the step is retracted.
 - In the event the coach door/screen door is left open, the light will turn off after five minutes.
 - The under step light is not available on all step models.

⚠ CAUTION

Step safely supports up to 300 lbs. DO NOT OVERLOAD THE STEP ASSEMBLY.

⚠ WARNING

RISK OF FALL OR SERIOUS INJURY - This vehicle is equipped with a Lippert automatic electric step. Turning the ignition switch to the "ON" position while the entry door is closed will cause the step to retract. Visually confirm that the step is fully extended prior to exiting the vehicle.

⚠ WARNING

If the vehicle is driven with the step in the extended position, there is the possibility of causing major damage to both the step and the coach. Always be sure that the step is fully retracted before traveling. If the step is left extended and strikes an obstruction while the vehicle is moving, major damage to both the step and the vehicle could result.



Kwikee® Electric Step Assembly - Various Options



Lock/Stationary Extended Mode

1. If your step is equipped with a step switch, and you would like the step to remain in the extended position while the door is opened and closed, place the step switch in the position for the step to extend when the door is opened and retracted when the door is closed (step assembly follows the door). The step should remain in the extended position with the under step light off when the door is closed.
2. With the step switch in the appropriate step lock position, the step extended, and the entrance door closed, turn the vehicle ignition on. The ignition override system will go into effect and the step will automatically retract.
3. Turn the vehicle ignition off and open the door. The step will extend and lock in the DOWN position. This is the "Auto Extend" feature. When the vehicle ignition is turned on, the step will always activate with the door movement, regardless of the step switch position.

Maintenance

STEP ASSEMBLY LUBRICATION

Clean all mud, salt, and road grime from the step before lubricating. Lubricate all moving parts (bearings, pivot points, slides, clevis pin, and drive linkage ball) every 30 days with a good quality moisture and heat resistant penetrating grease. KwikLube Spray Grease is specially formulated to lubricate Kwikee® Electric Steps and is recommended for lubricating all moving parts. Refer to the complete Kwikee manual for more information.

NOTE: Silicone lubricants and WD-40® are not recommended for use. They have a tendency to evaporate and dry the mating surfaces which leave them vulnerable to the elements.

Source(s): Kwikee by Lippert Components Electric Steps #888 Owner's Manual (2017 and 2021)

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.



Garages and Utility Sheds

Toy Hauler Garage Weights and Warnings

This article provides a safety overview of a coach with a toy hauler garage floorplan. This article is meant to be generic in nature and does not contain information specific to any installed equipment or features.

This garage off the back of the coach provides plenty of space to bring along your favorite ATV, motorcycles, or other outdoor toys. Some model years feature standard or optional equipment such as diamond tread rubber flooring, a retractable screen, entertainment systems and electronics, an auxiliary fueling station, a removable table, or even bunk beds.



Weight Capacities

Read and follow all instructions posted in your garage before use regarding unit weight capacity.

CAUTION

The loading and carrying capacity of the garage area and loading ramp of the Canyon Star may vary. Any shown labels are examples, and should not be used in lieu of any weight restrictions posted in your coach. **DO NOT** exceed this capacity when loading and unloading the cargo bay or when traveling with cargo in the bay.

WARNING

Secure cargo and vehicles as evenly and as far forward as possible. Consult the owner's manual for weighing procedures. Do not exceed garage weight capacity. Do not exceed GVWR (total weight rating) or GAWR (axle weight rating).

Warning Labels

IMPORTANT

There are a variety of informational and safety labels located in and around the garage area of your coach. It is critical that all of these labels are read and understood prior to using your coach to ensure safe operation.

**GARAGE LOAD
CAPACITY
1500 LBS.**

WARNING

Secure cargo and vehicles as evenly and as far forward as possible. Consult the owner's manual for weighing procedures. Do not exceed garage weight capacity. Do not exceed GVWR (total weight rating) or GAWR (axle weight rating).

WARNING

**OPEN VENT OR WINDOW ANYTIME
VEHICLES, NOXIOUS FUMES OR OTHER
HAZARDOUS ITEMS ARE IN THIS AREA.**

WARNING

**Open vent or window
anytime vehicles, noxious
fumes or other hazardous
items are in this area.**

**GARAGE LOAD
CAPACITY
2000 LBS.**

WARNING

Secure cargo and vehicles as evenly and as far forward as possible. Consult the owner's manual for weighing procedures. Do not exceed garage weight capacity. Do not exceed GVWR (total weight rating) or GAWR (axle weight rating).

WARNING

**OPEN VENT OR WINDOW ANYTIME
VEHICLES, NOXIOUS FUMES OR OTHER
HAZARDOUS ITEMS ARE IN THIS AREA.**

DANGER

Vehicles and equipment powered by internal combustion engines and placed in recreational vehicles can cause carbon monoxide poisoning or asphyxiation, which could result in death or serious injury. The flammable liquids used to power these items can cause a fire or explosion, which can result in death or serious injury.

To reduce risk:

1. Do not ride in the vehicle storage area when vehicles are present.
2. Do not sleep in the vehicle storage area when vehicles are present.
3. Close doors and windows in walls of separation (if installed) when any vehicle is present.
4. Run fuel out of engines of stored vehicles after shutting off fuel at the tank.
5. Do not store, transport, or dispense fuel inside this vehicle.
6. Open the windows, openings, or air ventilation systems provided for venting the transportation area when vehicles are present.
7. Do not operate propane appliances, pilot lights, or electrical equipment when motorized vehicles are present.

DANGER

Vehicles and equipment powered by internal combustion engines and placed in recreational vehicles can cause carbon monoxide poisoning or asphyxiation, which could result in death or serious injury. The flammable liquids used to power these items can cause a fire or explosion, which can result in death or serious injury.

To reduce risk:

1. Do not ride in the vehicle storage area when vehicles are present.
2. Do not sleep in the vehicle storage area when vehicles are present.
3. Close doors and windows in walls of separation (if installed) when any vehicle is present.
4. Run fuel out of engines of stored vehicles after shutting off fuel at the tank.
5. Do not store, transport, or dispense fuel inside this vehicle.
6. Open the windows, openings, or air ventilation systems provided for venting the transportation area when vehicles are present.
7. Do not operate propane appliances, pilot lights, or electrical equipment when motorized vehicles are present.

For More Information

For information about specific components installed inside or outside of the toy hauler garage, refer to model/year-specific content in Newgle.

Toy Hauler Rear Patio Deck and Railing System Overview

This article provides assembly, operation, and storage instructions for a patio deck and railing system installed on select floorplans of Canyon Star front-engine diesel coaches beginning with the 2023 model year.

How To Assemble The Patio Deck

WARNING


Be sure to keep hands, fingers, and other body parts, as well as clothing, clear of the door/deck and its associated moving parts when opening or closing it. Failure to do so could result in bodily injury and/or damage to the door and coach.

LOWERING THE PATIO DOOR

1. Remove the rear ladder from the coach. Place it somewhere safe where it cannot be damaged.
2. Make sure all objects and persons are clear of the rear door's path of travel.
3. Unlatch the door lock, which is located near the center of the rear door.




4. Lower the rear door into position to create the deck floor. If so desired, the deck can be used as a ramp by disconnecting the 110" cables from the deck and lowering it to the ground.

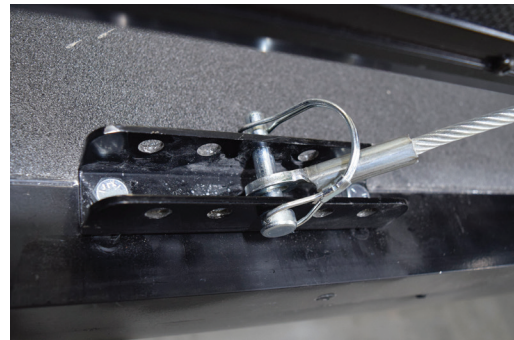

ASSEMBLING THE RAILINGS

1. Unsnap both railings where they meet at the center.
2. Lift the railing into an upright position, and lock it in place by pushing downward on the railing. This is also important for the swinging door to function properly.

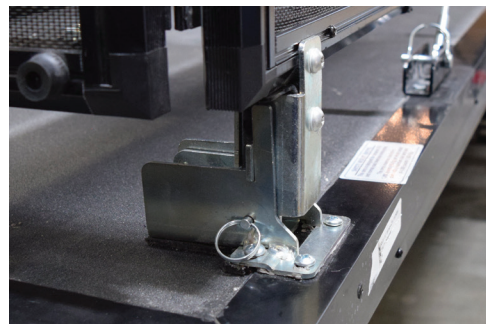

- Unsnap the end rail sections from the side rail sections. Swing the end railing out, securing it to the floor latches.




- Repeat steps for the opposite side of the rail frame.




ATTACHING THE LADDER

- Retrieve the deck steps from storage.
- Unscrew the railing from the step assembly.
- Using the latches on the step frame, secure the latches into the brackets on or near the edge of the deck.

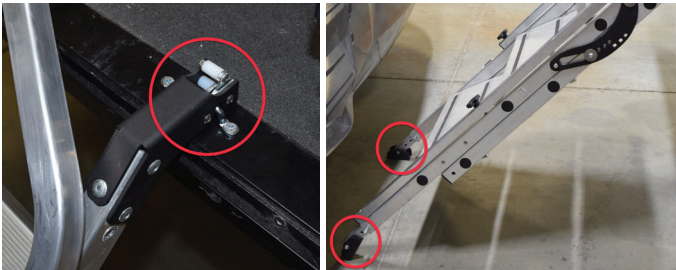

- Install the handrail in the brackets on the side of the step frame, and install/tighten the threaded knobs to secure the handrail in the upright position.
- Adjust the step-stabilizing legs to ensure that the steps are supported securely.
- Pull the pins for the step riser pivot and adjust until the step is level. Then reinstall the pins in the appropriate hole, securing the step pivot.

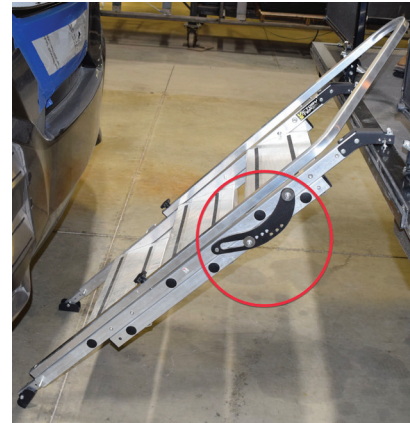

Completing The Setup

If desired, extend the patio awning for shade and turn on the patio lights. Accessories such as the pedestal table or Happijac dinette/sofa may also be set up and utilized. Refer to Newgle for additional information.



⚠ WARNING

Safety Weight Rating: This ramp is designed for consumer ATV and normal road clearance motorcycles. This ramp maximum load limit is 1,000 pounds (450 Kg) per wheel contact point, with a maximum total ramp load of 2,500 pounds (1,125 Kg). Do not exceed these maximum weight limits, including all items and person(s).

⚠ CAUTION


- When used as a patio, this door has a maximum capacity of 10 persons or 1,800 lbs maximum overall weight.
- Stabilizer jacks on unit must be used when the ramp door is in the patio position.
- Exceeding maximum weight limit could lead to collapse and possible personal injury.

How To Store The Deck Room

WARNING

Always check to make sure there are no objects or persons in the path of the deck when operating. Do not operate the deck with objects or persons on the deck.

1. Pull the pins for the step riser pivot, and adjust until the step is flat against the frame. Then reinstall the pins in the appropriate hole, securing the step pivot.
2. Remove the handrail, and secure it flat to the step frame.

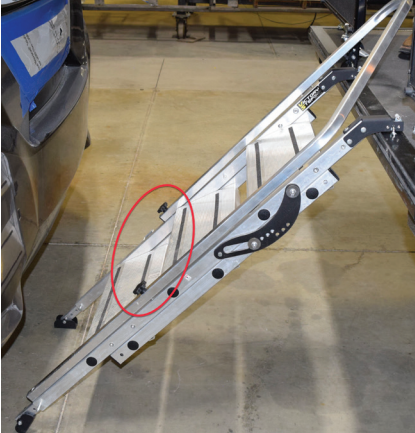

3. Unlatch the step assembly, and store it.
4. Unlatch and pivot the rotating portions of the railing one at a time, snapping them back onto the main railing.
5. Lift and pivot the railings down, and strap them into the stored position one at a time.
6. Close the rear door.
7. Latch the rear door, and rotate the latch until the door is secured.
8. Reinstall the rear coach ladder.

Rear Deck Safety

WARNING

Do not allow children to operate the rear door or the deck room. Do not leave children unattended on the deck room.

WARNING

Do not allow person(s) to climb, lean on, or step over the deck railing.

Toy Hauler Garage Manual Ramp Door Operation

This article provides an overview of the rear garage ramp door, as well as instructions for opening and closing it.

The rear garage ramp door is designed to allow easy access for loading and unloading of cargo into the garage area of your Canyon Star. The door features a hydraulic dampening system that allows one person to raise or lower the ramp door.

Operation

WARNING

Read entire ramp door instructions before operating. Failure to comply with these instructions could lead to serious injury or death.



OPENING AND LOWERING THE DOOR

To open the rear door, locate the handle inside the opening in the bottom of the trim (approximately mid-door). It incorporates a key lock so you can secure your garage by locking the release handle in place, preventing access to the garage area. Be sure the lock is unlocked before attempting to open the rear garage door.

A release trigger is located on top of the handle. Wrap your hand around the pull handle, and squeeze the release trigger with your finger. With the trigger pulled, the handle will swing down, releasing the latching mechanism for the rear garage door. Pressing on the door may release some pressure on the latching mechanism to allow the handle to swing down more easily.

Once the release handle has been pulled down fully, the garage door/ramp will begin to swing down. After opening a few feet, the hydraulic assist system will catch the door and allow you to lower it gently the rest of the way to the ground.

To complete the lowering process, rotate the hinged ramp cover at the bottom of the door to bridge the gap between the garage floor and the ramp/door. This provides a smooth transition as items are loaded up and down the ramp into the garage. Always use caution when loading and unloading cargo.

⚠ WARNING

Always check to make sure there are no objects, or person, in the path of the ramp when operating. Do not operate the ramp with person or objects on the ramp.

⚠ WARNING

Be sure to keep hands, fingers, and other body parts, as well as clothing, clear of the loading ramp/door and its associated moving parts when opening or closing it. Failure to do so could result in bodily injury and/or damage to the door and coach.

LIFTING AND CLOSING THE RAMP DOOR

To close the ramp/door, reverse the opening process. Rotate the hinged ramp cover back into the stored position, then swing the garage door/ramp back into the upright position. Once it is fully retracted, rotate the locking arm into its stored and locked position, and make sure it latches securely.


Toy Hauler Garage Powered Rear Ramp Door Operation

This article provides an overview of the toy hauler garage powered ramp door, as well as instructions for opening and closing it. The rear garage ramp door is designed to allow easy access for loading and unloading of cargo into the garage area of your Canyon Star front-engine diesel coach.

Operation

⚠ WARNING

Read entire ramp door instructions before operating. Failure to comply with these instructions could lead to serious injury or death.

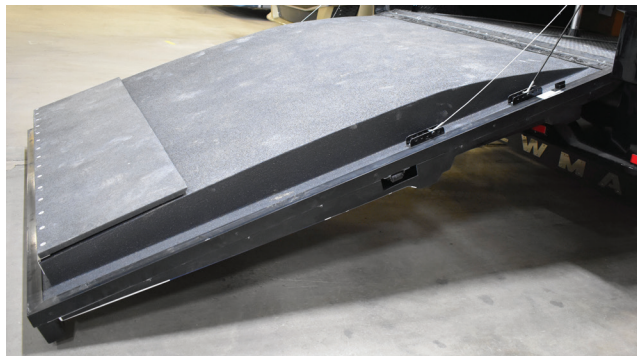

RELEASE HANDLE

To open the rear door, locate the handle inside the opening in the bottom of the trim (approximately mid-door). It incorporates a key lock so you can secure your garage by locking the release handle in place, preventing access to the garage area. Be sure the lock is unlocked before attempting to open the rear garage door.

Maintenance and Safety Precautions

⚠ NOTICE

The ramp door hinge should be lubricated at least twice a year using a graphite or silicone-based lubricant.

The ramp may have labels adhered to it to provide special instructions or weight ratings. Acknowledge and follow all warning labels to prevent any damage to equipment or personal injury. The following label is an example. Actual instructions and weight restrictions may vary.



A release trigger is located on top of the handle. Wrap your hand around the pull handle, and squeeze the release trigger with your finger. With the trigger pulled, the handle will swing down, releasing the latching mechanism for the rear garage door. Pressing on the door may release some pressure on the latching mechanism.



POWERED RAMP DOOR SWITCH

Select coaches equipped with an optional powered rear ramp door are equipped with an electrical switch located in the rear passenger side compartment. To lower the door, push the switch down. To raise the door, push the switch up. The door must be unlatched prior to operating the ramp door using the power switch.



⚠ WARNING

Always check to make sure there are no objects, or person, in the path of the ramp when operating. Do not operate the ramp with person or objects on the ramp.

⚠ WARNING

Be sure to keep hands, fingers, and other body parts, as well as clothing, clear of the loading ramp/door and its associated moving parts when opening or closing it. Failure to do so could result in bodily injury and/or damage to the door and coach.

RAMP DOOR ALARM

If the coach ignition is turned on and the parking brake is released, an audible alarm will sound and a red light on the dash will appear if the rear ramp door is not closed and latched.

**Maintenance and Safety Precautions****⚠ NOTICE**

The ramp door hinge should be lubricated at least twice a year using a graphite or silicone-based lubricant.


The ramp may have labels adhered to it to provide special instructions or weight ratings. Acknowledge and follow all warning labels to prevent any damage to equipment or personal injury. The following label is an example. Actual instructions and weight restrictions may vary.

**Toy Hauler Garage Pedestal Table Overview**

This article provides step-by-step instructions for assembling and disassembling a pedestal table located in a toy hauler garage.

To Assemble Table:

1. Remove the black filler plug from the table leg socket in the garage floor.
2. Loosen the black collar on the bottom of the table leg.
3. Insert the table leg prongs into the socket in the garage floor.
4. Twist the table leg until the prongs are rotated away from the opening in the socket.
5. Secure the table leg by tightening the black collar down against the socket.

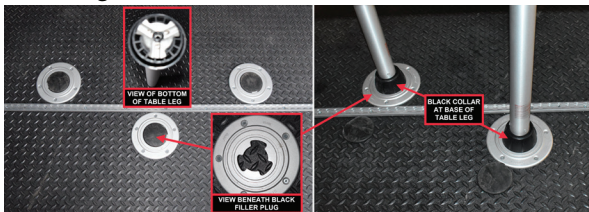

6. Repeat for each table leg.
7. Set the table top onto the three legs, inserting the top of each leg into a socket on the bottom of the table top.

**To Disassemble Table:**

1. Lift up on the table top to release each leg from the socket.
2. Store the table in a secure location.
3. Loosen the black collar on each table leg by rotating it in a counterclockwise motion.
4. Rotate each table leg to align the prongs with the socket openings.
5. Remove and store each table leg in a secure location.
6. Install the black filler plug to help prevent dirt and debris from entering the socket.

For information about the bunk bed option (as shown in the dinette configuration), refer to the "HappiJac Electric Lift Bunk Bed Operation" article in Newgle.



Auto-Motion Shade Powered Retractable Screen Operation

This article provides an operational overview of an Auto-Motion Shade powered retractable screen that may be installed on a toy hauler garage (option # T025 beginning in 2020 on Canyon Star 3927 floorplans).

Operation

This powered retractable screen is operated via a single channel remote (model EL-204P-1), which may be wall-mounted or used as a handheld controller. When activated, the LED indicator light will flash blue.

1. Press the “Up” key on the remote control to raise the retractable screen.
2. Press the “Down” key on the remote control to lower the retractable screen.
3. Press the “Stop” key on the remote control to stop the travel of the retractable screen.
4. When necessary, replace the batteries. This remote uses two 3V (CR2325) twist button batteries.



Pairing The Remote With The Screen Motor

⚠ IMPORTANT

On the back of each transmitter, you will find a small hole with a micro push button switch behind, used for the pairing with Module 216P. Newmar recommends this procedure be completed by an authorized service center.

Source(s): Auto-Motion Shade Quick Reference Guide (QRG) # 9: Pairing of 2nd Generation RF Transmitters with Standard Motor 4280P, Using External RF Receiver Module 216P

Product(s): Auto-Motion Shade Power Screen with Remote (Model: EL-204P-1 and EL-203P-1, Newmar Part Number: 153495 and 136020)

Black Widow Motorcycle Wheel Chock Overview (Model: MWC-2900)

This article provides an overview and operating instructions for a Black Widow motorcycle wheel chock (Model: MWC-2900).

“This chock features an adjustable 3-position cradle that accommodates most motorcycle wheel sizes—even as small as 16”. Manufactured from heavy-duty steel, the over-centering cradle locks the wheel into place for a tight grip that’s safe for bike and chock alike. Slide the front wheel into this adjustable motorcycle wheel chock for a convenient solution to stability during storage or transport.”

Drive or push the motorcycle into the wheel chock until the cradle locks the wheel into place. When unloading the bike, pull the motorcycle back until the cradle releases. Each chock is mounted to the garage floor using four bolts.

Use the “Load Lock Tie Down” rings and track mounted to the garage floor to secure the motorcycle in place. These rings can be moved to the desired location by pressing down and shifting them along the track.



⚠ IMPORTANT

The chocks are not for use as independent motorcycle stands, and tie-down straps are required when in use.




Source(s): <https://www.blackwidowpro.com/motorcycle/wheel-chocks/mountable-adjustable/p/mwc-2900/>

Product(s): Black Widow Mountable Adjustable Motorcycle Wheel Chock (Model: MWC-2900, Newmar Part Number: 033412)

Pit Posse Motorcycle Self-Locking Wheel Chock Overview (Model: PP2900)

This article provides an overview and operating instructions for a Pit Posse motorcycle self-locking wheel chock (Model: PP2900).

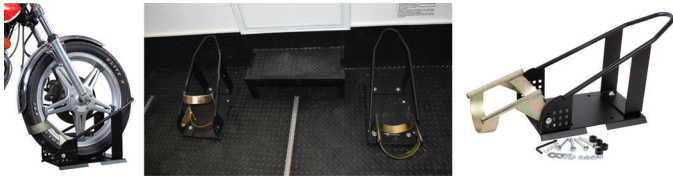

Simply push or drive the bike into the cradle. The pivoting bracket will close on the motorcycle tire securing the bike in the upright position. To remove, pull back on the motorcycle. The chock will automatically release the wheel. Each chock is mounted to the garage floor using four bolts.




Use the "Load Lock Tie Down" rings and track mounted to the garage floor to secure the motorcycle in place. These rings can be moved to the desired location by pressing down and shifting them along the track.

IMPORTANT

The chocks are not for use as independent motorcycle stands, and tie-down straps are required when in use.

Source(s): <https://www.pitposse.com/pit-posse-self-locking-wheel-chock.html>

Product(s): Pit Posse Motorcycle Wheel Chock (Model: PP2900, Newmar Part Number: 145457P)

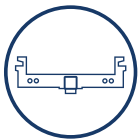

Hitches and Towing Components

Hitches and Towing Overview

Your motorhome is equipped with a hitch and tow plug, as it is designed for towing light loads. Your hitch may provide you with the capability of towing your car or trailer while traveling. A wiring harness or pigtail is needed to connect tail lights, brake lights, turn lights, etc. of the towed vehicle with that of the coach. Some coach models feature rear docking lights to assist with tow vehicle hookup at night.

Prior To Towing

Prior to towing, inspect all towing connections, including the hitch mounting bolts for unusual wear or corrosion. Check the mounting flanges for any deformation, as well as the hitch welds for any cracks, signs of movement, or fatigue in the hitch assembly. Safe and satisfactory performance of the towing system depends on the type of towing equipment connected to the hitch receiver. The assembled length of the drawbar/towing system used should be kept to a minimum. Do not exceed the rated capacities of the hitch or the components used to attach the towed vehicle or trailer.

IMPORTANT

Newmar is not responsible for damage or failure of the hitch receiver caused by the use of excessively long drawbars or other styles of drawbars that create leverage loads on the hitch receiver beyond its designed capabilities.

WARNING

Do NOT cut, drill, weld, or modify hitch.

Towing Capacity

The total weight of the motorhome and any vehicle towed must not exceed the GCWR (Gross Combined Weight Rating). When planning to tow, approaching the GVWR (Gross Vehicle Weight Rating) may reduce the motorhome's towing capacity. When weighing the motorhome, be sure to take passenger locations into consideration. The towed vehicles must have adequate active brakes. Contact your state Department of Transportation or your local Newmar dealer for your state requirements.

IMPORTANT

The hitch is typically supplied and installed by the chassis manufacturer, and it may be necessary to contact them directly for weight ratings and towing recommendations. Some information may also be available on a data label adhered near the hitch.





Ladders


This article provides safety information for using a ladder installed on a Newmar coach.

⚠ IMPORTANT

When going up or down the ladder, make sure the ladder is clear of debris, ice, water and any other slippery substance. Wear shoes that provide good traction. Slip-on shoes are not recommended when using the ladder.

⚠ IMPORTANT

The rear ladder maximum weight capacity may differ by manufacturer and dimensions of the ladder. Observe and do not exceed the weight rating for your ladder, which may be noted on the bottom of one of the ladder rungs.

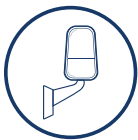

Mirrors

Exterior Mirror Multi-Directional Adjustment and Heat Toggle Switch Operation

This article provides basic operation and adjustment instructions for an exterior mirror.

Overview

Your coach may be equipped with convex remote-controlled two-part exterior rear view mirrors. The top portion of the mirror is flat, providing conventional reflected views down the sides of the RV, while the bottom portion is convex to provide an expanded view, helping to eliminate blind spots. These mirrors may also contain heating elements to defog, defrost, or de-ice the mirror glass during cold weather operation.



Operation

Some mirrors can be operated via remote control. These mirrors are adjusted by using the multi-directional switches located on the driver's door (optional on some models) or console. Make sure the seat is positioned for proper vehicle control, and then adjust the mirrors for maximum rear visibility prior to driving.

ADJUSTMENT CONTROL

The Mirror Control switch operates the electric portion of the mirror and adjusts the mirror up, down, back, and forth. To select which mirror to adjust, flip the selector to the left or right position. Move the selector to the center position to obtain the best view and make the directional arrows inactive. The adjustment control moves the top half of both mirrors. The bottom half of the mirror is convex and is adjusted manually.


HEAT

The red switch located near the mirror adjustment control operates the mirror heat (if equipped). The ignition switch must be on for the mirror heat switch to operate.

1. To turn the mirror heat on, turn the switch to the "ON" position. The light will illuminate on the switch when the mirror heat is operating.
2. To turn the mirror heat off, turn the switch to the "OFF" position. The light on the switch will turn off when the mirror heat is no longer operating.

⚠ IMPORTANT

Objects viewed in the convex mirrors are closer than they appear.

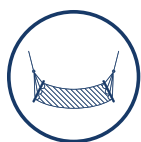

Optional Accessories

Flagpole Assembly Overview

This provides information about the flagpole option available on some coach models (Option # R045).

Assembly Components

The flagpole assembly (Newmar part # 143894 or 138708) should handle any standard 1-inch flagpole that may mount on the side of a house. If the coach is equipped with the optional flagpole mount (Newmar option # R045, Newmar part # 138682 and 138683), it is typically located on the front of the coach just in front of the entrance door. The flag assembly may be shipped from the factory in a kitchen drawer.



Assembly Installation and Removal

The mount's slot allows the angled flag assembly to easily be installed while displaying a flag and easily removed for travel. To display a flag, simply slide the assembly down into the mounting bracket, then install the flagpole (not provided by Newmar). To remove the flag and assembly, reverse the order of installation. For coach owners who wish to have a flagpole assembly installed on their coach, contact the Newmar Parts Department to order the proper assembly components. Newmar recommends having the mount installed by an Authorized Service Center.



Flagpole Safety

⚠ CAUTION

The flagpole assembly is not intended to be used in high wind conditions.

⚠ WARNING

When installing a flagpole assembly, ensure you have proper clearance away from overhead electrical lines or other obstructions.

⚠ DANGER

Do not leave flagpole assembly in mounting bracket while vehicle is in motion.



Paint, Roof, and Siding

Roof and Sidewalls Overview and Maintenance

This article provides a basic overview and maintenance of the roof and sidewalls.

Sidewalls

Newmar RV sidewalls are designed with structure to make them more rigid and dependable. By building aluminum frames with studs 16 inches on center, your sidewalls and roof will form a strong, lightweight, integrated structure so you can enjoy superior insulation. The sidewalls and end caps of your coach are constructed of smooth fiberglass, which is features an automotive style "Clear-Coat / Color Coat" painted finish.

SIDEWALLS MAINTENANCE

This article provides a basic overview and maintenance of the roof and sidewalls. Clean any unpainted fiberglass material with a mild cleanser and warm water. Use only soft cloths. Using stiff bristle brushes may cause scratches in the fiberglass surface.

⚠ IMPORTANT

Newmar is not responsible for weathering/oxidation of gel-coated surfaces.

EXTERIOR PAINT MAINTENANCE

For cleaning and waxing instructions and recommended products, refer to the Miscellaneous Care and Maintenance section in Newgle. Paint codes are typically posted on the back side of one of the upper kitchen cabinet doors.

Roof

This unit is manufactured with a 7mm decking material covered with fiberglass or rubber membrane. Proper care and routine maintenance of your roof is necessary for trouble-free performance. Frequent inspection (at least annually) of roof drains, seams, and joints should be performed by an Newmar Authorized Service Center.

Exterior Paint Overview

We're passionate about paint. And we believe that the RV we create for you should be as beautiful as it is comfortable. Our coaches are more gorgeous than ever, with a sleek, stunning exterior showcased by all-new graphics and the exquisite Full-Paint Masterpiece™ Finish. Our goal is to create a perfect finish every time we paint a Newmar. This is how we do it:

- Between 12 and 16 gallons of paint are used on each model.
- Several types of primer are applied, followed by a base coat, color for graphics and a final, clear coat.
- We use materials of only the highest quality and integrity.
- Our technicians are among the most knowledgeable and highly experienced.
- The equipment and techniques we have created are among the most advanced.

We always ensure that each coat of paint lays flat and smooth to produce a stunning brilliance. That's how we can promise that your Newmar RV will offer you an exterior of the highest quality and durability.

For cleaning and waxing instructions and recommended products, refer to the Miscellaneous Care and Maintenance section in Newgle. Paint codes are typically posted on the back side of one of the upper kitchen cabinet doors.

NOTE FROM NEWMAR

For information about cleaning your roof drains and gutters, refer to the Roof Drains article in Newgle.

ROOF MAINTENANCE

Regular cleaning and maintenance is essential to insuring a long, trouble-free life. Before cleaning, it is important that you inspect the sealants and gaskets used to seal components to the roof structure to be certain there is no leakage during the cleaning process. Any cracks or voids in the sealants and seals **MUST** be repaired prior to spraying the roof with water. Extreme caution should be used when inspecting or cleaning the roof.

⚠ WARNING

It is recommended that access, cleaning, and maintenance be conducted by a qualified professional at your local dealership. Use caution if working on top of your vehicle. The wet roof surface is extremely slippery.

If inspection and/or maintenance becomes necessary, stay on the main roof area. Do not walk or stand on the raised portions of the roof or the gutter rail area (if applicable). Do not exceed 300 pounds on the roof.

⚠ NOTICE

Do not place items on the roof for transportation. The roof was not designed to support the transportation of luggage or other items.

For more details about paint codes, refer to the “Coach - Paint Code Pages” section in NewPar, Newmar’s online

parts catalog (Parts and Warranty Reference > Coach - Paint Code Pages > Coach Year > Coach Model > More Info).

Diamond Shield Paint Protection Use and Care Guidelines

This article provides basic care and maintenance guidelines for the Diamond Shield paint protection. Follow the use and care guidelines as outlined by Diamond Shield.

IMPORTANT

Once applied, refrain from washing for 48 hours, washing after that time presents no problems. Do NOT use harsh or abrasive cleaners or detergents.

Step 1: Wipe Regularly

Wiping bugs and road grime off your vehicle, with a wet soft cloth, as soon as you get a chance is essential to keeping your film looking great. This will also reduce the risk of staining and discoloration from bug acids, runoff stains, and road grime left on for an extended period. When done, apply 303 Aerospace Protectant!

Step 2: Wash Monthly

Washing monthly will give your film the deep clean it deserves and will ensure the film remains crystal clear. We recommend using Advanced RV & Auto Wash and a soft cotton or lambswool mitt to apply. Do not use any abrasive brushes, rags, cloths, or compounds. When you’re done, apply 303 Aerospace Protectant!

IMPORTANT

Do not use Rain-Ex products or bug and tar removers.

Step 3: Wax Quarterly

Waxing your film on a quarterly basis, or more, will add that extra layer of protection to your film. Keeping it waxed will prevent damage from bug acids and road grime, and allow the film to effortlessly be wiped clean. We recommend using Advanced RV & Auto Wax, a synthetic polymer cream wax designed specifically for Diamond Shield.

General Care Precautions

Several cleaning techniques and cleaning products should NEVER be used on the areas protected by Diamond Shield on your vehicle.

- Do not pressure wash.
- Do not use Rain-X products.
- Do not use any abrasive brushes, rags, cloths or compounds.

This general care list is not comprehensive. Please call Diamond Shield at 1-888-806-5862 before using any products not specifically listed on Diamond Shield’s website. Using unapproved sprays, cloths, or waxes may cause damage to the film, which may not be covered under warranty.



Windows and Windshields

Hehr/LCI Emergency Exit and Vent Window Operation

This article provides instructions for opening and closing Hehr/LCI emergency exit and vent windows.

Hehr/LCI Egress Emergency Exit Window

Select Hehr windows have an opening window pane in the egress window for ventilation. This style of window can also be opened in the event of an emergency.



TO OPEN THE VENT:

1. Unclip and lower the arm.
2. Swing the arm 90 degrees, and push out on the arm until the red handle latches.

TO CLOSE THE VENT:

1. Unclip the red handle from the latch by lifting slightly while pushing outward.
2. Once the latch releases, pull the arm in until the window is closed.
3. Rotate the arm 90 degrees until it latches into the closed position.

IN THE EVENT OF AN EMERGENCY, OPEN THE WINDOW:

1. Remove the screen by pulling out on the red handle.
2. Push and release the lever from the locking hook.
3. Rotate the lever 90 degrees, and push it through the slot in the window frame.
4. Escape through the opening.

Hehr/LCI Double-Latched Emergency Exit Window



TO OPEN THE EMERGENCY EXIT DOUBLE-LATCHED WINDOW:

1. Flip both latches up to the open position.
2. Push out on the window.

TO CLOSE THE EMERGENCY EXIT DOUBLE-LATCHED WINDOW:

1. Pull the window shut while holding the window track with one hand.
2. With the other hand, rotate the latch up until it connects with the track on the window.
3. Press the front side down until it latches.
4. Repeat the steps for the second latch.

Fresco Flush Slide Driver Side Power Cockpit Window Operation

This article provides the operation instructions for a Fresco flush slide driver side power cockpit window.

The directional switch on the driver side console operates the Fresco power window.

1. With the ignition on, press and hold the switch in the up or down position to move the window in the desired direction.
2. Continue holding the switch until the desired window position is obtained. Then release the switch.
3. Pressing down on the switch opens the window by pulling the window in and sliding it forward.
4. Pressing up on the switch closes the window by sliding the window back and pushing the window out.



How To Prevent Window Condensation

This article provides a preventative overview of condensation on the inside of the windows and within the coach. Accumulation of condensation on surfaces within your unit occurs when warm, moist air contacts a cool surface. It is most evident on the inside of windows.

⚠ IMPORTANT

Since surface condensation within the coach cannot be controlled by the manufacturer, damage caused by condensation is not covered by your Newmar Limited Warranty.

Damage may occur to your unit if excessive condensation exists. This problem can be controlled by:

1. Slightly opening a window or roof vent to allow the moisture to escape from the unit.
2. A small dehumidifier is also very effective in removing moisture from the air.

Condensation levels are highest during times when a person is cooking or taking a shower in the unit, but these are not the only times condensation is present. Condensation can migrate through ceiling panels and saturate the fiberglass insulation in your ceiling cavity. This condition often causes the occupants to believe the recreational vehicle has a roof leak. Walls and ceiling panels may also become wet when the moisture accumulates on these surfaces.

⚠ IMPORTANT

Newmar Corporation does not recommend the use of any catalytic heaters.

Windshield Maintenance and Replacement

Proper care and maintenance of your windshield is critical to maintain good visibility and safe operation of the coach.

Care and Maintenance

Keeping your windshield clean will provide optimum visibility to view the road ahead. Should you encounter rock chips or cracks, have them fixed by an automotive glass professional immediately to avoid costly windshield replacement. If the crack spreads, replacement may be necessary.

Check the windshield washer fluid level prior to each trip, and top off the fluid reservoir as needed.

Windshield Replacement

When replacing a windshield, Newmar highly recommends purchasing the new windshield through the Newmar Parts department to ensure proper windshield fit. Customers and dealers have experienced many size and installation issues when attempting to use aftermarket windshields. If your windshield needs replaced, make sure that your dealer or glass replacement company purchases the replacement windshield directly from Newmar.

CAUTION

Do not operate the windshield wipers with damaged blades, as they may cause damage to the glass. Damage to glass by rocks, damaged wipers, or other foreign objects are not warrantable repairs.

Skylights Overview

This article provides basic information about the skylight installed in the coach.

For improved lighting and headroom, a skylight may also be installed in the bathroom over the shower. The opening provides additional light during daylight hours, and the skylight is tinted to provide privacy and reduce glare.

The skylight should be inspected with the roof and components, and the sealant should be maintained. Some sealants are not compatible with the skylight material. Newmar recommends using Surebond SB-140 butyl sealant around the skylight. Periodic cleaning using a mild detergent or cleaner specifically designed for plastics (such as Novus No. 1) is necessary; cleaning frequency may depend on the surrounding conditions while driving, parking, or storing the coach.

WARNING

It is recommended that access, cleaning, and maintenance be conducted by a qualified professional at your local dealership. Use caution if working on top of your vehicle. The wet roof surface is extremely slippery.



Wiper Systems

Wiper System Care and Maintenance

This article provides basic care and maintenance about the coach's wiper system, as well as information about wiper blade replacement.

Maintaining The Wiper Blades

Proper care and maintenance of your wiper blades is critical to maintain good visibility and safe operation of the coach. Clean the rubber element every time you fill your gas tank, and remove loose dirt and road grime from the windshield. When washing your coach, use a small amount of non-abrasive glass cleaner on a wet sponge to clean both the windshield and the rubber wiping elements. In colder climates, use an ice scraper

to remove snow and ice. Using your wipers to de-ice your windshield can damage the blades, as well as the arm and wiper motor.

Streaking, chattering, and worn blades may be caused by dry rubber that has hardened and cracked. Streaking can also be caused by oil, tree sap, road tar, or other foreign substances on the blade rubber or windshield. Chattering sounds as the blade passes across the windshield are caused by the "deformity" or "curve" in the rubber that some wiper blades develop over time.

Worn, damaged, or split rubber around the wiping edge is generally caused by age and use, but may be due to the effects of the sun's ultraviolet rays on the rubber. Damage may also be caused by ice scrapers, automatic car washes, or vandalism. Damage to glass by rocks, damaged wipers, or other foreign objects are not warrantable repairs.

Replacing The Wiper Blades

To inquire about replacement wiper blades or other components, refer to the NewPar (formerly ComNet) parts catalog or contact the parts department at 1-800-731-8300 (select the appropriate menu option). This will help ensure the proper wiper fit.

WARNING

Replace your windshield wiper blades when they become worn or damaged. Worn or damaged wiper blades may cause damage to the windshield, as well as interfere with the driver's ability, possibly resulting in a crash leading to injury or death.



HVAC

This chapter provides operational instructions for components related to dash and roof air conditioning, fans and ventilation, heating systems, and climate control.

⚠ IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the manufacturer's complete documentation. Refer to Newgle for more information about heating, ventilation, and air conditioning components offered for your coach's model year.



Air Conditioning and Heat, Dash

Bergstrom Single Zone Dash Air Conditioning and Heat Operation

This article provides basic operation instructions for a Bergstrom Single Zone Dash Air Conditioning and Heating system.

Control Panel Operation

BLOWER SPEED

One of the best ways of controlling temperature is by changing the speed of the blower. The blower switch controls the system on/off and provides several different speeds in any mode.

TEMPERATURE CONTROL

The temperature control dial controls only the heat content of the discharge air. The temperature control dial will also control the overall temperature of the discharge air if the AC system is operating. Turn the knob to the right (red area) for warmer air, and to the left (blue area) for cooler air. Use of the temperature control will also moderate the discharge temperature when the cooling system is engaged.

A/C CLUTCH

Illuminates when compressor clutch is engaged. This means the compressor is on and discharging refrigerant.

RECIRCULATION


Your driver/passenger heater and air conditioning system is designed to operate in fresh air mode by default. The recirculating air feature is primarily used for faster passenger area cool downs during the summer and warmups during the winter by closing off the fresh air source and recirculating the passenger compartment air. Pressing this switch will place your system in the recirculated air mode.

NOTE: Prolonged use of this feature can cause stale air quality and moisture to form on the windows.

AIR DISTRIBUTION

To achieve the maximum comfort in your vehicle, the air must be directed where it is needed. The mode switch (right of center) gives the user the ability to select where the air will flow.

- Panel Mode – Air is drawn into the system and discharged through the dash louvers only.
- Bi-level – Air is drawn into the system and discharged through the dash louvers and floor outlets.
- Floor – Air is drawn into the system and discharged through the floor outlets.
- Mix – Air is drawn into the system and discharged through the floor outlets and defrost outlets.
- Defrost – Air is drawn into the system and discharged through the defrost and demist outlets.

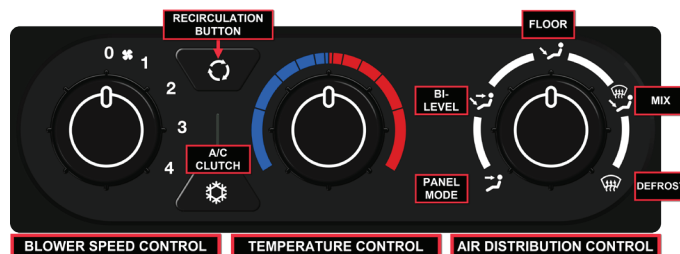

Operating Features

The A/C system is designed to operate in all air distribution modes. This provides significant moisture, dust, and pollen removal for enhanced passenger comfort.

The Bergstrom vehicle A/C system will not function if the outside temperature is below approximately 40 degrees F. For cool air circulation during low temperatures, it is suggested the operator utilize fresh air mode.

IMPORTANT OPERATING FEATURES AND TIPS

WINDOW FOGGING

In mild, but rainy or humid weather, windows may fog on the inside. To clear the fog of all driver area windows, turn on the air conditioning, set the system air intake to FRESH AIR by disengaging the RECIRC button, adjust the temperature and fan control to maintain comfort, position the mode control to DEFROST.

NOTE FROM NEWMAR

It may also be helpful to use the dash overhead fan to assist with window fogging and defrosting.

WINTER OPERATION

- Remove snow and ice from windshields and system air intakes if applicable.
- The discharge air will heat up faster if the blower is operated on lower speeds until the engine is hot and the recirculation switch is engaged.
- For windshield de-icing, use defrost mode.
- Ensure the air intake is free of ice and slush.

SUMMER OPERATION

Air-conditioned vehicles must be protected with a high-quality antifreeze coolant during summer to provide corrosion protection and to raise the boiling point of the coolant for protection against overheating. A 50% concentration is recommended.

- Use recirculated air control for a quick cool down.
- Close all windows and vents to hot humid outside air.
- Close all curtains which do not obstruct the driver's vision.

CARE AND SERVICE

- Keep the condenser and radiator free of bugs and debris.
- During periods of little use, operate the A/C system monthly to keep the compressor seals lubricated.
- Periodically inspect the belts and hoses for wear and proper tension.
- Periodically check the proper coolant levels.


⚠ WARNING

The A/C system contains refrigerant 134a under high pressure and should be serviced by qualified personnel only.

Repairs that alter the design of the Bergstrom system including the use of non-Bergstrom supplied parts will void the warranty and any Bergstrom liability for the system

Source(s): Bergstrom Single Zone A/C heater Owner's Manual Operating Instructions

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

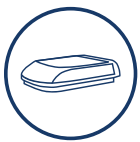

Air Conditioning and Heat, Roof

Roof Air Conditioning and Heat Overview

This article provides a brief overview of the roof air conditioning and heat pump, as well as filter maintenance. Keep your coach comfortable year around!

Your coach's air conditioners can be operated using the Comfort Control thermostat, KIB V-Bus LCD touchscreen, or the appropriate SilverLeaf screen. For more detailed information about climate control, refer to the appropriate product page(s) and associated content in Newgle.

Some roof top air conditioners have the ability to work as a heat pump when desired to produce heat instead of cooling. These models are effective at producing heat at ambient temperatures (above approximately 40 degrees). If the temperature drops below the threshold, most controls will revert to the furnace or hydronic heating system to produce the necessary heat.

Most air conditioning systems have a two minute built-in time delay, so there may be a slight delay in the operation of the air conditioner after the thermostat is set.



Filter Maintenance

On some coach models, grills with filters may be located behind decorative covers on the ceiling.

1. Remove the vent cover grill from the return air duct or the grill from the air conditioner ceiling assembly.
2. Remove the filter.
3. Wash, rinse, and dry the filter. If the filter does not come clean, or is damaged, replace it with a new filter. Do not substitute other types of filters, as this may restrict air flow and cause other issues. Do not operate the air conditioners without filters.

4. Reinstall the filter on the cover, and place it back into the vent.
5. Repeat the process for each return air vent.

For more information about accessing filters underneath decorative covers, refer to other Newgle articles (How to Access and Clean Air Conditioner Filters with... louvered wood covers, friction, mechanical, or magnetic latch covers).



Fans and Ventilation

Urea-formaldehyde Safety Guidelines

This article provides information about proper ventilation to prevent issues such as condensation and the release of urea-formaldehyde from coach products. Depending on your vent setup, they may be controlled by a switch directly on the vent assembly or the switches located on the wall. Dash fans may also be installed on or in the front overhead cabinet and aid in windshield defrosting and air circulation in the cockpit area of the coach.

Urea-formaldehyde is used in the production of particle board, hardwood plywood, and most paneling. Urea-formaldehyde resin may release formaldehyde vapors into the air, which may cause headaches, and in some people, eye, nose and throat irritation. Formaldehyde may intensify some allergies or upper respiratory problems like asthma.

Providing proper ventilation as needed by operating the power roof vents and opening windows should reduce the risk of such problems.

NOTICE

This vehicle is TSCA TITLE VI COMPLIANT and contains composite wood products that comply with the applicable California Code of Regulations Section 93120.2(a) Phase 2 (P2) formaldehyde emission standards specified on the above date of manufacture.

NI-151

NOTICE

This vehicle is TSCA TITLE VI COMPLIANT (conforme au titre VI de la TSCA) and contains composite wood products that comply with the applicable California Code of Regulations Section 93120.2(a) Phase 2 (P2) formaldehyde emission standards specified on the above date of manufacture.

NI-151

NOTICE

This vehicle is designed as a Recreational Vehicle.

When used for an extended period of time, while furnace heating is required, sweating and condensation conditions may occur.

The following precautions should be taken to minimize these conditions:

- (1) Use range hood when cooking.
- (2) Use the bathroom power vent when bathing or showering.
- (3) Open windows slightly for ventilation whenever possible.
- (4) Use dehumidifier to keep humidity as low as possible.

NI-13

IMPORTANT NOTICE

Certain of our latest product suppliers have advised that urea-formaldehyde is used in the production of particle board, hardwood plywood or paneling which they supply us and which we utilize in our finish product. These suppliers have requested that we communicate this to our customers.

For your information, we are reproducing samples of statements which have been provided to us by our suppliers.

WARNING: THIS PRODUCT CONTAINS A UREA-FORMALDEHYDE RESIN AND MAY RELEASE FORMALDEHYDE VAPORS IN LOW CONCENTRATIONS. FORMALDEHYDE CAN BE IRRITATING TO THE EYES AND UPPER RESPIRATORY SYSTEM OF ESPECIALLY SUSCEPTIBLE PERSONS SUCH AS THOSE WITH ALLERGIES OR RESPIRATORY ALLMENTS. PROPER VENTILATION SHOULD REDUCE THE RISK OF SUCH PROBLEMS. IF SYMPTOMS DEVELOP, CONSULT YOUR PHYSICIAN.

Adams, Inc.

WARNING: THIS PRODUCT CONTAINS A UREA-FORMALDEHYDE RESIN AND MAY RELEASE FORMALDEHYDE VAPORS IN LOW CONCENTRATIONS. FORMALDEHYDE CAN BE IRRITATING TO THE EYES AND UPPER RESPIRATORY SYSTEM OF ESPECIALLY SUSCEPTIBLE PERSONS SUCH AS THOSE WITH ALLERGIES OR RESPIRATORY ALLMENTS. PROPER VENTILATION SHOULD REDUCE THE RISK OF SUCH PROBLEMS. IF SYMPTOMS DEVELOP, CONSULT YOUR PHYSICIAN.

Woodbridge, Inc.

WARNING: THIS PRODUCT CONTAINS A UREA-FORMALDEHYDE RESIN AND MAY RELEASE FORMALDEHYDE VAPORS IN LOW CONCENTRATIONS. FORMALDEHYDE VAPOR MAY IN SOME PEOPLE CAUSE HEADACHES, EYE, NOSE, AND THROAT IRRITATION AND AGGRAVATION OF ALLERGIES AND RESPIRATORY PROBLEMS, SUCH AS ASTHMA. PROPER VENTILATION SHOULD REDUCE THE RISK OF SUCH PROBLEMS.

Robert Wood Plywood Corp

Ventilation is important in maintaining a comfortable environment and we direct your attention to the discussion of ventilation contained in your Owner's Manual.

Dash Overhead Fan Overview (Diesel Coaches)

This article provides an operational overview of the dash overhead fans for a diesel coach.

With the ignition key on, the O.H. Fans dash switch turns the overhead fan(s) on or off. The switch next to it labeled "High / Med / Low" allows the user to select the desired fan speed. The fan's purpose is to help circulate air around the windshield to minimize fog or ice buildup.



Fan-Tastic Vent Fan Operation via KIB 10.1" Central Monitor Capacitive Touch Panel

The Fans icon on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the Exhaust Fan Control page to turn the fans and rain sensor override on or off and control the fan speed.

⚠ IMPORTANT

The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.



Touch the FANS icon to jump to the Exhaust Fan Control page. Select which fan you wish to operate and press the power button. Once the power button turns red, power is supplied to the selected fan location. The buttons are gray while the circuit is inactive. The available buttons will vary by coach model and floorplan, as well as installed options, and may include, but are not limited to:

- KITCHEN
- BATH
- MASTER
- STOOL ROOM

The fan operation screen provides buttons for On/Off and Rain Sensor Override, as well as the fan speed (High, Medium, or Low). A red button indicates the fan is currently in operation, which fan speed is selected, or the automatic rain-sensing technology is disabled (RAIN O-RIDE).

Rain-O-Ride

The Rain-O-Ride button disables the rain sensor and will keep the fan running/open while raining. It can be used if moisture from the shower accidentally turns the fan off.

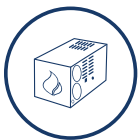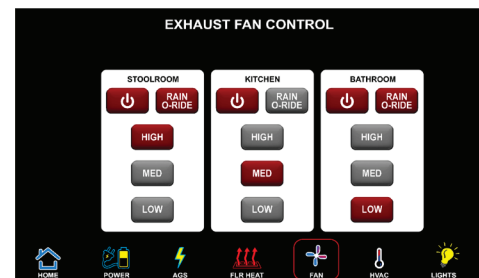

Furnaces

How to Operate and Maintain the Furnace

This article provides basic operation and maintenance instructions for a forced-air furnace. The furnace installed in your coach is a forced-air furnace fueled by propane gas and is controlled by the air conditioner wall thermostat or the KIB touchscreen panel. This thermostat controls both the heating and cooling of the coach. The heat is supplied throughout the coach via the ducts in the floor.

For more information about the thermostat and KIB touchscreen, refer to Newgle.

⚠ WARNING

There are no owner serviceable parts on the furnace. Never attempt to modify this furnace. Fire, explosion, asphyxiation, or carbon monoxide poisoning may occur. If the furnace malfunctions, consult a trained service technician.

⚠ WARNING

Do not store anything directly in front or on either side of furnace.

⚠ AVERTISSEMENT

Ne rien poser contre l'avant ou les côtés du générateur d'air chaud.

The furnace will not operate properly if the air flow at the floor registers, or the air return to the furnace, is blocked by personal, storage items, or rugs.

Operating The Furnace

To operate, set the thermostat to the desired temperature setting and turn the thermostat ON. Allow 60 seconds for the furnace to begin operating. To shut down the furnace, turn the thermostat OFF. After the furnace has been turned off, the fan will run for approximately 60 seconds to cool down.

⚠ WARNING

For your safety, do not use gasoline or other flammable liquids near the furnace or any other appliance.

⚠ WARNING

OPEN VENT OR WINDOW ANYTIME VEHICLES, NOXIOUS FUMES OR OTHER HAZARDOUS ITEMS ARE IN THIS AREA.

Proceed with caution when storing items under the cabinets to prevent crushing or damaging the furnace ducting or blocking the cold air return.

Smoke and fumes may be created as a result of the residual burn off of the manufacturing compounds that are sometimes present the first time the furnace is used.

This is normal; however, to minimize the smoke and fumes, the initial lighting of the furnace should be completed with the windows and doors open.

WATER COMPARTMENT HEAT VIA FURNACE

Coaches equipped with a forced-air furnace(s) have a designated heat duct for the water compartment in the basement to reduce the risk of freezing.

IMPORTANT

Heat output to the water compartment is only operational when the furnace is heating the interior of the coach.

Maintaining The Furnace

Check the gas system for leaks at least once a year. On the exterior of the coach you will find a furnace cover. This cover should be removed by authorized service technicians only.

Clean the complete furnace and air tube passageways periodically to remove dust, lint, etc. The furnace should be thoroughly cleaned before the start of each heating season. Any debris in the system may restrict air flow for combustion, bind the combustion air impeller, or prevent the blower motor from running properly.

Also, check the burner pilot orifices for debris. Lint accumulations may cause the blower to become unbalanced, vibrate, and restrict the ability of the blower to move air. If lint is blown into the heat exchanger, it may cause odors or create a fire hazard. Contact an authorized service technician for annual cleaning.

WARNING

Use caution when washing the exterior of your vehicle. Water should not be sprayed directly into the furnace vent. If water is forced beyond the rain baffles into the furnace vent, rusting of the furnace could occur. This could also cause improper combustion.

Suburban Furnace Operation (Model: SF and SFV Series)

This article provides basic operation instructions for a Suburban Furnace (Model: SF and SFV Series).

WARNING

Do not operate furnace while vehicle is in motion or being towed.

WARNING

If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not light the burner by hand.

Before operating, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

DANGER

WHAT TO DO IF YOU SMELL GAS

- Extinguish any open flame.
- Evacuate all persons from the vehicle.
- Shut off the gas supply at the gas container or source.
- Do not touch any electric switch or use any phone or radio in the vehicle.
- Do not start the vehicle's engine or electric generator.
- Contact the nearest gas supplier or qualified service technician for repairs.
- If you cannot reach a gas supplier or qualified service technician, contact the nearest fire department.
- Do not turn on the gas supply until the gas leak(s) has been repaired.

Operating Instructions

1. STOP! Read Users Information Manual supplied with furnace.
2. Turn the manual valve (if so equipped) or the valve at the outside LP tank to the "OFF" position. Do not force.

3. Set thermostat above room temperature to begin blower operation. A slight delay will occur before the blower comes on. Allow blower to run for 5 minutes for combustion chamber purge cycle. If blower does not come on or stops before ignition cycle, go to shut down and contact your dealer or a local recreational vehicle service agency.
4. After 5 minutes, move thermostat lever below room temperature. Blower will remain on. Wait approximately 2 minutes for blower to go off.
5. Open manual shut-off valve (if so equipped) or the valve at the outside LP tank. Correct operating characteristics depend on the valve being positioned fully open. Never attempt to operate with a valve partially closed.
 - Note: This furnace is equipped with a valve shut-off switch. With switch in OFF position, gas will not flow to burner nor will the furnace operate.
6. Set thermostat lever to desired setting.
 - Note: Motor will not come on instantly. Allow approximately 30 seconds for motor operation gas flow and sparks.
7. Allow 30 seconds for main burner to light after blower comes on. This furnace is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.

8. If burner does not light, repeat Steps 1 through 7.
9. If after three (3) attempts with no ignition, go to shut down and contact your dealer or a local recreational vehicle service agency. Do not continue to cycle furnace through thermostat in an attempt to get ignition.
 - Note: If furnace should lock out, the blower will go off in 5 minutes and remain off until unit is reset by reactivating thermostat.

Maintaining and Cleaning

You, as the owner/user, should inspect the furnace monthly during the heating season for presence of soot on vent. Operating the furnace under this condition could lead to serious property damage, personal injury or loss of life. If soot is observed on the vent, immediately shut furnace down and contact a qualified service agency.

[There are] several safety related items that you should follow during the heating season to assure continued safe operation of the furnace. [For a complete list of these items, refer to your product's user manual in Newgle.]

Source(s): Suburban User's Information Manual for SF, SFV, SH, and SHD Models

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.



Thermostats

Climate Control via KIB 10.1" Central Monitor Capacitive Touch Panel

The HVAC icon on the KIB 10.1" Central Monitor Capacitive Touch Panel displays the controls for the rooftop air conditioners, furnace or heating system, and provides access to the HVAC settings for the entire coach.


Overview

HVAC is a control system interface to the RV's heating and cooling system, and:

- Controls the Dometic rooftop air conditioners
- Controls the furnace or Oasis heating system, which also serves as the water heater
- Allows Heat/Cool temperature setting within 55 to 90-degree range
- Contains the Oasis hydronic system burner, A/C electric element 1 and A/C electric element 1 and 2 ON/OFF switch buttons (only on coaches equipped with an Oasis hydronic heating system).

⚠ IMPORTANT


The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.

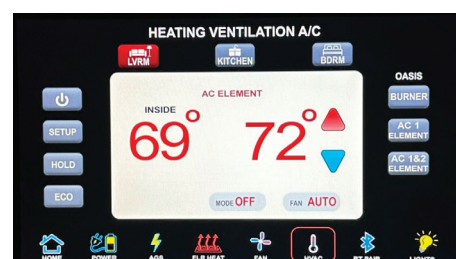

The main screens of the HVAC are:

- **Now/Status Page:** The main page where adjustments and room temperatures are displayed.
- **Room Selection:** Controls one of the three roof AC units (some RVs only have two roof units).
- **Setup Page:** Opens the page to set up heating and cooling schedules.
- **Scheduling:** Used to set up temperature programs that can change two times a day with up to three different programs that can run on different days of the week.
- **Time Clock:** The HVAC controller is where the time of day is set and stored, there is a battery backup so even without power turned on the time of day is kept.

NOW/STATUS PAGE

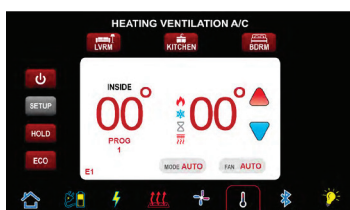



USER BUTTONS AND ICONS

- **POWER Button** — Turns the HVAC system ON/OFF.
- **SETUP Button** — Page jump to the HVAC setup pages.
- **HOLD Button** — Forces the system to hold the current temperature setting, regardless of schedules.
- **ECO:** Allows the user to select up to a 10-degree offset to allow more or less temperature variance from setpoint to reduce the energy used by the HVAC system while away from the RV.

ROOM SELECTION

There are 1-3 rooms to choose from depending on the floor plan, they are:

- **LVRM** — Selecting this will display the current “LIVING ROOM” settings.
- **KITCHEN** — Selecting this will display the current “KITCHEN” settings.
- **BDRM** — Selecting this will display the current “BEDROOM” settings.

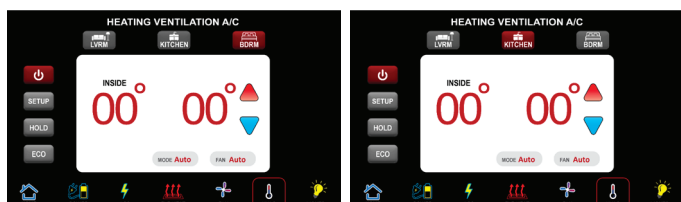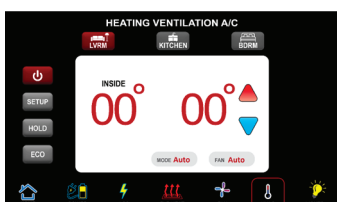

INDIVIDUAL ROOM SETTINGS

- **MODE** — Selects OFF, AUTO, COOL, HEAT PUMP, FURNACE, or FAN. Not all rooms have the FURNACE button.
- **FAN** — Selects AUTO, LOW, MED, OR HIGH.
- **TEMPERATURE** — Use UP/DOWN triangles to adjust room temperature set point.

STATUS DISPLAY

- **SET TEMPERATURE** — The target temperature for the room.
- **HOUR GLASS** — The system is waiting on the room’s roof top compressor to run.
- **PROG O-RIDE** — The “DAY/NIGHT” settings are being overridden by “HOLD.”
- **FIRE FLAME** — Indicates the furnace is turned on.
- **SNOWFLAKE** — Indicates the air conditioner compressor is turned on.
- **RED WAVES** — Indicates the heat pump compressor is turned on.


Setup Page

USER BUTTONS

- **BACK ARROW** — Page jump back to the Now/Status page.
- **SET TIME** — Page jump to the time-of-day settings.
- **SET PROG** — Page jump to the scheduling program setup.
- **SET WEEK** — Page jump to set a weekly program if desired. Set which program to run on that specific day. Different days can run different programs.


SETTINGS BUTTONS

- **RUN PROG** — Enables/disables the program settings to be observed or ignored.
- **WEEK PROG** — Enables/disables the week program settings to be observed or ignored.
- **AGS HVAC** — Enables/disables auto gen start to operate based on HVAC demand.
 - Generator is only started when the RV has no shore power and only when the HVAC has a demand present.
- **°F/°C** — Allows choice of displaying temperatures in degrees Fahrenheit or Celsius.

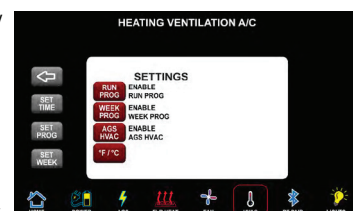


SETUP: SET TIME PAGE

Use “HR” & “MIN” buttons to set the time of day. Use “MM,” “DD,” and “YY” buttons to set the month, day, and year.

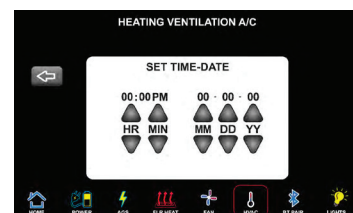

SETUP: SET PROG PAGE (DAY/NIGHT)

- **ARROW** — Page jump back to the Setup page.
- **DAY** — Displays the DAY setup for the room selected.
- **NIGHT** — Displays the NIGHT setup for the room selected.
- On a per-room-basis, the DAY, NIGHT, TIME, TEMP, MODE, & FAN can be setup for a “RUN PROG” schedule. The individual room settings are changed to “DAY/NIGHT” setting the time of day is the same as the time set in the DAY/NIGHT program.
 - Example: DAY/LVRM program settings are 8:00 AM, MODE = COOL, FAN = AUTO, TEMP = 70°F. When the time of day is 8:00 AM on the LVRM “NOW/STATUS” page all settings will change to the for mentioned.
- **PROG Button** – Assuming “Week Prog” is enabled from the “Setup Page,” this button will cycle through one of three different program settings.
 - Important: This is done on per DAY/NIGHT & per room. This is not to simply set up one DAY/NIGHT.
 - Example: Prog 1 requires all three rooms and their DAY/NIGHT to be set (6 different pages of settings). Prog 2 will be completely different setup pages.

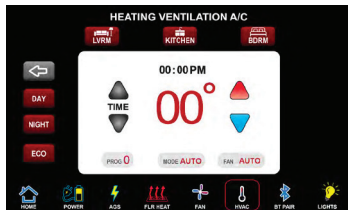


SETUP: SET ECO PAGE

- **Purpose:** To save energy when leaving the RV by simply pushing a button when you leave and return.
- **Room Selection:** Each room can be set for a different “SET ECO OFFSET”.
- Example: The bedroom door is closed -- set the bedroom offset to “ECO O-RIDE” while setting the LVRM&KIT to 10°. In this situation, the bedroom will try to maintain the temperature while the LVRM&KIT changes by 10° to save energy.
- **Set ECO Offset:** Value to offset temperature when ECO button is activated on main HVAC page. Example: If cooling and the ECO button is active, the room’s temperature will increase by the offset value.
- **ECO O-RIDE:** When activated, this zone will not use the ECO settings when the ECO button is activated on the main HVAC page.



SETUP: SET WEEK PROGRAM PAGE

- **Purpose:** To set which one of three different programs which will run on a specific day.
 - Example: The RV is only used on Saturday and Sunday and is empty throughout the week.
 - Program 1 - Setup to turn on all three air conditioners at 70°F at 7:00 AM and 68°F at 9:00 PM (set on Saturday and Sunday)
 - Program 2 – Setup to run a single air conditioner at 85°F all the time (set on Monday - Friday)
- Each day of the week is set by pressing the program button below the day.

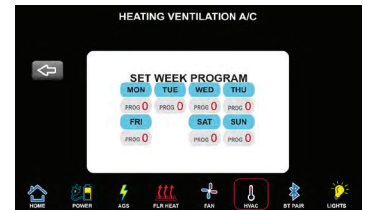

Mode Description

Note: Information was copied from the “Dometic Comfort Control 2” thermostat manual and specifications.

OFF — OFF MODE

- Displays “OFF” mode in a zone.

COOL — COOL MODE

- In the COOL mode, the system will cycle the compressor ON and OFF based on the room air temperature and the temperature set-point on the LCD. When the system calls for cooling, there will be a delay of approximately two minutes. During this delay, the hour glass icon will be displayed in the LCD. In auto fan, the fan will turn ON first followed by the compressor in approximately 15 seconds.
- In COOL mode, there are four fan selections: LOW / MED / HIGH / AUTO.
 - LOW / MED / HIGH: The fan operates continuously at the selected speed. The compressor only cycles ON and OFF.
 - AUTO: When auto fan is selected, the fan speed will vary depending on the difference between the temperature set-point and the room temperature. In auto fan, the compressor and the fan will both cycle ON and OFF. The compressor shuts OFF first followed by the fan in approximately 15 seconds.

HEAT PUMP — HEAT PUMP MODE

- In the HP mode, the system will cycle the compressor ON and OFF based on the room air temperature and the temperature set-point on the LCD. When the system calls for heating, there will be a delay of approximately two minutes. During this delay, the hour glass icon will be displayed on the LCD. In auto fan, the compressor will turn ON first followed by the fan in approximately 15 seconds.
- In HP mode, there are four fan selections: LOW / MED / HIGH / AUTO.

- LOW / MED / HIGH: The fan operates continuously at the selected speed. The compressor only cycles ON and OFF.
- AUTO: When auto fan is selected, the fan speed will vary depending on the difference between the temperature set-point and the room temperature. In auto fan mode, the compressor and the fan will both cycle ON and OFF. The compressor shuts OFF first followed by the fan in approximately 15 seconds.

FAN — FAN ONLY MODE

- In FAN mode, there are (4) fan speed selections:
 - LOW / MED / HIGH: The fan operates continuously at LOW / MED / HIGH speed.
 - AUTO: The fan will be OFF.

NOTE FROM NEWMAR

The HIGH / MED / LOW / AUTO fan settings on the 10.1" Central Monitor Capacitive Touch Panel only control the fan on the air conditioner/heat pump unit(s). Each Oasis heating convector has its own fan and is only ON or OFF; there is no speed adjustment on convector fans. Convector fans are automatically controlled through the Oasis zone control board. However, there may be additional switches in the bathroom and/or front dash area, enabling the user to manually turn off the fan when not desired.

FURNACE — FURNACE OR AQUA (HYDRONIC) HEATING MODE

- In the FURN / AQUA mode, the system will cycle the RV's furnace/aqua ON and OFF based on the room air temperature and the temperature set-point on the LCD.
- In FURNACE mode, there are (4) fan speed selections:
 - LOW / MED / HIGH. The fan operates continuously at LOW / MED / HIGH speed.
 - AUTO: The fan is OFF.


AUTO — AUTO CHANGE OVER MODE

- In the AUTO mode, the system will automatically change the mode of operation from cool to heat or from heat to cool. In order for this mode to operate, the zone being programmed must contain either a heat pump, heat strip, or furnace heating source. When in the AUTO mode, all preprogrammed operations for the heat pump, heat strip, and furnace will apply.
- Auto Change Over Cooling: If the room temperature rises above the temperature set-point by 2 °F / °C, the air conditioner will turn ON until the room temperature reaches the temperature set-point at which time the air conditioner will cycle OFF.
- Auto Change Over Heating: If the room temperature goes below the temperature set-point by 2 °F / °C, the available heat source will be cycled ON until the room temperature reaches the temperature set point at which time it will cycle OFF.
- If more than one heat source is available on this zone, the priority for selecting the heat source will be heat pump (first), and furnace (second).

AUTO FAN — ALL MODES

- When "AUTO" fan is selected, the fan speed will vary depending on the difference between the temperature set-point and the room temperature. In "AUTO" fan, the compressor and fan will both cycle ON and OFF.
- When the difference is:
 - 8 °F / °C or more, the fan operates on HIGH.
 - 5 to 7 °F / °C, the fan operates on MED.
 - 4 °F / °C or less, the fan operates on LOW.

This page is intentionally blank.

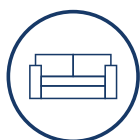

INTERIOR

This chapter provides detailed information about the furniture, cabinetry, flooring, fabrics, window coverings, and all of the interior accessories and finishing touches that turn your coach into a home.

⚠ IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the manufacturer's complete documentation. Refer to Newgle for more information about interior components offered for your coach's model year.



Beds and Mattresses

InnoMax Comfort Craft 2.0 Digital Air Mattress Operation (Model: Vista)

This article provides basic operation instructions for an InnoMax Comfort Craft 2.0 Digital Air Mattress (Model: Vista).

Wireless Digital Comfort Controls

Remote controls feature four functions - inflate (firm), deflate (soft), select side (left/right) & memory.

NOTE FROM NEWMAR


The remote allows the user to select the left or right side of bed and adjust the firmness setting using the up and down arrows: the higher the number, the firmer the support. The user is also able to program their favorite firmness setting number into memory.

⚠ IMPORTANT

Only one control operates at a time.

Source(s): Digital Air Sleep System Assembly Instructions

Product(s): Innomax Vista 8" Digital Air Bed Mattress (Model: Vista, Newmar Part Numbers: 166269, 166268, 166273, 166274)

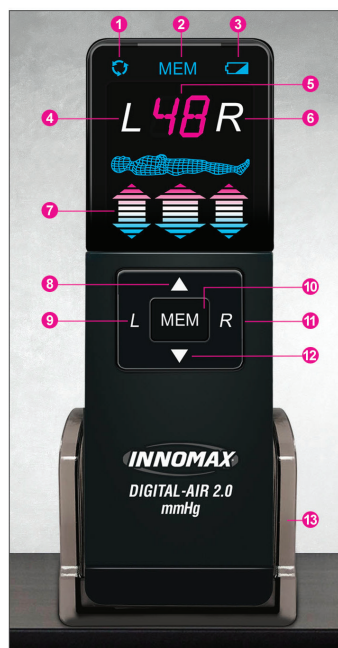

1	Smart Support
2	Activating Memory
3	Low Battery Capacity
4	Left Side
5	Support Level Index
6	Right Side
7	Real Time Illuminated Adjustment Mode
8	Inflation (Firm)
9	Select Left Side
10	Memory
11	Select Right Side
12	Deflation (Soft)
13	2 Sleek, Transparent Black Control Stands Included

HappiJac Electric Lift Bunk Bed Operation

This article provides an overview of the HappiJac (by Lippert Components) Electric Lift Bunk Bed installed in some coaches equipped with a garage (option # _K063 or _K065). Some floorplans provide an extra bedroom or living space in the garage area thanks to optional single or double electric lift bunk beds.

Happijac Power Bed Lift Operation

The HappiJac® Bed Lift System is a chain-driven two-trolley lift system operated by a 12V DC motor. It can accommodate one or two beds, or an alternate of a bed and a dinette/sofa configuration.

⚠ WARNING

The rear cargo area bunk beds are designed for temporary use and should not be occupied while in transit. They should also not be occupied while any vehicles are stored in the cargo bay area.

The HappiJac Power Bed Lift effectively maximizes existing vertical space, providing room for additional storage or sleeping/sitting area.



USING THE CONTROL SWITCH

Note: Upper and lower trolleys move together, unless one trolley set has been locked into place.

The upper and lower trolleys are operated from the control switch. Pressing and holding the switch in the UP position moves the trolleys upward. Pressing and holding the switch in the DOWN position moves the trolleys downward.

⚠ CAUTION

The upper trolleys can drift down if not properly secured. Make sure that the securing pins are in place after adjusting the upper trolleys.



The upper trolleys are only used to support a bed platform. Bed platform rails are secured to the tab brackets and the bed platform rests on the platform rails.

Limit switches are used to stop the bed(s) at their maximum travel range. However, the bed(s) can be stopped and used at any desired height. Once the control switch is released, the brake sets securing the bed(s) in that position.



⚠ CAUTION

Beds need to be parked in the UP position while unit is in tow.

STOWING THE UPPER TROLLEY/TOP BUNK (IF EQUIPPED)

The HappiJac Bed Lift system has a stow feature for the upper trolley, where the upper limit switches stop the upper trolleys in the uppermost position to provide maximum space underneath the bed platform attached to the upper trolleys.

NOTE: Lower trolleys can still move up and down when the upper trolleys are in the stowed position.

TO STOW

1. Press the UP switch to run the upper trolleys until they are stopped by the upper limit switches.
2. Insert all four locking pins through the C-channel rails.
3. Lower bottom bunk to desired operational height.

TO UN-STOW

1. Retract the beds up to the up and retracted position.
2. Remove all four locking pins from the C-channel rails.
3. Lower both platforms until the top bunk rests on the bunk stops, and the lower platform continues to extend and lower to the desired operational height.

SOFA OR DINETTE CONFIGURATION

The lift system can be configured to accommodate a bed on the upper trolley and a sofa or dinette on the lower trolleys. The sofa or dinette will need extra brackets that will lock into the lower trolleys.

Note: Bracket shown without sofa or dinette attached. Consult the manufacturer's instructions for bracket installation on sofa or dinette units.

LOWERING THE ARM

1. Remove the lockpins securing both bracket arms.
2. Pull up slightly on the bracket arm (sofa or dinette seat base), then pull out.
3. Gently lower the arm (sofa or dinette seat base).

LOWER TROLLEY STOP LOCK

Each of the lower trolleys has a stop lock to keep the lower trolleys from traveling upwards. To engage the stop lock, flip the long end of stop lock lever towards the inside of the C-channel rail. This lever will now catch on the bottom edge of the stop blocks in the C-channel rail, stopping the upward progress.

To disengage: pull the short end of the stop lock lever down to flip the long end out of the C-channel rail.

Maintenance

The bed lift system requires very little maintenance. The chains are pre-lubricated and nickel-plated to prevent corrosion. All bearings are sealed and all parts are either plated or finished with a durable powder-coat finish.

The only required maintenance involves keeping the mechanism clean and free of debris. When cleaning [the RV] after use, inspect the vertical trolley channels for dirt or debris and clean as necessary. After cleaning, a light application of silicone spray on the inner sides of the trolley channels will improve performance and reduce noise and amperage draw.

Source(s): HappiJac [by Lippert Components] Bed Lift Owner's Manual (Rev: 0710.19)

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

Safety Precautions

Coaches equipped with bunk beds may have labels adhered to a surrounding area to provide special instructions or weight capacities. Acknowledge and follow all warning labels to prevent any damage to equipment or personal injury. The following labels are examples only. Actual instructions and weight restrictions may vary.



Cabinetry and Woodwork

Cabinetry and Woodwork Care and Maintenance

Newmar's exquisitely crafted cabinetry newly gleams with chrome-finished hardware, the perfect complement to the array of appliances that make cooking and clean-up a breeze. Amish craftsmanship and elegance in design meld the wood cabinetry and furniture seamlessly with the Newmar interior. All Newmar cabinetry is custom built in our facility and designed with function and convenience in mind, as well as to provide as much storage as possible in your coach.

Construction

All joints on Newmar hardwood cabinets are glued, and then screwed together for extra durability. Hardwood raised panel cabinet doors are standard throughout the coach. Depending on your coach model, you may have hardwood cabinets or vinyl veneer finished cabinets. A variety of vinyl veneer and stain finishes are available for the cabinetry. A hand-sanded finish helps minimize seams so your hardwood cabinetry is as beautiful as it is durable. Metal drawer guides provide a smooth opening and closing of the drawers in your coach. To open a drawer, lift up slightly and pull open. This features helps prevent the drawers from opening during transit. Your unit may also include features such as adjustable pull out pantry boxes in the kitchen, soft-close drawers, or a molded silverware divider tray for added storage.

⚠ WARNING

On coaches equipped with a flip-down bunk or bunk bed lifts, NEVER operate the bed(s) with person(s) or object(s) on the bed platform or travel with any object(s) other than bedding on the beds.

⚠ CAUTION

Ensure that the areas above, below and adjacent to the bed(s) are free from obstructions before operating the bed(s). Properly secure loads in the bed area to avoid damage to the bed mechanism from shifting or falling loads.

⚠ IMPORTANT

Raise the bed(s) to the FULL UP position when the trailer is being towed TO AVOID DAMAGE TO THE BED(s) as a result of bouncing.

Humidity and Climate Change

Controlling the coach environment is the first priority of cabinet care and maintenance. Wood products shrink and grow according to the environment in which they are placed. These changes are in direct relationship to the relative humidity levels. As the humidity increases, the wood expands, and as the humidity decreases, the wood shrinks. This process does not happen instantaneously the longer the wood is exposed to low humidity, the more it will shrink as it dries out, and visa versa.

Coach owners who travel around the country may be more prone to this issue, as their coach is exposed to both extreme humidity and extreme dryness. It is necessary to acknowledge the fact that wood changes according its environment. Newmar recommends maintaining relative humidity levels between the range of 35-50 percent and temperature levels between the range of 40-90 degrees. The air conditioner or a dehumidifier will reduce the humidity level; however in dry climates, a humidifier may also aid in maintaining the appropriate humidity levels by raising the humidity level.

The following labels are examples of the notices that may be posted in the coach in regards to condensation prevention and formaldehyde exposure.

NOTICE

This vehicle is TSCA TITLE VI COMPLIANT and contains composite wood products that comply with the applicable California Code of Regulations Section 93120.2(a) Phase 2 (P2) formaldehyde emission standards specified on the above date of manufacture.

NI-151

NOTICE

This vehicle is TSCA TITLE VI COMPLIANT (conforme au titre VI de la TSCA) and contains composite wood products that comply with the applicable California Code of Regulations Section 93120.2(a) Phase 2 (P2) formaldehyde emission standards specified on the above date of manufacture.

NI-151

NOTICE

This vehicle is designed as a Recreational Vehicle. When used for an extended period of time, while furnace heating is required, sweating and condensation conditions may occur. The following precautions should be taken to minimize these conditions:

- (1) Use range hood when cooking.
- (2) Use the bathroom power vent when bathing or showering.
- (3) Open windows slightly for ventilation whenever possible.
- (4) Use dehumidifier to keep humidity as low as possible.

NI-13

IMPORTANT NOTICE

Certain of our forest product suppliers have advised that urea-formaldehyde resin is used in the production of particleboard, laminated plywood or particleboard which they supply us and which we utilize in our finish product. These suppliers have requested that we communicate this to our customers.

For your information, we are respectfully submitting statements which have been provided to us by our suppliers:

WARNING: THIS PRODUCT CONTAINS A UREA-FORMALDEHYDE RESIN AND MAY RELEASE FORMALDEHYDE VAPORS IN LOW CONCENTRATIONS. FORMALDEHYDE VAPOR MAY IRRITATE THE EYES AND UPPER RESPIRATORY SYSTEM OF ESPECIALLY SUSCEPTIBLE PERSONS SUCH AS THOSE WITH ALLERGIES OR RESPIRATORY ALLEGIES. PROPER VENTILATION SHOULD REDUCE THE RISK OF SUCH PROBLEMS. IF SYMPTOMS DEVELOP, CONSULT YOUR PHYSICIAN.

WARNING: URETHANE: THIS PRODUCT CONTAINS A UREA-FORMALDEHYDE RESIN AND MAY RELEASE FORMALDEHYDE VAPORS IN LOW CONCENTRATIONS. FORMALDEHYDE VAPOR MAY IRRITATE THE EYES AND UPPER RESPIRATORY SYSTEM OF ESPECIALLY SUSCEPTIBLE PERSONS SUCH AS THOSE WITH ALLERGIES OR RESPIRATORY ALLEGIES. PROPER VENTILATION SHOULD REDUCE THE RISK OF SUCH PROBLEMS. IF SYMPTOMS DEVELOP, CONSULT YOUR PHYSICIAN.

WARNING: THIS PRODUCT CONTAINS A UREA-FORMALDEHYDE RESIN AND MAY RELEASE FORMALDEHYDE VAPORS IN LOW CONCENTRATIONS. FORMALDEHYDE VAPOR MAY IRRITATE THE EYES AND UPPER RESPIRATORY SYSTEM OF ESPECIALLY SUSCEPTIBLE PERSONS SUCH AS THOSE WITH ALLERGIES OR RESPIRATORY ALLEGIES. PROPER VENTILATION SHOULD REDUCE THE RISK OF SUCH PROBLEMS. IF SYMPTOMS DEVELOP, CONSULT YOUR PHYSICIAN.

Robert Wood Johnson Corp.

Notification is important in maintaining a comfortable environment and we direct your attention to the discussion of ventilation contained in your Owner's Manual.

Care and Maintenance

The cabinetry should be wiped down with furniture polish to sustain the natural beauty and luster of the wood.

⚠️ NOTICE

Hardwoods may change color or darken when exposed to sunlight. It is important that the window shades be down during long periods of storage. Changing shades of color, or discoloration, from exposure to sunlight is not a warrantable repair, as it is the nature of the hardwood products in your coach.

⚠️ IMPORTANT

As with any wood product, do not saturate these cabinets with water or any other liquid. Be sure to wipe up spills as they occur to avoid staining.

Kitchen Cabinet Extension, Peninsulas, and Islands Overview

This article provides basic information about kitchen extensions, peninsulas, and islands.

Pull-Out Cabinet Extensions

The cabinet "extension" is incorporated directly into the kitchen cabinetry, and glides out on drawer guides to provide additional counter space when needed.



Pull-Out Cabinet Extensions Example

COACHES BUILT IN OR AFTER 2017

Most 2017 and newer coaches are equipped with a counter extension and an electric latch release. To extend the counter:

1. Turn on the coach battery disconnect.
2. Extend the slideout.
3. Press the button right above the pull-out island (between the counter extension and the main countertop) to release the island extension.
4. Pull out on the extension until the magnetic catches engage.

To retract the counter, push in the extension until it latches.

COACHES BUILT PRIOR TO 2017

On older coaches, unlock the extension by accessing the lever located in the top drawer.

⚠️ CAUTION

All pull-out cabinets must be secured prior to transit, as damage to the cabinetry and/or interior of the coach, or physical injury, may occur.

Stationary Peninsulas

The stationary peninsula provides additional storage and countertop space. The kitchen slideout extends and retracts around the peninsula while it stays in place.



Stationary Peninsula Examples

⚠️ IMPORTANT

Make sure the countertop is clear of obstructions or debris in the path of the slideout before extending or retracting the slideout. Do not allow any objects to fall between the peninsula and the slideout, as they may cause damage.

Stationary Islands

The island provides additional storage and countertop space. The stationary island may house the central vacuum system, as well as crucial plumbing and electrical fixtures.

IMPORTANT

Make sure the areas around the island are clear of obstructions or debris and all cabinet doors are securely closed before retracting the slideouts.



Stationary Island Example



Ceiling and Walls

Ceiling and Walls Care and Maintenance

The ceiling in your coach may be covered with a padded vinyl ceiling headliner and should be cleaned periodically to maintain a new appearance. Use a non-abrasive cleaner with a soft cloth. Do not use solvents of any kind, as they may damage the surface.

The decorative wall coverings can easily be maintained and are not much different from wallpaper and should be cleaned with a solution of mild soap and water or a non-abrasive cleaner with a soft cloth.

CAUTION

For stubborn spots, test any cleaner on a area that is hidden, as some cleaners may fade or discolor the wall covering. Do not use solvents of any kind, as they may damage the surface.



Countertops and Backsplashes

Solid Surface Countertop and Backsplash Care and Maintenance

This article provides proper care and maintenance instructions for solid surface countertops and backsplashes. No special cleaning products are necessary; however, the countertops and backsplashes can be damaged if they are not cared for properly.

Cleaning

The solid surface composite countertops are non-porous, so most dirt and liquids sit on the surface and can easily be cleaned with a soap or mild detergent.

Wipe up spills as soon as they occur. Film can also build up on the countertop if water is left to dry, making it appear blotchy and uneven. Always wipe the countertop completely dry with a soft cloth after spills and cleaning.

Spray the surfaces with a hard-surface cleaner, and leave it for a few minutes before wiping clean with a damp cloth. Strong chemicals and solvents may damage the surface and should be wiped up immediately, then rinsed with water.

IMPORTANT

Avoid using window cleaners that may leave a waxy build-up that dulls the surface.

Avoiding Damage

HEAT

The solid surface countertops can be damaged with excessive heat or the use of harsh chemicals. Never put hot pans directly on the counter or in the sink. Avoid pouring hot liquids directly into a solid surface sink; run cold water while pouring hot liquid into the sink to avoid damage. If possible, allow the pan or pot to cool first.

Use caution when using heated appliances, such as crock-pots, electric frying pans, toaster ovens, etc. When possible, never use these appliances directly on the countertop.

⚠ IMPORTANT

Always use a heat pad or trivet to protect the surface from heat that may mar or damage the surface.

CHEMICAL SPILLS

Strong acids and cleaners may discolor the surfaces and should be wiped up immediately and cleaned with soapy water to prevent damage to the surface. Prolonged exposure may require professional repair or replacement.

SCRATCHES

Try not to cut or chop food directly on the countertop, as you can score and scratch it. Slight abrasion marks may occur during normal daily use; cleaning regularly will ensure the durability and longevity of the countertops. Darker and heavily pigmented colors may show wear and tear more readily, and may require additional or more frequent maintenance.

Some deep scratches can be sanded out, and defects in solid surface countertops can be repaired, by trained professionals.

⚠ IMPORTANT

Always use a cutting board when cutting or chopping. Never cut or chop food directly on the countertop.

Countertop Extension Operation

This article provides an operational overview of the countertop extension.

To Raise The Countertop Extension Leaf:

- Lift up on the extension.
- Pull down on the support bracket to latch each support.

To Lower and Store The Countertop Extension Leaf:

- Lift up on the extension to take the pressure off of the support brackets.
- Fold the support brackets.
- Lower the extension until it is completely folded down.



Fabrics and Materials

Dash Material Maintenance

This article provides suggested maintenance instructions for the dash material. In order to keep the dash in like-new condition, follow these guidelines:

Do–

- Dust and clean the dash with a soft, damp cloth, or chamois, wiping the surface gently.
- Use a mild detergent and lukewarm water.
- Dry the surface, after washing and rinsing, by blotting with a damp cloth or chamois.

Do Not–

- Use harsh chemicals that may damage the dash.
- Use cloths containing grit or abrasive particles or kitchen scouring compounds to clean or dust the dash.
- Subject the dash to hard, direct blows.
- Use boiling water or strong solvents to clean the dash, as they will soften the plastic.

Fabrics and Materials Care and Maintenance

This article provides care and maintenance recommendations for the fabrics and materials installed in a Newmar coach.

IMPORTANT

The fading of upholstery, carpet and other interior fabrics can be caused by excessive sunlight. The drapes, blinds, or shades should be kept closed if the coach will be parked for an extended period of time to minimize fading. Normal deterioration due to wear and/or exposure to sunlight is not covered by the Newmar Limited Warranty.

The fabrics used in your coach may contain fire-retardant additives that may be damaged by use of improper cleaning products. Cleaning instructions for these items are DRY CLEAN ONLY. Water-based products are not recommended for cleaning the fabrics in your new unit. Most water-based household cleaning products are not formulated for use on these fabrics and may cause excessive shrinkage or fading. For best results, the fabrics in this unit should be cleaned by a professional carpet and upholstery cleaner.

Spills, spots, or stains should be treated as soon as possible to avoid permanent damage. If a spill occurs, blot the fluid with a dry towel. Do not rub the spill. Rubbing may cause the liquid to “set” in the fabric. When attempting to clean a spot or stain, always start from the outside and work inward to avoid spreading it further.

IMPORTANT

Some stains or soils are extremely difficult or impossible to be removed completely. These should receive immediate, professional attention. Spills, spots, stains or soils are the responsibility of the owner, and are not covered by the Newmar Limited Warranty.

WARNING

When cleaning the upholstery and fabric in the unit, do not use lacquer thinner, nail polish remover, laundry soaps, or bleach. Never use carbon tetrachloride or gasoline for cleaning purposes. These items may cause damage to the materials being cleaned, and most are highly flammable.



Flooring

Carpet Care and Maintenance

This article provides care and maintenance recommendations for carpet. The installed carpeting is made of synthetic materials, mostly nylon fiber and is easy to maintain.

Vacuum regularly to remove dirt, dust, lint, and other abrasive grit. Water-based spills and spots should be soaked up and removed immediately with a damp cloth. Grease or oil based stains and spots should be spot cleaned with a commercial spot cleaner intended for this purpose.

When complete shampooing is desired or necessary, it is best to have it done by a professional carpet cleaner. Wait for the carpeting to dry thoroughly before walking on it.

IMPORTANT

Do not soak or water-log your carpeting.

IMPORTANT

In carpet areas that receive the most sunlight, close the curtains, blinds, or shades to prevent fading.

IMPORTANT

Act quickly to clean up when anything is spilled or dropped on the carpet.

IMPORTANT

Slideout rollers may leave indentations in the flooring. This condition is normal and does NOT warrant flooring replacement.

Vinyl Flooring Care and Maintenance

This article provides care and maintenance recommendations for vinyl flooring, which is placed with the highest level of care.

For routine cleaning, sweep or vacuum regularly. Then, use a damp mop with warm water to clean a small area at a time. Rinse the mop frequently as to not redistribute the picked up dirt. If washing is needed, use a product designed for no-wax flooring.

IMPORTANT

Do not use solvent-based waxes or polishes, as damage to the flooring may result.

⚠ IMPORTANT

Slideout rollers may leave indentations in the flooring. This condition is normal and does NOT warrant flooring replacement.



Interior Doors and Hardware

Interior Doors and Hardware Overview

The interior doors add to the beauty and privacy of your coach. Newmar installs a variety of functional doors from the basic hinged-swinging door, recessed hardwood pocket doors, and even pivoting doors on select floorplans. Each interior door is designed to fit and function for trouble-free operation.

⚠ IMPORTANT

Always secure all interior doors prior to travel to prevent damage to the doors and any surrounding objects.



Interior Furnishings

Interior Furnishings Overview

Interior furnishings such as clocks, artwork, and other decorations help make your coach feel like home. Other furnishings may be installed to provide the essentials and the amenities for your convenience while traveling.

Pictures, Clocks, or Wall Art

Most pictures and wall art installed at the factory have a hanger at the top and Velcro at or near the bottom. There may also be Velcro on the sides. To remove the picture or wall art, pull the Velcro loose at the bottom and sides, and then remove it from the hanging device. Some decorations without a frame may have exposed screws that may be difficult to find. For this type of decor, locate the screws, and remove them.



Furniture Overview

Covered in coordinating fabrics and accented with pillows, a variety of furniture is available in your coach depending on coach model and floorplan as well as the options that were ordered. Options may include recliners, theater seating, sofa beds, dinettes, and booths. Your furniture is designed with function and style in mind. Many of the furniture pieces are multifunctional and may recline, turn into sleeping areas, open to access hidden storage areas, etc. Any furniture that has seatbelts installed from the factory have been tested and are intended only to be used in the seating position when the slideouts are in the retracted position for travel.

⚠ WARNING

Do not attempt to use recliners, theater seating or any furniture that opens or reclines and changes from the basic seating position unless the coach is in the set-up position (i.e., parked and with the slides open). Otherwise, occupants may become injured, and furniture and surrounding items may become damaged.

Driver and Passenger Seat Overview

This article provides an overview of driver and passenger chairs installed on a Newmar coach.

IMPORTANT

This article is intended to provide a basic overview of the driver and passenger seats and is NOT all-inclusive of available features on any one particular seat. Chair manufacturers, styles, and features vary by coach. Seat features may be controlled via rocker or joystick-style switches, levers, knobs, or buttons. For additional information about driver and passenger seat operation, refer to Newgle.

The fabric and color of the chairs is based upon the décor package selected at the time of production. The driver and passenger seats may be standard or wide-width and are covered in vinyl or leather. Some coach models feature branded seats with the logo of the coach model. Other variations may include notched arms and/or skirt panels. The seats have a three-point seat belt, which may be integrated into the seat. Some seats may also be operated via a remote control with additional features.

Standard and Optional Features of Driver and Passenger Chairs

ADJUSTABLE BASE

Chairs may have a powered or manual adjustable base. Powered driver and passenger front seats are mounted on power pedestals that offer a wide range of adjustments. A joystick-style switch typically moves the seat horizontally and vertically, a rocker switch tilts the front of the seat up and down, and another switch often controls the tilt of the rear of the seat base. Additional switches or knobs, depending on the coach year and model, control the recline angle of the seat back.

SWIVEL

When the coach is not in motion, some seats may have the option to swivel (turn around) to face the living room of the coach via a release lever on the pedestal. Before turning the chairs, follow this procedure:

- First extend the slideout room.
- Tilt the steering wheel up and toward the dash.
- Position the armrest to provide maximum clearance.
- Straighten the seat back.
- Move the seat forward or backward to provide enough clearance for the steering wheel. Additional adjustments may be necessary during this process.

Once these steps are completed, the chairs will swivel without interference.



ADJUSTABLE LUMBAR SUPPORT

Some driver and passenger seats may be equipped with a lumbar support in the lower back region of the seat. The power lumbar control switch is located on the side of the seat and can be used to adjust the lumbar portion of the seat. This setting determines the amount of pressure applied to the user's lower back.

FOOT REST

Some driver and passenger seats feature a manual or power foot rest. If equipped, powered foot rests may be extended or retracted via a control switch located on the seat.

ADJUSTABLE ARMS

Some driver and passenger seats have adjustable arms that can be raised or lowered based on the user's preference. These can often be adjusted via a lever located on the armrest. Some arm rests automatically move when adjustments are made to the angle of the seat back.

HEATED SEATS

Some seats may feature heat, which can be controlled via remote control (if equipped) or a switch located on the base of the seat. This switch is often red in color and/or has a graphic with upward moving "heat rays." Seats equipped with a remote control have adjustable heat settings.

COOLED SEATS

Seats may have adjustable cooling settings via a control switch located on the seat base or remote control.

SEAT MEMORY

Select coaches may be equipped with a memory package that allows you to set and store up different combinations of seat, steering wheel, pedal, and exterior rear view mirror positions for up to three drivers. For more information about the driver control memory system, refer to Newgle.

MASSAGE

Seats equipped with a remote control may have various massage modes and intensity settings.

HAPTIC FEEDBACK

This feature is used on coaches with a Mobileye lane departure warning system. The seat will vibrate to notify the driver if the coach leaves the intended lane.

Troubleshooting

If you experience issues with your power seats, please refer to the Fuse Panel portion of Newgle. Select your coach year, model, and floorplan to view the appropriate fuse location diagrams. These will often prove to be helpful when locating your fuse panels, positions, and ratings.

Passenger Seat Tablet Holder Overview

This article provides basic operation instructions for a removable holder for easy access to a tablet, smartphone, or other electronic device.

To use the holder, place the stem into the hole located on the top side of the passenger seat arm rest. Once mounted, adjust the size by moving the arms, legs, and feet of the holder to fit the size of the desired device.



Interior Steps and Step Covers

Stepwell Storage Overview

This article provides an overview of the stepwell storage provided on some coaches. Select coaches are equipped with step treads that can be lifted for additional storage.

⚠ CAUTION

Make sure all stored contents fit entirely inside of the step box. Raised step treads or loose items in the stepwell can create a trip or fall hazard.



Shades and Window Coverings

AutoMotion Shade Operation via 16-Channel Remote

This article provides basic operation instructions for an AutoMotion Shade via a 16-Channel Remote.

This multi-channel remote transmitter was developed to control a multiple number of shades and/or groups and it has the following features:

- 16-channel remote transmitter that can control up to up to 16 shades individually
- Each channel button has a small indicator light that comes on when the button is being pushed.
- Has a separate up, down and stop button for easy and accurate control of shades. To select the shade or shades you want to operate, use the channel buttons on the left. The selected shade name will then appear on the digital display when the appropriate channel is being pushed.
- The LCD automatically shuts off after 5 seconds to conserve the battery.
- Separate, easily accessible battery compartment at the back of the unit contains three AAA batteries.



Source(s): AMS RF Remote Transmitters (2nd Generation) User Guide

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.

Power Windshield Shade Operation

This article provides basic operation instructions for a Power Windshield Shade.

⚠ NOTICE

This information is generic in nature and may not be specific to your exact coach model and/or year.

⚠ IMPORTANT

Do not manually pull down on the power shades, as damage may result.

1. With the ignition on, press and hold the switch in the down direction to extend the drape to the ignition stop set limit, which is approximately half-way. This is to allow the driver to see out the window.
2. With the ignition off, press and hold the switch in the down position to extend the drape until it reaches the “down” stop set limit.
3. With the ignition on or off, press and hold the switch in the up position to retract the drape until it reaches the “up” stop set limit.
4. Release the switch during travel to stop the drape extension or retraction between the “up” and “down” stop set limits.

Visor/Shade (Day Shade)


The Visor switch is located on the dash and adjusts the windshield screen up or down. When the ignition switch is turned on it limits the visor travel to approximately 1/2 way down and with the key off it travels all the way down to the dash. The screen will travel up until it reaches the stop setting.



Front Privacy Drape / Shade (Night Shade)

Press the UP or DOWN button for the appropriate shade. Switches may be labeled “Front Privacy Drape” or “Shade.” Switch-operated shades require the switch to be held until the shade either reaches its limit or the desired intermediate position (the shade can be stopped at any point by simply releasing the switch).

The switch labeled “Front Privacy Drape” or “Shade” is located in the overhead cabinet or on the dash and adjusts the windshield shade up or down.

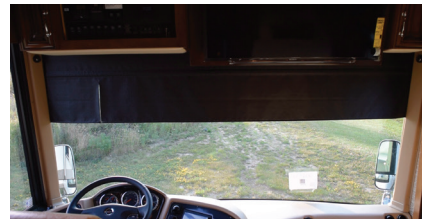

Manual Day and Night Shade Operation

This article provides basic operation instructions for the manual day and night shades.

Day Shades

The first section visible when closing the shade is the “DAY” section. This material is translucent. Sunlight passes easily through the material into the unit while allowing a degree of privacy.



TO LOWER THE DAY SHADE:

- Grasp the shade near the center, and gently pull it down to the desired position.
- Release it slowly and gently to maintain the desired position.

TO RAISE THE DAY SHADE:

- Quickly pull down the shade and gently release it, allowing it to retract. If necessary, hold on to the bottom to control the speed of the retraction.

Night Shades

The second visible section is the “NIGHT” section. This material is a heavier, more opaque material. Very little to no light passes through it, so these shades are generally used in the evening or when more privacy is desired, though under certain light conditions, it can cast shadows and silhouettes.

TO LOWER THE NIGHT SHADE:

- Grasp the shade near the center, and gently pull it down to the desired position.
- Release it slowly and gently to maintain the desired position.

TO RAISE THE NIGHT SHADE:

- Quickly pull down the shade and gently release it, allowing it to retract. If necessary, hold on to the bottom to control the speed of the retraction.



PLUMBING

This chapter provides detailed information about the coach's fresh and waste water system and all of the related components: faucets and fixtures, filters, sinks and showers, toilets, and much more.

⚠ IMPORTANT

Any of the following quick start instructions provided by Newmar should not take the place of the manufacturer's complete documentation. Refer to Newgle for more information about plumbing components offered for your coach's model year. Failure to connect and operate the system correctly may result in damage not covered by the Newmar Limited Warranty.

Plumbing Overview

About The Fresh Water System

The Fresh Water System consists of the fresh water holding tank, water pump, valves, connection hoses, and fresh water plumbing lines. This system is responsible for providing potable water for drinking, cooking, bathing, and all other activities that require clean water.

The fresh water system begins with a hose or hose reel, which provides the connection to the fresh potable water. Then, via the fresh water valve, the water is diverted through the coach to be distributed through the cold water plumbing lines to the fresh water holding tank or to the cold water connections of each faucet and the water heater. From the water heater, the water is then dispersed through a series of water lines to each faucet on the hot water inlet and the hot water spigots (if equipped).

About The Waste Water System

There are two separate waste systems: the gray tank system and the black tank system, which includes sinks, lavatories, showers, tubs, and toilets. Each tank has its own control valve, and both tanks drain through the sewer drain hose. The waste water system catches and contains the used water and divert the waste water through the traps and drain lines to the grey or black holding tank(s). It is then stored until the tanks are emptied using a sanitary drain or dump station.

⚠ CAUTION

Read and understand all operating instructions for the plumbing system prior to using your coach. Failure to connect and operate the system correctly may result in damage not covered by the Newmar Limited Warranty.

2024 Canyon Star Water Compartment Overview

This article provides a general breakdown of the components installed in a 2024 Canyon Star water compartment.

Overview

The water compartment in the coach typically contains the tanks and most of the controls for the plumbing system. It is usually located on the driver side of the coach immediately in front of the rear wheels, as it is isolated from other compartments and is heated and insulated. The water compartment contains parts of both the fresh and waste water systems.

⚠ IMPORTANT


Some plumbing components may be located in other compartment(s) and may not be mentioned in this article or labeled in the graphic.

WATER PRESSURE REQUIREMENTS

Ease of operation was the key element in the design of the water compartment and plumbing systems. The fresh water system in your coach is designed to operate at a maximum of 60 PSI. Water pressure levels above this level can damage the fresh water plumbing. If the water pressure ever surpasses 60 PSI, a pressure regulator must be installed to reduce the incoming pressure, or fill the fresh water tank and use the internal water pump to supply water to your coach.

Example Of A 2024 Canyon Star Water Compartment

The following information is generic for the 2024 Canyon Star. Components installed may vary by floorplan or optional equipment.

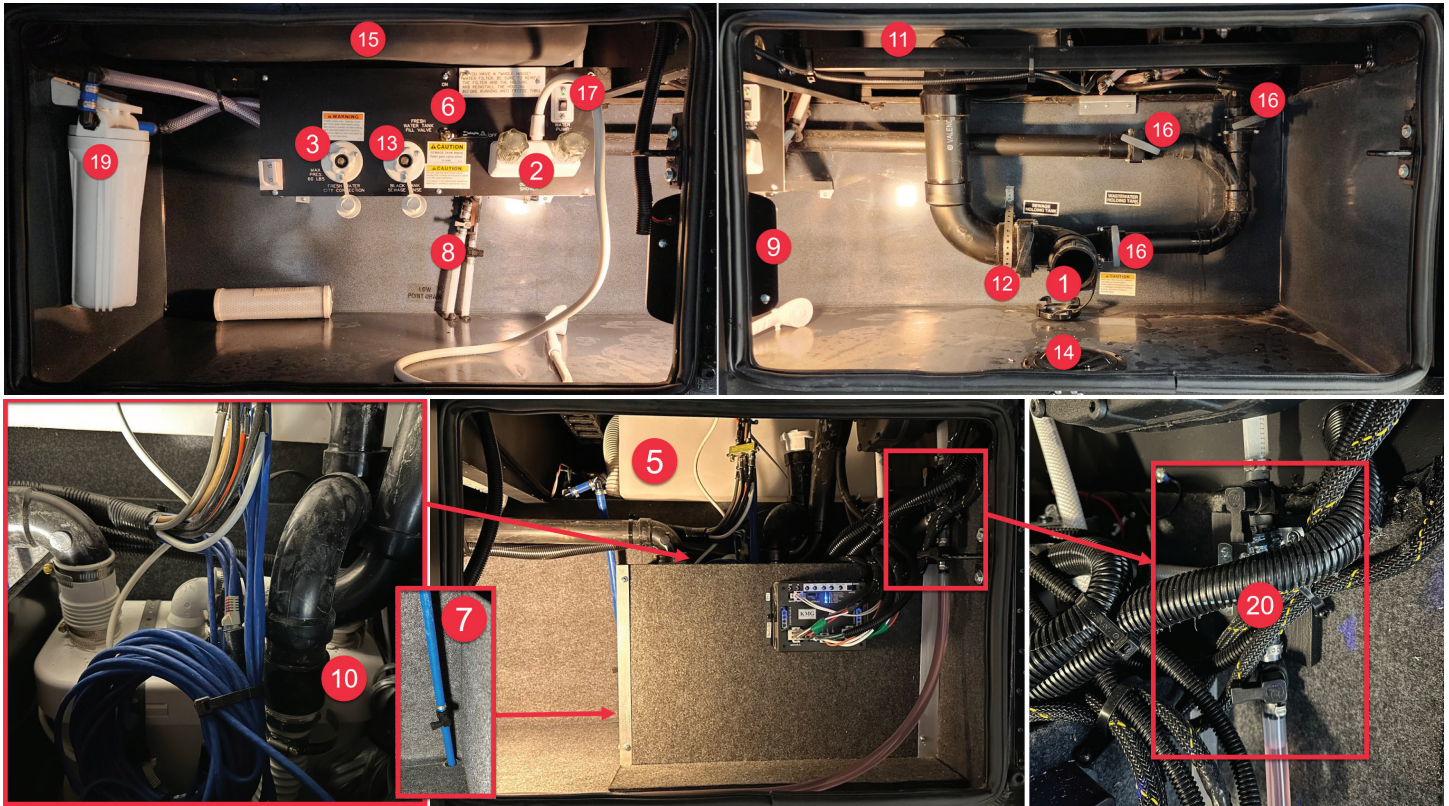

Component Definitions

	Component(s)	Summary of Function or Operation
1	Drain Outlet and Cover	The drain outlet is used to attach a 4" sewer hose, and the drain cover is used to prevent leakage of waste material. Make sure the drain cover is securely installed on the drain outlet unless actively dumping the tanks via a 4" sewer hose.
2	Exterior Shower	An exterior shower faucet with a wand can be used to rinse off shoes and/or feet, bathe a pet, wash your hands, or rinse off the sewer hose after dumping the waste water tanks. When finished using the exterior shower, shut off both the hot and cold valves. Do not simply shut off the valve on the shower head itself, as it may cause hot and cold water to mix at the exterior shower and could allow drastic changes in water temperature throughout the coach.
3	Fresh (City) Water Connection via Hose	This potable water connection is used in conjunction with the Fresh Water Fill Valve for a number of purposes, including pressurizing the plumbing in the coach and filling the fresh water tank. Connect the coach to the water source via a potable hose and the city water connection.
4	Fresh Water Hose Hatch (if equipped)	The hatch provides an opening in the compartment floor to insert the potable water hose to prevent the compartment door from crushing the hose when the door is closed.
5	Fresh Water Tank	This tank is used to hold fresh potable water for use throughout the water system and is usually located on the floor of the water compartment; however, some coach floorplans may be equipped with a water tank located in another compartment. The fresh water tank is filled from the city water connection with a hose or hose reel via the fresh water tank fill valve or auto fill system. This tank may be located behind a panel, cover, or the macerator and may not be visible from the outside.
6	Fresh Water Tank Fill Valve	The rotating fresh water tank fill valve is used to pressurize the fresh water system in your coach, as well as to fill the fresh water tank when the coach is connected to city water. With pressurized water supply connected, simply rotate the valve to the desired position: <ul style="list-style-type: none"> Manual fill position fills the fresh water tank when connected to a pressurized water source Auto fill position supplies pressurized water to the coach on demand from the city water connection and, if the auto fill function is enabled on the coach's tank monitoring system (i.e. Silverleaf, KIB, or Digi-Level), fills the fresh water tank to match the auto fill settings.
7	Fresh Water Tank Low Point Drain	The fresh water tank low point drain is used to empty the fresh water tank. Open the low point drain valve to drain the fresh water tank, and close the low point drain valve when filling the fresh water tank or storing fresh water in the tank. This low point drain is located near the fresh water tank and may be difficult to see from the outside. It is often located just behind the lip of the white drain pan when the fresh water holding tank is located in the main water compartment. When the fresh water holding tank is located outside of the main water compartment, the fresh water tank low point drain is typically near it.
8	Hot and Cold Low Point Drains	Typically the coach has one hot water low point drain and one cold water low point drain, which are used to empty the water lines. Open the valves to relieve water pressure and drain the water lines. Close the valves for normal operation of the pressurized water system.
9	LED Pancake Light	Some lights in the compartment have built-in switches on the light housing to turn the light on and off. Other lights are operated automatically via a plunger switch that activates the lights when the compartment door is opened.

10	Saniflo Lift Station Pump (Not Pictured)	Certain floorplans may use a lift pump in locations where plumbing drains are too low or too far away for gravity drains to effectively reach the waste water holding tanks. The design is a small collection tank with an inlet from the sink or shower with a submersible pump to push the water out of the discharge to the holding tank. The pump starts automatically (if 120 volt power is being supplied) as soon as the bath, shower, or sink begins to drain. It shuts down when the water has been drained. Note: Only select floorplans are equipped with lift station pumps, which may or may not be located in the water compartment.
11	Sewage (Black) Tank	The black tank is generally for sewage waste from the stool. It is typically located between the frame rails in the water compartment. This tank may be located behind a panel or cover and may not be visible from the outside.
12	Sewage (Black) Tank Dump Gate Valve with T-Handle	In conjunction with the sewage holding tank, the sewage tank dump valve provides adequate and safe storage and/or controls the disposal of waste materials. Open the black tank gate valve all the way by pulling on the T-handle. The tank will start to drain to the macerator or drain outlet as soon as the T-handle is pulled. The 4" drain line or macerator hose should be used to direct waste to the dump station for proper disposal.
13	Sewage (Black) Tank Rinse Connection	When draining your sewer tank, attach a water hose to the sewage tank rinse connection. After the tank is drained, leave the gate valve open, and open the water valve to the attached hose, allowing water to spray inside the sewage tank for several minutes to flush and rinse the tank.
14	Sewer Hose Hatch (Access Port)	The sewer hose hatch is a removable cover that allows the sewer hose or the small macerator hose to exit through the compartment floor in order to connect to a proper dump station. This allows the compartment baggage door to close without hindrance from the hose. The cover may be threaded or clipped. Note: When routing the sewer or macerator hose through the hatch, do not place on or near the Oasis, generator, or engine exhaust pipes. Otherwise, damage may occur.
15	Waste (Gray) Water Tank	The gray water holding tank is typically located in the underbelly of the coach, sometimes on top of the fresh water tank. It is primarily used for the drainage from the kitchen and bath sinks, shower, and the washing machine (if equipped). This tank may be located behind a panel or cover and may not be visible from the outside.
16	Waste (Gray) Water Tank Dump Gate Valve with T-Handle	In conjunction with the gray (waste) water holding tank, the gray (waste) tank dump valve provides adequate and safe storage and/or controls the disposal of waste water. Open the gray (waste) gate valve all the way by pulling on the T-handle. The tank will start to drain to the macerator or drain outlet as soon as the T-handle is pulled. The 4" drain line or macerator hose should be used to direct waste to the dump station for proper disposal. Newmar recommends dumping and flushing the gray (waste) water holding tank after the black (sewage) holding tank.
17	Water Pump Switch with LED Indicator	Press the water pump switch momentarily to activate the water pump. The LED illuminates when the pump is activated.
18	Water Pump with Filter (Not Pictured)	When not connected to city water, the coach's water pump is used to pump and pressurize water from the fresh tank for distribution through the hot and cold water lines. When activated, the water pump will automatically turn on and off to maintain proper water pressure in the coach.
19	Whole House Water Filter	The whole house water filter system uses a replaceable extruded carbon filter cartridge to remove sediment and certain impurities from the incoming water supply. This filters the fresh water as it is brought in to the coach from the city water connection through the hose or hose reel.
20	Winterizing and Antifreeze Inlet Valves (A and B)	The winterizing valves are only used during the coach winterization process. To determine proper valve positioning throughout the process, follow the posted instructions in the coach water compartment for the A and B valves. These valves may be located outside of the main water compartment on some coaches.

Additional Resources In Newgle

The above definitions are summaries and only explain the basic function and operation of each component. For additional information about these components and the complete operational instructions, please refer to the following list of additional articles in Newgle.

- Exterior Shower Overview
- Fresh Water Lines and Low Point Drains
- Fresh Water Tank and Drain
- Fresh Water Valves
- Holding Tank Rinse (No Fuss Flush)
- Hose Reel and City Water Connection
- How to Operate the Cargo Lights
- How to Winterize a Coach
- Waste Water Disposal
- Waste Water Holding Tanks
- Water Filter Care and Maintenance
- Water Pump Operation and Basic Troubleshooting

Water Compartment Heating via a Forced-Air Furnace

This article provides an overview of the water compartment heating via a forced-air furnace. Coaches equipped with a forced-air furnace have a designated heat duct for the water compartment in the basement to reduce the risk of freezing.



IMPORTANT

Heat output to the water compartment is only operational when the furnace is heating the interior of the coach.



Fresh Water System

Fresh Water City Connection Overview

This article provides a basic overview of the City Water Connection for coaches not equipped with a hose reel.

Located in the water compartment, the city water connection is made using a potable water hose. In conjunction with the “Fresh Water Tank Fill Valve,” this water source is used for a number of purposes, including pressurizing the plumbing in the coach and filling the fresh water tank. For coaches not equipped with a hose reel, use a water hose manufactured and labeled for potable water to ensure that the hose is drinking water-safe and will not alter the taste of the water.

The fresh water system in the coach is designed to operate at a maximum of 60 PSI. Water pressure levels above this level can damage the fresh water plumbing in the coach. If the water pressure ever surpasses 60 PSI, a pressure regulator must be installed to reduce the incoming pressure, or fill the fresh water tank and use the internal water pump to supply water to the coach.

Before connecting to the coach, use a potable water source to purge any remaining air and stale water in the hose. Then, connect the hose from the potable water source to the coach. Turn on the supply valve at the water source, and open each of the faucets to remove any air pockets in the coach plumbing lines. Once the water flows freely, close the faucet(s).

To disconnect from the city water supply, close the valve from the water supply. Release the pressure by rotating the fresh water valve to the tank fill position. Remove the hose from the city water supply, and store it in the water compartment. Once the pressure is relieved, rotate the fresh water valve to the appropriate operating position.

⚠ WARNING

Potable water only. Sanitize, flush, and drain water tank before using. Failure to maintain tank can result in death or serious injury.




Fresh Water Lines and Low Point Drains Overview

This article provides a basic overview of Fresh Water Lines and Low Point Drains.

Fresh Water Lines

Fresh water lines are used to distribute potable water throughout the coach. The hot water lines are typically red in color or translucent with red lettering. The cold water lines are typically blue in color or translucent with blue or black lettering.

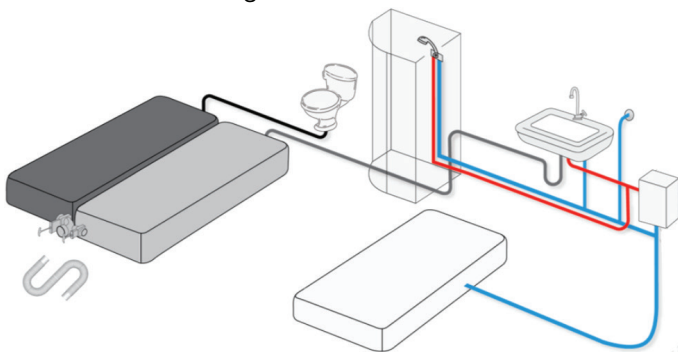


HEATED FRESH WATER LINES

Fresh water lines located beneath the slideout floor are typically heated to prevent freezing (i.e. refrigerator water supply). The water lines are routed in the heated water bay and inside the heated living area as much as possible.


Heated fresh water lines are typically used on floorplans with bath fixtures or a refrigerator containing an ice maker or water dispenser located in a slideout. Heated water lines are used to connect the plumbing from the basement area to the refrigerator where the water lines are exposed under the slideout. The 12 volt power to the heated water line is usually fused in the cord compartment fuse panel in diesel coaches and on the firewall fuse panel on gas coaches.



Some coaches may be equipped with a Manabloc water distribution manifold that allows water to be shutoff to individual water lines. For more information about the Manabloc, refer to Newgle.

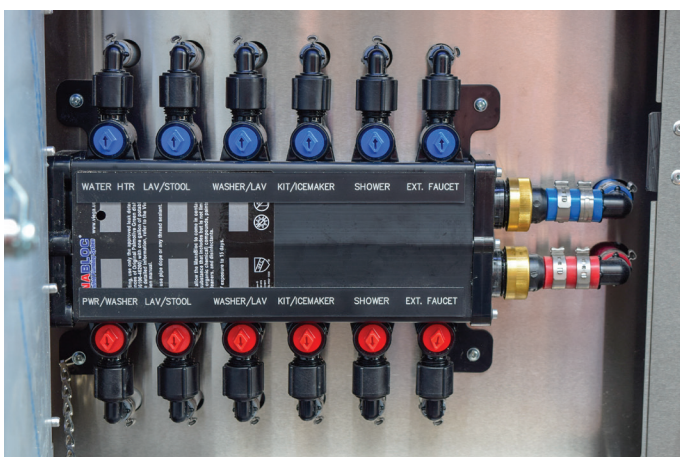

Some coaches may incorporate inline water valves on some water lines which may include the water spigot to the generator area or other non-heated compartment bays, ice maker water lines, and/or inline water filters. The valve(s) could be located various places depending on the coach year, model, and floorplan (i.e. under the kitchen sink, under the dinette booth, in the false pantry floor bottom, under the couch, or in the basement).

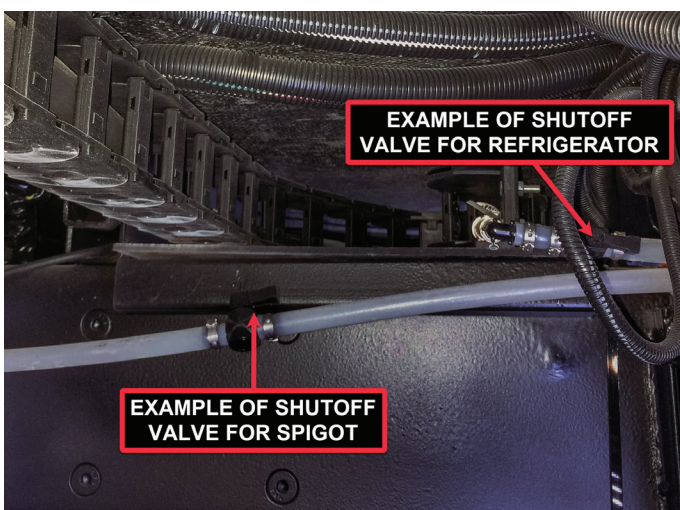

FRESH WATER LINES TO THE KITCHEN

The hot and cold plumbing lines connecting slideout-installed components, such as the kitchen sink and other optional equipment utilizing the coach water supply, are typically hard-plumbed within the slideout.



To ensure flexibility, a braided hose connects the rigid plumbing from within the slideout to the rest of the plumbing in the coach. This hose easily moves with the slideout as it extends and retracts. The plumbing lines are normally tied to the flexible drain pipe and extend and retract smoothly as the slideout travels.

Hot and Cold Low Point Drains

Low point drains are normally located in the water compartment and are marked “Low Point Drains.” Some valves are mounted in the water control panel and others are placed close to the water compartment and marked with a sticker nearby. Typically the coach has one hot water low point drain and one cold water low point drain, which are used to empty the water lines. Open the valves to relieve water pressure and drain the water lines. Close the valves for normal operation of the pressurized water system.

LOW POINT DRAIN CONFIGURATION EXAMPLES

On coaches equipped with tank rinse low point drain(s), turning the tank rinse drain valve to the “open” position will remove pressure and drain the tank rinse line. When finished using the tank rinse, it is recommended to turn off the water supply to the tank rinse connection. Open the valve, and drain off the pressure in the line before disconnecting the water hose.



Low Point Drain Configuration Examples

Preventing, Stopping, and Repairing Plumbing Leaks

⚠ IMPORTANT

In the event of a water leak, immediately shut off the water pump and/or disconnect the coach from the pressurized water source. Open the low point drains in the water compartment. This will relieve pressure and allow time to locate the leak and/or a shutoff valve (if the coach is equipped).

Poor or improper winterization may cause leaks, and/or vibration and flexing during travel can cause pipes and fittings to work loose. Follow this checklist to prevent or repair any plumbing leaks:

- Check all of the plumbing connections for leaks on a yearly basis.
- If the water pump runs when all faucets are turned off, check for a leak.
- Be sure the drain valves are closed.
- Tighten any loose faucet connections with a wrench.
- Disconnect the leaking connections completely, and check for mineral deposits or foreign material on the sealing surfaces. Clean the surfaces thoroughly, and reinstall the fitting.

⚠ IMPORTANT

Plumbing repairs should be performed by an authorized service center, followed by a pressure test.

Fresh Water Tank and Drain

This article provides a basic overview of the fresh water tank and drain. This tank is used to hold fresh potable water for use throughout the water system and is usually located on the floor of the water compartment; however, some coach floorplans may be equipped with a water tank located in another compartment. The fresh water tank is filled from the city water hook-up with a hose or hose reel.

⚠ WARNING

Potable water only. Sanitize, flush, and drain water tank before using. See owner's manual for instructions, care, and maintenance information. Failure to maintain tank can result in death or serious injury.

AD-04



FRESH WATER

AUTO TANK FILL &
AUTO CITY SUPPLY



CITY SUPPLY
(AUTO OVERRIDE)

MANUAL TANK FILL
(AUTO OVERRIDE)

FRESH WATER TANK FILL

MANUAL FILL



AUTO FILL

AUTO FILL MUST ALSO BE
ENABLED AT MONITOR PANEL
INSIDE COACH

Fresh water tank drains are located a few inches in front of or beside the fresh water tank and are connected to the fresh water tank with a 1/2" or 1" water line.

Whenever possible, drain the fresh water tank before traveling or only carry what you will need to get to your destination. Water in the tank will reduce the carrying capacity of the coach. All of the water should be drained from the fresh water system when the coach is not in use for more than one week to prevent stagnant water and reduce organic growth. To drain the fresh water tank, open the low point drain valve located near the fresh water tank.

FRESH WATER TANK DRAIN CONFIGURATION EXAMPLES



The fresh water fill valve located in the service compartment near the water hook-up determines whether the city water is going through the water system or into the fresh water tank. The excess water will be vented from an overflow vent pipe onto the ground when the tank capacity has been reached. This pipe is installed in the fresh water tank to prevent tank rupture from overfilling.

Fresh Water Valves

The article provides a basic overview for the Fresh Water Valves in a coach. The rotating "Fresh Water Valve" located in the water compartment is used to pressurize the fresh water system in your coach, as well as to fill the fresh water tank when the coach is connected to city water.

The Fresh Water Valve position determines whether the water supply fills the tank or pressurizes the fresh water system in the coach. Simply rotate the "Fresh Water Valve" to the appropriate position to perform the desired function.

⚠ IMPORTANT

If you leave this valve in the manual tank fill position, you may experience low water pressure while operating the water pump.

FRESH WATER VALVE EXAMPLES



Auto Fill

For coaches equipped with an Auto Fill function, the coach must be connected to a pressurized water source and have the Fresh Water Valve in the “Auto Fill” position. In addition to turning the valve, the coach must also have the Auto Fill function enabled within the tank monitoring system. This function is used to automatically fill the fresh water tank and shut off the water supply based on the tank levels. The system will turn on the Auto Fill valve when necessary and turn it off when the tank reaches capacity.

Both the Precision Circuit Digi-level and the KIB TMSC-100 systems control the electric auto fill valve via the monitor panel in an overhead panel and are fused in the 12 volt house fuse panel. The KIB TMSC-100 system’s circuit board is typically located in the shore cord compartment, and the Digi-Level does not use a separate circuit board.

The SilverLeaf system allows the Auto Fill feature to be activated via the touchscreen or the SPX-300 panel located in the water compartment. It is controlled by the TM102 module and uses the fuse panel and relay board typically located in the shore cord compartment. For more information about the coach’s tank monitoring system, refer to the sub-category within the Electronics section.

City Water Connection

Before connecting to your coach, use a potable water source to purge any remaining air and stale water in the hose. Then, connect the hose from the potable water source to your coach or the hose from your coach to the city water supply (if equipped with a hose reel). Turn on the supply valve at the water source, and open each of the faucets to remove any air pockets in the coach plumbing lines. Once the water flows freely, close the faucet(s).

FRESH WATER CONNECTION

AD-16

CITY WATER CONNECTION

AD-14

Water Pump

The water pump is used to pressurize the fresh water system when the unit is not connected to city water. The city water supply is under pressure, so the water pump is not necessary while you are connected to city water. Once the city water fill valve is not in the manual fill position, the water is supplied to the fresh water system components, including the hot water heater and faucets.

To disconnect from the city water supply, close the valve from the water supply. Release the pressure by rotating the fresh water valve to the tank fill position. Remove the hose from the city water supply, and store it in the water compartment. Once the pressure is relieved, rotate the fresh water valve to the appropriate operating position.

IMPORTANT

Use a water hose manufactured and labeled for potable water to ensure that the hose is drinking water-safe and will not alter the taste of the water.




Water Heaters

Truma AquaGo® Comfort Plus LP Gas Instant Water Heater Operation (Model: DLE60CP)

This article provides basic operation instructions for a Truma AquaGo® Comfort Plus LP Gas Instant Water Heater (Model: DLE60CP).

How It Works

The appliance was developed exclusively for use in recreational vehicles (RVs). The appliance is connected between the vehicle’s fresh water supply and its hot water plumbing system. It is powered by propane and a 12 V power supply. The ventilation grille on the access door allows combustion air to flow into the appliance and exhaust gas to flow out. When the appliance is switched on, the water will be heated on demand:

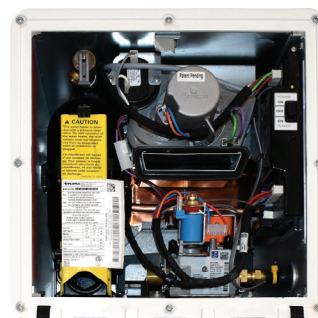

- A volume-flow sensor in the appliance detects when the hot water faucet has been opened and the volume flow is greater than approximately 0.4 gallons/min (1.5 liter/min). The burner then starts automatically.
- The burner control continuously adjusts the heater output based on volume flow and inlet water temperature, so that the temperature at the hot water outlet is approximately 120 °F (49 °C). A temperature stabilizer is also installed in the appliance to minimize fluctuations of the outlet temperature.
- After some time the maximum temperature at the faucet or in the shower is reached. The length of time will depend on the model (AquaGo basic, AquaGo Comfort and AquaGo Comfort plus) and variations in the water plumbing (length of pipes, insulation, circulation line, etc.). Like in a home shower, a comfortable water temperature at the shower head is reached by mixing in cold water.
- When the volume flow is less than approximately 0.4 gallons/min (1.5 liter/min) and the faucet is closed, the burner is automatically switched off.

The AquaGo Comfort and AquaGo Comfort plus models are equipped with a circulation pump. The circulation pump as well as the burner are switched on automatically by the control unit in order to keep the water temperature above 102 °F (39 °C) in “COMFORT” mode and 41 °F (5 °C) in “ECO” mode.

⚠ NOTICE

Risk of damage in frost conditions.

Pressure Relief Valve

⚠ WARNING

Scalding injury from hot water and/or tampering with the pressure relief valve! Never actuate the pressure relief valve as long as the appliance is still hot. Do not place a plug or reducing coupling on the outlet part of the valve.


- The pressure relief valve is a safety component and must not be removed for any reason other than replacement.
- The pressure relief valve is not serviceable; if defective, it must be replaced.
- It must be replaced by a Truma pressure relief valve rated for 100 psi (6.9 bar) that is CSA-certified and registered.
- It must be replaced by a Truma certified service technician.
- Tampering with the pressure relief valve will void the warranty.

The appliance is equipped with a pressure relief valve that complies with the standard for Relief Valves for Hot Water Supply Systems, ANSI Z21.22

Access Door

OPENING THE ACCESS DOOR

1. Turn the turn lock counterclockwise into the vertical position.

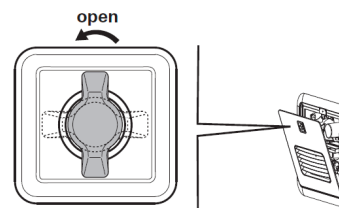


- The access door can be opened in two different positions:
 - Position 1 is the maximum opening width for switching the appliance on or off.
 - Position 2 is the starting position for removing the access door.

⚠ NOTICE


Damage to the hinge! Do not try to remove the access door in Position 1. Position 1 is the maximum opening width of the access door. Only remove the access door in Position 2.

2. Open the access door to Position 1.

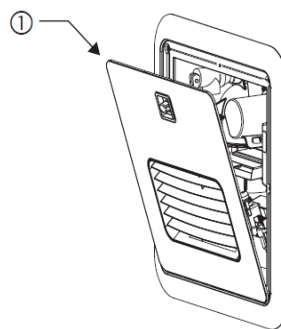

REMOVING THE ACCESS DOOR

1. Open the access door to Position 2.
2. Move the access door upwards to remove it.

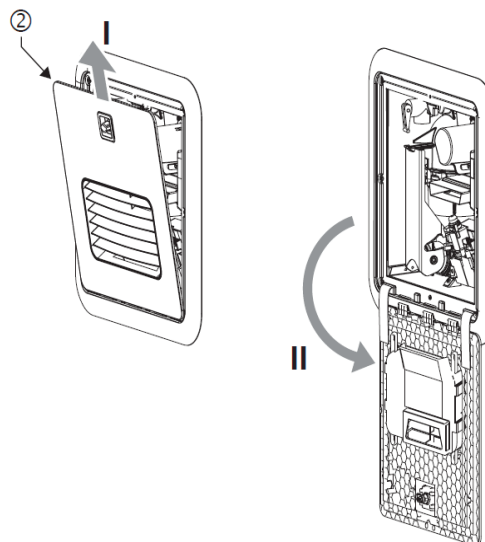


CLOSING THE ACCESS DOOR

⚠ NOTICE

Damage to the access door and the RV if the access door is not closed properly! Make sure that the access door is flush with the cover plate when closed.

1. If removed, insert the access door into the cover plate.
2. Make sure that the webbing is not pinched between the access door and the cover plate.
3. Press the access door against the cover plate.
4. Turn the turn lock clockwise into the horizontal position.

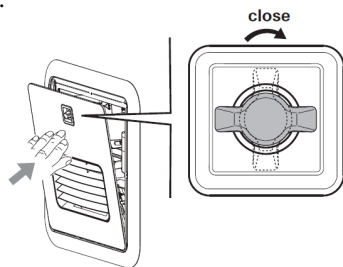

⚠ WARNING

Danger of over-temperature and toxic exhaust gases! Use with LP gas (propane) only. Butane or any mixtures containing more than 10 % butane must not be used. Keep the air inlet and exhaust gas outlet free of obstructions. Do not lean any objects against the water heater's access door or place any foreign objects within 2 feet (61 cm) of the access door.

⚠ WARNING

Danger of combustion, personal injury and damage to RV! Keep the area around the appliance free from combustible materials, gasoline, and other flammable vapors or liquids. Switch the gas supply and the appliance off: if anything seems to be out of the ordinary, if you smell gas, if you move the RV, before entering a gas station, before entering a tunnel.

Inspections Before Each Use

Check the appliance for the following points before each use. In case of damage, contact an authorized Truma service provider and do not operate the appliance.

1. Check for visible damage, e.g., on the cover plate or access door.
2. Provide adequate quantities of propane gas and fresh water.
3. Switch ON and check 12 V power supply of your RV.
4. Check that the access door of the appliance is closed.
5. Keep the appliance free of foreign objects, e.g., leaves, animals, spiderwebs, and keep the area around free of snow and ice. The appliance will not function properly if the intake air or exhaust terminal is obstructed.

Operating Procedures

⚠ NOTICE

Risk of damage in frost conditions. In frost conditions, ambient temperatures below 39 °F (4 °C), there is a risk that water in pipes, faucets and appliances could freeze. This can cause considerable damage. Before you fill water into appliances and parts that transport water, you must heat the installation area sufficiently so that the water cannot freeze.

Proceed as follows to fill the appliance with water:

1. Close open bypass lines (if present). Insert the water inlet filter or heating cartridge – if removed. 2, 7, 9 – 11.
2. Turn on fresh water supply or switch on water pump.
3. Fill the plumbing system.
 - Open all water-release points, e.g., cold and hot water faucets, showers, toilets.
 - It is important that you bleed the water system before starting the appliance.
 - Once water flows, the plumbing system is vented. Close the water-release points.
4. Start the appliance as follows:
 - Make sure that the LP gas supply is turned on.
 - Switch on the 12 V power supply (RV).
 - Open the access door.
 - Switch on the appliance at the POWER switch.
5. AquaGo Comfort / AquaGo Comfort plus:
 - Select the desired operating mode.
 - Close the access door.

⚠ WARNING

Scalding injuries caused by hot water! Water temperatures over 127°F (52°C) can cause severe burns or scalding and in extreme cases even death. Before using the hot water faucet or using the shower, allow the hot water to run until the water temperature no longer increases. Test the temperature of the water before placing a child in the bath or shower. Do not leave a child or an infirm person in the bath unsupervised.


- There may be a variation between the temperature delivered from the appliance and the temperature at the faucet due to water conditions or the length of pipe from the appliance.
- The presence of a flow restrictor in the hot water line may limit the water flow.

How to use hot water:

- To obtain the desired water temperature at the faucet or in the shower, mix cold and hot water.
- Particularly when showering, wait until the water temperature has stabilized before entering or allowing other people or animals to enter the shower.

Switching On The Appliance

1. Open the access door.
2. To switch on the appliance, switch the POWER switch to one of the two “ON” positions.
 - Both ON positions on the POWER switch have the same function. Choose your preferred position.
 - When the green power ON LED 1 is lit, the appliance is switched on.
 - If the red error code LED 2 is lit / flashes, there is a fault or warning.

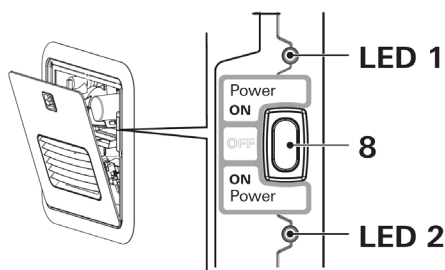


AQUAGO COMFORT / AQUAGO COMFORT PLUS

- The appliance is now ready for using the control panel inside your vehicle.

Operating Modes (Control Panel)

AQUAGO COMFORT / AQUAGO COMFORT PLUS

A control panel to select the operating mode.

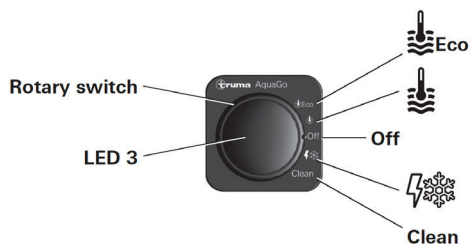

With the rotary switch you can choose between the following operating modes:

Symbol / Operating Mode	Description
ECO	The appliance is now running in energy-saving mode. <ul style="list-style-type: none"> • Water temperature at the outlet is approximately 120 °F (49 °C). • Prevention of freezing by using propane gas. The temperature in the appliance is automatically kept above 41 °F (5 °C). • During operation, the yellow status LED 3 is lit.
COMFORT	The appliance is now running in a mode that provides rapid availability of hot water. <ul style="list-style-type: none"> • Water temperature at the outlet is approximately 120 °F (49 °C). • Stand-by heat. The temperature in the appliance is automatically kept above 102 °F (39 °C). • During operation, the yellow status LED 3 is lit.
OFF	Stand-by. The appliance is not running in any operating mode. <ul style="list-style-type: none"> • The yellow status LED 3 is off. To switch off the POWER and gas supply, refer to “Switching OFF the appliance”.

ANTIFREEZE	Prevention of freezing using 12 VDC electricity: <ul style="list-style-type: none"> • Operating mode with installed electric antifreeze kit (available as an accessory) and appliance switched on. The temperature in the appliance is automatically kept above 41 °F (5 °C). • During operation, the yellow status LED 3 is lit.
CLEAN	Decalcification. Only AquaGo Comfort / AquaGo Comfort plus. See “Decalcification”. <ul style="list-style-type: none"> • For safety reasons, after 30 seconds the decalcification process cannot be stopped until the system has been rinsed in accordance with the instructions. See “Interrupting decalcification”.

DESCRIPTION OF THE YELLOW STATUS LED 3

Signal	Meaning
LED 3 is lit	Appliance is switched ON
LED 3 is off	Appliance is switched OFF.
Every 7 s, LED 3 is interrupted for 1 s	The appliance must be decalcified
LED 3 flashes slowly 1 s on, 1 s off	Decalcification mode has been activated
LED 3 flashes quickly	Before you use the water system you must rinse it.
LED 3 flashes 2 x briefly after a break.	There is a fault in the appliance. The exact fault diagnosis must be determined via error LED 2. Risk of freezing if the temperature in the appliance is below 37.4 °F (3 °C).

Switching Off The Appliance

1. AquaGo Comfort / AquaGo Comfort Plus
 - Set the control panel to “Off”.
2. Open the access door.
3. Switch off the appliance at the POWER switch.
 - The green Power-ON LED 1 extinguishes.
4. Close the access door.
5. If the appliance is not needed, turn off the gas supply to the appliance.
 - If you intend to put the RV into storage or turn off the appliance during freezing temperatures.

Operation In Frost Conditions

(Ambient temperatures below 39 °F (4 °C))

⚠ NOTICE

Risk of damage in frost conditions. In frost conditions, ambient temperatures below 39 °F (4 °C), there is a risk that water in pipes, faucets and appliances could freeze. This can cause considerable damage. If the appliance is not to be used in frost conditions, you must winterize the appliance. Winter operation will not protect the RV’s entire water system. Water lines, faucets, water tanks and the external water valves and the vehicle must be heated separately. The RV must be designed for winter use/freezing conditions. The water pipes in the RV must be ice-free to operate the AquaGo Comfort / AquaGo Comfort plus in winter. Otherwise, there is no water flow and the appliance does not start.

ONLY AQUAGO COMFORT / AQUAGO COMFORT PLUS

When the vehicle is standing, to -4 °F (-20 °C):

- The appliance has a built-in thermostat that will start the burner and the circulation pump whenever the temperature in the appliance falls below 41 °F (+5 °C). The burner will automatically shut off when it senses a temperature above 111 °F (44 °C).

NOTICE

For the appliance to operate properly, you must ensure a constant supply of power (12 V), propane gas, sufficient water in the system. You must leave the appliance powered “ON”. The operating mode must be “ECO” or “COMFORT”. The water system must be bled so that the circulation pump works.

NOTICE

If the vehicle is standing and ambient temperatures are below -4 °F (-20 °C), the appliance must not be operated and must be winterized.

While driving (or if there is no gas supply), to -4 °F (-20 °C)

NOTICE

Gas must not be used for heating while the vehicle is in motion. Ask your dealer / vehicle manufacturer about options for heating your RV while driving.

An electric antifreeze kit is available as an accessory (ask your dealer). With this kit, the appliance can be kept frost-free while you are driving or if there is no gas supply (to ambient temperatures of -4 °F (-20 °C)). The electric antifreeze kit includes detailed instructions.

NOTICE

While the vehicle is in motion and at ambient temperatures below -4 °F (-20 °C) the appliance must not be operated and must be winterized.

Winterizing

NOTICE

Severe damage to the water system components and the appliance! Any damage caused by freezing or an unsuitable winterizing fluid will not be covered by warranty. Follow the recommendations below if the appliance will be stored under freezing conditions or for an extended period of time. Winterize the appliance at the start of the winter season or before traveling to a location where freezing conditions are likely.

If your RV is equipped with a bypass around the appliance, separate the appliance from the water system with the bypass.

WINTERIZING THE APPLIANCE

To winterize the appliance, you must drain all water from the appliance. To do this we advise the following steps:

- Remove the water inlet filter or heating cartridge.
- Let water completely drain from the appliance. This can take several minutes.
- Do not insert the water inlet filter or heating cartridge into the appliance during winter – if the appliance is not used.

CAUTION

Danger of crushing/pinching of fingers when the Easy Drain Lever is closed! Never put fingers between the Easy Drain Lever and latch.

- Close the Easy Drain Lever and the access door.

Once the water has been drained, the appliance is protected against freezing conditions.

IMPORTANT NOTE FROM NEWMAR

On coaches equipped with a Truma AquaGo water heater mounted above the floor line of the coach, open the low point drain located in the hot water recirculation loop between the shower loop and the water heater. The exact location will vary, but the low point drain is typically located in the basement area at or near the lowest point in the loop and may be marked with a low point drain label.


WINTERIZING THE RV WITH A WINTERIZING FLUID

- Winterizing the RV with a winterizing fluid is only possible with an installed bypass kit (not in scope of delivery)
- Refer to “Connection diagrams” for all letters referred to in the following description.

WINTERIZING AQUAGO COMFORT PLUS

1. Close valves A, B and E.
2. Make sure that valve D remains in the closed position.
3. Open valve C.
4. Drain the appliance.
5. Flush the RV's water system with a suitable winterizing fluid according to the supplier's or RV manufacturer's guidelines.
6. Close all faucets (if open).
7. Open valve D.
8. Wait until winterizing fluid has drained. Collect escaping fluid in a suitable vessel.
9. Close valve D.

Model AquaGo comfort plus

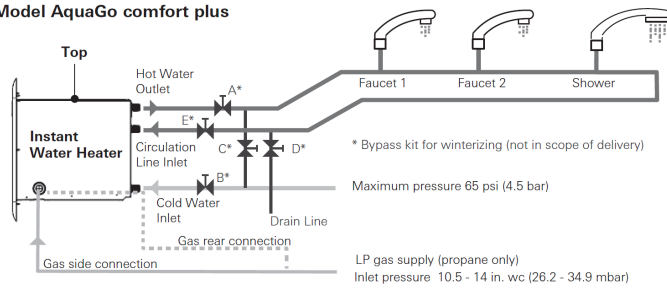

NOTE FROM NEWMAR

To de-winterize, simply reverse the winterizing steps.

Source(s): Installation and Operating Instructions Truma AquaGo Basic / Comfort / Comfort Plus


Product(s): Truma AquaGo Comfort Plus Water Heater (Model: DLE60CP, Newmar Part Number: 144933)

Water Heater 2-Valve Bypass System Overview

This article provides a brief overview of a Water Heater 2-Valve Bypass System. The 2-valve bypass system is located near the water heater.

Using the bypass valve(s) while winterizing your coach will prevent anti-freeze from reaching the water heater. Draining the water heater during winterizing is required. On some coaches, this consists of two valves: one at the inlet and one at the outlet of the water heater.

By closing the inlet and outlet valves, it opens the bypass hose between the inlet and outlet lines allowing the hot water lines to be blown out and RV winterization antifreeze to flow through, bypassing the water heater.

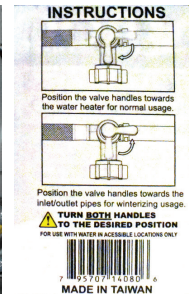

Water Pumps and Controllers

Water Pump Operation and Basic Troubleshooting

The water pump is self-priming and totally automatic, operating on demand whenever water is required. When not connected to city water, the coach's water pump is used to pump and pressurize water from the fresh tank for distribution through the hot and cold water lines.

When the water pump switch is turned on, the water pump builds pressure in the system and will shut off as soon as the system is correctly pressurized. When a faucet is opened, the pump will turn on and operate as necessary to maintain the preset pressure in the system. Water pump operation is not necessary while the coach is connected to city water, since the potable water is already pressurized.

When using water at a low flow rate (GPM), the pump may pressurize the system and short cycle, meaning the pump shuts on and off quickly. In many cases, the pump will stop short cycling if the flow rate of the water is increased.

Operation

1. Fill or partially fill the fresh water supply tank.
2. Open the kitchen and bathroom faucets.
3. Turn the water pump switch on, and allow the water to fill the water line and the hot water heater. The switch to this pump may be located in the exterior water compartment, in the kitchen, or in the bathroom.

4. Close each faucet after it delivers a steady stream of water (close the cold water first). Leave the hot water faucets on until they also deliver a steady stream of water. This will ensure that the water heater is filled with water.
5. The water pump should stop running once all faucets are closed.
6. The pump is now ready for automatic operation. The pump will run when a faucet is opened and stop when a faucet is closed and the correct pressure has been reached.

CAUTION

Never allow the pump to run for long periods of time without water in the supply tank, as pump damage or blown fuses may result.

Care and Maintenance

All of the water should be drained from the fresh water system when the unit is not in use for more than one week.

Troubleshooting

If water doesn't flow when a faucet is turned on while using the demand system, use the following troubleshooting tips.

1. If the pump is running, but there is no water:

- Fill the tank.
- Clear the water line to the pump or the pump inlet filter.
- Rotate the city water / tank fill valve to the correct position.

- Make sure the winterizing valve(s) are not in the winterizing position(s).
- ### 2. If the pump isn't running:
- Check the pump switch.
 - Check the 12 Volt fuses.
 - Check the electrical connections.
 - Check the battery.

Water Pump and Auto Fill Operation via KIB 10.1" Central Monitor Capacitive Touch Panel

The Home screen on the KIB 10.1" Central Monitor Capacitive Touch Panel displays water-related switches for controlling the water pump, as well as the settings for top off and auto fill.

WATER PUMP

The home page will display the water pump switch on all the coaches, which will supply power to the water pump.

The water pump may be activated and deactivated via the KIB Monitor Panel, or, if equipped, via a momentary contact switch with LED indicator. The KIB switch panels communicate with a circuit board and touchscreen monitor on a dedicated V-BUS. The V-BUS receives on/off commands from the water pump button on the KIB display monitor or the water pump switch located in the water compartment.


The KIB circuit board is typically located in the cord compartment and sends 12 volt power to complete the water pump circuit. Once the pump pressure switch makes contact, the pump will supply water pressure to the fresh water system. The pump will shut off once the pump pressure switch is satisfied.

TOP OFF AND AUTO FILL

The top off and auto fill icons will appear on coaches equipped with an auto fill feature, which, when activated, allows automatic filling of the fresh tank while the coach is hooked up to a pressurized potable water source.

IMPORTANT

The Central Monitor Capacitive Touch Panel is customized by KIB and Newmar based on the model and year of coach, as well as the available standard and optional equipment. Based on the configuration of the coach, the location of icons, settings, or statuses and corresponding descriptions may vary from what is shown, but the operation of the panel is the same.

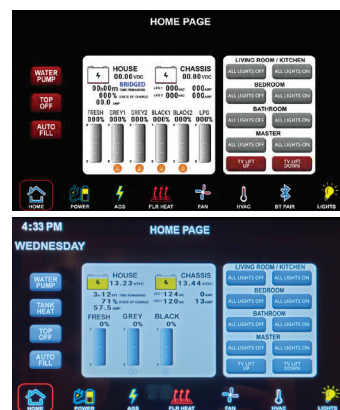

Faucets and Fixtures

Faucets and Fixtures Overview

Your installed bathroom and kitchen faucets and fixtures are available in many styles, finishes, and configurations, often complementing the other fixtures in your coach.

With proper maintenance, the faucets in the coach should provide years of trouble-free usage. The faucets and fixtures can be cleaned by wiping with a soft, damp cloth. Washing with warm water will remove dry water spots. Turn off the water and drain the pressure before attempting repair or replacement of the faucet.

IMPORTANT

Avoid using "S.O.S." type cleaning pads or other abrasive cleaners because they may scratch the surface. Do not use cleaners that contain harsh or abrasive chemicals. Alcohol or similar solvents should never be used.



Filters

Water Filter Care and Maintenance

This article provides basic care and maintenance recommendations for water filters. Your coach may be equipped with a fresh water filtration system. This system uses extruded carbon filter cartridges to remove sediment and certain impurities from the incoming water supply. The filter assembly is located in the basement water compartment. Select coach models may also have additional filters installed for drinking water.

When To Replace Your Filters

Most water filter manufacturers recommend that you replace your water filters every six months. These guidelines are based more on average household size and average consumption rates rather than your specific coach. The frequency of filter changes depends upon your water usage and the quality of water you are using. As you travel and hook up to different water sources some may contain more sediment, metals, sulfur and other impurities which affect the filter life, the taste and

smell of your water. Other factors are how often it is used and stored and how long water is able to sit in the holding tank and become warm and stagnate.

Change the filter at least every six months and at any time you notice decreased water flow or notice unpleasant taste, odor, or algae after flushing and sanitizing the water system. Water filters and fresh water system maintenance are the customer's responsibility in order to ensure safe potable water.

Flow-Pur Whole House Water Filters

This article provides basic instructions for replacing a Flow-Pur Whole House Water Filter. Replacement filter cartridges are available through the Newmar parts department. For parts inquiries, refer to the NewPar (formerly ComNet) parts catalog or contact the parts department at 1-800-731-8300 (select the appropriate menu option).

1. To replace the filter cartridge, turn off the water supply to the coach at the city water connection, or turn off the water pump if using potable water.
2. Drain the water pressure off the system by opening a faucet or low point drain, and press the red button on top of the filter housing.
3. Unscrew the filter canister by rotating to loosen and remove it (the top housing has male right hand threads, and the canister portion has female threads).
4. Insert the new filter cartridge, positioning it so the opening in the bottom of the filter is placed on the molded ring at the bottom of the canister.



⚠ CAUTION

When replacing the filter, make sure the rubber O-Ring seal is properly positioned in its groove in the cartridge housing. An improperly positioned or missing seal will cause leakage around the perimeter of the filter housing.

5. Reattach the canister to the filter housing by rotating the canister until it tight. Do not over tighten the canister when attaching it back to the housing.

⚠ IMPORTANT

Do not allow water to freeze in the water filter canister. Freezing will crack and permanently damage the filter housing and associated plumbing. Always remove the filter cartridge prior to winterization.



Power Washers, Sprayers, and Exterior Showers

Exterior Shower Overview

An exterior shower located in the water compartment on the driver side may be an optional feature on your coach and can be used to rinse off sand or grass, muddy shoes, or bathe a pet outside of the coach. The exterior shower may also be used to wash your hands or rinse off the sewer hose after dumping the waste water tanks.

The faucet operates just as it would in the kitchen or bathroom. When finished using the exterior shower, shut off both the hot and cold valves. Do not simply shut off the valve on the shower head itself, as it may cause hot and cold water to mix at the exterior shower and could allow drastic changes in water temperature throughout the coach.



Waste Water System



Sinks, Tubs, and Showers

Sinks, Tubs, and Showers Overview

This article provides an overview and care and maintenance recommendations for sinks, tubs, and showers. The sink and shower are the beginning of the waste water system. The basic purpose is to contain the used water so it can be drained via the attached waste water drain line to the holding tank.

Care and Maintenance

The maintenance requirements for sinks and the shower are on an as-needed basis. Occasionally, the attached drain and trap may need to be cleaned of soap scum and hair to maintain efficient drainage. The basins and shower walls can be cleaned to maintain the original luster. Clean the entire surface, including the exterior, of the lavatory and kitchen sinks and shower with mild soap and warm water. Wipe the entire surface completely dry with a clean, soft cloth.

IMPORTANT

Avoid using “S.O.S.” type cleaning pads or other abrasive cleaners because they may scratch the surface. Do not use cleaners that contain harsh or abrasive chemicals. Alcohol or similar solvents should never be used.

Follow these tips to maintain the shower(s) in the coach:

1. Make sure the shower doors are closed and latched or locked prior to travel.
2. Check for leaks in the shower seals. Reseal them as needed.
3. Using a mild detergent and a soft cloth, wipe down the shower walls and glass enclosures after each use to avoid soap scum and hard water deposits.
4. When winterizing the coach, clean up any remaining antifreeze in the shower, as it may cause staining.

Waste Water Drain Lines

The drain lines are plumbed from the sinks, showers, and toilets are sloped to drain waste water to the grey or black tank. However, if the coach is equipped with a lift pump, refer to the “Lift Pump” article. If the coach is equipped with macerator toilet(s), refer to the toilet article(s).

The drain lines connecting slideout-installed components, such as the kitchen sink and other optional equipment utilizing the coach water supply, are typically hard-plumbed within the slideout. The hard plumbing from the kitchen slideout connects to the hard plumbing from the tank using a braided drain line to ensure flexibility as the slideout extends and retracts. The fresh water plumbing lines are normally tied to the flexible drain pipe and extend and retract smoothly as the slideout travels.




P-Traps and Waterless Traps

This article provides an overview and care and maintenance recommendations for traditional and waterless p-traps.


P-Traps

The sinks and shower drain have a water trap to prevent holding tank odors from entering the coach. These traps must have water in them in order to trap the odors. While traveling, the water may leave the P-Trap. While stored, the water may evaporate, allowing an odor to enter the coach. If this occurs, run water from the faucet into the drain, allowing water to fill the trap.

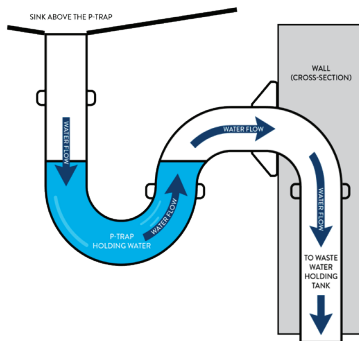

Waterless Traps

Some coach models with a rear shower may have waterless traps in lieu of conventional P-traps. Waterless traps are designed to allow water to drain and to prevent odor from entering the coach without the height requirements of the conventional p-trap. Pressure builds and the self-sealing valve opens as water drains from a fixture. The valve closes to form a tight seal after the water has completely drained from the sink or shower. No routine or seasonal maintenance is required for the waterless trap.

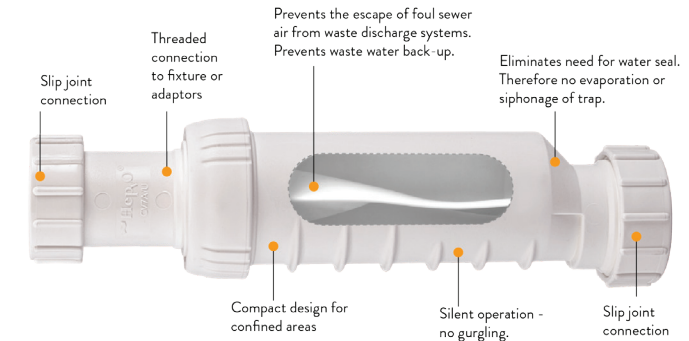

NOTICE
Remove the waterless trap before using mechanical drain-cleaning devices. Waterless trap can be damaged.
AD-123

Foreign objects, such as hair, in the trap may allow odor to enter the coach and impede or slow water drainage and require occasional cleaning. When removing the waterless trap for cleaning, the ridges must be down and the direction of water flow must be correct when re-installed.

⚠ IMPORTANT

If standing water occurs in your shower, do not attempt to unplug or open the drain with a coat hanger or a sewer snake. Before taking your coach to a service center, try leveling your coach so that the rear is raised slightly higher than the front. This may correct the condition and prevent drain-cleaning or a service repair. If this does not correct the issue, Newmar recommends taking your coach to a service center for drain-cleaning or repair.

SFA Saniflo Lift Station Pump Operation (Model: Sanivite)

This article provides basic operation instructions for a SFA Saniflo Lift Station Pump (Model: Sanivite).

Overview

Certain floorplans may use a lift pump in locations where plumbing drains are too low or too far away for gravity drains to effectively reach the waste water holding tanks. The design is a small collection tank with an inlet from the sink or shower with a submersible pump to push the water out of the discharge to the holding tank.



Note: Lift pumps operate on 120 volt power. The coach must be plugged into shore power or using the generator, or, when dry camping, the batteries must be charged and the inverter must be operational. Some coaches may have a separate small inverter just to operate the lift pump; however, most will share the inverter with other inverted circuits.

Note: On floorplans with lift pumps, follow proper winterization instructions to prevent the system from freezing.

Operation

After storage and/or winterization, run the water from the bathroom or from the kitchen appliance connected to the pump. Check to make sure connections are water tight and that the pump starts and stops correctly.

The pump starts automatically as soon as the bath, the shower, or the sink begins to drain. It shuts down when the water has been drained.

Note: The pump may cycle on and off several times as it discharges the drain water.

Source(s): SFA SaniVite Installation Instructions and Technical Data

Product(s): SFA Saniflo Lift Station Pump (Model: 8-59925-00208-4, Newmar Part Number: 125332)



Toilets

Toilet Overview, Care, and Maintenance

This article provides an overview of toilet operation and care and maintenance. “Go” in style and comfort, no matter where your travels may take you.

Waste Water Drain Lines

The drain lines are plumbed from the sinks, showers, and toilets are sloped to drain waste water to the grey or black tank.

Care and Maintenance

Before using the stool, treat the tank with water that is mixed with an odor-controlling chemical, which is readily available at any RV supply store. Mix as directed on the holding tank chemical package. After mixing and flushing the chemical mixture, the waste tank is ready for use. The stool should be cleaned regularly for maximum sanitation and operational efficiency.

⚠ IMPORTANT

Be careful not to spill the chemical on your hands, clothing, or the carpet, as it may cause a permanent stain.

⚠ CAUTION

Use only approved RV odor controlling chemicals in the holding tanks. Do not use chlorine or caustic chemicals like laundry bleach or drain-opening chemicals, as they will damage the seals in the toilet and dump valves. Products containing ammonia and petroleum may damage the ABS plastic holding tanks and seals.

When using your stool, it is wise to fill the bowl 3/4 full of water. This will help to wash the solids away from directly below the stool and to ensure complete dumping of the holding tank. After flushing, a small amount of water should remain in the bowl.

Dometic Standard Gravity-Discharge Toilets with Flush Pedal Operation (Models: 300, 310, and 320 Series)

This article provides basic operation instructions for a Dometic Standard Gravity-Discharge Toilet with Flush Pedal (Models: 300, 310, and 320 Series). Dometic 300, 310, and 320 series toilets are lightweight, residential-size toilets for installation directly above a holding tank.

Adding Water To The Toilet Bowl

To add water to the toilet, press the flush pedal part of the way down. Water flows into the bowl while the flush ball remains closed. If the flush ball moves, let up on the pedal slightly. Adding water to an empty bowl helps prevent holding tank odors from entering the living space. Adding water is recommended prior to flushing solids and toilet paper.

⚠ IMPORTANT

Before adding water, consult the toilet manufacturer's owner's manual for the specific procedure relating to your system.

⚠ NOTICE


Residual water trickle in ceramic bowls: Due to integrated rim of this toilet bowl, water may continue to slowly trickle into toilet bowl for up to 20 minutes after flushing. If water trickle continues after 30 minutes, replace the water valve.

⚠ NOTICE

To prevent holding tank odors from entering the living space, make sure a small amount of water remains in the toilet bowl.

⚠ WARNING

Do not flush diaper wipes, feminine hygiene products, or any other products that would not be easily liquefied. Also avoid using holding tank deodorant capsules, as they may cause damage to the macerator. Damage resulting from flushing any materials or objects other than organic waste and toilet paper are not warrantable repairs.

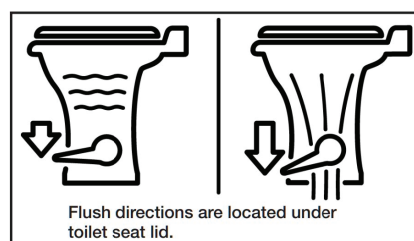

Flushing The Toilet

To flush, press the pedal down until it contacts the floor. Release the pedal after the complete flush.

- When flushing liquids, press the pedal for 1-2 seconds.
- When flushing solids, press the pedal until contents are rinsed from bowl. Flushing longer than necessary will cause holding tank to fill too quickly.

A small amount of water will collect in the bowl after a flush to create an airtight seal.

Source(s): Dometic 310 and 320 Series Gravity-Flush Toilet Instruction Manual

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.


Dometic Macerator-Style Toilets with Flush Pedal Operation (Models: 7600 Series)

This article provides basic operation instructions for a Dometic Macerator-Style Toilet with Flush Pedal (Model: 7600 Series).

The Dometic MasterFlush 7600 series electric-flush toilet macerates waste and pumps it to a holding tank or other effluent storage or disposal system. Operated by a flush pedal, the toilet allows the user to add water to the bowl (before using or flushing) and to flush the toilet.

Adding Water To The Toilet Bowl

To add water to the toilet, press the flush pedal slightly. To avoid possible overflow, water flow will stop automatically if the pedal is pressed too long. More water is usually added only when flushing solids.

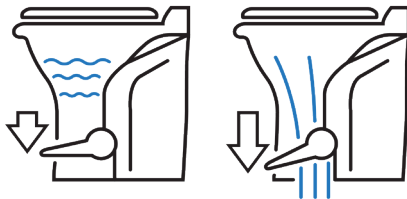

Flushing The Toilet

To flush, press the pedal down completely, then release it. This activates a powerful macerator pump that siphons water and waste from the toilet bowl, macerates and propels the effluent to the holding tank.

Waste Water Holding Tanks

This article provides a basic overview of the waste water holding tanks. There are two separate waste systems: the gray tank system and the black tank system. Each tank has its own control valve, and both tanks drain through the sewer drain hose.



The waste drainage system was designed to provide adequate and safe storage and/or disposal of waste materials. The drainage system uses plastic piping and fittings connected to the sinks, toilet, and holding tanks to provide for their drainage to an outside termination. All waste water tanks are vented through the roof and covered with a vent cap. The coach should be reasonably level for best operation of the system.

⚠ NOTICE

Residual water trickle in ceramic bowls: Due to integrated rim of this toilet bowl, water may continue to slowly trickle into toilet bowl for up to 20 minutes after flushing. If water trickle continues after 30 minutes, replace water valve.

Changing Flush Modes

MasterFlush 7600 series toilets offer two flush settings to help manage water consumption:

1. Normal Flush: Uses 0.83 gallons per flush and adds water to the bowl after every flush.
2. Dry Bowl Flush: Uses 0.21 gallons per flush and does not add water to bowl after flush.
3. To change from Normal to Dry Bowl flush setting, press "Flush" pedal for about 10 seconds. Flush mode has been changed to Dry Bowl setting. Change mode to Normal flush by following the same procedure.

Source(s): Dometic 7600 Series MasterFlush Toilet Instruction Manual

Product(s): This source is associated with more than one product. Refer to Newgle for more information about the product(s) offered for your coach's model year.



Some coaches not equipped with Oasis Hydronic Heating may have optional tank heating pads to reduce the risk of tank contents freezing.

Gray Water Holding Tank

The gray water holding tank is located in the underbelly of the coach, sometimes on top of the fresh water tank. It is primarily used for the drainage from the kitchen and bath sinks, shower, and the washing machine (if equipped).

CAUTION

The gray tank valve must be in the open position when operating the optional washing machine.

Black Water Holding Tank(s)

The black water holding tank(s) are generally for sewage waste from the stool. It is typically located between the frame rails in the water compartment directly beneath standard flushing toilets. Macerator-style toilets can be installed away from the black tank.

During normal use, tank buildup may occur on the inside of the tank. How quickly buildup occurs varies from user to user and is affected by many factors such as water hardness, the amount of solid waste, how easily the toilet paper breaks down, how often the tank is dumped, and how well the tank is flushed. When buildup occurs, it may impair the tank sensor's ability to read tank levels properly. Preventive tank maintenance is recommended.

Waste Water Disposal

This article provides basic instructions for draining the waste water holding tanks.

Both of the holding tanks terminate in a valve arrangement that permits draining each tank separately or together. The valves that open to release the water are called gate valves. The blade that closed the opening in the sewer drain pipes is connected to the T-handle to release the contents of the tank(s) when pulled.



The sewer line must be securely capped during self-containment use to prevent leakage of waste material onto the ground or pavement.

CAUTION

Keep drain valve closed to minimize the presence of sewer gases. Sewer gases can be present when RV is connected to campground sewage hookup. Can lead to illness or personal injury.

AD-120



The gray and black tank(s) should be rinsed after dumping and treated with a waste tank additive to help break down and liquefy solid waste and help reduce odors. This chemical is readily available at any RV supply store. Add tank chemicals and the amount of water recommended by the chemical manufacturer. If the coach is equipped with two black tanks, add the chemicals to both toilets.

IMPORTANT

Be careful not to spill the chemical on your hands, clothing, or the carpet as it may cause a permanent stain.

CAUTION

Use only approved RV odor-controlling chemicals in the holding tanks. Products containing ammonia and petroleum will damage the ABS plastic holding tanks and seals.

Do not pull the holding tank gate valve open, or operate the electric dump valve switch (if equipped) when the protective cap is installed on the pipe. Always drain the tank into an acceptable sewer inlet or dump station.

WARNING

Holding tanks are an enclosed sewer system and must be drained into an approved dump station. Both black and gray water holding tanks must be drained and rinsed thoroughly on a regular basis in order to prevent the accumulation of harmful or toxic materials.

WARNING

When routing the sewer or macerator hose, do not place on or near the Oasis, generator or engine exhaust pipes. Otherwise, damage may occur.

How To Drain The Waste Water Holding Tanks

The holding tanks should only be drained when they are at least three-fourths full, to provide sufficient water to allow the complete flushing of waste materials in the drain lines and hose. If the tanks are not three-fourths full, add enough water to allow for sufficient flushing. Whenever possible, drain the holding tanks prior to traveling. The carrying capacity of your unit will be reduced if water is left in the black or gray tanks.

To empty the waste water tanks, follow the procedure below, depending on the type of waste system your coach uses. It is recommended to drain the black water tank before the gray water tank. The holding tank valves may be operated via a tank gate valve (t-handle) or an electric dump valve switch (when equipped).


DRAINING THE WASTE WATER TANKS ON A COACH WITH A STANDARD GRAVITY DRAIN AND DUMP SYSTEM

1. Connect the adapter to the drain hose.
2. Unscrew the drain cap, and connect the hose with the adapter to the drain fitting. Support the hose as needed for optimal flow.
3. Open the gate valve all the way by pulling on the T-handle. The tank will start to drain as soon as the T-handle is pulled.
4. After you have drained the black water tank, immediately drain the gray water tank, allowing the water from the gray tank to wash the black water residue from the drain lines and hose.
5. When both of the tanks are empty, flush them with fresh water before you close the valves. Flush the gray tanks by pouring a couple of gallons of water into a sink drain. The drain outlet is engineered for quick release of the drain hose adapter.
6. Always close the gate valves and secure the end cap to prevent leakage while in transit.
7. Add a holding tank deodorant to help control the odor and break down the solid waste.

DRAINING THE WASTE WATER TANKS ON A COACH WITH A MACERATOR WASTE SYSTEM (SANI-CON)

The Sani-Con macerating waste system provides the following convenient features:

- Provides a sanitary method for discharging liquid waste from the RV by easily and quickly emptying waste-water from the RV's holding tanks, without relying on gravity.
 - The macerating system pumps liquid waste from holding tanks and does not rely on gravity.
 - The macerator is designed to process human waste and toilet tissue, making the Sani-Con ideal for black water, as well as gray water, discharges.
1. Make sure the black and gray water dump valves are closed.
 2. Point the hose nozzle upward, and remove the nozzle cap.

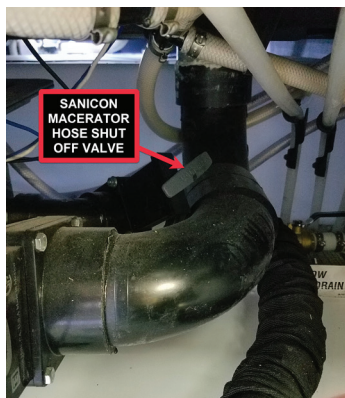

⚠ IMPORTANT


Select coaches equipped with a Sanicon macerator may have a valve to shut off the waste flow to the macerator drain hose. This valve can be shut off when using the larger gravity drain to prevent pressure and waste in the small hose when not in use or in the event that the small hose develops a leak. However, this valve must be open if you plan to use the macerator drain hose. You must open the valve prior to turning on the macerator.

3. Insert the nozzle into the sewer connection.
4. Open the gray water dump valve, and run the macerator pump for a few seconds to confirm that the system is operating correctly.

⚠ IMPORTANT

If there is a problem with the connection, or if the system is not functioning correctly, the macerator may need to be cleaned or serviced.

5. Shut the gray water dump valve, and turn off the pump switch once you have determined that there are no problems.
6. Open the black water dump valve, and turn on the macerator pump switch.
7. Monitor the tank as it empties. The pump will run louder when the tank is empty.
8. Turn off the pump switch once the tank is empty.
9. Flush the black tank, and operate the macerator while it is flushing.
10. Turn off the flush system, then turn off the macerator.
11. Close the black water dump valve.

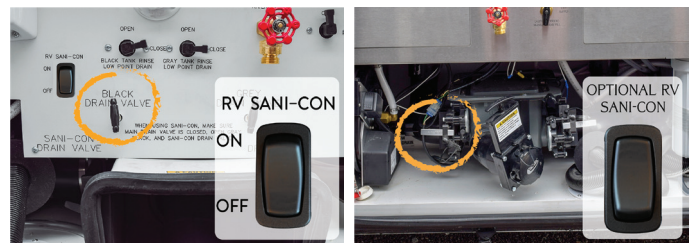

12. Add tank chemicals and the amount of water recommended by the chemical manufacturer. If the coach is equipped with two black tanks, add tank chemicals to both via the toilets.
13. Drain the gray tank next to help flush out the macerator and sewer hose.
14. Open the gray water dump valve.
15. Turn on the pump switch.
16. Monitor the tank as it empties. The pump will run louder when the tank is empty.
17. Turn off the pump switch once the tank is empty.
18. Flush the gray tank, and operate the macerator while it is flushing (if equipped).

19. Turn off the flush system, then turn off the macerator.
20. Close the gray water dump valve.



21. Place the cap on the hose and store it.
22. Add tank chemicals and the amount of water recommended by the chemical manufacturer.

Camping with Sewer Hook-Up

When camping at parks with sewer hook-up, it is important to keep the black water holding tank gate valve closed at all times, except when dumping. The gray tank can be kept open while hooked to a sewer connection, but the black water tank must be kept closed. This is done so that an ample supply of liquid remains in the tank to provide a smooth flow through the gate and drain valve when dumping.

Sufficient liquid in the tank causes a swirling action that should take any accumulated solid wastes with it. Accumulation of solid wastes in the black water tank can be avoided by keeping the gate valve closed when connected to the sewer hook-up. If the valve is left open, solid wastes may accumulate in the tank. This may eventually result in costly repairs.


Holding Tank Rinse - No Fuss Flush

This article provides an overview of the holding tank rinse (no fuss flush) system. The coach may be equipped with a flushing system for the holding tank(s).

Tank Rinse Overview

The basic tank rinse system consists of:


- a water inlet,
- a vacuum breaker to prevent water from siphoning back out of the tank and into the hose (normally located in a lavatory cabinet to provide placement above the height of the tank),
- a fixed sprayer in the tank,
- and connecting water lines.

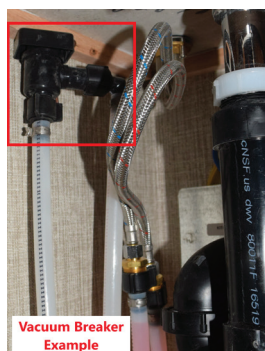

Black Tank Rinse

When draining your sewer tank, attach a water hose to the sewer spray hookup. After the tank is drained, leave the gate valve open, and open the water valve to allow water to spray inside the sewage tank.

Allow the water to rinse the tank for a minimum of three to five minutes to ensure it is clean. This should flush the inside of the tank of any debris that may be left inside.

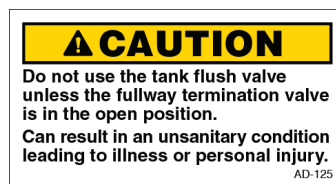

Next, disconnect the freshwater hose and close the gate valve. If there are any solids still left inside the tank, fill the sewage tank with approximately ten gallons of water and holding tank chemical through the stool. As you travel, the agitation of the water should help liquefy any solids left in the tank. You can dump the sewage tank again at your next destination.


Grey Tank Rinse

Select coaches may also have a tank flush on the grey water tank. Follow the same flush procedure by leaving the grey tank gate valve open while flushing.



Tank Rinse Low Point Drain(s)

On coaches equipped with tank rinse low point drain(s), turning the tank rinse drain valve to the "open" position will remove pressure and drain the tank rinse line. When finished using the tank rinse, it is recommended to turn off the water supply to the tank rinse connection. Open the valve, and drain off the pressure in the line before disconnecting the water hose.

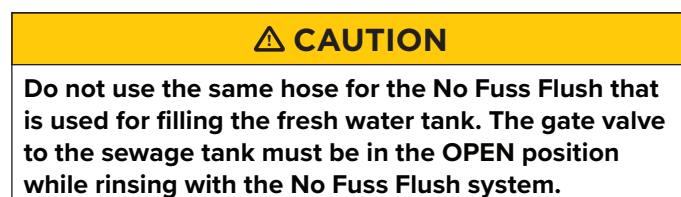

⚠ IMPORTANT

Always drain the sewage tank prior to rinsing. Never rinse a sewage tank that is full. The sewage drain must be open while rinsing the sewage tank, and the drain hose must be positioned to drain into an approved sewage dump station. Failure to open the valve will cause the sewage tank to fill with water, and can cause damage to your plumbing and interior.

If you require additional instructions on gray/sewage tank valve operation, refer to the Waste Water Disposal article in Newgle.



SLIDEOUTS

This chapter provides information about electric flat floor, bedroom, kitchen, wardrobe, and full wall slideouts, as well as hydraulic slideouts.

⚠ IMPORTANT

Before operating any slideout, read and follow the warning labels and operation instructions posted in your coach.

Leveling and Full Wall Slideout Sequence of Operation

This article provides step-by-step instructions for leveling the coach and operating the slideouts.

⚠ IMPORTANT

In the past, Newmar has recommended leveling the coach prior to deploying the slideouts. As of 2015, Newmar makes the following recommendation for the extension and retracting of slideouts.

Motorhomes, like all vehicles, flex in travel. Flexing may be different due to terrain and the coach's fulcrums (resting on tires or jacks). As the coach flexes, this movement is more noticeable in the outside reveal on a wider slideout.

Extending The Slideouts and Leveling The Coach

1. Park the coach on a reasonably level campsite.
2. Leave the coach at ride-height with air in the air bags (if equipped with air suspension) or on normal suspension (coaches without air suspension).
3. Plug the coach into shore power (if available) or start the generator to increase the voltage for better slideout operation.
4. Look at the "reveal" or "gap" of the two vertical wall trims around the slideouts to make sure there is plenty of clearance so the trim will not rub when extending the slideout. If the gap looks good, then the slideout can be operated.
 - **Note: Most often the gap will look best when sitting on the tires with the air suspension inflated (at ride-height), and not on the jacks.**



⚠ IMPORTANT

In the unlikely occasion that the slideout trim has inadequate clearances, try leveling or repositioning the coach and rechecking the clearances before extending the slideout.

5. Verify that the path of the slideout is unobstructed and free from any surrounding objects, both inside and outside of the coach.
6. Once the appropriate conditions are met, follow the operating instructions posted in your coach to extend the slideouts (image for example only).

7. Dump the air suspension (if equipped). This step is included in the auto-leveling process for most coaches.
8. Deploy the leveling jacks.

Retracting The Jacks and Slideouts

1. Retract the leveling jacks.
2. Start the coach.
3. Allow the coach air suspension to fill and return to ride height (units without air suspension will return to normal suspension).
4. Turn the engine off.
5. Verify that the path of the slideout is unobstructed and free from any surrounding objects, both inside and outside of the coach. This includes any water or debris that may have collected on the slideout roof or the topper awning.

⚠ IMPORTANT

Debris left on the roof or topper may prevent the slideout from sealing properly when retracted, as well as prevent the mechanical lock arms from closing properly when the slideout is extended.

6. For a full wall slideout, visually inspect the front vertical trim for adequate clearance prior to complete retraction (when the slideout trim spacing can be observed). The spacing should look even from top to bottom (see image for reference).

⚠ IMPORTANT

In the unlikely occasion that the slideout trim has inadequate clearances, try leveling, or if necessary, repositioning the coach, and rechecking the clearances before fully retracting the slideout.

7. Retract the slideouts. Inspect all slideouts for complete retraction.
8. If the coach is equipped with manual lock arms, make sure to lock them.
9. Unplug the coach from shore power when you are ready to depart.

Electric Slideouts

Electric Slideout Operation

This article provides basic operation instructions for an electric slideout.

Electric Slideout Switches



ELECTRIC BEDROOM SLIDEOUTS

The operating switch for the bedroom slideout is usually located on the bedroom wall. If there is a full wall slideout on the driver side of the coach, the switch may be located on the wall that separates the bedroom from the living room.

ELECTRIC FLAT FLOOR SLIDEOUTS

Newmar pushed the RV industry forward by introducing the first flat floor slideouts. We continue to lead today with our patented flat floor slideout designs. The same insight and experience that helped us improve slideout functionality has also helped us improve slideout quality.

The operating switch for the flat floor slideout is usually located in the overhead cabinet above the driver or passenger chair or the overhead cabinet above the entrance door.

ELECTRIC FULL WALL SLIDEOUTS

Most electric full wall slideouts extend from the living area to the master bathroom in a Newmar coach.

ELECTRIC KITCHEN SLIDEOUTS

The operating switch for the kitchen slideout is usually located in the overhead cabinet above the driver or passenger chair or the overhead cabinet above the entrance door.

ELECTRIC WARDROBE SLIDEOUTS

The operating switch for the wardrobe slideout is usually located in the bedroom, on the wall beside the corresponding slideout.

Electric Slideout Operation

In order to operate a slideout with the required voltage levels, batteries should be fully charged, the generator should be powered on, or the coach should be connected to shore power. This maintains the voltage levels required to operate the slideouts.

⚠ IMPORTANT

Read entire slideout room instructions posted in your coach before extending or retracting the slideout.

- On diesel coach slideouts: Park brake must be engaged before operation the slideout rooms. The slideout room will not operate when Park Brake is released.
- On gas coach slideouts: Ignition key must be turned off or in accessories position before operating the slideouts. The slideout rooms will not operate when the ignition key is in the ignition ON position.

EXTENDING THE SLIDEOUT ROOM



1. Slideout end windows must be shut before moving room.
2. Look for and remove any obstructions before moving room.
3. Caution on motorhomes: Move driver seat forward before moving room.
4. If rooms are equipped with Manual Lock-Arms, be sure to release arms before running room out.
5. Press and hold the appropriate slideout switch until the slideout is fully extended and stops moving.
6. Release the switch. Note: The slideout room movement can be stopped at any time by releasing the switch.

RETRACTING THE SLIDEOUT ROOM

1. Slideout end windows must be shut before moving room.
2. Look for and remove any obstructions before moving room.
3. Caution on motorhomes: Move driver seat forward before moving room.
4. Press and hold the appropriate slideout switch until the slideout room is fully retracted and stops moving.
5. Release the switch. Note: The slideout room movement can be stopped at any time by releasing the switch.
6. If rooms are equipped with Manual Lock Arms, be sure to engage lock arm when rooms are in and before moving coach.

Manual Operation of Room

Refer to the Manual Operation Instructions located on the kitchen overhead cabinet.

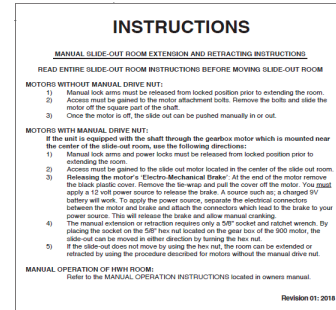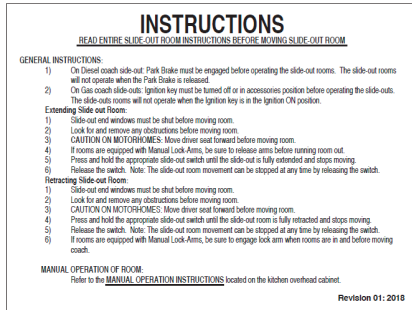

Slideout Safety

WARNING

Do not allow children to operate the slideout. Do not allow any person to place their arms, legs, body or head between any pinch point of the lock arms, slideout fascia, interior walls, exterior walls, objects, or floor as serious injury or death could result. Any adjustments, or repairs, must be made only by "Newmar" qualified personnel. Always check the interior and exterior of the coach for objects, or persons, that are in the path of the slideout when extending or retracting the room. Always check the room to be sure any objects, or debris, are removed before retracting the room. Operator must remain continually in control of the slideout room control switch while the room is moving in or out.

WARNING

Be sure that the driver's seat is in the forward position before activating the slideout room.

WARNING

Do not allow children to operate the slideout. Do not allow any person to place their arms, legs, body or head between any pinch point of the lock arms, slide-out fascia, interior walls, exterior walls, objects, or floor as serious injury or death could result. Any adjustments, or repairs, must be made only by "NEWMAR" qualified personnel. Always check the interior and exterior of the coach for objects, or persons, that are in the path of the slide-out when extending or retracting the room. Always check the roof to be sure any objects, or debris, are removed before retracting the room. Operator must remain continually in control of the slide-out room control switch while the room is moving in or out.

NI-121

WARNING

Be sure that driver's seat is in the forward position before activating the slide out room.

NI-043

Electric Slideout Maintenance

This article provides care and maintenance information for the electric slideout. Electric slideout drive mechanisms do not require lubrication as part of the scheduled maintenance. Some noise is normal during extension and retraction from the various moving parts and seals.

Chains, Rollers, and Tubes

If a technician determines lubrication is needed on some component(s) such as chains, rollers, or tubes, Newmar recommends using a light coat of LPS 1 Greaseless Lubricant, which provides a dry, thin lubricating film that is resistant to dirt and dust buildup.

IMPORTANT

Newmar does not recommend the use of grease, silicone, or WD-40 on the slideout tubes or chains, as these products tend to collect dirt and dust.

Seals

If slideout seal lubrication is necessary, the slideout seal provider (Clean Seal) recommends using a silicone-based spray or water-based 303 protectant on the rubber slideout seals. They state this will not hurt the seal. They also stated that baby powder could be used but would need to be applied frequently, as it would wash away. The silicone base spray would last longer and would not need to be applied as often. Newmar recommends bi-annual treatment of slideout seals.

Motor Mounting Bolts

In addition, the torque on all electric slideout motor mounting bolts should be checked annually by an Authorized Newmar Service Center.

Cleaning The Slideout Rollers

This article provides information about when and how to clean the rollers on an electric slideout.

When To Clean The Rollers

⚠ IMPORTANT

It is important to clean the slideout rollers under the floor regularly. Dirt and other debris may adhere to the rubber coating on the rollers, which may lead to a dull finish, scratching, scoring, or further damage to the flooring. Such damage is **NOT** covered under warranty.

There is no set schedule for cleaning the slideout rollers. It will vary based on the cleanliness of the coach, and other factors such as dust, dirt, sand storms, as well as the type and condition of the roads traveled.

The following list provides examples of when the rollers should be cleaned:

- Liquid spills on the roller, floor, or under the slideout
- Fragments from broken glass, pottery, or other sharp objects on the roller, floor, or under the slideout
- Sand or other abrasive materials on the roller, floor, or under the slideout
- Hair wrapped around the roller or shaft
- The roller begins sliding on the floor instead of rolling smoothly

Manually Retracting an R3 or O1 Series Electric Bedroom Slideout with a Square Shaft

This article provides instructions for manually retracting a bedroom slideout with a square shaft if it will not retract on its own.

⚠ IMPORTANT

If the slideout is stuck in the retracted position, take the coach to an authorized service center for diagnosis and repair. Do **NOT** attempt any of the following procedures.

⚠ IMPORTANT

Prior to proceeding with a manual retraction procedure, make sure the ignition key is in the off position and the park brake is set. Then, try retracting the slideout again, as some controllers require the ignition to be off, and others require the park brake to be set.

⚠ WARNING

The manual retraction procedures are for emergency use only. These procedures bypass all normal safety features. It is the responsibility of the person(s) performing the procedure to watch for moving parts and pinch points in order to avoid injury.

⚠ IMPORTANT

Slideout rollers may leave indentations in the flooring. This condition is normal and does **NOT** warrant flooring replacement.

How To Clean The Rollers

1. The slideout rollers can usually be accessed by extending the slideout half way.
2. Blow any remaining debris from under the slideout.
3. If possible, clean the ramps for the electric flat floor slideouts.
4. If more room is necessary to clean the ramp and rollers, push out on the top of the room and slide a wooden wedge between the floor and the bottom of the slideout in a few different places to create more clearance.
5. Clean the rollers one at a time with a soft cloth and a mild cleaner. A wet Swiffer cloth can also be used. Do not use harsh cleaners or solvents that may soften plastics.
6. Another alternative is to clean a portion of each of the rollers, then move the room slightly to clean the next portion. Repeat this process until all of the rollers have been cleaned all the way around.


Option 1

This option requires the motor and gear box to be operational. This procedure bypasses the slide controller, switch, and the wiring. If battery power is unavailable, or if the motor/gear box is inoperable, move to a different option.

⚠ IMPORTANT

This procedure can be performed on any single motor electric slideout.

1. Disconnect the red and black wires connected to the motor.
2. Using the the wires attached to the motor, connect to a 12 volt cordless battery to retract the slideout. If the wire polarity is reversed, the slideout will extend instead of retract.

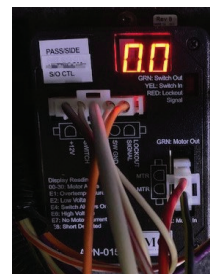

⚠ IMPORTANT

If the slideout motor has a brake installed, you must also hook one brake wire to the battery with the red slideout motor wire and one with the black slideout motor wire.

This can also be done at the slideout controller's wiring harness by removing the motor's red and black harness plug from controller and jumping a 12 VDC power source at the Molex plug.



3. Disconnect the wire(s) from the cordless battery pack.

Option 2

If the slideout is stuck in the extended position and option 1 is unavailable or fails:

COACHES WITH MANUAL LOCK ARMS

1. Remove the four mounting bolts, and move over the slideout motor until it disengages from the square shaft.
2. Manually push the room in or out.
3. Lock the room with manual lock arms (if equipped).
4. Take the coach to an authorized service center for diagnosis and repair.

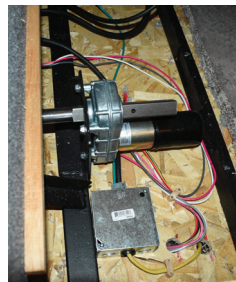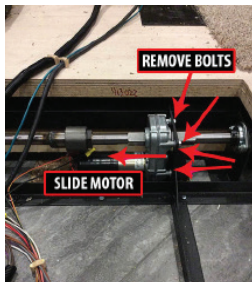

COACHES WITH MECHANICAL LOCK ARMS

1. Slide the motor back over onto the square shaft, and reinstall the four mounting bolts.
2. The motor and brake assembly must be installed (or another way devised) to hold the slideout in the retracted position prior to traveling.
3. Take the coach to an authorized service center for diagnosis and repair.

Manually Retracting a Single Motor Flat Floor or Wardrobe Slideout with a Square Shaft

This article provides instructions for manually retracting a single motor flat floor or wardrobe slideout with a square shaft if it will not retract on its own.

⚠ IMPORTANT

If the slideout is stuck in the retracted position, take the coach to an authorized service center for diagnosis and repair. Do NOT attempt any of the following procedures.

⚠ IMPORTANT

Prior to proceeding with a manual retraction procedure, make sure the ignition key is in the off position and the park brake is set. Then, try retracting the slideout again, as some controllers require the ignition to be off, and others require the park brake to be set.

⚠ IMPORTANT

This procedure can be performed on coaches with a brake on the slideout motor.

Option 3

If the slideout is stuck in the extended position and option 1 and/or 2 is unavailable or fails, try the following steps to manually retract the slideout by removing the brake and turning the shaft. Only a few tools are necessary to complete this procedure; however, it requires the gear box to be operational.

⚠ IMPORTANT

Make sure you do not damage portions of the shaft that will slide through the motor, trantorque, bearing, and cog wheels.

1. First, locate the strap that secures the rubber boot on the outside of the motor.
2. Remove the strap, and pull off the rubber boot, removing it from the motor.
3. Remove the four screws from under the rubber boot on the brake.
4. Once the brake is removed, use a wrench to turn the shaft to retract the slideout.
5. After the slideout is fully retracted, reinstall the brake.



⚠ WARNING

The manual retraction procedures are for emergency use only. These procedures bypass all normal safety features. It is the responsibility of the person(s) performing the procedure to watch for moving parts and pinch points in order to avoid injury.


Option 1

This option requires the motor and gear box to be operational. This procedure bypasses the slide controller, switch, and the wiring. If battery power is unavailable, or if the motor/gear box is inoperable, move to a different option.

⚠ IMPORTANT

This procedure can be performed on any single motor electric slideout.

1. Disconnect the red and black wires connected to the motor.
2. Using the the wires attached to the motor, connect to a 12 volt cordless battery to retract the slideout. If the wire polarity is reversed, the slideout will extend instead of retract.

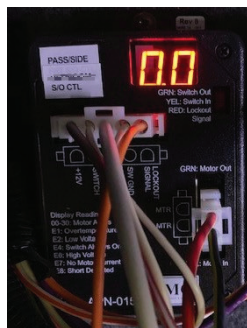

⚠ IMPORTANT

If the slideout motor has a brake installed, you must also hook one brake wire to the battery with the red slideout motor wire and one with the black slideout motor wire.

This can also be done at the slideout controller's wiring harness by removing the motor's red and black harness plug from controller and jumping a 12 VDC power source at the Molex plug.

3. Disconnect the wire(s) from the cordless battery pack.

Option 2

If the slideout is stuck in the extended position and option 1 is unavailable or fails, try the following steps to manually retract the slideout by removing the brake and turning the shaft. Only a few tools are necessary to complete this procedure; however, it requires the gear box to be operational.


1. First, locate the strap that secures the rubber boot on the outside of the motor.
2. Remove the strap, and pull off the rubber boot, removing it from the motor.
3. Remove the four screws from under the rubber boot on the brake.
4. Once the brake is removed, use a wrench to turn the shaft to retract the slideout.



⚠ IMPORTANT

Make sure you do not damage portions of the shaft that will slide through the motor, trantorque, bearing, and cog wheels.

On slideout motors equipped with the 5/8" reduction gear nut, it can be turned to retract the slideout.

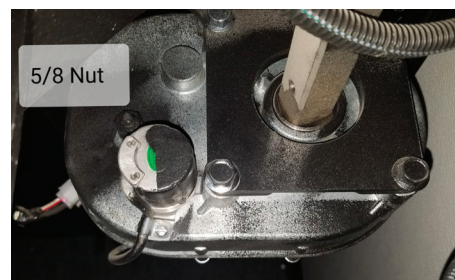

5. After the slideout is fully retracted, reinstall the brake.

Option 3 - Wardrobe Slideout Motor with Square Shaft

⚠ IMPORTANT

This procedure can be performed on coaches with a brake on the slideout motor.

IF THE SLIDEOUT IS STUCK IN THE EXTENDED POSITION


1. Remove the four mounting bolts, and move over the slideout motor until it disengages from the square shaft.
2. Manually push the room in or out, or use a wrench to rotate the shaft. Make sure you do not damage the shaft with the wrench.

WITH MANUAL LOCK ARMS

3. Lock the room with manual lock arms (if equipped).
4. Take the coach to an authorized service center for diagnosis and repair.

WITH MECHANICAL LOCK ARMS

3. Slide the motor back over onto the square shaft, and reinstall the four mounting bolts.
4. The motor and brake assembly must be installed (or another way devised) to hold the slideout in the retracted position prior to traveling.
5. Take the coach to an authorized service center for diagnosis and repair.

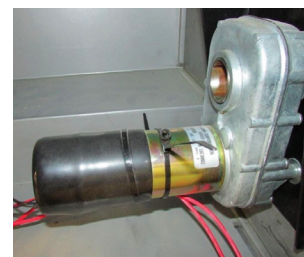

⚠ NOTICE

Depending on the year, model, and floorplan of the coach, the exact slideout motor(s) location may vary. Generally, they may be accessed from under the slideout in the compartment area. Some motors may also be located in the wheel well area under a cover.

Manually Retracting a Dual Motor Electric Full Wall or Kitchen Slideout with Square Shaft

This article provides manual retraction procedure options for a dual motor electric full wall or kitchen slideout with a square shaft.

Due to the dual motor setup, manual retraction using a separate battery or 12V source is not recommended since motors run at different speeds. This may increase the risk of binding the room and/or causing extensive damage to the drive assembly.

Option 1

IMPORTANT

This procedure can be performed on coaches with a brake on the slideout motor.

If the slideout is stuck in the extended position, try the following steps to manually retract the slideout by removing the brakes from each motor and turning the shaft. Only a few tools are necessary to complete this procedure; however, it requires the gear box to be operational and the person(s) retracting the room to keep the slideout from binding. This can be done by alternating moving each side in small increments or by turning each side simultaneously with a person at or near each motor or shaft assembly.


1. First, locate the strap that secures the rubber boot on the outside of the motors.
2. Remove the strap, and pull off the rubber boot, removing it from the motors.
3. Remove the four screws from under the rubber boot on the brake.
4. Once the brake is removed, use a wrench to turn the shaft to retract the slideout.



IMPORTANT

Make sure you do not damage portions of the shaft that will slide through the motor, trantorque, bearing, and cog wheels.

On slideout motors equipped with the 5/8" reduction gear nut, it can be turned to retract the slideout.

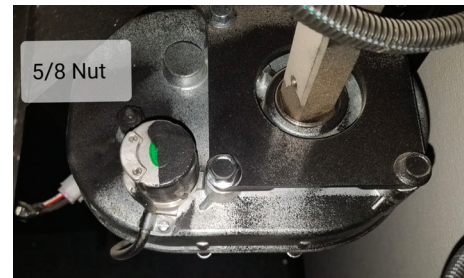

5. After the slideout is fully retracted, reinstall the brake.

Option 2

1. Remove the four mounting bolts, and move each slideout motor until it disengages from the square shaft.
2. Manually push the room in or out, or use a wrench to rotate the shafts. Make sure you do not damage the shafts with the wrench and keep the room in sync to prevent binding.

WITH MANUAL LOCK ARMS

3. Lock the room with manual lock arms (if equipped).
4. Take the coach to an authorized service center for diagnosis and repair.

WITH MECHANICAL LOCK ARMS

3. Slide the motor back over onto the square shaft, and reinstall the four mounting bolts.
4. The motor and brake assembly must be installed (or another way devised) to hold the slideout in the retracted position prior to traveling.
5. Take the coach to an authorized service center for diagnosis and repair.

NOTICE

Depending on the year, model, and floorplan of the coach, the exact slideout motor(s) location may vary. Generally, they may be accessed from under the slideout in the compartment area. Some motors may also be located in the wheel well area under a cover.

This page is intentionally blank.




IMPORTANT


How to Weigh a Coach

IMPORTANT

Weight Descriptions

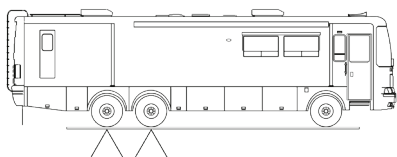

To find the total weight of the coach, except for the front axle, move the unit so that the front wheels are off the scales as shown. Record the weight. This weight should not exceed the total rating of the axles remaining on the scales. The front axle weight is determined by subtracting this weight from the GVW that was obtained in step one. This amount should not exceed the listed front axle weight rating.

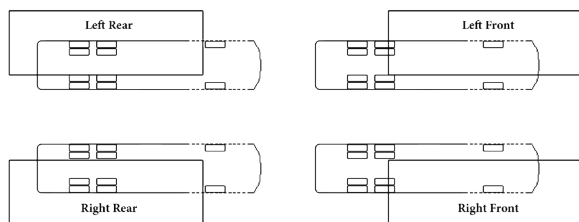

ALTERNATE WEIGHING PROCEDURE

The recommended procedure to accurately weigh a motorhome is on individual corner scales. Since these are not always available, this diagram shows how to weigh a motorhome on a typical truck scale.

Since only one corner can be weighed at a time, the remaining three corners need to be as close to the scale as possible without being on the scale, and the unit needs to be as level as possible. Remember, wind and rain can cause inaccuracies of weights.

⚠ IMPORTANT

Your coach has been aligned at the factory as part of the production process. To provide optimum tire longevity and offer the best handling characteristics, Newmar recommends you have your unit re-aligned after loading your belongings. Though highly recommended, this alignment is not mandatory, and as such, is not warrantable by Newmar or the chassis manufacturer.

Washing and Drying a Coach

This article provides the BASF/Newmar-recommended procedure for washing and drying the coach.

⚠ IMPORTANT

Damage caused by inappropriate or unapplied maintenance is not covered under warranty as expressed in the Newmar Expressed Limited Written Warranty.

Washing The RV

Following these procedures can provide a long-lasting, high-gloss finish to your RV. These same procedures can also be applied to your everyday automobile, producing the same long-lasting results.

The clear coat used on all painted Newmar RVs is similar to the technology used by automotive manufacturers. The painted surface is baked in our state-of-the-art bake booths which cures the clear coat finish. The end result is a Masterpiece Finish which is the highest quality in the industry. The same care needs to be performed and maintained on the RV exterior surface as on an automobile finish.

Make sure the coach's surface temperature is under 90° F. Never wash the vehicle in direct sunlight, [while the vehicle is hot, or with hot water].

- Rinse the entire coach to remove all loose dirt and grime. Never hold a pressure washer close to the surface. Use a fan type spray nozzle, making sure that the water coming out of the gun has a fan and not a single straight stream.

NOTE FROM NEWMAR

Keep the stream at least 18 inches from the edge of any decals, as high pressure water may cause the decals to loosen and peel.

- Most automotive stores offer mild car wash shampoos that are safe for clear coat finish. We recommend using baby shampoo as it will not leave a film on the painted finish. Adding ½ of a cup of food-grade vinegar to the water will boost the cleaning ability of any cleaner and also soften the water. This also helps to minimize water spots.

⚠ IMPORTANT

Do not use dish soap, detergents with degreasing agents, or industrial cleaners as they can cause damage to the finish.

NOTE FROM NEWMAR

Do not use solvents such as acetone, MEK, toluene, etc. on the decals. Any solvent including alcohol may soften or smear colors. Do not use lacquer thinner or paint on decals. Do not overcoat the decals with clear paint. Do not allow gasoline or other fuels to drip or stay on the decals for any length of time. If this occurs, immediately flush the area with water.

- Use 100% cotton or lambs-wool pad or wash mitt for washing the painted surface of the RV. Use a different mitt for washing the wheels and undercarriage.
- Change water in the wash bucket often or place a "dirt guard" in the bottom of the bucket to keep the cleaning pad or wash mitt free of dirt and debris.

The following products may assist you when cleaning your coach, and may be purchased through the Newmar parts department:

- Lambswool Pad (Newmar part #018461A)
- 4-way Swivel Pad Holder (Newmar part #018461)
- Lambswool Mitt (Newmar part #018464)
- Extension Pole (Newmar part #018463)
- EZE Squeegee (Newmar part #016462)

IMPORTANT

Absolutely no brushes should be used on the painted surface. Use of these on your RV's painted surface will cause damage to the finish, as it would an automobile finish. Newmar does not support using of any style, type, or material of brush, even though it may be marketed as 'RV Safe' or 'Approved.'

NOTE FROM NEWMAR

The use of any cleaning products outside of Newmar's recommendation is at the customer's discretion. However, Newmar and BASF take no responsibility for any scratches, swirls, or damage to the finish of the coach caused by the use of non-recommended products.

Drying The RV

Drying the RV is just as important as washing it. Today's tap water and well water contains many chemicals that could leave water stains on the finish. After washing, dry the RV with EZE Squeegee (Newmar part # 018462) or a clean 100% leather chamois.

IMPORTANT

You can also use fresh microfiber towels for drying. Please use caution, as these towels are made partially with polyester (which is plastic), which can break down over time from extended use and washing, eventually causing damage to the clear coat finish.

Source(s): BASF Recommended procedures for a long-lasting, high-gloss finish, AD6622 REV 11.2021

Product(s): BASF Finishes

Waxing and Polishing a Coach

This article explains the BASF/Newmar-recommended benefits and suggestions for using waxes and polishes to maintain your coach's finish.

The coating on your RV is a state-of-the-art base coat/urethane clear coat. This means that what you wash and polish is a clear coating designed to protect the colored base coat. The clear coat needs to be maintained especially in harsh environments. Clear coats will appear to fade or lose gloss as the surface becomes contaminated by the environment. A finish that is dull or low in gloss is a result of contamination. Occasional washing alone will not adequately remove some forms of contamination and will require polishing of the finish.

Polishes and waxes primarily serve to:

- Remove minor surface imperfections caused by water spots and acid rain.
- Remove minor scratches by filling them and leveling the surface.
- Seal the pores of the finish creating an easier-to-clean surface.
- Beautify the paint finish appearance with more depth and high gloss.
- Protect the paint finish from the elements.

IMPORTANT

Do not use products that contain harsh abrasives such as rubbing compounds. These products should be used by an experienced technician with proper training and equipment.

Most polishes and waxes are designed to clean and polish in one application, whether by hand or machine. A machine-applied polish will last longer than one applied by hand because the high RPMs of the buffing wheel create heat, resulting in a deeper film with higher gloss. However, a hand-applied polish or wax will offer outstanding performance and protect the RV's finish. When applying the polish or wax, do so in a shaded area making sure the RV surface is at the specified temperature according to the polish manufacturer's recommendations.

Due to the variations of polishes and waxes, incorporate the following:

NOTE FROM NEWMAR

Apply polish or wax while the coach is parked in a shaded area so the coach's surface is at the specified temperature according to the polish manufacturer's recommendations.

- Condition the polishing pad by rubbing a slight amount of polish on it.
- Use only the amount of polish specified in the label directions.
- Work a small area at a time.
- Rinse off and remove dried polish from crevices, trim and moldings.

NOTE FROM NEWMAR

The exterior finish of your coach will require a routine waxing. When water will not bead and roll off a freshly washed vehicle, a new coat of wax is needed. Wax not only improves the appearance of the vehicle, but it also protects the finish against oxidation and corrosive materials. The recommended type of wax is one that is compatible with painted or gel-coated fiberglass finishes, and contains a UV (ultra-violet) inhibitor. Buffing with a polishing compound will improve a dull or discolored finish.

NOTE FROM NEWMAR

When using a polishing compound that does not contain a wax preservative, reapplying a coat of hard wax after polishing is recommended.

⚠ IMPORTANT

Refrain from waxing or polishing for at least 90 days from [the coach's] date of manufacture.

Source(s): BASF Recommended procedures for a long-lasting, high-gloss finish, AD6622 REV 11.2021

Product(s): BASF Finishes

How to Clean Exterior Chrome

This article provides the Newmar-recommended procedure for maintaining your exterior chrome accessories.

Removing Tarnish and Water Spots

Wash chrome items with soap and water the same way you wash the exterior paint. If the chrome still has some tarnish and water spots on it, clean it with a soft cloth and vinegar. Add a little baking soda to the rag if you need a stronger cleaner.


Removing Rust/Oxidation

Rust is not a warranty issue, as it is a common occurrence (especially in southern states where there is a lot of humidity) and requires frequent maintenance. Most exterior chrome can be cleaned, even the plastic, except for the side marker light bezels. To clean oxidation/rust off of the chrome, complete the following steps:

1. Regularly clean chrome with WD-40 using a white or blue Scotch Brite pad or very fine steel wool. Test it in an inconspicuous area to ensure no damage is occurring while using the pad or steel wool.
2. Then use a chrome polish to help maintain the finish and make it last longer.

⚠ IMPORTANT

The more often the chrome is cleaned, the easier the cleaning process. Coaches exposed to salt spray from the road or ocean air should be cleaned more often to maintain the best appearance.

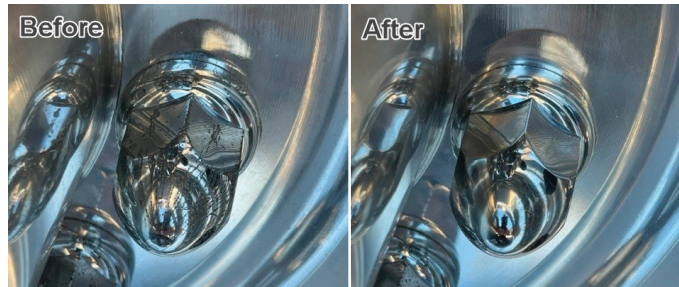

How to Winterize a Coach

This article provides the Newmar-recommended step-by-step instructions for winterizing a coach.

⚠ NOTICE

The following instructions are generic to Newmar coaches, and are NOT specific to your coach. They should only be used as a reference guide for this process. Appliances, drain locations, and plumbing components may vary by coach. The following images are for example purposes only. Your coach may or may not be equipped with the same components as shown.

Follow the winterizing instructions to reduce the risk of leaks caused by cracks from freezing pipes. Damage caused from the fresh water system freezing can

be extensive and costly to repair. A new coach may be equipped with a similar label if the system has been winterized.


This fresh water system has been protected with non-toxic anti-freeze. Please flush and drain lines before using. AD-70

⚠ IMPORTANT


Once water has been introduced into the system, it is no longer protected and must be winterized again any time the coach may be subjected to freezing temperatures.



EXAMPLE OF WATER COMPARTMENT ON GAS COACH

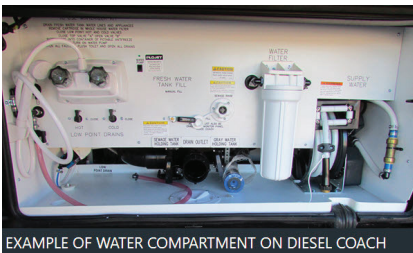

EXAMPLE OF WATER COMPARTMENT ON DIESEL COACH

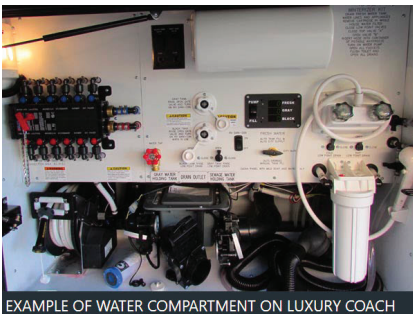

EXAMPLE OF WATER COMPARTMENT ON LUXURY COACH

When to Winterize a Coach

Although great care has been taken to build a well-insulated unit, recreational vehicles are not intended for extended use in sub-freezing weather without special precautions. When the outside temperature drops below freezing, the furnace must be turned on to keep the coach warm. Continued use in cold weather will require the coach to be winterized.

It is critical to winterize the plumbing in your coach when storing it in temperatures below freezing or using it in extremely cold conditions. If subjected to these conditions without being properly winterized, the heating system may be unable to keep the coach and its compartments above freezing temperatures.

⚠ WARNING

Winterizing is the responsibility of the consumer. Make sure you have protected the complete water system any time your coach is in freezing temperatures. Failure to complete the winterization process may result in extensive damage to the water system, appliances, and coach.

⚠ IMPORTANT

A regulated compressed air supply is needed to properly complete this procedure. The pressure should be regulated between 40 and 60 PSI (pounds per square inch). Higher pressures may cause damage.

How to Winterize a Coach

1. Drain the black and grey tanks. If equipped, also empty the macerator hose.
2. Drain the fresh water tank. Open the tank drain valve located in the driver-side water bay.
3. Turn off the switch(es) to the water heater or the hydronic heating system, including the burner and the 120 Volt element, depending on your coach's equipment.
4. Turn on the refrigerator.
5. While the tank is draining, remove all of the water filters. Install a bypass or the filter canister, including the whole house, refrigerator, and drinking water filters (whether standard or UV), if your coach is equipped.



3 Bypass Valve System

6. For units with a tank-style water heater instead of a hydronic heater:
 - a. Close the valves to the water heater, and open the bypass valve, which is normally located at the back side of the water heater. Depending on your particular floor plan, access to the back of the water heater may be located in a cabinet, the closet, or in an exterior compartment.
 - b. Remove the drain plug at the bottom of the water heater tank on the exterior of the coach.

⚠ NOTICE

For units with a tankless water heater, do NOT put the water heater in by-pass mode. Instead, blow it out, and install the antifreeze as directed for a hydronic heater.

⚠ IMPORTANT

The 120 Volt water heater element must be turned off by flipping the switch near the water heater's drain plug.

⚠ IMPORTANT

On coaches equipped with a Truma AquaGo water heater mounted above the floor line of the coach, open the low point drain located in the hot water recirculation loop between the shower loop and the water heater. The exact location will vary, but the low point drain is typically located in the basement area at or near the lowest point in the loop and may be marked with a low point drain label.

7. Open the low point drains by turning the valve to the "open" position or by pulling up on the handle if the coach is equipped with T-Handle valves. There should be one drain for hot and one for cold, and they are normally located in the water compartment.
8. Connect the regulated air supply to the inlet of the hose from the hose reel (if equipped) or the city water fill inlet using a blowout plug. Air will flow out of the low point drains.
9. Cycle all faucets and the auto fill or tank fill valve (whichever the coach is equipped with) to all possible positions for a minimum of 10 seconds at each position. Do not forget the hot water spigot with low point drain next to the generator (if equipped).

10. Cycle the tank fill valve to all positions in order to purge water out of the lines and valve assembly.

⚠ IMPORTANT

On coaches equipped with Aqua View Showermi\$er Fresh Water Reclamation System, cycle the valve to the bypass position to purge the water out of the line back to the fresh water tank while pressurized air supply is connected. Then place the valve back to normal flow mode to the shower head, and then purge the shower. Do not leave the valve in bypass mode when running antifreeze in the line because it will allow antifreeze into the fresh tank.

11. After blowing the water out of the system with pressurized air, disconnect the hose, and pour approximately one cup of antifreeze into the hose. Hook the hose back up to the pressurized air, and blow the antifreeze through the hose and hose reel to protect it.
12. Close the low point drains. This must be done prior to pumping antifreeze through the lines, or the antifreeze will be pumped onto the ground.
13. Remove the whole house filter canister, and dump any remaining water, and reinstall.
14. Locate the winterizing valves marked "A" & "B" located in the water compartment.
15. Close valve "A" by rotating the valve clockwise. Open valve "B" by rotating the valve counter clockwise.
16. Remove the plug at the end of the clear winterizing hose.
17. Insert the hose into a jug or bucket of antifreeze.
18. Replace the empty jugs, or refill the bucket as needed to complete the entire process.
19. Turn on the water pump by activating water pump switch. Red antifreeze will start flowing through the clear hose into the water lines.
20. Run cold water from the kitchen faucet until the red potable antifreeze is detected. Run hot water from the kitchen faucet until the antifreeze is detected.

⚠ IMPORTANT

Make sure you run enough antifreeze through each faucet to fill each P-trap.

21. Proceed to the next faucet, and repeat process for each faucet, including the lavatory, shower sprayers, and outside shower faucet. If equipped, repeat the process for the instant hot water, drinking water dispensers, and hot water spigot with low point drain (next to the generator).

⚠ IMPORTANT

For coaches equipped with a sink or shower connected to a Saniflo Sanivite lift pump, the lift pump must be completely emptied, or enough RV antifreeze must be poured down the drains to allow the lift pump to cycle until the antifreeze concentration is sufficient for freeze protection. Pour at least one liter of antifreeze down the drain connected to the lift pump. Make sure the pump cycles at least once, then pour another liter down the drain. Wait for the lift pump to cycle again; then the remaining liquid in the lift pump should have an adequate antifreeze concentration at this point.

22. Flush each toilet until the red antifreeze is detected. If the toilet is equipped with a sprayer, activate and flush it until the antifreeze flows from the sprayer.
23. Run the dishwasher through a cycle to winterize the water inlet plumbing, as well as the pump and drain line.
24. If the coach is equipped, turn on the washing machine. Select a wash cycle setting that uses warm water to activate both the hot and cold inlet valves. Allow the washing machine to fill for approximately two minutes. Press the “cancel” and “drain” selection to begin draining the machine. This will winterize the pump and drain, as well as the washing machine’s P-trap.

25. Depress the refrigerator’s external water dispenser while holding a container to catch the fluid. Continue to let the fluid flow until the red antifreeze is detected.

⚠ NOTICE

The red antifreeze may not appear instantly, as most refrigerators have a reserve for cold water. However, if you did not remove the water filter in the refrigerator in Step 5, the fluid will run clear for a long time.

26. Make sure the ice maker is turned on. Once it reaches the proper temperature, it will attempt to make ice cubes, which will become pink in color. This may take several hours. Once they become pink, turn off the ice maker and the refrigerator. Empty the ice cube tray, and clean out the ice maker and freezer area.
27. Turn off the water pump. Close the winterizing valve “B”, and open valve “A”.
28. Insert the plug into the clear hose, and stow the winterizing hose.
29. If the coach is equipped, winterize the macerator by turning it on and emptying the black and gray holding tanks, allowing the macerator and macerator hose to fill with antifreeze. If there is no macerator in the coach, use the sewer hose to drain the black tank, followed by the gray tank.

How to De-Winterize a Coach

This article provides the Newmar-recommended step-by-step instructions for de-winterizing a coach.

1. Connect your water hose to a fresh potable water supply.
2. Set the auto fill or tank fill valve for city water supply.
3. Run water through each faucet, toilet, and shower on both hot and cold settings.
4. Run the dishwasher and the washing machine through a complete cycle before using.
5. Depress the refrigerator water dispenser while holding a container to catch the fluid being dispensed. Continue until clear water is dispensed.
6. Install the refrigerator filter (if equipped).
7. Turn off the water supply drain pressure from the system using low point drains. Install all filters in the system.
8. Close the low point drains.
9. Turn on the ice maker, allowing it to run through multiple cycles. Throw away any ice with antifreeze. Clean out the ice maker and the tray until clear ice is available.
10. If the coach is equipped with a water heater, install a drain plug. Open the water heater valves, and close the by-pass valve on the back side of the water heater.
11. Turn on the fresh potable water supply.
12. Open the hot water faucet until the water heater is filled and flows through the faucet without air.
13. Flip the water heater switch to the “ON” position. This is located near the drain plug (if equipped with a water heater).
14. Check the tank level, and dump if necessary.
15. The coach is now ready to use.

⚠ NOTICE

Newmar recommends installing clean filters unless the sanitization process will also be completed at this time.


How To Sanitize The Water System

This article provides the Newmar-recommended step-by-step instructions for sanitizing a complete water system.

⚠ NOTICE

The following instructions are generic to Newmar coaches, and are NOT specific to your coach. They should only be used as a reference guide for this process. Appliances, drain locations, and plumbing components may vary by coach.

Follow the sanitizing instructions to reduce the risk of fresh tank contamination. All of the water should be drained from the fresh water system when the coach is not in use for more than one week. Whenever possible, drain the fresh water tank before traveling or only carry what you will need to get to your destination. Water in the tank will reduce the carrying capacity of the coach.

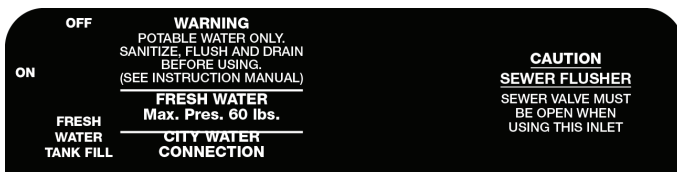

When To Sanitize The Water System

Newmar recommends sanitizing your water system under the following scenarios to discourage organic growth and contamination:

- Purchasing a new or used coach
- After your coach has been in storage for a lengthy amount of time
- At least once per year for proper maintenance
- If an unpleasant odor arises from your water

⚠ NOTICE

The Fresh Water System may need to be sanitized more often depending on the source of the water supplied to the coach.

How To Sanitize The System

1. Drain the fresh water tank by turning the tank drain valve to the open position.
2. Drain the water heater (if equipped) by removing the drain plug.

⚠ NOTICE

Do not attempt to drain the water heater when the water is hot or the system is pressurized, as scalding may occur.

While the tank is draining, remove all of the water filters, including the refrigerator and drinking water filters (standard or UV), if your coach is equipped, and install a bypass.

⚠ NOTICE

Not all filters have a 'bypass,' so it may be necessary to install the canister without the filter.

3. Remove the main (whole house) filter housing.
4. Remove the filter, and pour household bleach (1/4 cup per 15 gallons, as determined by your tank capacity) into the filter housing. For example: 1.75 cups of bleach for coaches equipped with a 105 gallon fresh water tank or 1.25 cups of bleach for coaches equipped with a 75 gallon fresh water tank. This will approximately be a 50 ppm (parts per million) bleach solution.

⚠ NOTICE

For any coaches not equipped with a whole house filter, skip these steps. Instead, use a funnel to pour bleach into the hose prior to hooking the coach up to a potable water supply.

5. Reinstall the housing and the water heater drain plug after it has drained completely.
6. Hook up the water hose from the hose reel (if equipped), or hook up a drinking water-safe portable hose to a potable water source.
7. Turn the valve to 'tank fill' or 'manual tank fill.'
8. Turn on the potable water source, and completely fill the water tank. (This will flush the bleach/water solution from the filter housing [Step 4] into the water tanks.)
9. Turn off the tank fill valve (on non-auto fill coaches).
10. Turn on the water pump.
11. Run water out of one faucet on both hot and cold settings until a strong bleach smell becomes evident.
12. Repeat this for all faucets, as well as the refrigerator, dishwasher, washing machine, toilets, low point drains, etc.

⚠ NOTICE

Top off the water tank so that the sides and top of the tank are sanitized as well.

13. Turn on the refrigerator and the ice maker. Depending on your refrigerator model, the ice maker may have a flip lever or an ON/OFF switch. Let the ice maker run until the bleach/water solution is detected. This may take a few cycles. One cycle consists of the ice maker filling the trays with water, freezing the water, and then dumping the ice into the ice bin. This cycling process will occur automatically if the refrigerator, the ice maker, and the water pump are all turned on.
14. Disconnect the water hose, and dump out some water.
15. Pour one ounce (1 oz.) of bleach into the water hose, and reconnect it to the potable water supply.
16. Turn on the water for a brief moment to flush the bleach through the water hose, allowing it to mix in the hose reel or the portable hose used for potable water.
17. Turn off the water supply, and disconnect the water hose.
18. Cap the end of the hose.
19. Let the bleach water sit in the system for a minimum of four hours. However, for best results, allow the solution to sit overnight or up to 12 hours.

20. Drain the fresh tank using the drain valve.
21. Fill the fresh tank with clean potable water.
22. Run water out of each faucet on both hot and cold settings until the bleach smell is no longer evident.

⚠ NOTICE

If the bleach smell is still noticeable, repeat steps 21-22 to flush the system again.

⚠ IMPORTANT

If algae or slime is detected in the fresh water system, it may be necessary to repeat the entire process until the system is flushed clean.

Once the system is flushed, Newmar recommends replacing the water filters. Do not re-use the contaminated filters, as this will greatly reduce the effectiveness of the sanitization process.

⚠ NOTICE

Sanitizing through the winterization process will not sanitize the fresh tank or all of the water lines.

Routine Maintenance Schedule (Diesel Coaches)

This article provides the Newmar-recommended routine maintenance schedule for diesel coaches.

⚠ IMPORTANT

All routine maintenance is the responsibility of the owner and is not covered by the Newmar Limited Warranty. Please note that damage caused by improper or unapplied maintenance is not covered by the Newmar Limited Warranty.

⚠ IMPORTANT

Cosmetic adjustments and alignments must be performed within the first three (3) months from date of original purchase for warranty consideration. Thereafter, these items are considered routine maintenance.

RV Service / Maintenance

Items supplied by other manufacturers may require specific individual maintenance not listed herein. Please refer to the manufacturers' suggested maintenance guidelines in the Owner's Information Packet.

Description	Weekly	Monthly	Quarterly	Bi-Annually	Annually	Other
Test smoke alarm, carbon monoxide detector, and propane gas detector.	X					
Check battery water level (liquid lead acid batteries only).		X				
Clean range hood exhaust fan filter and blades.			X			
Check LP gas lines for leaks with soap solution or leak detector.			X			
Check coach charging system and inspect battery connections/fluid levels			X			
Inspect and clean slideout rollers on each slideout.			X			
Inspect the exterior rubber slideout seals, and apply a UV inhibitor, such as 303 Protectant.				X		
Have the propane system inspected by a qualified technician.				X		
Check operation of windows, latches, and hinges.				X		
Check and replace water filters.				X		
Clean the roof ducted air conditioner filter(s).				X		
Service each roof air conditioner per manufacturer requirements.				X		

Description	Weekly	Monthly	Quarterly	Bi-Annually	Annually	Other
Clean and inspect all door and window seals, and reseal where necessary.				X		
Inspect and reseal around the tub and shower area where necessary.				X		
Lubricate the exterior door hinges and latches with a graphite (silicone) lubricant.				X		
Check, clean, and tighten battery cables, and inspect batteries for proper fluid level.				X		
Inspect roof seams and joints (should be performed by an Authorized Newmar Service Center. If resealing is necessary, it is the owner's responsibility and is not covered by the Newmar Limited Warranty).				X		
Check all gas appliances for proper operation.				X		
Check BIRD/BIM bi-direction charging system.				X		
Check exterior lights, including tow plug					X	
Perform generator oil, fuel, and air filter change					X	
Lubricate the moveable parts on the entrance step.					X	
Inspect the slideouts for proper seals. If realignment is necessary, please contact an Authorized Newmar Service Center.					X	
Sanitize the fresh water system.					X	
Wax and buff all gel-coat surfaces on the vehicle.					X	
Check mounting bolts on all-electric slideout motors for proper torque. This should be performed by an Authorized Newmar Service Center. If any bolt is under-torqued, remove the bolt, and add blue LOCTITE® thread sealant to the bolt threads. If there is no washer on the nut side of the bolt, add a flat washer. Reinstall and torque all 5/16" bolts to 19 ft. lbs. and all 3/8" bolts to 33 ft. lbs.					X	
Refrigerator (House-type) - Annual maintenance (includes water and air filter)					X	
Refrigerator (Absorption-type) - Supplier required maintenance (clean burner, cooling unit's flue and spiral baffle, roof cap screen or upper side vent. Check control board sequence for correct functionality).					X	
Service forced air furnace					X	
Service LP water heater burner, flush tank, and check anode rod					X	
Water pressure / leak test / flush system / sanitize all tanks					X	
Service jacks / leveling system					X	
Service AquaHot/Oasis Furnace/Water Heater (Every THREE years)						X

Chassis Service / Maintenance

⚠ IMPORTANT

Always follow the chassis and/or engine maintenance guidelines found in the chassis and/or engine manufacturer owner's manual. The maintenance intervals may vary based on engine, engine oil type, severity of use, mileage, and/or timeframe.

How to Prepare A Coach for Storage

This article provides general steps and recommendations to prepare a coach for storage.

The following information is not intended to provide detailed instructions relating to any specific year, model, or floorplan of the coach. Some of the general statements may not apply to a coach, depending on its installed equipment and/or options.

Whether stored for one month or even longer, there are several things you can do to help ensure the coach is ready to go after the downtime.

Pre-Storage Steps

Make sure the fuel tank is full. You can also add a fuel stabilizer appropriate to your type of fuel. Run the engine long enough to distribute the stabilizer. It is also recommended to have engine and generator oil changes before storing for a few months or more.

NOTE FROM NEWMAR

Refer to your chassis owner's manual for recommended products.

If the coach is being stored for winter, please refer to How to Winterize A Coach for further steps.

Choose a Good Spot for Storage

The best option is indoor storage. The second best option is under a carport or other shelter. The last option is outdoor storage. Store away from machinery, heat sources, and areas that generate noxious fumes.

If storing outside, avoid parking near trees or where weeds and grass can grow tall. This will help protect the coach from damage from limbs, moisture, and other hazards.

Newmar recommends leaving your coach plugged into shore power during storage, so parking in a location where this option is available would be best. This will help maintain the battery charge. Newmar's recommended best practice is to store the coach while plugged into 50 amp or 30 amp shore power. If you choose to store plugged into 20 Amp, refer to the Newgle article titled "Can I store My Coach While Using 20 Amp Service?" for more information.

Prepare the Coach's Interior

Remove any kitchen or bath items that are perishable, including food, beauty items, and anything that can freeze. Defrost the refrigerator and put a carton of baking soda inside. Leave the doors propped open for air circulation.

Put out insect and/or mouse bait to help eliminate any vermin that might enter the coach.

Make sure all the lights are off, including the storage and exterior areas. Turn off the breakers to all appliances that you do not want to operate during storage (i.e. the refrigerator, stove, etc.).

Inspect and Clean the Coach Exterior

Inspect roof and window sealant for cracks that might admit water. Reseal any cracks with the appropriate sealant for the surfaces. Allow any sealant to cure before washing the exterior.

Inspect the underside of the coach. Block or seal any gaps that are big enough to admit mice or other vermin.

Inflate the tires to the maximum recommended pressure, which is noted on the tire.

Thoroughly wash the exterior and clean the interior of the coach. Make sure the exterior is completely dry, including fabric awnings before storing inside or using an RV cover.

Prepare the Batteries

If the batteries are liquid lead-acid, top off the cells with distilled water. Make sure the batteries are fully charged, which will protect them from freezing and sulfation. Make sure all other battery types are charged prior to storage.

Coach owners who decide not to follow Newmar's recommendations to keep the coach plugged into the appropriate outlet (shore power 50 amp or 30 amp) during storage will need to do very frequent checks on the coach to check/maintain and charge batteries.

Prepare the Generator

If you are storing the coach inside and your coach has auto gen start (AGS), disable this function. If stored outside, the AGS can be enabled to help maintain battery charge if and when shore power is not available.

Inverter Power

Depending on your unique situation, you may want to power off the inverter to prevent it from providing 120 volt power, which will drain batteries that are not being charged.

Some coach owners may want to leave the inverter powered on to keep the refrigerator cold in case of power loss. This applies to coaches that are typically plugged in during storage and checked frequently (depending on the length of storage time and shore power availability).

Turn off or disable the inverter if you do not wish to provide 120 volt power during storage. When shore power is not available and if the inverter is not off or disabled, the battery bank will be drained. If left drained, unattended dead batteries in a cold climate may result in frozen and/or damaged batteries that may require replacement.

Some inverters may have the ability to turn the charger section on or off. When shore power is available, it is recommended to leave the charger on or enabled to charge the batteries as needed. For additional information about inverter(s)/charger(s), refer to the product page(s) in Newgle for your installed component(s).

When Ready to Store

If storing outside, pull onto blocks to help protect the tires from direct contact with the ground. These give the tires some defense against changes in ground temperature. Make sure the block is large enough so that the tires fully rest on them and do not touch the ground at all.

Plug the coach into shore power, if available.

Finally, if storing outside, covering the tires and the coach with breathable covers will help protect them from the sun and other elements.

Checks While in Storage

Check the batteries weekly if not plugged into shore power and monthly if plugged into shore power, and charge them if below 12.5 volts. Plug the coach into shore power or use a portable charger to top off the batteries to their full charge, as needed.

If the coach is stored outside, do a visual check for damage, leaks, rodents, etc., every month.



The leveling system should be cycled at least once a month to keep the system in operating condition.

If the coach will be stored for more than three months, move the coach slightly every three months to rotate the tires and help prevent flat spots. Top off the air in the tires, if needed.

Maintenance and Service Record

Use this chart to keep track of all service work performed on the coach. For additional pages, refer to Newgle.

Date	Service Center / Dealer Name and Address	Description of Service Work Performed	Cost
xx/xx/xxxx	Example Dealer Name and Address	Example of Description of Service Work Performed	xxxx.xx

Fuel, Oil, and MPG Record

Use this chart to keep track of all odometer mileage, fuel, oil, and average MPG for the coach. For additional pages, refer to Newgle.

[illegible][illegible]

[illegible][illegible]

This page is intentionally blank.



NEWMAR CORPORATION | 355 N DELAWARE ST | PO BOX 30
NAPPANEE, IN 46550-0030 | 574-773-7791 | FAX 574-773-2895
NEWMARCORP.COM