CASS HUDSON CO. Installation Instructions Dream Dinette

(Window Version)









CASS HUDSON CO. IMPORTANT


Ensure assembly is square, straight, and centered throughout installation process.

Vehicle wall must be reinforced prior to installation of Dream Dinette.

Slotted holes are used in order to allow for adjustment during the installation process. Once the mechanism is installed properly the remaining holes should be used to secure the mechanisms in place.


Table Top Preparation


• Strike a centerline down the middle of the table top.

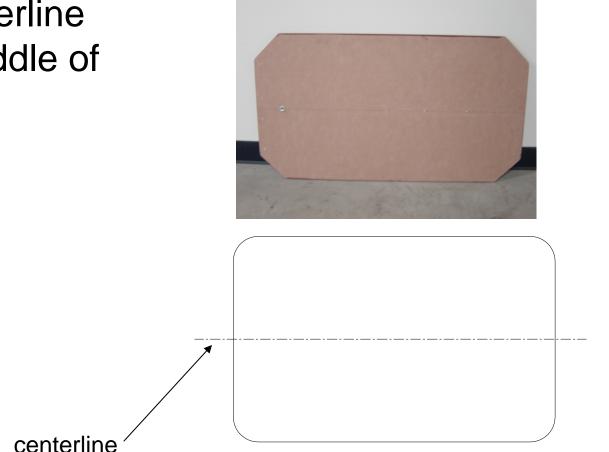

Attach Mechanism to Table Top

- Unfold dinette mechanism and install two bolts being sure not to over tighten.
- Strut Location for version with 22" mounting plate.
- This location is not used in this design.
- Strut Location for version with 25.5" mounting plate.

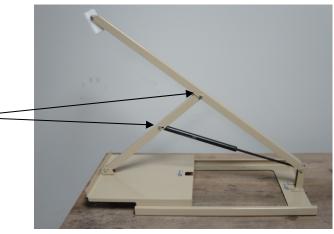

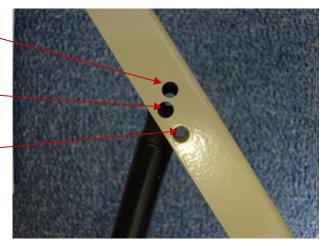

Attach Mechanism to Table Top

• Turn mechanism over on to table top.



Attach Mechanism to Table Top continued

- Align mechanism so that it is centered and flush to the edge of the table top.
- Ensure that the mechanism is square, straight, and centered to table top then secure using all 8 hole locations.





Attach Slide Track and Lock Bar

- Place slide track in center of table top and adjust such that the slide block covers approximately 1/3 of the lock bar window.
- Secure slide track into place using slotted holes.
- Firmly press lock bar into place and secure using hardware. Be sure the lock bar is parallel with the slide track and the hardware is as far apart as possible in order to insure proper operation of lock.





Mount Assembly

 Mount assembly to wall being sure to utilize all 13 mounting holes.





NOTES:		REVISION HISTORY			
UNLESS OTHERWISE SPECIFIED	REV	DESCRIPTION	DATE	APPROVED	
	A	PRODUCTION RELEASE	07.19.07	DLS	
	RAWN darre HECKED IG APPR GR APPR UNLESS OTHER DIMENSIONS A ANGLES	Image: miselength O7/19/07 CASS II Image: miselength CC CC Image: miselength TITLE CC Image: miselength TITLE Image: miselength Image: miselength SIZE DWG NO RE IN INCHES B DWG NO	UDSON CO ME ROLL WITH DREAM DINETTI DDT255X15	I US	