




F1




R1

R1

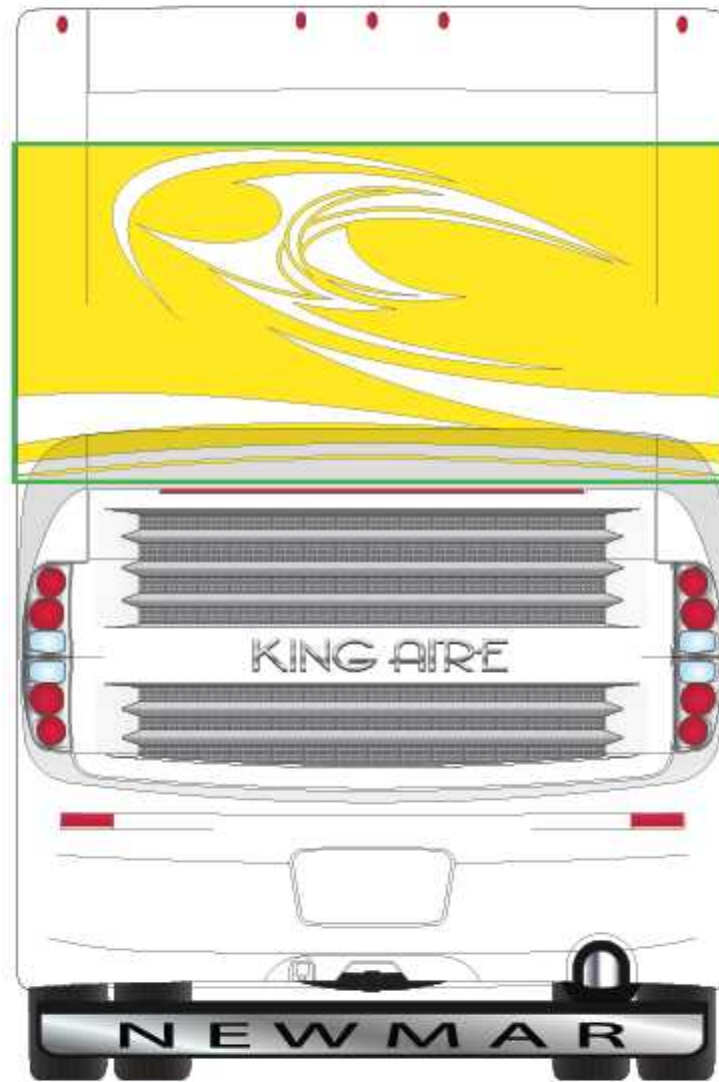

Begin with P1 by aligning registration marks at front cap molding and at floor rail molding. Start at front and work toward rear. Proceed with panels 2, 3, and 4 as shown.

Apply front and rear as shown.

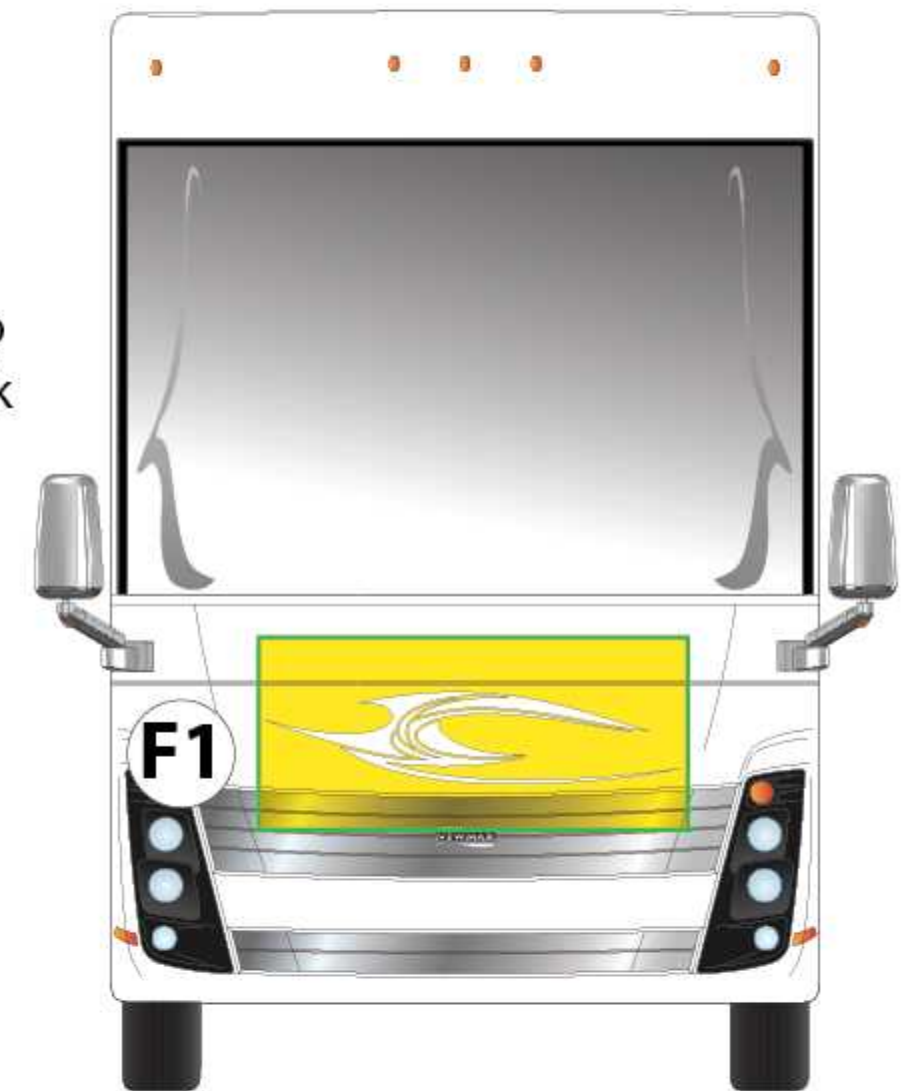


Passenger Side

P4

P3

P2

P1

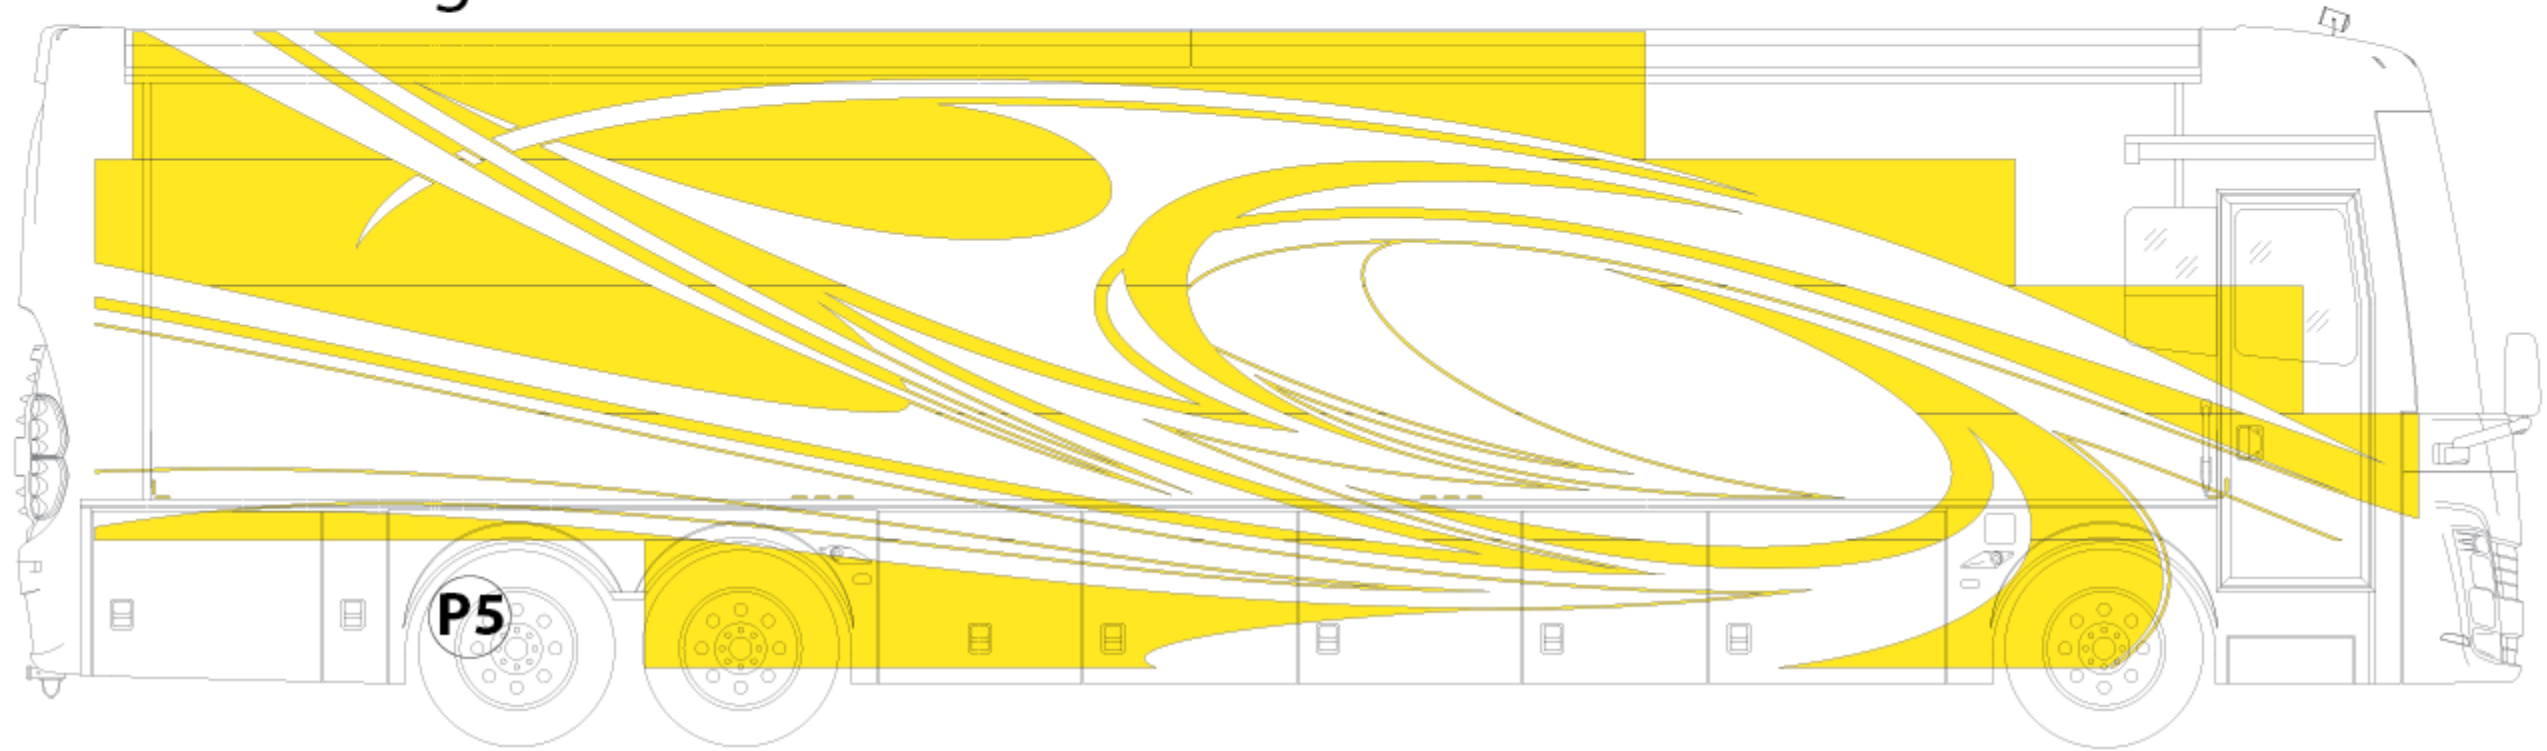

Driver Side

