

# PEAK SLIDER REPLACEMENT

## REMOVAL AND INSTALLATION INSTRUCTIONS

**DESCRIPTION:** PEAK SLIDER PLACEMENT

**APPLICATION:** A & B-CLASS VEHICLES

**PART NUMBER:** ????

**KIT CONTENTS:**



QTY.1 - ????





### TOOLS REQUIRED:

1. #1 PHILIPS SCREW DRIVER

### PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, AND NOTES:

**⚠ WARNING**

## REMOVAL AND INSTALLATION PROCEDURE:

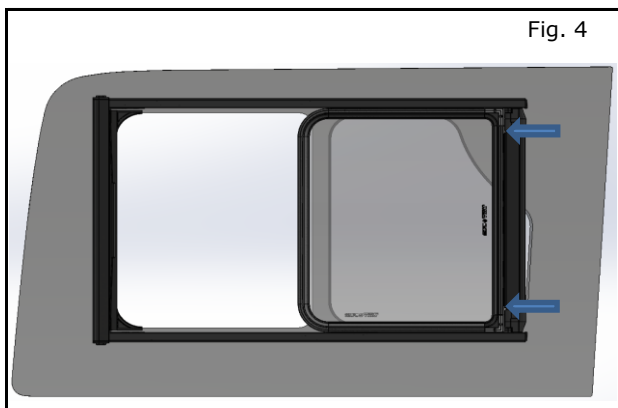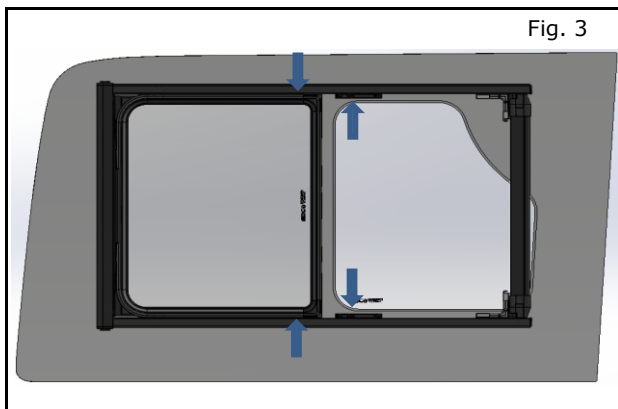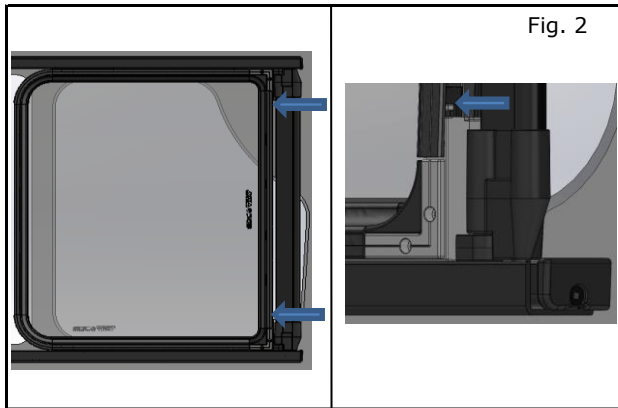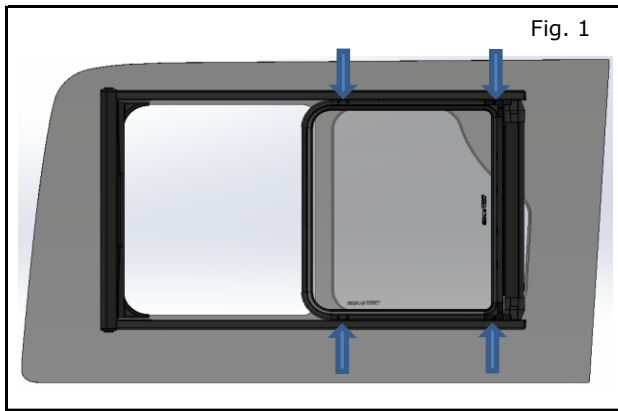

1) OPEN WINDOW

2) REMOVE QTY. 8 #1 BLACK SCREWS WITH #1 SCREWDRIVER

2) INSERT #1 SCREWDRIVER BETWEEN CORNER PIN TAB AND CORNER ATTACHEMNT PLASTIC ON BOTH TOP AND BOTTOM OF SLIDER.

3) WITH SCREWDRIVER INSERTED BETWEEN PLASTIC, PRESS SLIDER FORWARD AND PRESS HANDLE BACKWARD TO SEPARATE SLIDER FROM HANDLE ASSEMBLY

NOTE(S): PLASTIC SHOWN IN WHITE FOR BETTER VISABILITY


4) REMOVE DEFECTIVE SLIDER WINDOW

5) INSERT NEW WINDOW AND ALIGN WITH PIN PLASTIC

6) SLIDE WINDOW TOWARDS HANDLE UNTIL BOTH HANDLE PIN PLASTIC SNAPS INTO PLACE

## REMOVAL AND INSTALLATION PROCEDURE:

Fig. 5

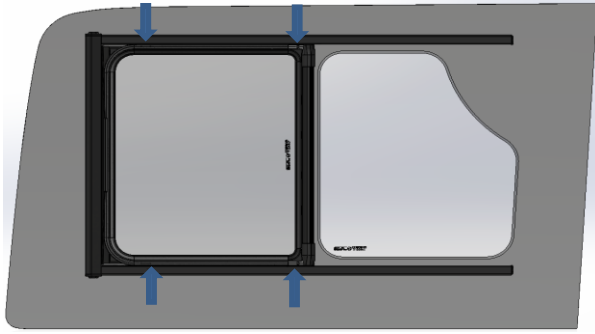

- 7) CLOSE WINDOW
- 8) USE 5/64" DRILL BIT AND DRILL QTY. 4 HOLES IN PLASTIC THROUGH EXISTING HOLES IN SCREEN SIDE OF SLIDER FRAME
- 9) USE #1 PHILIPS SCREWDRIVER TO SCREW QTY.8 #1 BLACK SCREWS BACK INTO SLIDER