
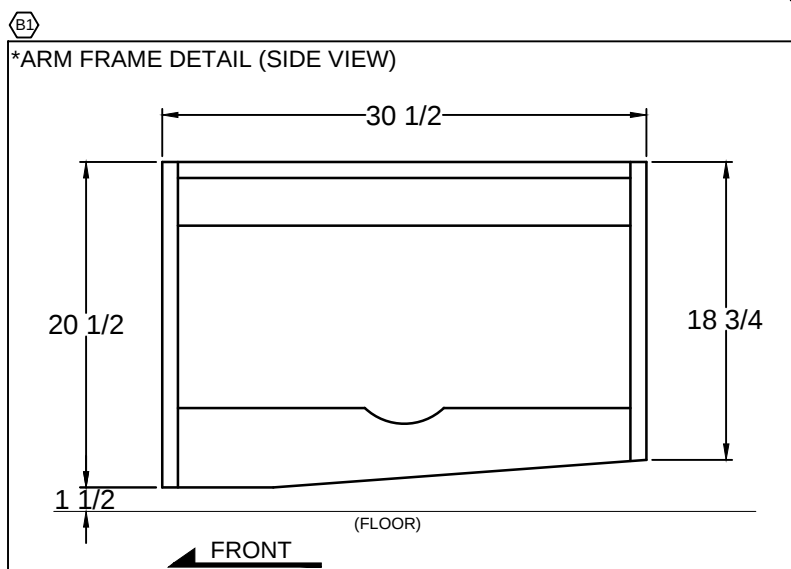


CUT PATTERN	
BACK FRAME NO.	
BASE FRAME NO.	
WOOD PATTERN	

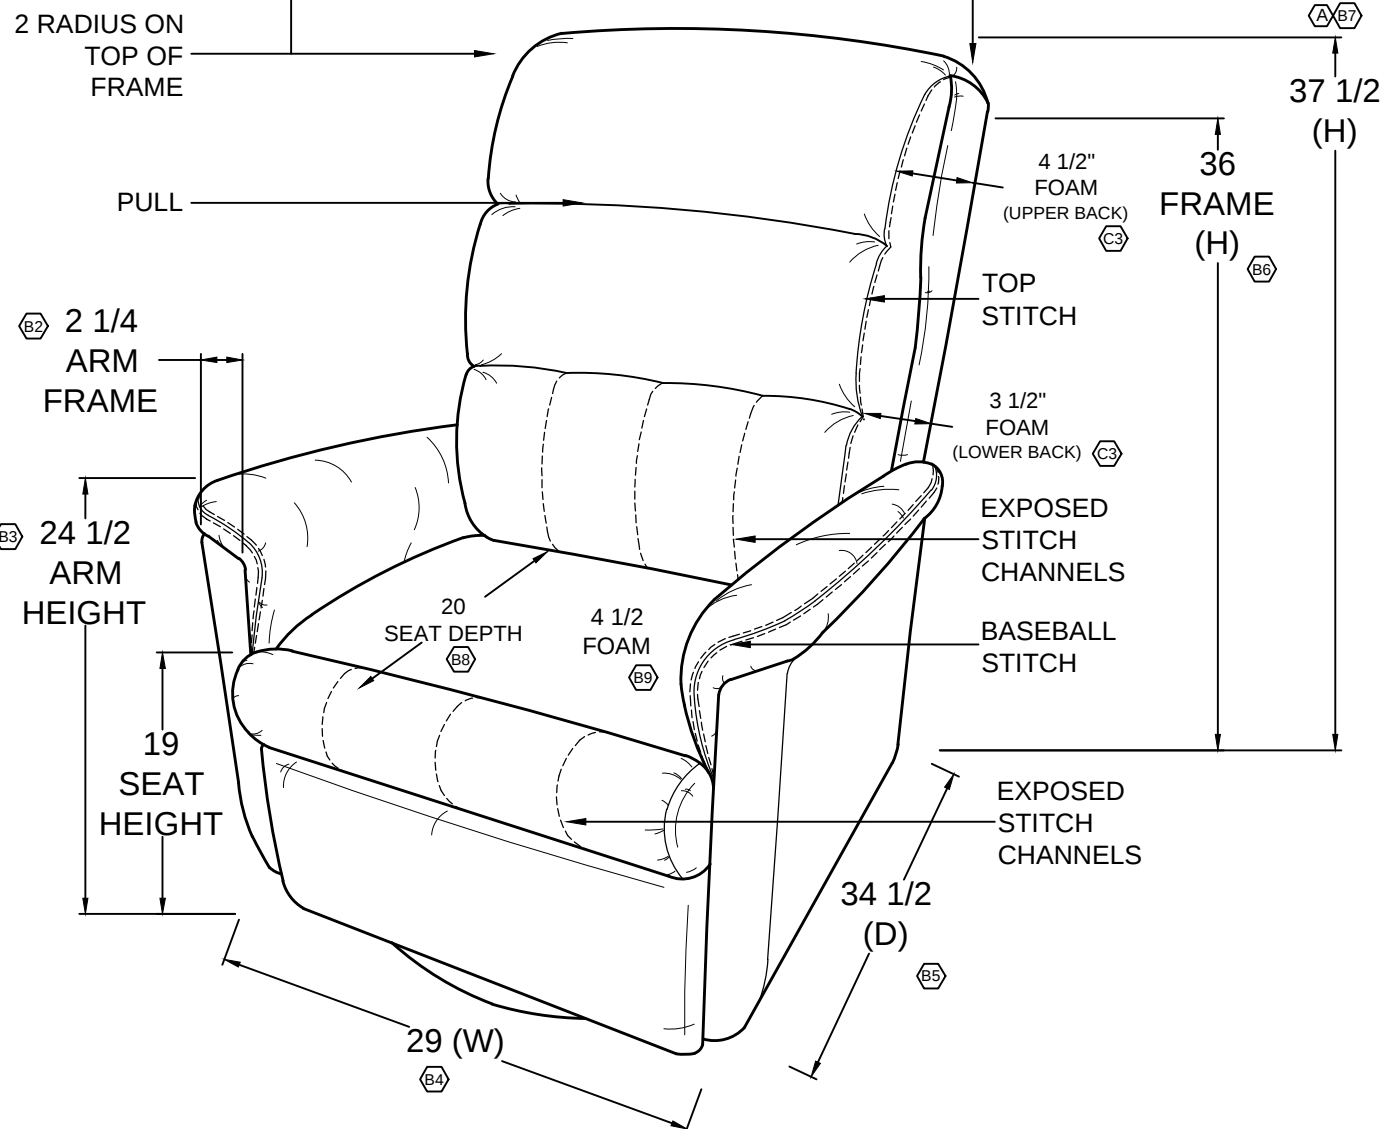

JA	C	[1] ADD SPRING CLIPS TO SEAT SPRINGS. [2] ADD 8x24 802 SPRINGS x4. [3] ADD 4-1/2" FOAM TO UPPER BACK & 3-1/2" FOAM TO LOWER BACK. (REF. ECO #029-2019). [4] MECHANISM LEG A410812333S 23" WIDE MECH W/ SWIVEL 4108-2. (REF. ECO #036-2019)	06.10.19
JA	B	PRODUCTION UPDATE: [1] ADD ARM FRAME DETAIL. [2] CHANGE ARM FRAME WIDTH TO 2-1/4"; WAS 2". [3] CHANGE ARM HEIGHT TO 24-1/2"; WAS 27". [4] CHANGE WIDTH TO 29"; WAS 28-1/2". [5] CHANGE DEPTH TO 34-1/2"; WAS 36-1/2". [6] CHANGE FRAME HEIGHT TO 36"; WAS 35-1/2". [7] CHANGE O.A. HEIGHT TO 37-1/2"; WAS 38". [8] ADD 20" SEAT DEPTH. [9] ADD 4-1/2" SEAT FOAM	01.28.19
JA	A	PER RL, O.A. HEIGHT IS 38"; WAS 40-1/2".	11.08.18