
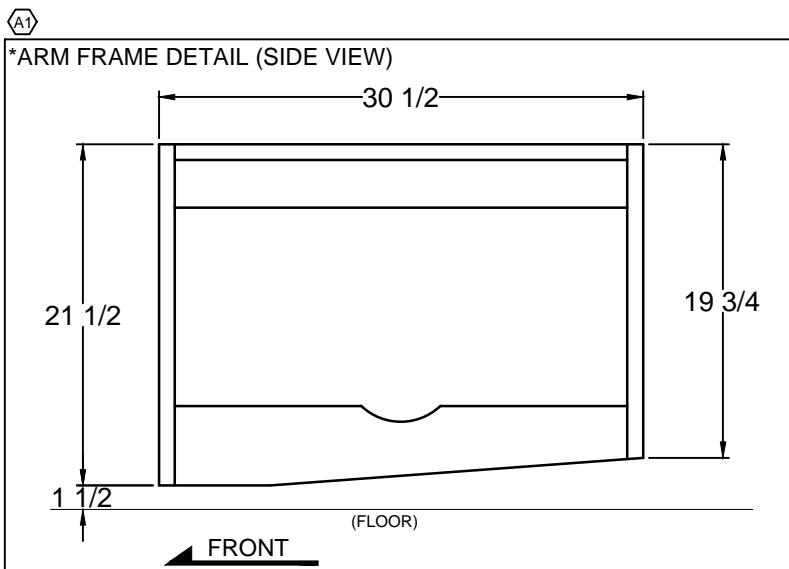


CUT PATTERN	
BACK FRAME NO.	
BASE FRAME NO.	
WOOD PATTERN	

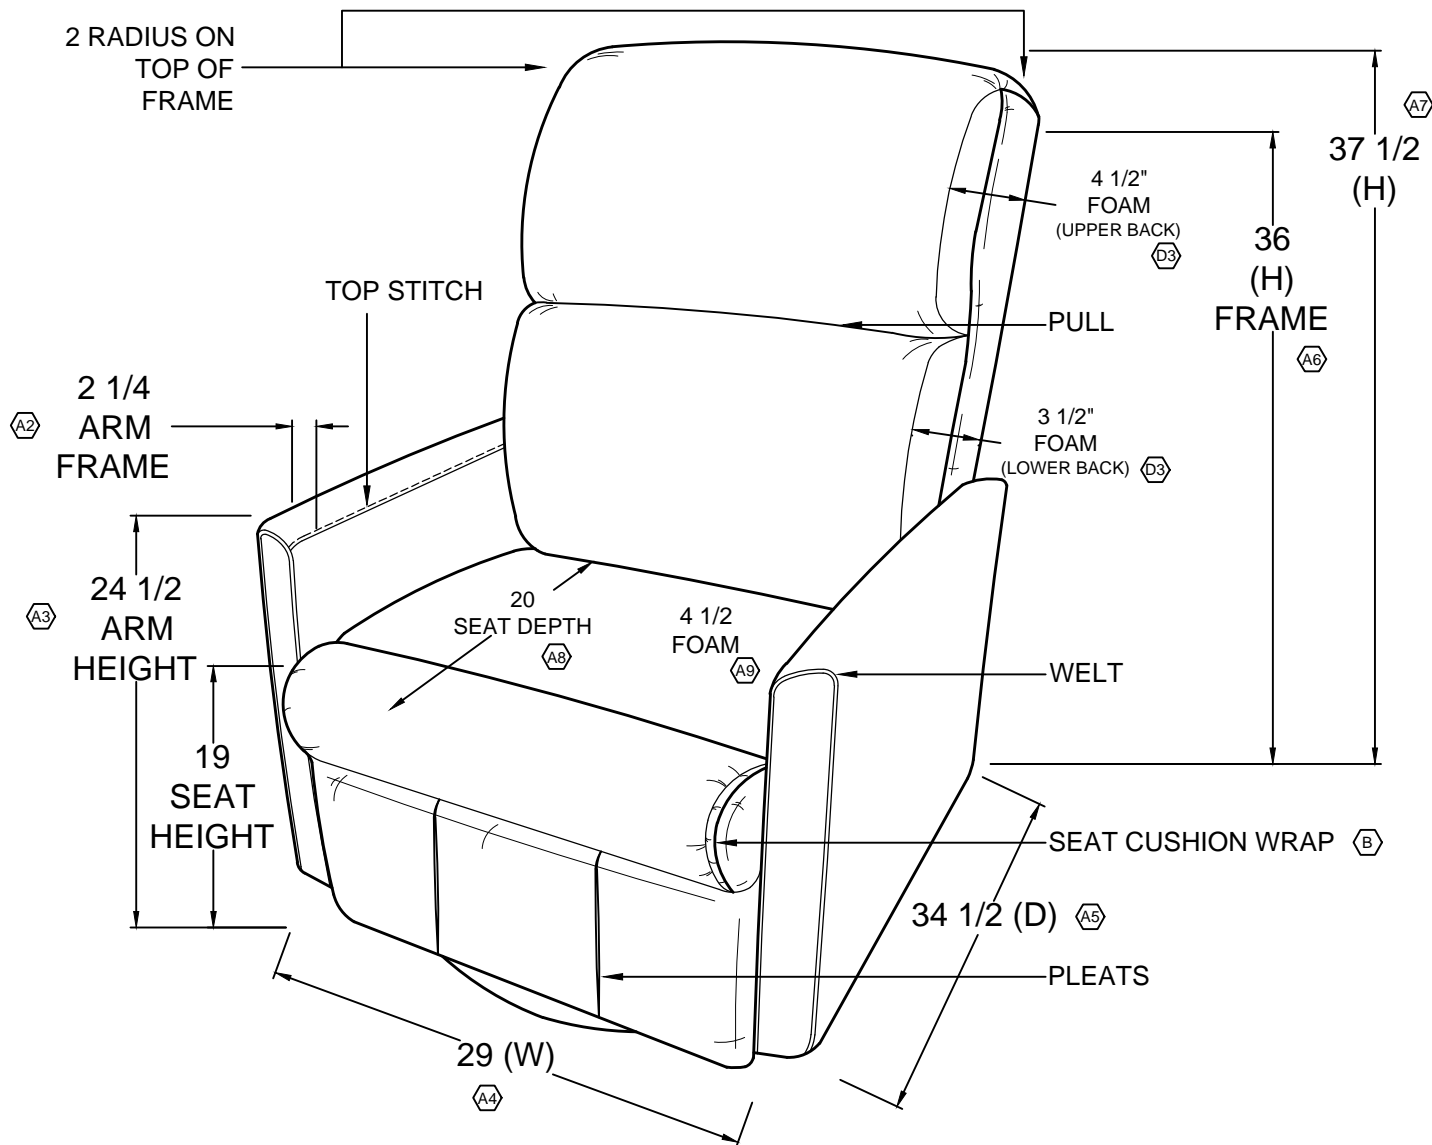

**\*NOTE:**

- CONNECT SEAT WRAP TO FOOTREST.
- ADD BLACK DECKING SKIRT INSIDE FOOTREST.

JA	E	ADD NOTES TO CONNECT WRAP TO FOOTREST PANEL AND ADD BLACK DECKING SKIRT TO INSIDE FOOTREST. (REF. ECO #058-2019)	02.24.2020
JA	D	[1] ADD SPRING CLIPS TO SEAT SPRINGS. [2] ADD 8x24 602 SPRINGS x4. [3] ADD 4-1/2\" FOAM TO UPPER BACK & 3-1/2\" FOAM TO LOWER BACK. (REF. ECO #029-2019). [4] MECHANISM LEG A410812333S 23\" WIDE MECH W/SWIVEL 4108-2. (REF. ECO #058-2019)	06.10.19
JA	C	PER RL, ADD SEAM TO SEAT FOR CUSHION WRAP.	04.09.19
JA	B	ADD SEAT CUSHION WRAP. (REF. ECO# 031-2019)	03.29.19
JA	A	PRODUCTION UPDATE: [1] ADD ARM FRAME DETAIL. [2] CHANGE ARM FRAME WIDTH TO 2-1/4\" WAS 2\". [3] CHANGE ARM HEIGHT TO 24-1/2\" WAS 27\". [4] CHANGE WIDTH TO 29\" WAS 35-1/2\". [5] CHANGE DEPTH TO 34-1/2\" WAS 36-1/2\". [6] CHANGE FRAME HEIGHT TO 36\" WAS 38\". [7] CHANGE O.A. HEIGHT TO 37-1/2\" WAS 40-1/2\". [8] ADD 20\" SEAT DEPTH. [9] ADD 4-1/2\" SEAT FOAM.	01.28.19