
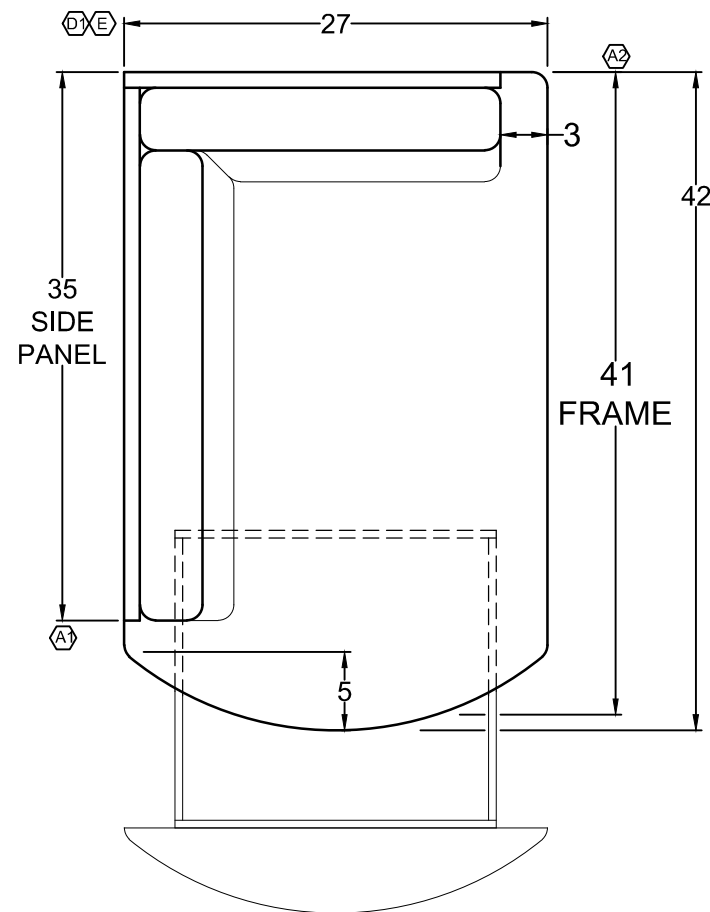
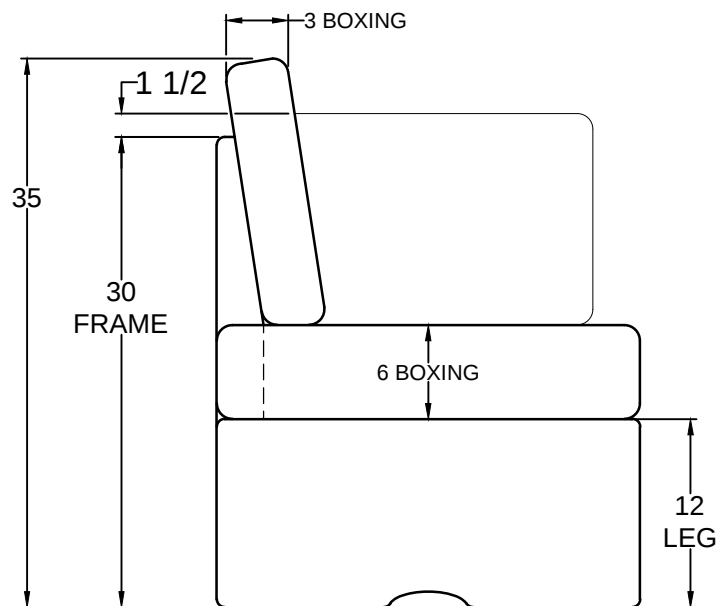


CUT PATTERN	
BACK FRAME NO.	
BASE FRAME NO.	
WOOD PATTERN	

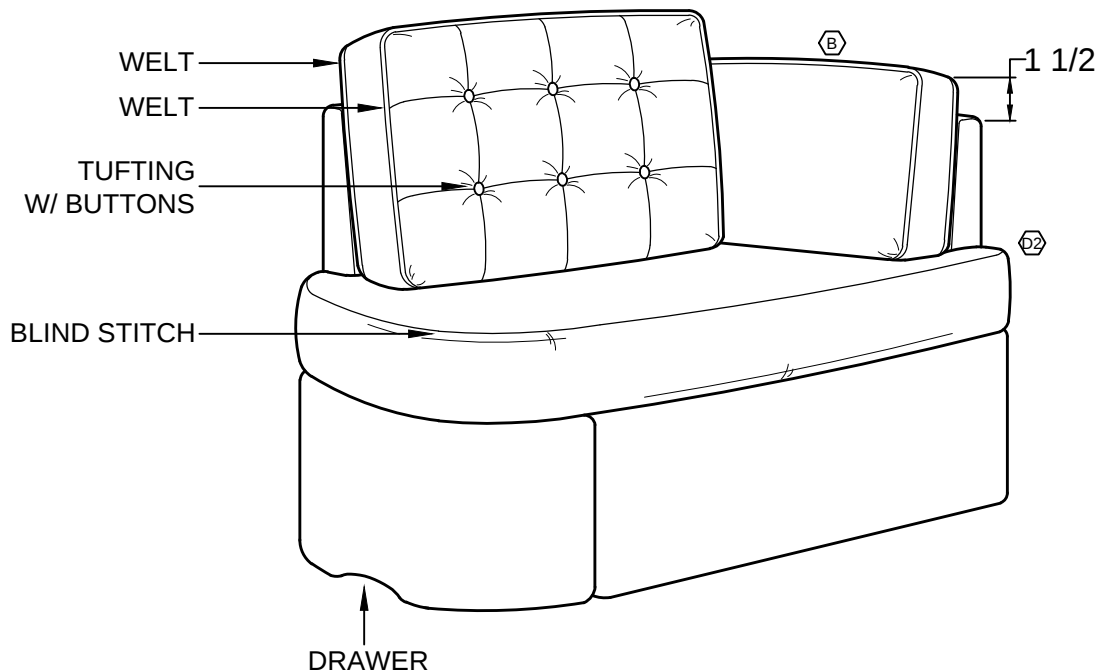

JA	E	PER RL, CHANGE O.A. WIDTH BACK TO 27"; WAS 25".	06.04.21
JA	D	PER RL, [1] CHANGE O.A. WIDTH TO 25"; WAS 27". [2] ADD T-CUSHION TO WALL SIDE CUSHION.	05.27.21
JA	C	PER RL, REMOVE BUTTONS & TUFTING FROM WALL SIDE PILLOW. (REF. ECO# 005-2021).	03.31.21
JA	B	PER RL, REMOVE SQUARES FROM SEAT CUSHION.	03.17.21
JA	A	PER WOOD, [1] CHANGE SIDE PANEL DEPTH TO 35"; WAS 37". [2] ADD 41" METAL FRAME DEPTH DIMENSION TO DRAWING.	03.08.21