


Victorian® Jetted Shower™ Trim Garniture Jetted Shower™ Victorian®

Adorno Victorian® para Jetted Shower™

Model/Modelo/Modèle T18255 Series/Series/Seria

Victorian® Jetted Shower™

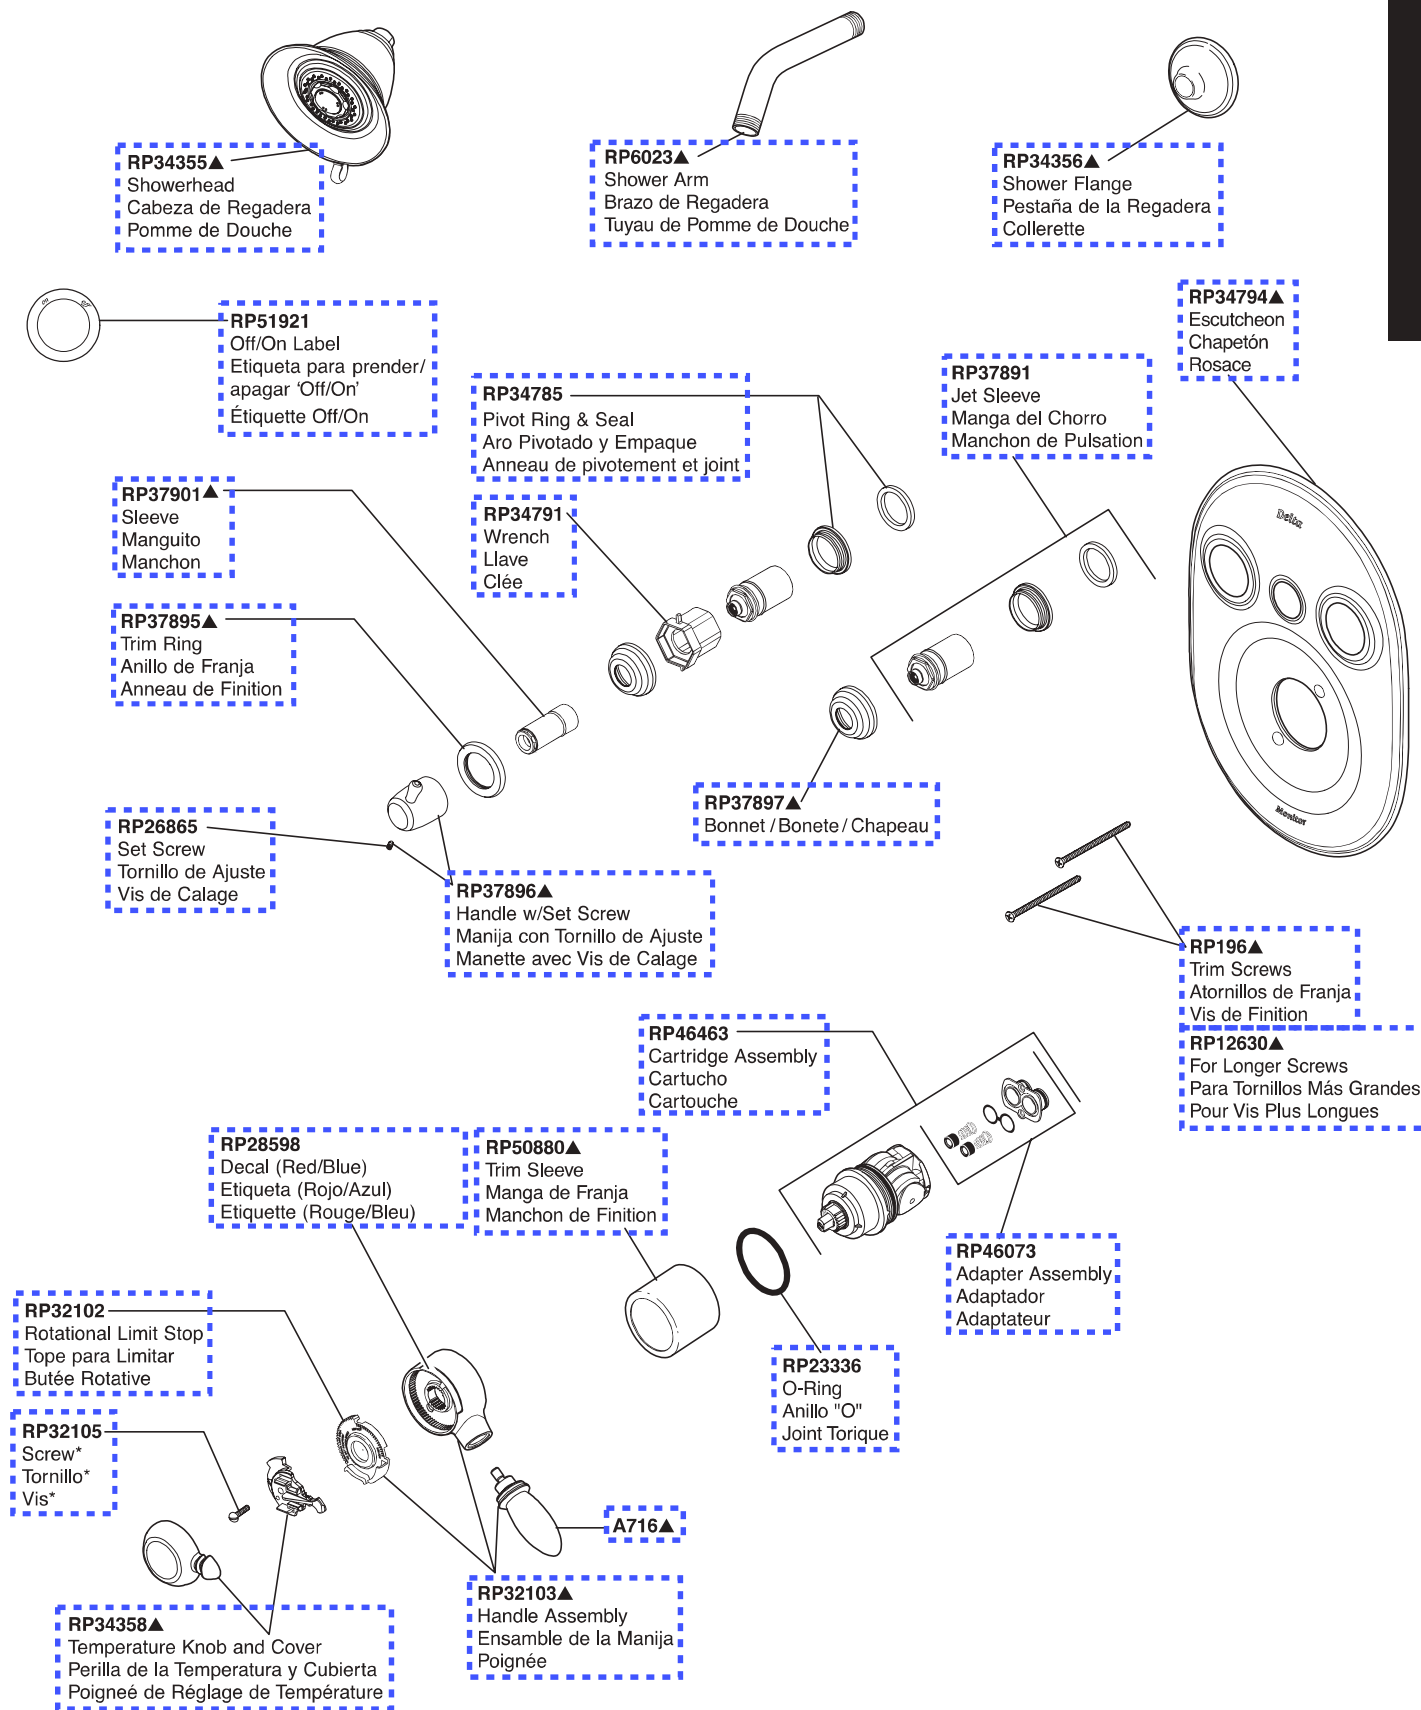

▲Specify finish / Especificar el Acabado / Précisez le fini

T18255 51915_Rev D 5-17-12

*NOTE: Do NOT overtighten screw./ **NOTA:** NO apriete demasiado el tornillo./ **NOTE:** NE serrez PAS trop la vis.

TRIM ONLY

Victorian® Jetted Shower™ Trim Garniture Jetted Shower™ Victorian®

Adorno Victorian® para Jetted Shower™

Model/Modelo/Modèle T18255 Series/Series/Seria

Using New Trim With Rough R18222 & R18442


Para el uso de un accesorio nuevo con tuberías internas R18222 & R18442

Utilisation de la nouvelle finition avec les soupapes R18222 et R18442


*If you have R18222 or R18442 installed, you will need to order **RP37901▲** (sleeve) to use the new trim.

*Si usted tiene instalado la pieza R18222 o R18442, necesitará ordenar **RP37901▲** (manga) para usar con el accesorio nuevo.


*Si vous avez installé la soupape R18222 ou R18442, vous devez commander l'article **RP37901▲** (manchon) et l'utiliser avec la nouvelle finition.

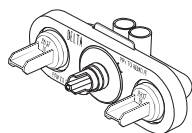


R18222

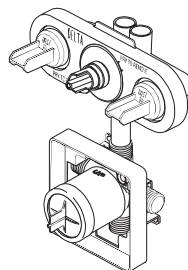


R18442

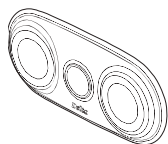

T18037-XO or
T18017-XO

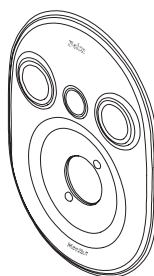

T18255-XO, T18240-XO
or T18230-XO



RP37901▲
Sleeve
Manguito
Manchon