


NEWMAR CORPORATION WARRANTY DEPARTMENT

| TECHNICAL SERVICE BULLETIN | | | | | | | |
|--|---|--|--|---|---|------------------------------|--|
| DATE ISSUED | MODEL YEAR(S) AFFECTED | MODEL(S) AFFECTED | TSB # | | | | |
| 5/16/97 | 1996-1997 | ALL | 140 | | | | |
| BRAND | | TYPE | | | | | |
| All <input type="checkbox"/> | American Star <input type="checkbox"/> | Kountry Star <input checked="" type="checkbox"/> | Dutch Star <input checked="" type="checkbox"/> | All <input type="checkbox"/> | T T <input type="checkbox"/> | F W <input type="checkbox"/> | |
| NewAire <input type="checkbox"/> | Mountain Aire <input checked="" type="checkbox"/> | Kountry Aire <input checked="" type="checkbox"/> | London Aire <input type="checkbox"/> | C A <input checked="" type="checkbox"/> | D P <input checked="" type="checkbox"/> | D B <input type="checkbox"/> | |
| <input type="checkbox"/> Air Conditioning & Heating | | | | <input type="checkbox"/> Electrical Components | | | |
| <input type="checkbox"/> Appliances & Accessories | | | | <input type="checkbox"/> Exterior Components | | | |
| <input type="checkbox"/> Cabinets & Furniture | | | | <input type="checkbox"/> Interior Components | | | |
| <input checked="" type="checkbox"/> Chassis Components | | | | <input type="checkbox"/> Plumbing & Bath Components | | | |
| <input type="checkbox"/> Construction Components | | | | <input type="checkbox"/> Windows, Awnings, Vents, & Doors | | | |
| DESCRIPTION OF PROBLEM | | | | | | | |
| Angle of throttle pedal MC-20. | | | | | | | |
| RECOMMENDED SOLUTION | | | | | | | |
| See the attached recommendations from Freightliner. | | | | | | | |

If you have any questions regarding this T.S.B., please contact a Warranty Service Representative at Newmar Corporation.

NEWMAR CORPORATION WARRANTY DEPARTMENT

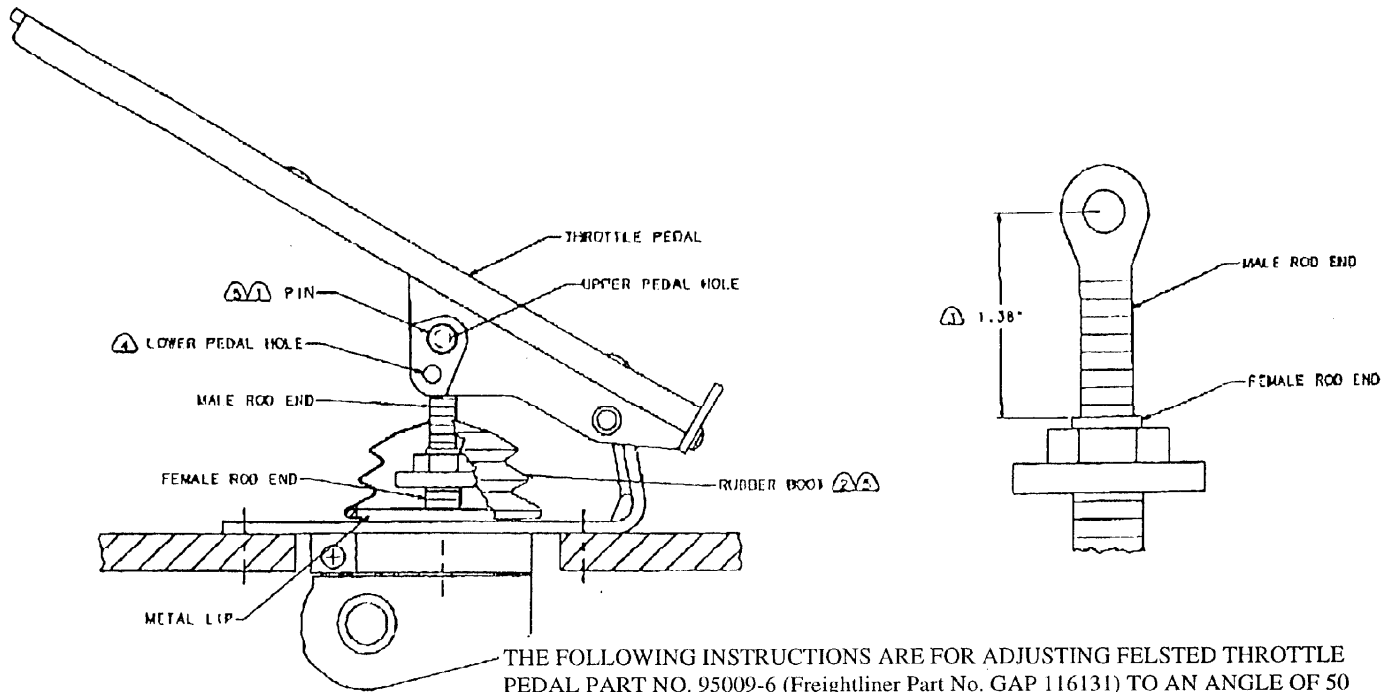

THE FOLLOWING INSTRUCTIONS ARE FOR ADJUSTING FELSTED THROTTLE PEDAL PART NO. 95009-6 (Freightliner Part No. GAP 116131) TO AN ANGLE OF 50 DEGREES AT IDLE.

- 1) REMOVE PIN GOING THROUGH UPPER PEDAL HOLE WHICH CONNECTS MALE ROD END TO BOTTOM SIDE OF THROTTLE PEDAL.
- 2) DETACH RUBBER BOOT FROM METAL LIP AT BASE OF PEDAL.
- 3) ROTATE MALE ROD END UNTIL DISTANCE BETWEEN EYE OF MALE ROD END AND TOP OF FEMALE ROD END IS 1.38".
- 4) ALIGN EYE OF MALE ROD END WITH LOWER PEDAL HOLE ON BOTTOM SIDE OF THROTTLE PEDAL.
- 5) INSTALL PIN THROUGH LOWER PEDAL HOLE AND REATTACH RUBBER BOOT.

□