

NEWMAR CORPORATION WARRANTY DEPARTMENT

TECHNICAL SERVICE BULLETIN							
DATE ISSUED	MODEL YEAR(S) AFFECTED	MODEL(S) AFFECTED	TSB #				
11/12/97	1998	ALL	146				
BRAND		TYPE					
All <input checked="" type="checkbox"/>	American Star <input type="checkbox"/>	Kountry Star <input type="checkbox"/>	Dutch Star <input type="checkbox"/>	All <input checked="" type="checkbox"/>	T T <input type="checkbox"/>	F W <input type="checkbox"/>	
NewAire <input type="checkbox"/>	Mountain Aire <input type="checkbox"/>	Kountry Aire <input type="checkbox"/>	London Aire <input type="checkbox"/>	C A <input type="checkbox"/>	D P <input type="checkbox"/>	D B <input type="checkbox"/>	
<input type="checkbox"/> Air Conditioning & Heating				<input type="checkbox"/> Electrical Components			
<input checked="" type="checkbox"/> Appliances & Accessories				<input type="checkbox"/> Exterior Components			
<input type="checkbox"/> Cabinets & Furniture				<input type="checkbox"/> Interior Components			
<input type="checkbox"/> Chassis Components				<input type="checkbox"/> Plumbing & Bath Components			
<input type="checkbox"/> Construction Components				<input type="checkbox"/> Windows, Awnings, Vents, & Doors			
DESCRIPTION OF PROBLEM							
Connecting the Winegard satellite dish to the pre-wire.							
RECOMMENDED SOLUTION							
Attached is a drawing of a pre-wire connector that may be useful. They may be ordered through Winegard.							

If you have any questions regarding this T.S.B., please contact a Warranty Service Representative at Newmar Corporation.

NEWMAR CORPORATION WARRANTY DEPARTMENT

WINEGARD®

Model PW-0946

RD-9946 Pre-Wire Connectors

NOTE: Perform all installation steps in RD-9946 installation manual up to Step 4 then perform procedures listed here. Option B must used to route the antenna mount cable, see the installation manual Step 1, Figure 5.


1. Route antenna mount cables through knockouts on mount base.
2. Secure mount base and antenna mount per installation manual.
3. Cut wires at connector coming from the antenna mount. Strip wires 1/4" inch. **DO NOT CUT COAX CABLE.**
4. Attach the wires coming from the RV to the connector as shown below.

NOTE: First color is the primary color: Example: Green/Black is a green wire with a black stripe.

5. Attach the wires coming from the antenna mount to the connector as shown below.
6. Press the connectors together as shown below. Make sure to secure connectors together using the screws on the connectors.


CAUTION: THESE CONNECTORS ARE NOT WEATHERPROOF! THEY WILL NOT FIT UNDER THE MOUNT, THEY MUST BE PLACED UNDER THE ROOF. YOU CANNOT LEAVE THIS CONNECTION EXPOSED TO THE WEATHER. THE SYSTEM WILL SOON FAIL IF THIS IS DONE. THE CONNECTORS MUST BE PLACED UNDER THE CE-2000 ROOF FEED-THRU PLATE.

OVER

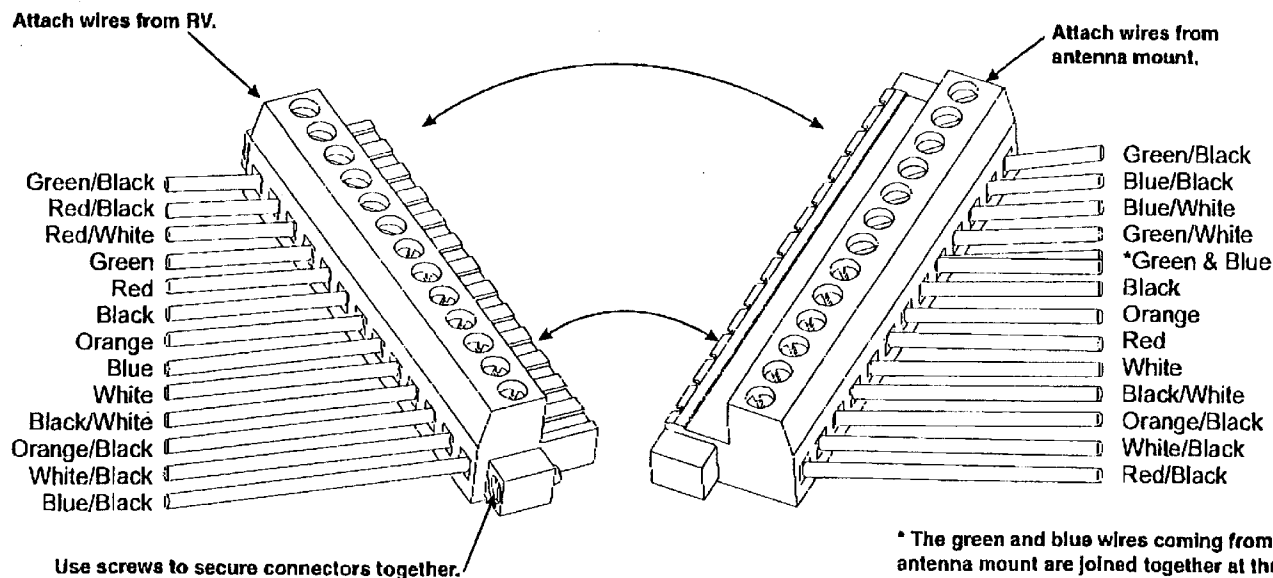

NEWMAR CORPORATION WARRANTY DEPARTMENT

7. Place connectors under roof as shown below. When placing the connectors into the roof, be sure not to break any of the wires.
8. Seal roof entry with silicone sealant provided.
9. Secure roof-thru plate with screws provided. Apply sealant around plate.
10. Proceed to Step 5 in RD-9946 Installation manual.

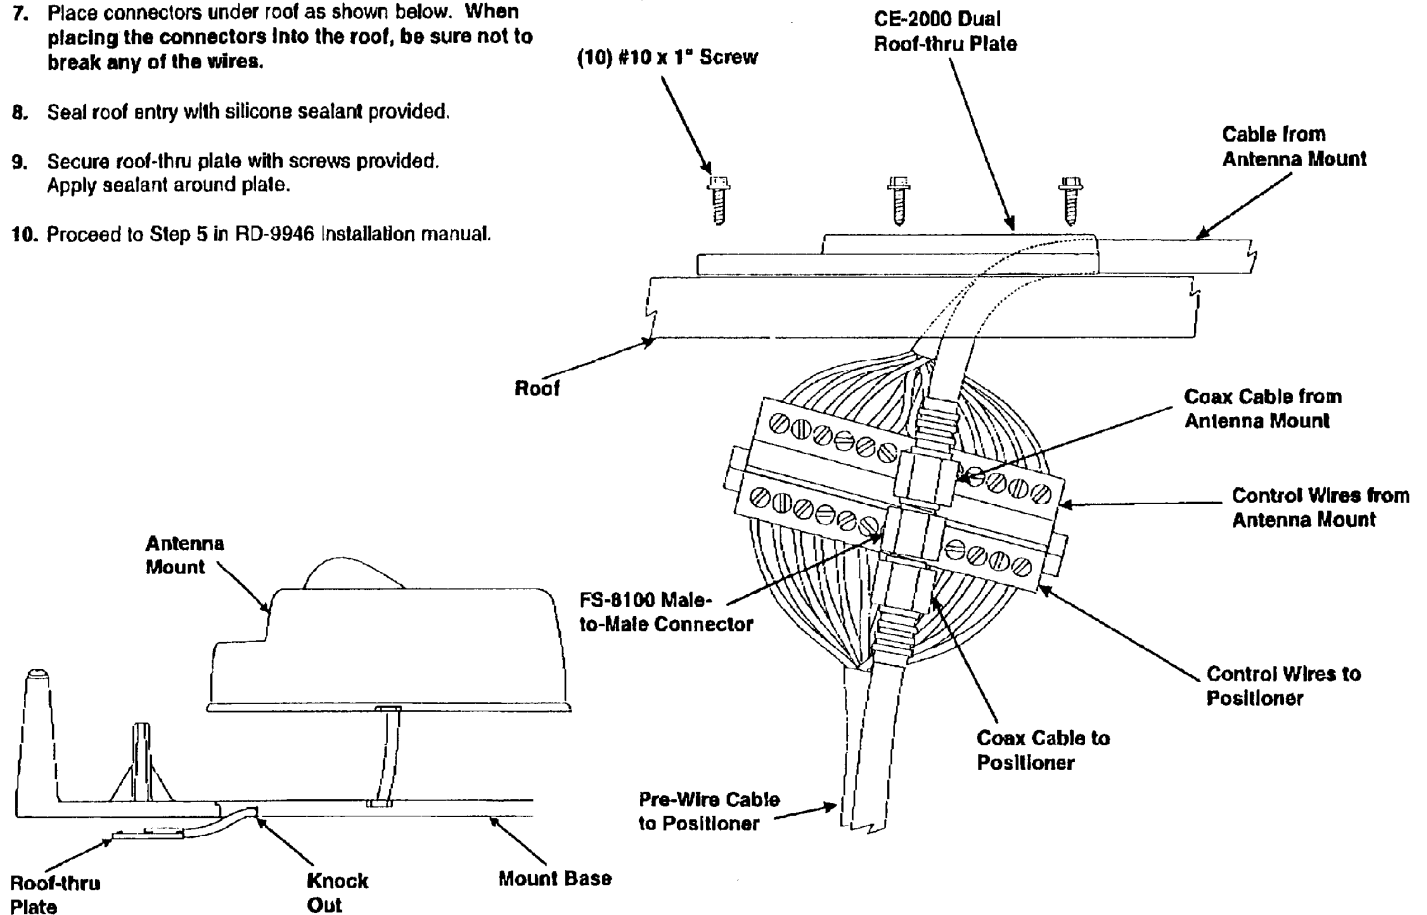

Printed In U.S.A. Winegard Company • 3000 Kirkwood St. • Burlington, IA 52601-2000 • 319/754-0600 © 1997 Winegard Company 2451170