72185 COUNTY ROAD 3 NAPPANEE, IN 46550

NEWMAR CORPORATION WARRANTY DEPARTMENT

800.858.4924 Fax 219.773.2007


TECHNICAL SERVICE BULLETIN							
DATE ISSUED	Model Year(s) Affected)	MODEL(S) AFFECTED		TSB#	
11/25/97	1996-1998			ALL		149	
BRAND					Түре		
All Americ	can Star 🛚	Kountry Star 🛚	Dut	ch Star 🛚	All T	T□ FW□	
NewAire □ Mountain Aire □ Kountry Aire □			Lon	don Aire□	C A 🗖 D	PD DBD	
☐ Air Conditioning & Heating				☐ Electrical Components			
☐ Appliances & Accessories				☐ Exterior Components			
☐ Cabinets & Furniture				■ Interior Components			
☐ Chassis Components				☐ Plumbing & Bath Components			
☐ Construction Components				□ Windows, Awnings, Vents, & Doors			
DESCRIPTION OF PROBLEM							
RECOMMENDED SOLUTION							
Attached is a drawing of agreed to supply the strict themselves. If this is not excess of \$12.00 for the	ing and pay \$ ot agreeable,	12.00 labor if a deale shades are to be sent	r or c	ustomer wish	es to restring the	e shades	

NEWMAR CORPORATION WARRANTY DEPARTMENT


Re-Stringing Instructions

SPECIALITIES WINDOW DAY/NIGHT SOFT SHADES

Starting from the left (with the end cap, spring and cord) string one cord through the second hole (counting from the left) on the top (NIGHT) section of the shade. String the same cord through the fourth hole (still counting from the left) on the sheer (DAY) section of the shade. String the remaining cord through the fourth hole (counting from the left) on the top (NIGHT) section of the shade. String the same cord through the second hole (still counting from the left) on the sheer (DAY) section of the shade.

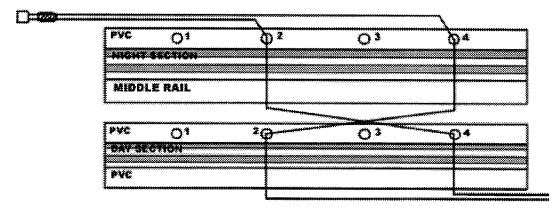

Starting from the right (with the end cap, spring and cord) string one cord through the second hole (counting from the right) on the top (NIGHT) section of the shade. String the same cord through the fourth hole (still counting from the right) on the sheer (DAY) section of the shade. String the remaining cord through the fourth hole (counting from the right) on the top (NIGHT) section of the shade. String the same cord through the second hole (still counting from the right) on the sheer (DAY) section of the shade.

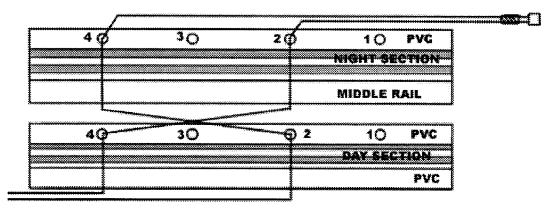

At the end of assembly, take cord #1 and #3 to the left and cross cord #2 and #4 to the right. Slide on the bottom rail and attach the end caps. Put the cords through the holes on the end.