



WHEN YOU KNOW THE DIFFERENCE

Welcome to the exciting world of recreational vehicle traveling and the growing Newmar family!

Congratulations on your purchase of a Newmar product. We sincerely thank you for choosing Newmar as your recreational vehicle. We hope that you will enjoy many miles of traveling. Your new vehicle was built with care using today's technology and old world craftsmanship. We, at Newmar, strive to build vehicles that are safe, dependable, and comfortable to provide you with years of carefree, pleasant traveling. With your new RV purchase, Newmar provides a 12-month limited warranty. Please read the Newmar Limited Warranty and all other component warranties that apply to the equipment installed on your unit.

Carefully read both the instructions in this Owner's Guide and the booklets supplied by the chassis and component manufacturers for important operation, safety, and maintenance requirements/information. Your dealer should be consulted should you have any questions. If your dealer is unable to answer the questions to your satisfaction he will refer you to our staff for assistance. Our customers are extremely important to us and we will make every effort necessary to ensure your satisfaction.

The limited warranties issued by the chassis and component manufacturers require periodic service and maintenance. The owner's failure to provide this service and/or maintenance may result in the loss of warranty coverage. Be sure to file the appropriate registration card with the component manufacturer as described with the individual instruction booklets to activate the warranties on the components within your Newmar RV. This Owner's Guide should be kept in your vehicle for quick reference. Take time to get acquainted with your unit and how it operates.

Again, thank you and welcome to the Newmar family.

Newmar Corporation



WHEN YOU KNOW THE DIFFERENCE

This guide is provided by Newmar Corporation solely for the purpose of providing instructions about the operation and maintenance of this vehicle and its components. Nothing in this manual creates any warranty, either expressed or implied. The only warranty offered by Newmar Corporation is set forth in the written limited warranty that applies to this vehicle.

Instructions are included in this manual for operating some of the components that are standard on this vehicle. Instructions are also given for components that are options and may not appear on all vehicles. For more detailed information on components refer to the individual manufacturer's operating instructions contained in the Owner's Information Package.

The limited warranties issued by the chassis and component manufacturers require periodic service and maintenance. The owner's failure to provide this service and/or maintenance may result in the loss of warranty coverage. The owner should review the Newmar Corporation Limited Warranty and other manufacturers' limited warranties on all components applicable to this vehicle. To activate the warranties on the components within your Newmar recreational vehicle, be sure to file the appropriate registration card with the component manufacturer as described with the individual instruction booklet.

Throughout this guide, reference is made to the following terms: Warning, Caution, and Important. These terms indicate important information that must be understood and followed. The definitions of these terms are:



Emphasizes an area in which personal injury or even death could result from failure to follow instructions properly. Mechanical damage may also occur.

A CAUTION

Failure to observe a caution can cause damage to the equipment or unit. Personal injury is unlikely.



This will provide additional information to make a step easier or clearer.

Chapter

SERVICE INFORMATION

CUSTOMER ASSISTANCE	3
COMPONENT PART SUPPLIERS	
Air Conditioning	
Appliances	. 3
Electrical	
Exterior	
Heating	. 4
TO OUR VALUED CUSTOMERS	5

CUSTOMER ASSISTANCE

Newmar Corporation	
Ford Motor Company	
Freightliner Custom Chassis	1-800-FTL-HELP
Spartan Motors	
Spartan Roadside Companion	1-888-890-1741
Workhorse Custom Chassis	1-877-946-7731

COMPONENT PART SUPPLIERS

Accessories

Back Up Monitor	Alpha Systems 574-295-5206
	A. S. A. Inc 574-266-1886
CB Radio (Cobra)	Tri Star Distributing 800-456-3340
Computer TripTek	River Park, Inc 800-442-7717
Furniture (Upholstered)	Flexsteel Industries 563-556-7730
	Villa International 562-404-8111
Navigation	Mito 888-433-6486
Roof Vent	FanTastic Vent Corp 800-521-0298
	Ventline 574-848-4491
Security System	Tri/Mark 800-447-0343
Stereo - Dash	Mito 888-433-6486
Stereo (Sony)	River Park, Inc 800-442-7717
TV Antenna	The Winegard Co 800-288-8094
Television (Sony)	River Park, Inc 800-442-7717
Satellite Dish (Winegard)	The Winegard Co 800-288-8094
Satelllite Dish (KVH)	River Park, Inc 800-442-7717
DVD	River Park, Inc 800-442-7717
Air Conditioning	
Dash Air	Evans Tempcon 800-354-7088
Roof Air	Dometic 800-544-4881
Appliances	
Dishwasher,	Midwest Sales 574-287-3365
Freezer	Dometic 800-544-4881
Microwave (Dometic)	Dometic 800-544-4881
Microwave (GE)	Midwest Sales 574-287-3365
Range	Atwood-Greenbrier 815-877-5700
	Magic Chef 515-792-7000
Refrigerator	Dometic 800-544-4881
	Norcold 800-543-1219

Water Heater - Atwood	Atwood Mobile Prod	815-877-5700
Water Heater - Suburban	Suburban Mfg	800-659-2138
Water Heater - Oasis	ITR	800-993-4402
Washer/Dryer, 1-piece	Splendide	800-736-4127
Washer/Dryer, 2-piece	Whirlpool	. 800-442-1111
		. 1)

Electrical (tires and batteries separately warranted)

Batteries - 12Volt	Interstate 800-872-4100
Batteries - 6 Volt	Interstate 888-772-3600
Inverter/Converter	Magnum 425-353-8833
Generators	Onan 800-888-6626

Exterior

Furnace, Hydronic

Awning & Hardware	A & E 800-544-4881
	Carefree of Colorado 800-621-2617
	Girard 800-382-8442
Jacks (CA & DP)	H W H Corporation 800-321-3494
Jacks (FW)	Atwood Mobile Prod 815-877-5700
	Equalizer Systems 800-846-9659
Rubber Suspension (FW)	Mor-Ryde, Inc 574-293-1581
Steps, Electrical	Lippert/Coach Step 574-535-2085
Steps, Electrical	Kwikee Products 800-736-9961
Steps, Manual	Hickory Springs Mfg 574-262-2399
Tires	Goodyear 800-227-1999
	Michelin 803-234-5000
Heating	
Furnaces	Atwood Mobile Prod 815-877-5700
	Suburban Mfg 800-659-2138

Please note that your Newmar Limited Warranty is activated only after Newmar has received a signed Warranty Registration Form from your selling dealer.

ITR 800-993-4402

If it has been more than 60 days since the purchase of your new coach and you have not received your Newmar Owner's Warranty Card, please contact your selling dealer or the Newmar Warranty Department at 800-731-8300.

TO OUR VALUED CUSTOMERS:

If, for any reason, you have a problem obtaining satisfactory and timely warranty service that may substantially impair the use, value or safety of your Newmar product, please call us on our toll free line at 800-731-8300 so that we may attempt to resolve your concerns.

All of the information contained in this brochure is believed to be accurate at the time of publication. However, it may be necessary to make revisions and Newmar reserves the right to make any such changes without notice or obligation. Please refer to the component information literature provided in the Owner's Information Packet for specific warranty details for the components applicable to your recreational vehicle.



WHEN YOU KNOW THE DIFFERENCE

NEWMAR CORPORATION 355 N DELAWARE ST PO BOX 30 NAPPANEE, IN 46550-0030 www.newmarcorp.com

$\operatorname{Chapter} 2$

GENERAL & SAFETY INFORMATION

DELIVERY
Dealer Responsibilities3
Customer Responsibilities3
Recreational Vehicle Limited Warranty3
Warranty Service Deadline4
Owner's Information Package4
Customer Relations 4
Reporting Safety Defects 4
Information Sheet4
IMPORTANT RV TIRE INFORMATION
READ AND UNDERSTAND THE FOLLOWING
INFORMATION BEFORE TAKING YOUR FIRST TRIP
IN YOUR RV!6
SAFETY PRECAUTIONS
Before Starting Out
Towing8
Propane & Fuel
0
Propane & Fuel9
Propane & Fuel
Propane & Fuel
Propane & Fuel9Propane Gas System General Information10Propane Regulator11Propane Distribution Lines12
Propane & Fuel9Propane Gas System General Information10Propane Regulator11Propane Distribution Lines12Precautions & Recommendations12
Propane & Fuel
Propane & Fuel9Propane Gas System General Information10Propane Regulator11Propane Distribution Lines12Precautions & Recommendations12Fire Safety12Fire Extinguisher13
Propane & Fuel.9Propane Gas System General Information.10Propane Regulator.11Propane Distribution Lines12Precautions & Recommendations12Fire Safety12Fire Extinguisher13Smoke Detector13
Propane & Fuel.9Propane Gas System General Information.10Propane Regulator.11Propane Distribution Lines12Precautions & Recommendations12Fire Safety12Fire Extinguisher13Smoke Detector13Emergency Exit Window13
Propane & Fuel.9Propane Gas System General Information.10Propane Regulator.11Propane Distribution Lines12Precautions & Recommendations12Fire Safety12Fire Extinguisher.13Smoke Detector13Emergency Exit Window13Weight Information.14

DELIVERY

Throughout the manufacturing process your vehicle has been inspected by our qualified technicians. However, our final inspection at the factory is not to be the last one. The pre-delivery inspection and systems check your dealer performs are the final inspections done to the unit prior to you receiving your new coach. Your dealer is also available to assist you in understanding the limited warranties and completing any necessary forms to activate the warranties for the various appliances and accessories installed in your unit.

Dealer Responsibilities

- 1 A pre-delivery inspection and systems check. Thoroughly inspecting the vehicle and the operation of the factory installed components.
- 2. A customer walk-through. This is done to familiarize the customer with the vehicle, its systems and components, and their operation.
- 3. Delivery of the Owner's Information Package. This package contains the warranty cards and registrations for the vehicle and factory installed components that carry a separate warranty. The detailed operating and maintenance instructions on these components are also included in this package.
- 4. Assisting the customer in completing the component registration forms, at the customer's request. To avoid loss of warranty coverage, the dealer should review the limited warranty provisions with the customer stressing the importance of filing warranty cards and registrations to the component's manufacturers within the prescribed time limit.
- 5. Providing the customer with information regarding warranty and non-warranty work on the vehicle and its separately warranted components whether the customer is in or out of the area.

Customer Responsibilities

The customer is responsible for regular and proper maintenance of the vehicle. Properly maintaining your vehicle will prevent conditions arising from neglect that are not covered by your Newmar limited warranty. The maintenance guidelines in this manual and any other applicable manual should be followed. It is your responsibility and obligation to return the vehicle to an authorized dealer for repairs and service.

To assist you in avoiding problems with your vehicle, we recommend you do the following:

- A. Read the warranty. Go over it thoroughly with your dealer.
- B. **Inspect the vehicle.** Do not accept delivery until you have gone through the unit with the dealer. Newmar has provided a check list to be used during retail delivery. Check each item on the list and make sure the dealer does the same. Do not sign this checklist until you have done this.

NOTE: The sales literature versus actual specifics to the vehicle's measurements, weights, or quantities may vary.

- C. Ask questions about anything that you do not understand concerning your recreational vehicle.
- When taking delivery, set an appointment for adjustments. This appointment should be approximately two
 (2) weeks after you accept delivery.
- E. **Responsible Use.** Your vehicle is designed to be used for recreational or temporary living purposes. It is not designed to be used as a full-time residence or for commercial use. Commercial use means using as a business asset such as a mobile office or using the vehicle for lease/rental purposes.

Recreational Vehicle Limited Warranty

The Newmar Corporation Limited Warranty was provided to you by your selling dealer prior to purchase. Please refer to this document when inquiring about the Newmar Warranty. To receive an additional copy, please write to:

Newmar Corporation, Warranty Department

P.O. Box 30, Nappanee, IN 46550-0030.

Warranty Service Deadline

Warranty service required needs to be completed during the term of the warranty. Service work scheduled or performed after the expiration of the Newmar warranty **WILL NOT** be covered.

Owner's Information Package

Included in this package are valuable documents about your vehicle and its components and systems. The Newmar Owner's Guide does not cover every possible detail of the equipment, standard and/or optional, installed on or in your vehicle. Consulting the booklets and instruction manuals in this package will help you safely operate, maintain, and troubleshoot these items.

Read all of the information and understand the safety and operating instructions included in the Owner's Information Package. To assure full warranty coverage, it is essential that all maintenance instructions are followed.

Customer Relations

If you wish to schedule maintenance work, schedule service work, or order parts you should notify your local authorized Newmar Service Center to set up an appointment. If you are unsure of the location of the closest authorized Service Center, see the listing in this manual. You may also write to:

Newmar Corporation Warranty Department 72185 C.R. 3 P.O. Box 30 Nappanee, IN 46550-0030

Reporting Safety Defects

If you believe that your vehicle has a significant defect which could cause a crash or could cause injury or death, you should inform the National Highway Traffic Safety Administration (NHTSA) and Newmar Corporation.

To contact NHTSA, you may either call the Auto Safety Hotline toll free at 1-888-327-4236 (TTY #1-800-424-9153) or write to: NHTSA, 400 Seventh Street, S.W., Washington, DC 20590. NHTSA also has established a website where you can contact them:

http://www.safecar.gov

Information Sheet

Newmar has enclosed an Information Sheet for your convenience. This sheet contains important information about your coach. The sheet can be found in the black literature bag provided with your unit. Listed on this sheet is the six digit Newmar Serial Number. This number is needed whenever making an appointment for service or ordering parts through your Newmar Dealer or Service Center. Also listed is the Vehicle Identification Number (VIN). The VIN is the legal identification of the completed vehicle and is used by the state for vehicle registration. Both of these numbers are also listed on the Customer Care card Newmar issues upon receipt of registration.

Below is a sample of the Information Sheet.

- 1 The Newmar Serial Number
- 2 Year/Brand/Type/Floorplan
- 3. Vehicle Identification Number (VIN)
- 4. Manufacturer, Model and Serial Number of factory installed equipment.



IMPORTANT RV TIRE INFORMATION

READ AND UNDERSTAND THE FOLLOWING INFORMATION BEFORE TAKING YOUR FIRST TRIP IN YOUR RV!

M WARNING

Routine maintenance on your RV is important, but it cannot be overstated just how critical proper tire maintenance is to the safety, operation, and durability of your new unit.

To insure your tires are operating safely, regular inspection of your tires, and checking of tire pressures is absolutely mandatory. FAILURE TO FOLLOW PROPER INFLATION GUIDELINES MAY RESULT IN TIRE FAILURE, WHICH, UNDER CERTAIN CIRCUMSTANCE CAN CAUSE LOSS OF VEHICLE CONTROL OR ACCIDENTS THAT MAY RESULT IN PROPERTY DAMAGE, BODILY INJURY, AND / OR DEATH.

For safe operation and maximum weight carrying capacity, it is imperative that the tires be inflated to and maintained at the listed tire pressures on the Federal ID Tag that is affixed to the interior wall just behind the driver's seat in motorhomes, and to the lower front corner of the road side sidewall on fifth wheel trailers. Below is a sample of the Federal ID Tag you will find with your RV.

IT IS PARAMOUNT TO THE SAFE OPERATION OF THE VEHICLE TO MAINTAIN PROPER TIRE PRESSURES. TIRE PRESSURES SHOULD BE CHECKED AND ADJUSTED BEFORE AND AFTER EACH TRIP, AND SHOULD ALWAYS BE CHECKED AND ADJUSTED WITH THE TIRES COLD. NEVER ADD OR RELEASE PRESSURE FROM THE TIRES WHEN THEY ARE HOT (AFTER HAVING DRIVEN A MILE OR MORE).

For additional information on your tires,	contact the Newmar Corporation.
---	---------------------------------

MANUFACTURED BY	/ FABRIQUE PAR:		DATE:	
GVWR/PNBV	KG (LB)		
GAWR/PI	NBE	TIRES/PNEU	RIMS/JANTE	COLD INFL. PRESS./PRESS. DE GONFL. A FROID
FRONT/	KG			KPA SINGLE DUAL
AVANT (LB)			(PSI/LPC)
INTERM/	KG			KPA SINGLE DUAL
INTERM (LB)			(PSI/LPC)
REAR/	KG			KPA SINGLE DUAL
ARRIERE	LB)			(PSI/LPC)
THIS VEHICLE CON	FORMS TO ALL APPLICABLE	E ILS FEDERAL MOTOR VEHICLE SAF	ETY STANDARDS IN FEFECT ON T	HE DATE OF MANUFACTURE SHOWN ABOVE.
THIS VEHICLE CON DATE OF MANUFAC	IFORMS TO ALL APPLICAB TURE CE VEHICULE EST	LE STANDARDS PRESCRIBED UNDER	A THE CANADIAN MOTOR VEHICL Qui lui sont applicables en v	E SAFETY REGULATIONS IN EFFECT ON THE ERTU DU REGLEMENT SUR LA SECURITE DES
V.I.N./N.I.V.:			TYPE/TYPE:	FD-228

SAFETY PRECAUTIONS

Prior to driving your vehicle, be sure you have read this entire owner's guide and that you understand your vehicle's equipment completely and how to use the equipment safely. Read and understand all of the instructions and precautions in this owner's guide and the chassis manufacturer owner's manual before operating your new motorhome. Listed below are some safety precautions that must be adhered to while your motorhome is in motion. These precautions, as well as others that involve possible damage to equipment, are also listed in the appropriate areas in this manual.

\land DANGER

Any motorized vehicle or any motorized equipment powered with flammable liquid can cause fire, explosion, or asphyxiation if stored or transported within the recreational vehicle. To reduce the risk of fire, explosion, or asphyxiation:

- (1) Do not ride in the vehicle storage area while the vehicles are present.
- (2) Do not sleep in the vehicle storage area while vehicles are present.
- (3) Close doors and windows in walls of separation (if installed) while any vehicle is present.
- (4) Run fuel out of engines of stored vehicles after shutting off fuel at the tank.
- (5) Do not store, transport, or dispense fuel inside this vehicle.
- (6) Open the windows, openings, or air ventilation systems provided for venting the transportation area when vehicles are present.
- (7) Do not operate gas appliances, pilot lights, or electrical equipment when vehicles are present.

FAILURE TO COMPLY COULD RESULT IN AN INCREASED RISK OF FIRE, EXPLOSION, ASPHYXIATION, DEATH, OR SERIOUS INJURY.

Before Starting Out

The following is a brief list of procedures that will aid in your driving safety and extend your equipment's life.

Windows, mirrors, and light lenses are to be clean and unobstructed.

Tires should be checked for proper cold inflation pressure.

Wheel lug nuts should be checked for proper tightness.

- Fluid levels, including engine oil, transmission fluid, coolant, power steering fluid, brakefluid, and windshield washer solvent, should be checked and filled if necessary.
- Disconnect the unit and store the sewer and water supply hoses as well as shoreline power cords.
- Secure all cargo in the storage compartments in the event of a sudden stop.
- Verify that the step has retracted prior to engine ignition.

Towing

While driving on slippery surfaces, use care when accelerating or decelerating. Skidding and loss of vehicle control may be the result of abrupt changes in speed.

Driving through water deep enough to wet the brakes may affect the stopping distance or cause the vehicle to pull to one side. If you have driven through deep water, check the brake operation in a safe area to be sure they have not been affected. Never operate a vehicle if a difference in braking efficiency is noticeable.

Extreme terrain and adverse weather may affect the handling and/or performance of your vehicle.

Propane & Fuel

▲ warning

Propane cylinders shall not be placed or stored inside the vehicle. Propane cylinders are equipped with safety devices that relieve excessive pressure by discharging propane to the atmosphere. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

▲ warning

IT IS NOT SAFE TO USE COOKING APPLIANCES FOR COMFORT HEATING. Cooking appliances need fresh air for safe operation. Before operation:

- (1) Open overhead vent or turn on exhaust fan
- (2) Open window

FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY. Unlike homes, the amount of oxygen supply is limited due to the size of the recreation vehicle, and proper ventilation when using the cooking appliance(s) avoids dangers of asphyxiation. It is especially important that cooking appliances not be used for comfort heating, as the danger of asphyxiation is greater when the appliance is used for long periods of time.



DO NOT FILL PROPANE CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY. Overfilling the propane container can result in uncontrolled propane flow, which can cause fire or explosion. A properly filled container contains approximately 80 percent of its volume as liquid propane. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.



Portable fuel-burning equipment, including wood and charcoal grills and stoves, shall not be used inside the recreational vehicle. The use of this equipment inside the recreational vehicle can cause fire or asphyxiation. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.



DO NOT BRING OR STORE PROPANE CYLINDERS, GASOLINE, OR OTHER FLAMMABLE LIQUIDS INSIDE THE VEHICLE. FAILURE TO COMPLY COULD RESULT IN FIRE OR EXPLOSION



IF YOU SMELL PROPANE:

- (1) Extinguish any open flames, pilot lights, and all smoking materials
- (2) Do not touch electrical switches
- (3) Shut off the propane supply at the container valve(s) or propane supply connection
- (4) Open doors and other ventilating openings
- (5) Leave the area until odor clears
- (6) Have the propane system checked and leakage source corrected before using again

FAILURE TO COMPLY COULD RESULT IN EXPLOSION RESUTLING IN DEATH OR SERIOUS INJURY.



Propane regulators must always be installed with the regulator vent facing forward. Regulators that are not in compartments have been equipped with a protective cover. Make sure that the regulator vent faces downward and that the cover is kept in place to minimize vent blockage that could result in excessive propane pressure causing fire or explosion.

Propane Gas System General Information

A warning label has been placed near the Propane gas container. This label reads:

The Propane gas system components in your unit have been approved for use in camping vehicles by a nationally recognized testing laboratory. Propane gas is a clean-burning dependable fuel when properly handled. The Propane gas tank mounted on your unit contains liquid propane gas under high pressure. The liquid gas vaporizes as the fuel is used and passes through the tank valve to a regulator that automatically reduces the pressure. The low-pressure gas is then distributed to the appliances through the pipe manifold system. Appliance lighting problems are commonly caused by an improperly adjusted gas regulator. Never attempt to reset the regulator yourself. Have an authorized service technician make any necessary adjustments. We recommend that you have the Propane gas system checked by an authorized service technician at least once a year and after every extended trip. Although the manufacturer and dealer carefully test for leakage, travel vibrations could loosen fittings. Leaks can be easily found by applying leak detector solution at the connections. If leak detector solution is not available, a soapy water solution made with dish soap can be used. Tightening the fitting usually stops any leaks. If this does not work, shut off the main gas valve at the tank and immediately consult an authorized service technician for repairs. If a leak is suspected, the identifying odor smells similar to rotten eggs (sulfur). Never test for a leak by lighting a match or having an open flame where you suspect leaking gas.

▲ WARNING

Shut off the main gas valve at the tank when the camping vehicle is not in use. Also, shut off the valve when refueling to avoid potential danger from pilot lights igniting fuel fumes. Some appliances, such as the refrigerator, water heater, and furnace, have DSI (direct spark ignition) boards, so it is important that you turn the appliances off when the PROPANE gas is off. The ignition in the appliances will continue to spark even if there is no PROPANE gas available.

Propane Regulator

The regulator acts as the heart for the Propane gas system. The Propane gas in the tank is under high pressure. The regulator reduces the pressure of this gas so that it is safe to use with the various appliances in your unit. If corrosion is noticed, contact a qualified Propane gas service technician. Do not adjust the regulator. It is factory preset. Adjustments are to be made by a qualified Propane service technician using specialized equipment.

Propane gas regulators must always be installed with the diaphragm vent facing downward. Regulators that are not in compartments have been equipped with a protective cover. Make sure that the regulator vent faces downward and that the cover is kept in place to minimize the vent blockage that could result in excessive gas pressure causing fire or explosion.

Propane Distribution Lines

The primary manifold is a black steel pipe running the length of your unit. Most secondary lines leading to gas appliances are made of copper tubing with flare fittings. If any of the gas lines rupture, do not attempt to splice them. Always run a new line. We recommend gas distribution work be performed by an authorized service technician. The main valve at the Propane tank must be closed when removing or servicing any gas appliance. This will prevent dangerous gas leakage that could result in an explosion and possibly serious injury. If a leak is suspected, have the systems inspected and repaired by a qualified service technician.

Precautions & Recommendations

Inspect the Propane fill valve for foreign materials before refueling.

Shut the pilot lights off prior to refueling Propane gas tanks.

Never check for gas leaks with an open flame (match, etc.).

Gas lines should be visually inspected periodically.

Have the gas system inspected yearly and before and after extended trips.

The gas system should be inspected and repaired by qualified technicians only.

\land warning

The Propane system in your recreational vehicle is designed for liquefied petroleum gas only. Never attempt to connect natural gas or butane gas in this system.

Fire Safety

The possibility of fire exists in all areas of life, and the recreational life-style is no exception. Recreational vehicles are complex machines. They are made up of many materials, some of which are flammable. Like most hazards, the possibility of fire can be minimized, if not totally eliminated. This is done by recognizing the danger and practicing common sense safety and maintenance habits. For safety reasons, your unit is furnished with both a fire extinguisher and a smoke alarm.

Fire Extinguisher

The fire extinguisher is rated for Class B (grease, gasoline, diesel fuel, flammable liquids) and Class C (electrical) fires. These are the most common types of fires in vehicles. Read the operator's manual and the instructions on the fire extinguisher. Be sure to know how and when to use the extinguisher and where it is located.

Fire extinguishers are mechanical, pressurized devices. Care must be exercised when they are handled. They must be maintained as the operator's manual instructs for proper and safe operation. The extinguisher should be inspected at least once a month. More frequent inspections may be required if the extinguisher is exposed to the weather or to possible tampering. Do not test the extinguisher by partially discharging. Doing this will cause a loss of pressure.

If a fire occurs in the vehicle, evacuate the vehicle as quickly and as safely as possible. Consider the cause and the severity of the fire and the risk involved before trying to extinguish it. If the fire is major or fuel fed, move away from and stand clear of the vehicle and wait for emergency assistance to arrive.

Smoke Detector

The battery powered smoke detector is mounted on the ceiling in the living area of the unit. Read the operating instructions for details on the testing and care for this important safety device. Test the smoke detector after the unit has been in storage, before each trip, and at least once a week during use. The detector should never be disabled because of nuisance or false alarm from cooking smoke or a dusty furnace. Ventilate the unit with fresh air and the alarm will shut off. Never disconnect or remove the battery from the smoke alarm. The battery should be replaced once a year or when the low battery signal sounds.

Emergency Exit Window

In the bedroom of the unit, there is an emergency exit (egress) window. This window is designed to be used as an additional exit in emergency situations. It can be easily identified by the red color of the handle and the red "EXIT" label. To open the egress window, lift the handle and push outward on the window. The window can be closed by pulling the window closed and lowering the handle to the down or locked position.

Weight Information

Below is a sample of a weight information label which may appear in your unit.

Weighing the Unit

The following definitions are given to help in communications of issues of weight and your unit.

- GAWR: Gross Axle Weight Rating is the maximum permissible weight for an axle.
- GCWR: Gross Combination Weight Rating is the value specified by the manufacturer of the vehicle as the maximum allowable loaded weight of this motorhome and any towed trailer or towed vehicle.
- GVWR: Gross Vehicle Weight Rating is the maximum permissible weight of this fully loaded motorhome. The GVWR is equal to or greater than the sum of the Unloaded Vehicle Weight plus the Cargo Carrying Capacity.
- UVW: Unloaded Vehicle Weight is the weight of this motorhome as built at the factory with full fuel, engine oil, and coolants. The UVW does not include cargo, fresh water, PROPANE gas, or dealer installed accessories.
- CCC: Cargo Carrying Capacity is equal to GVWR minus each of the following: UVW, full fresh (potable) water weight (including water heater), full PROPANE-Gas weight and SCWR.
- GVW: Gross Vehicle Weight is the weight of the unit with all items and supplies that are loaded into the unit at any point in time.
- SCWR: Sleeping Capacity Weight Rating is the manufacturer's designated number of sleeping positions multiplied by 154 pounds (70 kilograms). NOTE: The sales literature may give approximates or standards. Each individual unit may weigh differently based on the factory and/or dealer options added. To assure the accuracy of your weights be sure the unit is always level during weighing. The unit has been built to comply with the component suppliers recommended limits and give you a realistic CCC. When loading the unit, distribute the items so that not all of the weight is

added to one area of the unit. If you have questions as to what the weight of the unit is after it has been loaded, take the unit to a drive-on scale or use individual wheel scales and verify that the weights are within the limits of those specified for the unit. When weighing the unit, follow these instructions. Failure to follow these instructions may give an erroneous weight reading.

To assure the accuracy of your weights be sure the unit is always level during weighing. The unit has been built to comply with the component suppliers recommended limits and gives you a realistic CCC. When loading the unit, distribute the items so that not all of the weight is added to one area of the unit. If you have questions as to what the weight of the unit is after it has been loaded, take the unit to a drive on scale, or use individual wheel scales and verify that the weights are within the limits of those specified for the unit. When weighing the unit, follow these instructions. Failure to follow these instructions may give an erroneous weight reading.

- NOTE: The sales literature may give approximates or standards. Each individual unit may weigh differently based on the factory and/or dealer options added.
- Pull the unit onto the scales. This is the total weight of the unit. To do this, put the front jacks down far enough to take all of the weight off of the tow vehicle and onto the scales. Make sure that only the trailer is on the scales. Record the weight. This is the GVW and should not exceed the GVWR supplied by Newmar for the unit.
- 2 Hook up to the unit and be sure, again, that there is no part of the tow vehicle on the scales. Weigh the unit with only the trailer tires on the scales. Record the weight. This is the total weight on the axles. When this amount is subtracted from the GVW (first reading), the difference is the hitch weight. To achieve the approximate weight on each axle, divide this weight by the number of axles. This amount should not exceed the GAWR of the unit. For example 9,360 pounds with 2 axles is 4,680 pounds per axle or approximately 2,340 pounds per tire.

Hitching Fifth Wheels

Hooking the fifth wheel will become quite simple after a little practice. Follow the steps listed below.

Adjust the fifth wheel jacks until the trailer is at the height level for hooking to the tow vehicle.

2. Place wheel chocks behind the wheels of the coach.

🗥 important

Your fifth wheel is equipped with electrically activated trailer brakes. Make sure the proper brake controls are installed and in working order before traveling. Be sure that there is a positive and negative line from the battery of the tow vehicle to the seven-way plug on the fifth wheel. This will assure that there is adequate electrical current to the braking system at all times.

- 3. Release the fifth wheel lock handle.
- 4. Align the tow vehicle so the fifth wheel will accept the kingpin.
- 5. Back the tow vehicle slowly into the fifth wheel until the kingpin engages in the fifth wheel lock, automatically locking.
- 6. Verify that the lock is closed.
- 7. Connect the electrical pigtail between the fifth wheel and the tow vehicle.
- 8 Connect the breakaway switch line. Be sure the breakaway switch cable is not attached to any part of the tow vehicle hitch assembly. Make sure there is enough slack in the break-away cable to allow for turning.
- 9. Adjust the mirrors on the tow vehicle.
- 10. Check all of the lights on the fifth wheel and the tow vehicle (running lights, brake and tail lights, turn signal lights, and back up lights).
- 11. Pick up and store the wheel chocks.
- 12. Check the inside of the coach to verify that everything is stored properly, vents are closed, all of the doors and drawers are shut, and the TV antenna lowered. Close the entrance door and retract the steps.
- 13. Raise the fifth wheel jacks so the entire hitch load is on the tow vehicle. The jacks should be about 2 off of the ground. Do not raise the jacks completely until you have tested the brake control. This will also test the hook-up.
- 14. Pull the unit forward and apply the hand control for the trailer brakes to be sure they are operating properly.
- 15. Completely raise the fifth wheel jacks.

Campsite Parking

If the campground does not have drive through sites, it is recommended to stop near the site and inspect it for slopes or uneven areas. Carefully back into the site. Watch for low-hanging limbs, posts, large rocks or other obstacles. Back in so the site is on the driver's left. This will enable the driver to watch the rear of the unit. Maneuver the vehicle into position before backing into the site. Back up slowly, using the side mirrors as a guide or with the assistance of another person outside, guiding the parking procedure.

Place the tow vehicle in park and turn off the ignition. Block all of the trailer wheels with wheel chocks. Side to side leveling should be done by using shims under the tires on the low side of the unit after it has been backed into the site. This must be done before disconnecting the trailer from the tow vehicle. Lower the stabilizing jacks, if installed. Connect the 120 volt shore power to the unit. Open the LP gas valves at the LP tanks. Connect the fresh water supply and sanitize the water systems if necessary. Connect the waste drain hose to the sewer hookup. Start the refrigerator, water heater, and furnace, if needed. Light the oven pilot light, if applicable. Remember that the refrigerator will not operate efficiently if the unit is not level.

Chapter β

HVAC, APPLIANCES & ACCESSORIES

HEATING & AIR CONDITIONING
Air Conditioning3
Furnace3
Propane Bottles4
Propane Bottle Filling4
Propane Leak Detector5
Propane Regulator5
MAJOR APPLIANCES
Refrigerator
Microwave
Range Hood
Range
Television Antenna
Television
Cable & Telephone Jack8
Satellite Prep8
Stereo / Surround Sound System9
Water Heater9
Water Heater Storage9
Pressure Relief Valve10
Washer/Dryer (Optional)10
Ceiling Fan
Central Vacuum System (optional)

HEATING & AIR CONDITIONING


Air Conditioning

The roof mounted central air conditioner installed on your unit will operate only when the unit is supplied with 120 volt AC power from the power cord or the optional generator. The air conditioner circuit breaker must be in the ON position for it to work. The unit may be equipped with two air conditioners, if an option package was installed. Park the vehicle in the shade with the drapes or blinds closed for the best performance. Set the thermostat to the desired temperature while keeping the doors and windows closed. Keep in mind that air conditioners use a large portion of the available electric power.

RV parks may experience low voltage on days with high heat or humidity. This is commonly referred to as a brown out. A brown out may trip the air conditioner circuit breaker. The circuit breaker protects your air conditioner motor from damage and is necessary during low voltage conditions. The tripping breaker is not a fault in your electrical system. The cool air from the air conditioner is ducted throughout the coach through the cool air ceiling ducts. Warm air is returned to the air conditioner through return air ceiling ducts. Below is the thermostat that controls the air conditioner. It also controls the furnace. Simply select the desired temperature. The blower will cycle automatically, or you may choose low, medium or high fan settings.

Step One: Select "system" to be used (cool or furnace).*
Step Two: Select fan mode ("on" runs constantly, "auto" cycles fan on and off with A/C or furnace).
Step Three: Select fan speed ("Hi" or "Lo").
Step Four: Select desired temperature.

*Expect a 2-minute delay for compressor to start.

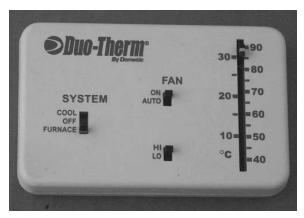

Furnace

The furnace(s) installed in your unit is a forced-air furnace fueled by Propane gas. If your unit is equipped with two furnaces, the living area furnace is controlled by the air conditioner wall thermostat that controls the heating, and cooling of the unit. The furnace installed in the bath/bedroom area is controlled by the thermostat in the bedroom. The heat is supplied to the unit through ducts in the floor. The furnace will not operate properly if the air flow at the floor registers, or the air return to the furnace, is blocked by personal or storage items. Storage under the cabinets should be done carefully to prevent crushing or damaging the furnace ducting or blocking of the cold air return. Smoke and fumes may be created as a result of the residual burn off of the manufacturing compounds that are sometimes present the first time the furnace is used. This is normal.

To minimize the smoke and fumes, the initial lighting of the furnace should

be done with the windows and doors open. Continue until the residue is completely burned off. To operate, set the thermostat to the desired temperature setting and turn the thermostat to the on position. Allow 60 seconds for the furnace to begin operating. To shut down the furnace, turn the thermostat to the off position. After the furnace has been turned off, the fan will run for approximately 60 seconds to cool down.

For your safety, do not use gasoline or other flammable liquids in the vicinity of the furnace or any other appliance. Clean the complete furnace and air tube passageways periodically to remove dust, lint, etc. Check the gas system for leaks at least once a year. Check and clean the blower wheel annually.

On the exterior of the coach you will find a furnace cover. There are no owner serviceable parts on the furnace. This cover should be removed by authorized service technicians only. The furnace should be thoroughly cleaned before the start of each heating season. Any debris in the system may restrict air flow for combustion, bind the combustion air impeller, or prevent the blower motor from running properly. Also, check the burner pilot orifices for debris. Lint accumulations may cause the blower to become unbalanced, vibrate, restrict the ability of the blower to move air. If lint is blown into the heat exchanger, it may cause odors or create a fire hazard. Contact an authorized service technician for annual cleaning. Consult the manufacturer's operating instructions in your Owner's Package for further information.

▲ WARNING

Use caution when washing the exterior of your vehicle. Water should not be sprayed directly into the furnace vent. If water is forced beyond the rain baffles into the furnace vent, rusting of the furnace could occur. This could also cause improper combustion.

\land warning

Never attempt to modify this furnace. Fire, explosion, asphyxiation, or carbon monoxide poisoning may occur. If the furnace malfunctions, consult a trained service technician.

Propane Bottles

This unit is equipped with two 30# Propane bottles. Two 40# Propane bottles may be installed as an option. These bottles are controlled with an automatic pressure regulator. The Propane bottles contain liquid petroleum gas under high pressure. As the fuel is used, the liquid gas vaporizes and passes through the tank valve to a regulator that automatically reduces the pressure. The low-pressure gas is then distributed to the appliances throughout the pipe manifold system. Improperly adjusted regulators are the major cause of appliance lighting problems. Never attempt to reset the regulator. This is to be done by a qualified service technician. While in high altitudes or extreme cold weather a gas shortage may be experienced. Using one appliance at a time can help adjust to this problem.

It is recommended to have the Propane system inspected by an authorized service technician at least once a year and after every extended trip. This system is tested by both the manufacturer and the dealer. Leaks can be caused by travel vibrations, therefore routine inspections are recommended.

The primary gas manifold is a black steel pipe running the length of the unit. All secondary lines leading to the gas appliances are made of copper tubing with flare fittings. If any of these lines rupture do not attempt to splice them. Always have a new line ran. Gas distribution work must be performed by an authorized service technician. When removing or servicing any gas appliance, close the main gas valve at the Propane bottles. This will prevent dangerous gas leakage that could result in an explosion and possible serious injury. If a gas leak is suspected, have the system inspected and repaired by a qualified service technician as soon as possible.

Propane Bottle Filling

Do not fill the bottles to more than 80 percent of capacity. Fire or explosion may be the result of uncontrolled gas flow from an overfilled tank.

▲ WARNING

The main gas valve must be shut when the vehicle is not in use. Shut the valve off when refueling to avoid potential danger from pilots lights igniting fuel fumes. Gas valves on appliances with direct spark ignition (DSI) should also be in the off position. Do not store Propane, gasoline, diesel, or other flammable liquids inside the vehicle. Fire or an explosion could be the result of ignoring this warning.

▲ WARNING

Portable fuel burning appliances are not safe for heating inside the recreational vehicle. Asphyxiation or carbon monoxide poisoning can occur.

The presence of moisture in Propane fuel causes the regulators to freeze. The moisture will pass through the cylinder valve and into the regulator where freezing occurs. To help prevent the regulator from freezing, always keep the tank control valve closed when not in use, even when the tank is empty, to prevent moisture from collecting on the inside. If moisture becomes a problem, consult an authorized Propane service center for assistance.

Propane Leak Detector

Liquid Propane (Propane) Gas is heavier than air and will settle to the lowest point of the room, which is generally on the floor of your coach. Because of this, the Propane detector installed in your coach is located near the floor. The detector is also sensitive to other fumes, such as hair spray, which contain butane as the propellant. Butane, like propane, is heavier than air and will settle to the floor level where it may be detected. When this occurs, press the reset button to stop the alert sound for 60 seconds.

The detector is equipped with a sensor activation strip. This strip must be removed for the detector to operate properly. This should have been done during the dealer's Pre-Delivery Inspection. Please check the detector to verify that the activation strip has been removed. Please consult your Propane detector User's Guide for more detailed information.

▲ WARNING

Never check gas lines for leaks with an open flame. Do not check for leaks using ammoniated or chlorinated household type detergents. These detergents can cause cracks to form on the metal tubing and brass fittings. Take the unit to a qualified Propane gas service technician to find and repair the leak. Keep the tank valve closed and all of the appliances turned off when the unit is stored. If any of the Propane gas valves do not close leak-tight by hand, consult a service technician.

Propane Regulator

The regulator is the heart of the Propane system. The regulator reduces the pressure of the gas so it is safe to use with various appliances. Regulators are equipped with a vent. In the event excess pressure builds up in the body of the regulator, a relief mechanism vents it to the atmosphere. It will vent until the pressure returns to the normal range. The vent must be kept clean and clear of obstructions or corrosion. A clogged vent could cause the failure of components. Contact a qualified Propane technician if corrosion or obstruction is noticed.

MAJOR APPLIANCES

Refrigerator

Before starting the refrigerator, verify that the main Propane gas valve is in the on position. The refrigerator is equipped with a semi-automatic energy selector (AES) control system. It can be set to select either 120 volt or

Propane gas operation, automatically, if desired. A 12 volt power supply must be available for the electronic control panel to function. The shore line must be plugged in, or the optional generator running, to operate in the 120 volt mode. The main Propane gas valve must be open for operation in the Propane mode. To start the refrigerator, press the main power ON/Off button to the ON position.

To use the 2-way Auto Mode, push the AUTO/GAS mode selector into the ON position. If 120 volt is available, the AC mode indicator light will be illuminated designating AC operation. If 120 volt is not available, the gas mode indicator light will be illuminated. The control system will automatically switch to gas operation. To operate on gas only, push the AUTO/GAS mode selector until the gas indicator light has lit. After 45 seconds, the burner should be ignited and operating normally. The initial start up may take longer than 45 seconds in order to allow the air to be purged from the gas line. If the gas does not ignite within 45 seconds, the check indicator light will illuminate and the gas mode light will go off. If the check indicator light illuminates and the gas mode indicator light is off, then the controls have failed to ignite the burner in the gas mode. When the check indicator light is on, press the main power ON/OFF button to the off position to reset. Do not continue to reset the gas operation if the check indicator light continues to illuminate after several tries. The thermostat on the refrigerator controls the gas and electric operation. This eliminates the necessity of resetting the temperature each time a different energy source is used. Press the temperature selector button until the light at the desired setting is illuminated. After the initial start up, the thermostat should be moved from the coldest setting to the desired setting, which is usually mid range. An optional feature on the refrigerator is the addition of an icemaker. For detailed operating instructions, please consult the manufacturer owner's manual in the Owner's Information Packet.

\land WARNING

Most Propane gas appliances used in recreational vehicles are vented to the outside of the vehicle. When parked close to a gasoline pump it is possible that the gasoline fumes could enter this type of appliance and ignite the burner flame causing a fire or explosion. Use caution when refueling.

Microwave

Standard in your unit is a 22" microwave oven. As an option, your unit may be installed with a 30" convection microwave with a three burner cooktop. All of the microwave ovens installed by Newmar operate in the same manner. The microwave's control panel is the touch pad type. Simply enter the temperature, mode, and cooking time desired. For instructions on how to operate any of the special features on the microwave oven, please refer to the microwave owner's manual in your Owner's Information Package.

If the microwave contains the range hood, the hood is controlled by the microwave control panel. Refer to the microwave owner's manual for further instruction on the hood operation.

Range Hood

A range hood may be incorporated into the microwave. The microwave's control panel operates the range hood functions. This range hood has both a fan and a light for your convenience. The fan has two speeds which are low and high. Simply select the desired setting from the microwave's control panel. For further detailed information on the hood operation, refer to the microwave Owner's Manual.

Range

Your unit may be equipped with a three burner recessed range with a glass oven door and electronic ignition. There are different models used in the Newmar product line with different types of controls. To light the burners on some models, turn the control knob to turn the gas on. Wait a couple of seconds, and then push the red spark button until a flame appears. On other models, after the gas control has been turned on; turn the spark control knob until a flame appears. All burner controls operate counter clockwise and have to be pushed inward in order to turn. On units with an oven, the oven control must also be pressed inward before turning. To light the oven, push in the oven control knob and rotate counter clockwise to the PILOT ON position. Light the oven pilot light located at the back left-hand side of the oven burner. The oven pilot may be slow in lighting due to initial air in the gas line. The oven pilot has been factory adjusted. No further adjustments are necessary. To extinguish the oven pilot, push in the oven control knob and turn clockwise to the "Off" position. For further instructions, please refer to the oven manufacturer owner's manual in your Owner's Information Package.

Your range may be equipped with a bi-fold range cover that matches your countertop material. This cover helps to protect the burners when they are not in use. Before cooking on the range top, the cover must be in the full upright and folded position, preventing the cover from falling on the range top during cooking. Never close the cover while the burners are in use and do not use the cover as a griddle or cooking surface. Never use the range while the RV is moving and remember to close the bi-fold cover when the range top is not in use.

For further instructions, please refer to the oven manufacturer owner's manual in your Owner's Information Package.

The following warning label has been placed in the cooking area to remind the user to provide an adequate supply of fresh air for combustion:



It is not safe to use cooking appliances for comfort heating. Cooking appliances need fresh air for safe operation. Before operation:

1. Open overhead vent or turn on an exhaust fan.

2. Open a window.

Unlike homes, the amount of oxygen supply is limited due to the size of the recreational vehicle. Proper ventilation when using the cooking appliance(s) will avoid dangers of asphyxiation. It is especially important that cooking appliances not be used for comfort heating as the danger of asphyxiation is greater when the appliance is used for long periods of time.


The following label has been placed in the vehicle near the range area:

If You Smell Gas:

- 1. Extinguish any open flames, pilot lights, and all smoking materials.
- 2. Do not touch electrical switches.
- 3. Shut off the gas supply at the tank valve(s) or gas supply connection.
- 4. Open doors and other ventilating openings.
- 5. Leave the area until the odor clears.
- 6. Have the gas system checked and leakage source corrected before using again.

Television Antenna

A TV antenna with a power booster is installed in your coach and is designed for reception of all color and blackand-white channels. If the reception is poor, you should verify that the power switch is in the "ON" position and that all of the connectors are tight. If poor reception still occurs, consult your authorized dealer. To raise the antenna into the operating position, turn the elevating crank (clockwise) in the "UP" direction, about 13 turns, or until some resistance to turning is noticed. On the power booster, turn the switch to "ON" in order to amplify the signal being received. Once in the "UP" position, rotate the antenna to receive the best picture. This is done by pulling down on the directional handle with both hands until it disengages from the ceiling plate and then rotating it until reception has improved. The antenna must be lowered before moving the vehicle. To lower, rotate the directional handle until the pointer is aligned with the pointer on the ceiling plate. Turn the elevating crank (counter-clockwise) in the "DOWN" direction, about 13 turns, or until some resistance to turning is noticed. The antenna is now locked and in the travel position. Your unit may be equipped with one exterior antenna jack and two interior antenna jacks.

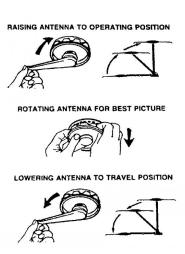



Under no circumstances should you lower the antenna in any position except the travel position.

Television

The coach is cable ready and may be equipped with a color television in the entertainment center located in the living room. An option may be to install a DVD player and/or to have a color television installed in the bedroom. The televisions, if installed, are powered by 120 volt electricity. Your unit must be plugged into shore power, or have the optional generator running, in order for the television to work. The operation is similar to most televisions used in the home. The main unit has the basic ON/OFF, VOL(ume) UP and DOWN, CH(annel) UP and DOWN, and Menu buttons. The remote control has these in addition to many other function keys. Please consult your television owner's manual for further information. There are two interior jacks and one exterior jack installed for televisions to receive the antenna signal. An optional exterior television jack on the door-side of the coach is available. Your unit may also be pre-wired for a satellite system.

\land Caution

Under no circumstances should you lower the antenna in any position except the travel position.

Cable & Telephone Jack

Cable television jacks are featured on your unit. An interior jack may be installed where specified and another jack may be an exterior jack located in the electric compartment. An additional feature in this unit is the telephone hook-up. This includes the connector for the incoming telephone line and one telephone outlet inside the unit.

Satellite Prep

Your unit has been prepped at the factory for use with a DSS satellite system. In the entertainment center you will find connections for RG6 dish connection to a DSS receiver, and a phone jack to connect to the receiver for "Pay-Per-View" programming. The RG6 cable runs to an exterior connector where the dish can be set on a tripod for ease of adjustment.

Stereo / Surround Sound System

The standard stereo installed in your unit is a Surround Sound / DVD / CD / AM/FM Stereo system. There are speakers located throughout the coach for your listening pleasure, with a remote mounted subwoofer for enhanced audio quality. For detailed information on the operating instructions, please refer to the manufacturer's owner's manual in the Owner's Information Package.

Water Heater



Do not light the water heater until it is filled with water. There is a switch on the exterior of the water heater labeled "Electric." This switch must be in the "ON" position for the water heater to work in the electric mode.

Before lighting the water heater, fill the fresh water system. Purge any air from the water heater by opening all hot water faucets until water flows steadily from each one. The water heater installed in this coach may be a ten gallon gas/electric model with direct spark ignition. Optional is the ten gallon model with a direct spark ignition and engine assist feature. The water heater operates on both Propane gas and 120 volt electricity.

It is important to read all of the safety information provided in the water heater manufacturer Operation Manual in the Owner's Information Package. The following instructions are for the standard water heater with direct spark ignition (DSI). This appliance does not have a pilot light. It is equipped with an ignition device that automatically lights the burner. Do not try to light the burner by hand. Before lighting smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle before lighting the water heater fill the fresh water system. Purge any air from the water heater by opening all hot water faucets until water flows steadily from each one. The water heater installed in this unit is a ten-gallon gas/electric model with direct spark ignition (DSI). This water heater operates on Propane gas or 120 volt electricity. It is important to read all of the safety information provided in the water heater manufacturer operation manual in the Owner's Information Packet. This appliance does not have a pilot light. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand. Before lighting, smell all around the appliance on the floor. Consult the Operation Manual for further instructions if a gas leak is noticed. The gas valve is fully automatic, no adjustments are necessary. Read the safety information provided in the Operation Manual before lighting the appliance. Turn off all electrical power to the water heater. Turn the gas supply to the OFF position. Wait five minutes for the gas to clear the area. If you smell gas, STOP! Follow the safety instructions in the Operations Manual. If gas odor is not noticed than turn the gas supply to the ON position. Turn on the electrical supply to the water heater. Inside the unit there is a switch marked WATER HEATER. Turn the switch to the ON position. There will be a 15 second purge before the unit will spark. If the burner does not light on the first try, there will automatically be two more tries for ignition before it will lock out. Each ignition cycle will have a 15 second purge. If lock out occurs before the main burner lights, turn the switch to OFF, wait five seconds and turn the switch to ON again. This will re-start the ignition cycle. The initial start-up of the water heater may require several ignition cycles before all of the air is purged from the gas lines.

\land WARNING

Do not light the water heater until it is filled with water. There is a switch on the exterior of the water heater labeled Electric. This switch must be in the ON position for the water heater to work in the electric mode.

Water Heater Storage

When storing your unit for the winter months, the water heater must be drained to prevent damage from freezing. The first step is to turn off all electrical power and Propane gas going to the water heater. The water pump must also be turned off. Open both the hot and cold water faucets to drain the lines. Open the drain on the water heater.

Drain the entire water system. When preparing the unit for use after it has been stored, make certain the water system, including the water heater has been filled before re-lighting the water heater. Failure to fill the water heater before lighting may damage the water heater and void the warranty.

Pressure Relief Valve

The temperature and pressure relief valve is designed to open if the temperature of the water within the heater reaches 210 F, or if the water pressure in the heater reaches 150 pounds. Recreational vehicle water systems are closed systems and during the water heating cycle the pressure build-up in the water system may reach 150 pounds. When this pressure is reached, the pressure relief valve will open and water will drip from the valve. This dripping will continue until the pressure is reduced to below 150 pounds, and the valve closes. This condition is normal and does not indicate a defective relief valve.

▲ WARNING

Do not plug the relief valve under any circumstances.



VARIANO

Do not store any combustible materials or liquids near or adjacent to the water heater.

Washer/Dryer (Optional)

The preparation for a washer and dryer is a standard feature on this product. However, the installation of a two piece washer and dryer is part of the various option packages available. The washer and dryers used by Newmar function as those in a home, operating on 120 volt electricity. For more detailed information on the operating instructions, read the appliance owner's manual in the Owner's Information Package.



The gray tank valve must be in the open position when operating the washing machine.

Ceiling Fan

In the living room area you may find a ceiling fan. This operates on 120 volt electricity. The fans three speeds (low, medium and high) can move air in two directions, up and down. Moving the air up in the summer months, the fan will help circulate the cool air from the air conditioner. By moving the air down, the fan will help circulate the warm air from the furnace in the winter months.

Central Vacuum System (optional)

A central vacuum system is available as an option. This system allows you to vacuum the interior of your unit using provided attachments through a port in the floor. For convenience, the system is mounted in the basement, and allows for easy removal of dust and contaminants.

$\mathbf{Chapter}\; 4$

CABINETS, FURNITURE & INTERIOR FEATURES

CABINETS	3
FURNITURE Living Room Area Bedroom Area	3
INTERIOR FEATURES	4
Ceiling Window Treatment	

CABINETS

The cabinetry in your RV is constructed on-site at the Newmar Production Facility. Oak hardwood raised panel doors are standard throughout the unit. Brass door and drawer handles give the interior an added touch of elegance. The standard cabinets in your unit are finished in oak vinyl veneer. Your unit may be equipped with the optional hardwood cabinetry in a variety of finishes. Your cabinetry was designed with function and convenience in mind, and was built to exacting standards by modern craftsmen.

Brass door and drawer handles give the interior an added touch of class. The silverware drawer may contain a molded silverware divider tray for added storage convenience.

Storage is an important factor to all RV owners. Keeping this in mind, the cabinetry is structured to provide as much storage as possible. In the bedroom, the bed platform lifts to provide an additional, convenient storage area. A strap is provided to help raise the bed. Once the bed platform is lifted, it is held open by pressurized struts to allow hands-free access.

A countertop with a color coordinated edge is installed in the kitchen. To clean, wipe with a damp cloth and for dried on spots or rings, wipe with a damp cloth and a mild liquid soap. Strong chemicals and solvents may damage the surface and should be wiped up immediately, then rinse the surface with water.

Avoid cutting directly on the countertop surface, avoid excessive heat, and keep harmful chemicals away to avoid countertop surface damage. The cabinetry throughout the unit can be cleaned with commercial furniture cleaner or polish. As with any wood product, do not saturate the cabinets with water or any other liquid. Be certain to wipe up spills as they occur to avoid staining.

The drawer directly in front of the kitchen and lavatory sink does not pull out, but rather flips down. This provides a storage tray for dish cloths, scouring pads, washcloths, etc. Metal drawer guides may be on all of the drawers throughout the unit. These guides provide a smooth opening and closing of the drawers. To open a drawer, lift up slightly and pull open. This mechanism will prevent the drawers from unintended opening while traveling.



FURNITURE

Living Room Area

A standard feature in the kitchen area is the free-standing dinette. This includes a hardwood table and four chairs. The chair seats and backs are designed with a coordinating upholstery fabric to match your decor. Optional is a combination desk/dinette table with two folding chairs and two fixed chairs or a hidden leaf dinette table.

Depending upon the floor plan of your unit, the standard sofa will either be a Magic Bed or Hide-Abed sleeper sofa. As an option, an air mattress may be included for the Hide-A-Bed sofa. The magic bed sofa converts into a sleeping area by holding and pulling up on the bottom cushion while pushing down on the back cushion. Before converting the hide-a-bed sofa, extend the slide out (see Chapter 5 for slide out instructions) to make room for the bed. Once the room is extended, remove all of the seat cushions. Next, take hold of the handle on the bed mechanism and pull to extend. Expand the bed to the fully-open position by unfolding the foot portion of the bed. All of the sofas are upholstered in decor-matching fabric. If you have any questions regarding the warranty on this sofa, contact the sofa manufacturer.

Depending on the floorplan of your unit, one or two large recliners may be installed in the living room. Optional are one or two leather/vinyl large recliners or one two small leather/vinyl recliners. One or two leather/vinyl recliners with an ottoman, a sofa coffee table, or a chair end table may also be optional features in the living room.

Bedroom Area

The standard mattress in the bedroom is a 60" x 80" queen size bed. A luxurious pillow top mattress may be an option in lieu of the standard mattress. For best results, it is recommended that the bedspread be DRY CLEANED ONLY.

On each side of the bed you may find wardrobe closets. Lights may be installed in these closets for your convenience.

INTERIOR FEATURES

Flooring

The floor covering throughout the living room and bedroom of the unit is nylon tufted cut loop carpeting. In the Owner's Information Package you will find literature supplied by the carpet manufacturer. This information will be helpful in maintaining and extending the life of the carpet. Please refer to this information for the carpet or hard surface flooring care and cleaning instructions. Simple vacuuming is all that is necessary to remove loose dirt and debris for everyday cleaning. Mop occasionally, using a minimal amount of water. Abrasive cleansers and scouring pads can scratch and damage the surface also.

Ceiling

The ceiling in this unit is covered with a padded vinyl ceiling headliner. The recommended cleaning instructions are to use a soft cloth and a mild detergent.

Window Treatment

The window treatment throughout this unit, except in the kitchen, is pleated day/night window shades and lambrequins. These shades have two sections. The first section visible when closing the shade is the "DAY" section. This material is translucent. Sunlight passes easily through the material into the unit. The second visible section is the "NIGHT" section. This material is a heavier, more opaque material. Very little to no light passes through it. It is generally used in the evening or when more privacy is desired, though under certain light conditions, it can cast shadows and silhouettes. If any curtains are installed in this unit, cleaning instructions are DRY CLEAN ONLY. Water-based products are not recommended for cleaning fabrics. Water-based products may cause excessive shrinkage or fading. The kitchen window is equipped with a mini-blind.

Chapter 5 ELECTRICAL FEATURES

Electrical Systems
General Information
Breaker Boxes
Batteries
Battery Inspection & Care 4
Battery Disconnect Switch 4
120 Volt Receptacles5
Ground Fault Circuit Interrupt Receptacle 5
Wiring Connector5
Generator Prep (Optional)5
Generator (Optional)5
Solar Prep (optional)6

ELECTRICAL SYSTEMS



Use of "Adapter" cords with the RV shore power cord.

All Newmar units are manufactured with a 50 amp electrical breaker box and electrical system. To provide the correct amperage into the RV and to assure the operation is as designed, it is important that they be plugged into the correct type of properly grounded receptacle. The receptacle <u>MUST</u> be properly grounded to insure safe, proper operation of all electrical components.

NEWMAR CORPORATION DOES NOT RECOMMEND USE OF "ADAPTER", "CHEATER", OR "DOG BONE" STYLE CONNECTORS THAT WILL adapt or MODIFY THE EXISTING SHORE POWER CORD TO A DIFFERENT STYLE OF OUTLET. USE OF THIS TYPE OF ADAPTER WILL GREATLY REDUCE THE AMOUNT OF AVAILABLE CURRENT IN THE UNIT, AS WELL AS CREATE THE POTENTIAL FOR ELECTRICAL FAILURE AND / OR FIRE. NEWMAR CORPORATION CANNOT ASSUME LIABILITY FOR FAILURES OCCURING TO THE RV, ITS ELECTRICAL SYSTEM, OR ANY OF ITS COMPONENTS FROM THE USE OF ANY ELECTRICAL ADAPTER.

General Information

There are two electrical systems in your coach. They are the 12 volt DC system and the 120 volt AC system. Most standard appliances require 120 volt electricity while the majority of the lighting used in recreation vehicles is powered by 12 volt electricity. The power for the 12 volt system is supplied by the coach batteries. The power for the 120 volt system is supplied by the power cord when the unit is connected to an outside power source or by the generator, if so equipped. When connected to shore power, the standard 80 amp power converter will automatically charge the batteries as well as convert 120 volts into 12 volts. To connect the unit to 120 volt shore power, first make sure all of the breakers are in the off position. This is done to avoid a power surge. Unwind the power cord from the electrical compartment. The standard electrical service for fifth wheels is 50 amps. Check to make sure the pins in the outlet are oriented correctly, that they match the power cable, and that they are in good condition. If there is a circuit breaker switch at the plug, it should be turned OFF before making the connection. Insert the plug completely into the outlet and turn the circuit breaker on. Close, and lock the electrical compartment door to keep the contents clean, dry, and secure. Close the cover on the power box, if equipped, to avoid an unintended disconnection, and to keep contents clean. Switch the main breaker to the ON position. The 120 volt system will energize all 120 volt circuits and outlets when the main breaker is turned on.

Breaker Boxes

The 120 volt and 12 volt breaker boxes are generally located in the cabinet above the toilet, but the location varies with each floorplan. Circuit breakers and fuses are installed to protect the electrical system from overloading. Do not attempt to change the circuitry or add appliances yourself. Please consult an authorized Newmar Service Center.

Batteries

Any 12 volt battery you install in your unit is warranted by the battery manufacturer. Two six volt batteries (wired in series) may be installed instead for longer life. They are used to operate the 12 volt items in the unit. The batteries also operate the water heater's electronic ignition, landing jacks, etc. In-line breakers protecting these circuits are found near the batteries. If the tow vehicle is equipped with a charge line, the tow vehicle's electrical system will charge the coach batteries while in transit. The power converter, if installed, automatically charges the coach batteries when the unit is connected to a 120 volt outside power source. A battery disconnect switch is provided with your unit.

Battery Inspection & Care

Remember, when a battery is not used for an extended period of time, it may lose its charge. Periodic charging of the battery during storage of the unit will increase the life of the battery. Check the external condition of the battery periodically. Look for cracks in the cover and case. Check the vent plugs and replace them if they are cracked or broken. Keep the battery clean. Accumulations of acid film and dirt may permit current flow between the terminals, which could drain the battery. To clean, wash the battery with a diluted solution of baking soda and water to neutralize any acid present. Rinse thoroughly with clean water. Foaming around the terminals or on top of the battery is a sign that acid is being neutralized. Avoid getting the baking soda solution in the battery.

Secure all vent caps. Dry the battery cables and terminals. Do not use grease on the bare metal inside the cable terminals to prevent corrosion. Grease can act as an insulator. Electricity will not flow through it. A plastic ignition spray will protect the terminals after they have been cleaned. When storing the unit for a short period of time, the battery should be disconnected from the coach to prevent draining. When not using your unit for an extended period of time, the battery should be removed and stored in a warm place. Mark the cables, positive and negative, for easy identification. Batteries are not to be stored on concrete floors. The battery may require periodic charging during storage. If the unit is to be stored for a long period of time, it is recommended that all the batteries inside the unit be removed from clocks, radios, smoke alarms, etc. This will prevent unnecessary drain and corrosion of the batteries. The coach battery is a deep cycle RV/marine battery. This type of battery consumes water and must be filled periodically. Please be sure to check the battery water level on a regular basis, particularly after extended periods of heavy use where frequent charging can cause more boiling of the fluid in the battery. Battery electrolyte or distilled water can be used to fill batteries in most cases, but be certain to consult the owner's manual supplied by the battery manufacturer for specifics regarding the batteries in your unit.

Battery Disconnect Switch

The Battery Disconnect Switch is a red colored handle located in the restroom adjacent to the 12 volt DC distribution panel. This switch enables you to disconnect the batteries from the DC electrical circuits in the coach for short to mid term storage purposes, and for servicing convenience.

If the batteries will be stored for an extended time (three or more months), it is a good idea to remove them from the RV and store them as outlined above.

▲ WARNING

Do not allow the battery fluid to contact your skin, eyes, fabric, or painted surfaces. The fluid could cause serious personal injury or property damage. Wear eye protection when working with any battery.

▲ CAUTION

Disconnect the 120 volt electrical power cord and the negative terminal from the coach batteries before working on the electrical system.

\land warning

Remove rings, metal watch bands and other metal jewelry before working around batteries. Use caution when using metal tools. If a tool contacts a battery terminal or metal connected to it, a short circuit could occur which could cause personal injury, explosion or fire.

120 Volt Receptacles

For your convenience, there are 120 volt receptacles located throughout the interior of the unit. There may also be exterior outlets located on the door side of the coach. These receptacles require the three-pin plugs that provide proper grounding to protect you from electrical shock. Do not use an adapter, cheater, or extension cord that breaks the continuity of the ground circuit to the ground pin. Never remove the ground pin from a plug in order to connect it to a two pronged ungrounded outlet. Never operate the camping vehicle with an electrical short. An electrical short may cause the exterior of the unit to shock you when touched. If you feel even the slightest shock, disconnect the unit from the 120 volt power source. It is usually a break in the grounding circuit. **The grounding circuit must be continuous from the frame to the distribution panel, to the power cord, to the earth ground.**


Ground Fault Circuit Interrupt Receptacle

The 120 volt electrical outlets in the kitchen and bath area are ground fault circuit interrupt (GFCI) protected receptacles. The electrical outlets located in the slide out may be wired through the kitchen GFCI. The exterior electrical outlets are wired through the bathroom GFCI. If an item plugged into a slide out or outside receptacle is not working, check for a tripped GFCI in the kitchen or bathroom. These outlets protect the user from ground faults between a hot wire and ground. The GFCI will not reduce the shock hazard if the short is between a neutral and hot wire, or two hot load wires. The GFCI should be tested at least once a month. The 120 volt electrical system must be on in order to test the GFCI. The reset button needs to be pushed in all of the way before starting the test. Push the test button. This will cause the reset button to pop out which means that the protected circuits have been disconnected. Push the reset button back in until a click is heard. This will reactivate the protected circuits the GFCI is working properly the reset button will remain in the IN position.

Wiring Connector

The wiring connector installed on all Newmar towable units is the standard seven pin connector. The 12 volt or 6 volt battery in the tow vehicle supplies power to the trailer's electric brakes, tail lights, brake lights, turn lights, etc. through this connector. Below is the diagram of the tow plug. This view is looking into the tow vehicle receptacle. As stated above, this is a standard seven pin pigtail.

Red
Brown
Green
White
Yellow
Black
Blue

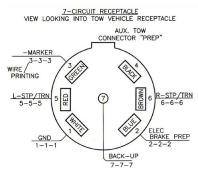

Generator Prep (Optional)

This option must be installed before the generator option. With this option, the remote start wire is installed in the unit along with the automatic change over switch and carbon monoxide detector.

Generator (Optional)

As an option, a generator may be added. With the installation of the generator, your unit may have a 50 amp automatic changeover switch. When the generator is running, it will produce 120 volt power. This will supply electricity to the appliances and 120 volt lights in the unit when not connected to shore power. There is an hour meter on the generator. The meter tracks the number of hours the generator has been running. This information is important for routine maintenance. For further instructions on the generator operation and maintenance, please refer to the generator manufacturer operator's manual located in the Owner's Information Package.

Solar Prep (optional)

Your unit may be equipped with "Solar Panel Prep". This package provides wiring routed from the roof down into the battery compartment. On the roof, the wiring (one red and one white wire) is located just below the surface of the roof, and is marked with a sticker to aid in locating it.

The wires are routed through the walls down into the Battery Compartment, where they can be attached to the batteries or coach circuitry as necessary.

Chapter 6 EXTERIOR FEATURES

EXTERIOR FEATURES
Exterior Sides3
Security Lights (Optional)3
Jacks3
Stabilizer Jacks4
Electric Stabilizer Jacks (Optional)4
Roof4
Steps4
Electric Steps (Optional)4
Windows5
Doors5
Vents5
AWNINGS
Side Awning
Extending
Retracting
Window Awning (Optional)6
Extending
Retracting
Spare Tire Carrier7

EXTERIOR FEATURES

Exterior Sides

The exterior sides of this unit are constructed of gel-coated fiberglass. To add to this feature, the end caps are also gel-coated fiberglass. Clean the fiberglass material with a mild cleanser and warm water. Use only soft cloths. Using stiff bristle brushes may cause scratches in the fiberglass surface. Please note, Newmar is NOT responsible for weathering/oxidation of gel-coated surfaces.

Security Lights (Optional)

Optional are exterior security lights. One or two may be installed on each side of the coach for added protection. If installed, the switch for these lights may be located inside the front entrance door.

Jacks

Fifth wheel units may be equipped with 12 volt electrical jacks. As an option, hydraulic leveling jacks with touch panel control may be installed. Before using the jacks, read and closely follow the operation instructions provided by the jack manufacturer. To lift the unit for uncoupling, drop the pad tube by removing the lock pin. Re-pin the hole that places the foot pad closest to the ground to compensate for variations in the terrain between the jacks. Push the toggle switch to the DOWN position and hold until the jack raises the unit to the desired height.

To raise the jacks after coupling, push the toggle switch to the UP position and hold until the jacks are fully retracted. Release the toggle switch as the lock pin in the inner ram tube nears the end of the outside tube to avoid unnecessary wear on the motor clutch. Remove the lock pins and raise the pad tubes, re-pinning them in the highest possible position.

ACAUTION

When the jacks reach their maximum extended or retracted length or maximum load, you will hear a clicking noise. This is the slip clutch built into the motor to prevent jack overextension or retraction. Release the toggle switch as soon as you hear the clicking. Continued operation with the clutch slipping can damage the jacks.

A CAUTION

Before raising the jacks, make sure the hitch is securely latched by applying the trailer brakes and slowly pulling the tow vehicle forward. The unit should prevent the tow vehicle from moving.

These jacks can be operated manually, if necessary. Insert the hand crank into the alignment tube until the end engages with the crank shaft. Turn the crank handle counter clockwise to raise the trailer. Remove and store the crank handle. To raise the jacks after coupling, rotate the crank handle clockwise. Retract as far as possible with the crank handle, then remove the lock pin and raise the pad tube and re-pin it in the highest possible position. Please refer to the jack manufacturer operation instructions for further assistance. The snaps for the fifth wheel jacks may be featured on this model.

▲ CAUTION

Before moving the trailer, crank up the stabilizer jacks to the fully closed position. Tighten 1/4 turn to secure the jacks in the travel position. This will help prevent the stabilizers from working open due to road vibration. Do not use stabilizer jacks to lift the unit.

Stabilizer Jacks

Fifth wheel units may also be equipped with one pair of stabilizer jacks.

As an option, an extra pair of stabilizer jacks or power twin jacks may be installed. The operation of the stabilizer jack is fairly simple. First park the vehicle on level ground. Block the wheels using tire chocks to prevent the unit from moving. Level the front and the back of the unit using the landing gear. Crank the stabilizers down on the low side first; this will bring the trailer to a fine level position. Re-tighten the stabilizers on the low side of the unit, if necessary. Do not use stabilizer jacks to lift the unit.

Electric Stabilizer Jacks (Optional)

In place of the manual stabilizer jacks, an electric stabilizer jack assembly

may be optioned. For further instructions on the operation of these, refer to the manufacturer operator's manual in the Owner's Information Packet.

Roof

This unit is manufactured with a 7mm rubber roof material. Optional is a gel-coated fiberglass roof and top wrap. Proper care and routine maintenance of your roof is necessary for trouble-free performance. On this model, the ladder is an optional feature. The ladder will assist you in gaining access to the roof for the sole purpose of routine inspections and maintenance.

Steps

Triple entrance door steps may be installed on your unit. If so, these steps may be the manual fold-down type of steps. To extend the step, first release the locking latch. Once the latch is released, pull the step pivot section out and down by the step cross member bar. Next, release the second step by pulling the step up and straight outward until it locks into position. Then pivot the third and final step out and down. For retracting the step, reverse the procedure. Keep all step pivot points lubricated with a quality grease-based spray lubricant for smooth operation.

Electric Steps (Optional)

Installation of the electric triple entrance steps may be an optional feature on fifth wheel units. These are installed in place of the standard manual steps. Operation for the electrical entrance door step is as follows;

- 1. With the entrance door open, turn the step power switch on.
- 2. Close the door. The step should retract and lock in the up position.
- 3. Open the door. The step should extend and lock in the down position with the under step light on.
- 4. Turn the step power switch off. The step should remain in the extended position when the door is closed. Turning off the power with the step retracted will hold the step in a retracted position as well.

ACAUTION

If the vehicle is towed with the step in the extended position, there is the possibility of causing major damage to both the step and the vehicle.

▲ WARNING

Be careful not to get any fingers or clothing near the pivot action of the step.

Windows

In the bedroom of the unit, one window will be marked EXIT. This window is an emergency escape, or egress, window. To open in case of an emergency, lift the red handles at the bottom of the window and push out. The windows installed in the fifth wheel units may be the radius torque, tinted safety glass style. These windows are also referred to as jalousie windows. Optional may be the double pane tinted safety glass windows.

Doors

The entrance door to fifth wheels is a radius door equipped with a dead bolt lock and lighted steps for added security. The door can be held open with the door stop. With the door open, simply lift the "T" section on the door and place it in the holder on the exterior sidewall of the unit. Next to the entrance door, a lighted, acrylic assist handle may be optional. If installed, this handle will assist anyone entering the unit.

Vents

In the kitchen area, an optional feature may be the 12 volt vent equipped with a rain sensor on the roof hood. Anytime the vent is open and it senses rain, it will automatically close. The vent is controlled by the wall thermostat. Once powered ON and the desired temperature is selected, the vent will run until the preset temperature is reached. When the temperature is reached, the vent will automatically shut off. Do not leave the fan in active mode while the unit is in storage or unattended for long periods of time. High winds or other unusual conditions or obstructions may prevent the vent from closing resulting in leakage, which could cause serious damage.

In the bath area a vent may be installed that operates on 12 volt electricity. This vent will be controlled by an on/off switch on the wall. Optional may be a vent with a rain sensor. If this is installed, it would be in place of the standard vent and located above the tub/shower.

A skylight may be an optional feature in the bathroom. If installed, it may be located above the tub/shower.

AWNINGS

Side Awning

A patio awning is a standard feature on your coach. To operate, follow these instructions:

Extending

- 1 Loosen the black adjustment lock knob behind each main arm. Flip the travel lock latches up.
- 2. Using the provided pull rod, reach up and pull the locking lever forward or down to release the awning.
- 3. Hook the rod into the loop of the pull strap and pull the awning all the way out.
- 4. Slide one rafter arm up until it snaps into place. Push down on the main arm to remove slack from the fabric, and tighten the black adjustment knob. Repeat on other side.
- 5. Slide the pull strap to the right end of the roller and wrap it around the main arm.
- 6. Pull up on the lift handle and raise the arm assembly to the desired height. Swing handle in, and allow the lock button to snap into one of the holes. Repeat on the other side.
- 7. Press the release lever at the bottom end of one main arm, pull the arm assembly outward to a vertical position, and readjust height. Repeat on other side. Drive provided stakes through holes of each patio foot into the ground.
- 8. During rain, lower one end to allow water to flow off.

(See the awning manufacturer's instructions for additional operating and maintenance details and precautions).

Retracting

- 1 Pull the stakes from the ground, swing the arm toward the vehicle, and snap the patio foot into the bracket. Repeat on the other side.
- 2. Raise the lift handle to release the lock button. Lower the main arm to the stop plug. Swing the handle in to engage the lock button in a hole. Repeat on other side.
- 3. Loosen black adjustment knob, lift slider catch, and slide the rafter arm down to the bottom of the main arm. Leave the black adjustment knob loose. Repeat on other side.
- 4. Grasp the pull strap and pull toward you. Flip the locking lever to the ROLL UP position. Hold the awning in the down position until you are ready to roll up the awning.
- 5. Slide the pull strap to the center and using it to control speed, allow the awning to return to the side of the vehicle. Allow the strap to wind diagonally to prevent a bulge in the fabric.
- 6. Tighten the black adjustment knob and flip the travel lock latch down. Repeat on other side. The awning is now ready for travel.



The awning will try to roll up as soon as the locking lever is flipped to the ROLL UP position.

▲ CAUTION

Whenever heavy or prolonged rain or wind is anticipated, or you will leave the awning unattended, it is best to close the awning. Damage as a result of weather is not covered by warranty.

Window Awning (Optional)

A window awning may be an optional feature on fifth wheels. To operate these, use the following instructions:

Extending

1 Grasp the loop on the pull strap and pull down to extend the awning. Then hook the loop onto the window strap hanger.

Retracting

- 1 Remove loop on the pull strap from the window strap hanger.
- 2. Slowly allow the awning to roll back to the closed position by feeding the pull strap upwards and diagonally. This prevents the strap from building up and creating a bulge in the fabric.
- 3. The window awning is now ready for travel with no further locking required.



Do not release the strap as the window awning is under tension and may snap back against the vehicle.

Spare Tire Carrier

Your unit has a spare tire mounted under the front of the unit, between the landing gear. This tire is raised and lowered via a crank mechanism that extends from under the unit on the door (curb) side. Attach the provided handle and crank the tire down, or up as necessary. Be sure the spare time is securely positioned for travel, and regularly check the air pressure in the tire to be certain it is ready for use at all times.



Chapter 7

PLUMBING & BATH FEATURES

_	RESH WATER SYSTEM	3
	Kitchen Sink	3
	Bath Sink, Shower & Accessories	3
	Monitor Panel	3
	Water Pump	3
	City Water Hook-Up	4
	Fresh Water Tank Fill	4
	Sanitizing	4
	Water Filtration System	5
	Water Heater By-Pass System	6
	Fresh Water Lines	6

WASTE WATER SYSTEM 6

General Information 6	i
Toilet 6	,
P-Traps7	
Black Water Holding Tank7	
Gray Water Holding Tank7	
Waste Water Disposal7	
Camping with Sewer Hook-Up 8	,
No Fuss Flush 8	,

FRESH WATER SYSTEM

Kitchen Sink

The kitchen sink installed in your unit may be an acrylic, double-bowl sink equipped with two sink covers to provide additional counter space when the sink is not in use. Cleaning care consists of washing with mild detergents and a soft cloth. Avoid using S.O.S. type cleaning pads because they may scratch the surface. The faucet in the kitchen may be a single-handle faucet equipped with a pullout spout.

Bath Sink, Shower & Accessories

The sink in the bathroom may be a porcelain sink. Use care when cleaning to avoid scratching the surface. The brass bathroom accessories in fifth wheel units include a towel bar, tissue holder, towel ring, and robe hook. The shower installed is a fiberglass combination tub/shower with a glass shower door. An assist handle may be installed in the tub/shower as an optional feature.

Monitor Panel

The monitor panel allows you to check the approximate levels in the fresh, gray, and black water holding tanks, and the battery condition. The monitor panel is generally located in the bathroom. Simply press the button of the item to check its status. The empty indicator light will always light when the button is pressed. If the tank is full, all of the lights will be on. Lights are sequential, and indicate the level in approximately 1/4 tank increments. For example: If the tank selected is approximately 1/2-full, then the indicator lights E, 1/4, and 1/2 will be lit.



Water Pump

The water pump is self priming and totally automatic, operating on demand whenever water is required. The water pump is used to pressurize the fresh water system when the unit is not connected to city water. To start the pump, follow these instructions:

- 1. Fill or partially fill the fresh water supply tank.
- 2. Open the kitchen and bathroom faucets.
- 3. Turn the water pump switch on and allow the water to fill the water line and the hot water heater.
- 4. Close each faucet after it delivers a steady stream of water (close the cold water first). Leave the hot water faucets on until they also deliver a steady stream of water. This will ensure that the water heater is filled with water.
- 5. The water pump should stop running once all faucets are closed.
- 6. The pump is now ready for automatic operation. The pump will run when a faucet is opened and stop when a faucet is closed.
- 7. Never allow the pump to run for long periods of time without water in the supply tank. Pump damage or blown fuses may result.

If water doesn't flow when a faucet is turned on while using the demand system, use the following trouble shooting chart.

SITUATION	SOLUTION
Pump running – no water	 Fill tank Clear the water line to the pump
Pump doesn't run	 Check the pump switch Check the 12 volt fuses Check the electrical connections Check the battery

All of the water should be drained from the fresh water system when the unit is not in use for more than one week. For more detailed information regarding the water pump, refer to the water pump manufacturer's brochure in your Owner's Packet.

City Water Hook-Up

When connecting your unit to city water, be certain to use a water hose manufactured and labeled for potable water. This will ensure that the hose will not alter the taste of the water. To hook the city water supply to the unit, connect one end of the hose to the city water supply. This will usually be a faucet or valve similar to your garden hose valve at home. Turn the city water supply on for a few seconds in order to clear the line. Once the hose has been flushed, turn the supply off. Connect the other end of the hose to the city water connections. Turn on the water supply and open all of the faucets to clear the air from the lines in the unit. Once air pockets have been purged from the water lines and water flows freely, close all of the faucets. The city water supply is under pressure; therefore the water pump is not necessary when connected to city water. Once the city water fill valve is opened, water is supplied to the fresh water system including the hot water heater, faucets, and stool. To disconnect from the city water supply, close the spigot valve and remove the hose from the city water supply. Disconnect the hose from the city water connection and store the hose in the water compartment.

Fresh Water Tank Fill

The fresh water tank is filled via the "gravity" fill connection located on the side of your unit. Open the door to access the gravity fill, and add water as desired. Since there is not an automatic shut-off for the fresh water tank fill, check the level from the monitor panel while filling the unit. The excess water will be vented from an overflow vent pipe onto the ground when the tank capacity has been reached. This pipe is installed in the fresh water tank to prevent tank rupture from overfilling. All of the water should be drained from the fresh water system when the unit is not in use for more than one week.

Whenever possible, drain the fresh water tank before traveling. Water in the tank will reduce the carrying capacity of the unit.

Sanitizing

To assure complete disinfecting of your fresh water system, it is recommended that the following procedure be followed on a new system, on one that has not been used for a length of time, or one that may have become contaminated. This procedure is also recommended before long periods of storage, such as over the winter months:

- 1. Drain the fresh water tank by opening the drain valves. There is one valve per water tank. All of the faucets should be in the closed or off position.
- 2. Prepare a chlorine solution using one gallon of water and 1/4 cup of chlorine bleach (5% sodium hypochlorite solution).

Prepare enough of the chlorine solution to administer one gallon of solution for every 15 gallons of tank capacity. For sanitizing this unit, prepare 41/2 gallons of the chlorine solution. This mixture puts a 50 PPM (parts per million) residual chlorine concentration in the water system that will act as a quick kill dosage for harmful bacteria, viruses and slime forming organisms. Concentrations higher than 50 PPM may damage the water lines and/or tank.

- 3. Once the fresh water tank is empty, close the drain valves on the water tank.
- 4. Pump the chlorine solution into the tank. This is done by placing the winterizing hose into the chlorine solution. Close the valve from the fresh water tank to the pump and open the valve from the solution to the pump. Turn the tank fill valve from city water to tank fill. Turn on the water pump until all of the solution is pumped into the fresh water tank.
- 5. Turn off the water pump. Close the valve to the solution. Open the valve from the tank to the water pump. Fill the water tank with the city water tank fill (or by using the same method as was used to put the sanitizing solution into the tank). Remove the water filter (from the drink dispenser faucet, if installed) and install the by-pass pipe to allow the sanitizing solution access to the faucet. Open each faucet in turn including the kitchen faucet, bath faucet, inside and outside shower, turning on both the hot and cold, and flushing the stool until all of the air has been purged from the pipes and the water runs freely. The entire system will then be filled with the sanitizing solution.
- 6. Allow the 50 PPM disinfecting solution to stand in the system at least four hours.
- 7 Drain the system and flush with fresh water. The water system needs to be flushed with clean water repeatedly, if necessary, until there is no chlorine taste or smell left in the system. To remove any excessive chlorine taste or odor that might remain, prepare a solution of one quart vinegar to five gallons of water. Allow this solution to agitate in the tank for several days by vehicle motion. Drain the solution and refill the tank with clean water.

Water Filtration System

Your unit may include a fresh water filtration system. This system uses extruded carbon filter cartridges to remove sediment and certain impurities from the incoming water supply. The filter assembly is located in the basement water compartment.

To replace the filter cartridge, turn off the water supply to the RV (at the city water connection). Unscrew the filter canister by rotating it clockwise. Replacement filter cartridges are available through your Authorized Newmar Dealer; have them order part number 03738.



Insert the new filter cartridge, positioning it so the opening in the bottom of the filter seats on the molded ring at the bottom of the canister. Reattach the canister to the filter housing by rotating the canister in a counter clockwise direction. When replacing the filter, make certain the rubber "O-Ring" seal is properly positioned in its groove in the cartridge housing. An improperly seated or missing seal will cause leakage around the perimeter of the filter housing. Use caution not to over tighten the canister when attaching it back to the housing.

A IMPORTANT

DO NOT ALLOW WATER TO FREEZE IN THE WATER FILTER CANISTER. Freezing will crack and permanently damage the filter housing and associated plumbing. **ALWAYS REMOVE THE FILTER CARTRIDGE PRIOR TO WINTERIZATION.** RV Antifreeze will render the filter element unusable.

Water Heater By-Pass System

The water heater by-pass valve is located at or near the water heater. By closing the water heater supply valve and opening the by-pass valve you can divert water away from the water heater. This is done when winterizing your unit. Using the by-pass will keep antifreeze out of the water heater when winterizing the system.

Before disinfecting the fresh water system, remove the water filter and install the by-pass pipe to allow water access to the drink dispenser faucet, if installed. The water filter is located under the kitchen sink. The filter will remove chlorine, dirt, and other matter. It will also eliminate most phenol (or similar) odors and tastes while delivering sparkling, taste free water for drinking and cooking. The filter is connected only to the cold water line that is attached to the drink faucet. The filter is not guaranteed to remove the tastes and odors of iron and sulfur. To remove these tastes you will need to chlorinate the water. Replacement filters are available that will filter iron and sulfur. Ask your dealer or RV supply center about acquiring an iron and sulfur filter. If you are traveling in an area where the water has a high iron and sulfur content, then add 1 tablespoon of chlorine bleach to every 10 gallons of water in your tank. This will precipitate the iron or sulfur so that the filter can remove it. If you are at a site where the unit is hooked up to city water, you will not be able to chlorinate the system because the water flows straight to your faucets and not through the fresh water tank. Filters should be changed every 6 - 12 months depending on the quality and quantity of water that is used in your unit.

Fresh Water Lines

Vibration and flexing during traveling can cause pipes and fittings to work loose. Check all of the plumbing connections for leaks on a yearly basis. If the water pump runs when all faucets are turned off, check for a leak. Be sure the drain valves are closed. Connections at the kitchen and bathroom faucets normally seal with hand tightening and a half turn with a wrench. If a fitting leak persists, disconnect it completely and check for mineral deposits or foreign material on the sealing surfaces. Clean the surfaces thoroughly and reinstall the fitting. Take the coach to an authorized service center for repairs if the system continues to leak. Follow the winterizing instructions given in Chapter 14 to reduce the risk of leaks caused by cracks from freezing pipes. Freezing damage can be extensive and expensive.

WASTE WATER SYSTEM

General Information

The waste drainage system was designed to provide adequate and safe storage and/or disposal of waste materials. All of the materials used in the making of this system are tested by a nationally recognized testing laboratory. The drainage system uses ABS plastic piping and fittings connected to the sinks, toilet, and holding tanks. This provides for their drainage to an outside termination.

The unit should be reasonably level for best operation of the system. There are two separate waste systems. The gray water system is for waste water from the sinks and shower. The black water system is generally for sewage waste from the stool. Each tank has its own control valve and both tanks drain through the sewer drain hose.

Toilet

The stool operates with water from either the fresh water tank with the water pump on or the city water supply. Before using the stool, add water to the bottom of the tank. Refer to the BLACK W ATER TANK instructions in this chapter. The stool flushes wastes directly into the black water holding tank. The stool uses high velocity water injection to produce a swirl effect in the bowl. The greatest problem that causes stool solids to build up in the holding tank is lack of liquids. When using your stool, it is wise to fill the stool 3/4 full of water. This will help to wash the solids away from directly below the stool and to ensure complete dumping of the holding tank.

Depending upon the model installed, water can be added to the stool bowl by lifting up on the lever. To flush the stool, push down on the lever until water swirls. The stool requires little maintenance.

Use an approved non-abrasive cleaner to clean the bowl. Spraying the bowl sealing blade with a silicone spray will retain the original smooth operating condition. Check the complete instruction and trouble shooting guide in the stool manufacturer's owner's manual provided in the Owner's Information Packet.

P-Traps

Each of the sink drains, the shower drain, and the washing machine drain (if equipped) has a water trap (P-Trap) to prevent holding tank odors from entering the coach. These traps must have water in them in order to work. While traveling, the water may splash out of the sink and shower drains. While stored, the water may evaporate allowing an odor to enter the coach. If this occurs, run water from the faucet into the drain, allowing water to fill the trap.

Black Water Holding Tank

The black water, or sewage, holding tank is located directly beneath the toilet. Before using the stool, you will need to treat the tank with water that is mixed with an odor controlling chemical. These chemicals are readily available at any RV supply store. Be careful not to spill the chemical on your hands, clothing or the carpet because it may cause a permanent stain. Pull the toilet levers forward to allow the chemical to mix with the toilet water. Continue pulling the toilet levers until at least one inch of solution is directly under the toilet. Release the levers and the waste tank is ready for use.

Gray Water Holding Tank

The gray water holding tank is located in the underbelly of the unit. It is primarily used for the drainage from the kitchen and bath sinks and the shower.

Waste Water Disposal

Both of the holding tanks terminate in a valve arrangement that permits draining each tank separately or together. It is recommended to drain the black water tank before the gray water tank. This will allow the water from the gray tank to wash the black water residue from the drain lines and hose. The valves that open to release the water are called gate valves. The blade that closes the opening in the sewer drain pipes is connected to the T-handle to release the contents of the tank(s) when pulled. The sewer line must be securely capped during self-containment use to prevent leakage of waste material onto the ground or pavement. Do not pull the holding tank gate valve open when the protective cap is installed on the pipe. Always drain the tank into an acceptable sewer inlet or dump station.

▲ CAUTION

Use only approved RV odor controlling chemicals in the holding tanks. Products containing ammonia and petroleum will damage the ABS plastic holding tanks and seals.

Whenever possible, drain the holding tanks prior to traveling. The carrying capacity of your unit will be reduced if water is left in the black or gray tanks.

The holding tanks should only be drained when they are at least 3/4 full. Doing this provides sufficient water to allow the complete flushing of waste materials in the drain lines and hose. If the tanks are not 3/4 full, add enough water to allow for sufficient flushing. To empty the waste water tanks, connect the adapter to the drain hose. Use the adapter supplied with your unit. If the adapter is lost or broken, one can be purchased from most RV supply stores.

Once you have placed the adapter on the drain hose, it can remain there for the life of the hose. Unscrew the cap off the drain. Connect the hose with the adapter in place to the drain fitting. Open the gate valve all the way by pulling on the T-handle. The tank will start to drain as soon as the T handle is pulled.

After you have drained the black water tank, immediately drain the gray water tank. Doing this helps to flush the black water from the sewage hose.

When both of the tanks are empty, flush them with a fresh water rinse before you close the valves. The gray tanks are easily flushed by pouring a couple of gallons of water into a sink drain. Prime the system with an odor control chemical following the directions above for preparing the system for use. The drain outlet is engineered for quick release of the drain hose adapter. Always close the gate valves and secure the end cap to prevent leakage while in transit. After draining, add enough water to the black water tank to cover the bottom. When using dump stations for draining the holding tanks, please keep other travelers in mind. Practice good housekeeping. Leave the dump stations in good order. Above all, do not pollute.

Camping with Sewer Hook-Up

When camping at parks with sewer hook-up, it is important to keep the black water holding tank gate valve closed at all times, except when dumping. The gray tank can be kept open while hooked to a sewer connection but again, the black water tank must be kept closed. This is done so that an ample supply of liquid remains in the tank to provide a smooth flow through the gate and drain valve when dumping. Sufficient liquid in the tank causes a swirling action that should take any accumulated solid wastes with it. Accumulation of solid wastes in the black water tank can be avoided by keeping the gate valve closed when connected to the sewer hook-up. If the valve is left open, solid wastes may accumulate in the tank. This may eventually result in costly repairs.

▲ CAUTION

The gray tank valve must be in the open position when operating the optional washing machine.

\land warning

Holding tanks are an enclosed sewer system and must be drained into an approved dump station. Both black and gray water holding tanks must be drained and rinsed thoroughly on a regular basis in order to prevent the accumulation of harmful or toxic materials.

No Fuss Flush

This unit may be equipped with a flushing system for the holding tanks. When draining your sewer tank, attach a water hose to the Sewer Spray hookup. After the tank is drained, leave the gate valve open and open the water valve to allow water to spray inside the sewage tank. This will clean the inside of the tank of any debris that may be left inside the tank. After this is done, disconnect the water hose and close the gate valve.

▲ CAUTION

Do not use the same hose for the No Fuss Flush that is used for filling the fresh water tank.

▲ CAUTION

Some floor plans use multiple grey water tanks. If your unit is equipped with a "No Fuss Flush" system, it is imperative that you be certain the dump hose is connected to the units drain outlet and inserted into an approved dump station, and **ALL** of the grey water (waste water) and black water (sewage water) dump valves are fully open to facilitate proper drainage as the rinsing is performed. Failure to do so can result in the grey water and / or sewage tanks filling and overflowing inside the unit, as well as potential damage to the coaches plumbing and associated components.

When unsure if any solids are still left inside the tank, fill the sewage tank with approximately ten gallons of water through the stool. Then, as you travel, the agitation of the water should help liquefy any solids left in the tank. You can dump the sewage tank again at your next destination.

Chapter 8 SLIDE OUT FEATURES

SLIDE OUT FEATURES	3
General Instructions	3
Operating the Slide Out Room	3
Retracting the Slide Out Room	4
MANUAL EXTENSION AND RETRACTION 4	4
Operating Precautions	4

SLIDE OUT FEATURES

\land warning

Read the following slide out room instructions before activating the switch.

▲ CAUTION

The slide outs can be operated without utilizing the leveling system, but is recommended to have the unit as level as possible.

General Instructions

A IMPORTANT

The slide out room should be inspected for alignment every six (6) months. If alignment is necessary, have the room adjusted.

- 1. The slide out room can be stopped at any time by activating the slide out switch. The room will reverse directions each time the switch is activated.
- 2. If the slide out room stops before reaching the full "OUT" or "IN" position, the slide out controller may need adjustment.
- 3. To adjust the slide out controller, turn the adjustment screw clockwise to increase the power and counterclockwise to decrease the power.




Move the adjustment screw in small increments. Try moving the slide out room again. Use caution. There is a potential for component or structural damage if the screw is adjusted too high.

\land important

This screw does not adjust the slide out room speed. It sets the amount of power required to move the room against the mechanical stops.

Operating the Slide Out Room (w/manual locking arms)

- 1. Verify the coach is either plugged into shore power or is under generator power.
- 2. The windows on the end of the slide out room must be closed before moving the room in either direction.
- 3. Before extending or retracting the room, look for and remove any obstructions.
- 4. Move the driver's chair forward before moving the slide out room in either direction.
- 5. Disengage the lock arms by pulling down on the center of the arm using the lock arm release tool, as required.
- 6 Activate the slide out switch in the desired direction to either extend or retract the room. **Please note that you must hold the slide out switch for the duration of movement of the room**. If the switch is released during room extension or retraction, the room will stop moving. When the room has reached full extension or retraction, the slide out will automatically stop.
- 7. If retracting the room, be sure to engage the lock arms for the slide out room as soon as it has fully retracted.

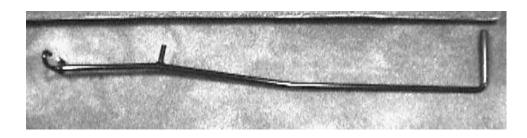

Retracting the Slide Out Room

- 1 Activate the slide out switch. When fully retracted, the room will automatically stop. The indicator light will be lit while the room is traveling.
- 2. Before moving the coach, engage the lock arms by pushing the arm up into the locked position using the lock arm tool, as required.



On units equipped with **manual lock arms**, it is important to release the switch as soon it has pulled tight and stopped moving. Current will be applied to the slide out motor as long as you hold the switch. Automatic resetting circuit protection is incorporated to minimize the chance of failures from not releasing the button at the end of room travel, but timely releasing of the button before the circuit protection engages is highly recommended.

MANUAL EXTENSION AND RETRACTION

The slide out room may be manually retracted. Before attempting to manually extend or retract a slide out room, please contact your servicing dealer or call Newmar Customer Support at 1-800-731-8300.



The TRANS-TORQUE bushing must be re-tightened to re-couple the slide out gear motor before moving the coach. This will hold the slide out room in place. The correct torque on the 11/2" TRANS-TORQUE bushing is 110 foot pounds maximum. The correct torque on the 11/2" TRANS-TORQUE bushing of the K-900 motor (center shaft motor) is 125 foot pounds maximum.

Slide outs with either the center or end mounted motors can be moved by pushing the room the full length of its travel in either direction. This method will require the assistance of at least two people.

Operating Precautions

▲ WARNING

Before extending the slide out, make certain that there is a minimum of five (5) feet of clear space on the slide out side of the unit. Prior to extending the room, be sure to unlock the slide out locking arms. Make sure there are no obstructions either inside or outside the unit that may interfere with the slide out extension. Tree branches, bushes or telephone poles can cause extensive damage to the exterior of the unit.

\land important

It is important to clean the slide out rollers under the floor regularly as dirt may adhere to the rubber coating on these rollers and cause damage to hard surface flooring. Such damage is not covered under warranty. These rollers may leave indentations in carpeting, linoleum and other flooring. This condition is normal and does not warrant flooring replacement.

Chapter 9 ROUTINE MAINTENANCE

EXTERIOR CARE
Washing3
Waxing4
Seals4
Striping & Decals4
Simulator Care5
Rubber Roof Care & Maintenance5
Battery Inspection & Care6
INTERIOR CARE
Carpet7
Fabrics7
Walls & Ceiling8
Dash8
Woodwork8
Counter Tops8
Accessories9
Detectors9
Condensation9
ROUTINE MAINTENANCE
Monthly9
Every Three (3) Months10
Every Six (6) Months10
Annually10
Winterizing10

EXTERIOR CARE

Damage caused by improper or unapplied maintenance is not covered by your Newmar Limited Warranty.

Washing your RV

The clear coat used on all painted Newmar RV^Is is a similar to the technology that used by car manufacturers. It is baked in our Istate of the art bake booths which cures the clear coat. The end result is a Masterpiece Finish which is the highest quality in the industry. The same care needs to be performed and maintained on your RV exterior surface as on your automobile.

- i Make sure the RVIS surface temperature is under 90° F, and is not in direct sunlight.
- i Rinse the entire coach to remove all loose dirt and grime. Never hold a pressure washer close to the surface. Use a fan type spray nozzle, making sure that the water coming out of the gun has a fan and not a single straight stream.
- Most car stores offer mild car wash shampoos that are safe for clear coat finishes. We would recommend using baby shampoo as it will not leave a film on the coach. Adding ½ of a cup of food grade vinegar to the water will boost the cleaning ability of any cleaner and also soften the water. This also helps to minimize water spots. Do not use dish soap, detergents with degreasing agents, or industrial cleaners as they can cause damage to the finish.
- Use 100% cotton or Lambswool pads or wash mitts for washing the painted surfaces of your RV. Use a different mitt for washing the wheels and undercarriage. Please contact your Newmar dealer to order these Newmar parts. (*Lambswool pad: 018461; Backer Pad: 018461A; Lambswool mitt: 018464; Extension pole: 018463*)
- i Change water in your wash bucket often or place a □dirt guard □ in bottom of the bucket to keep the cleaning pad or wash mitt free of dirt and debris.

ABSOLUTELY NO BRUSHES SHOULD BE USED ON THE PAINTED SURFACE. USE OF THESE ON YOUR RV S PAINTED SURFACE WILL CAUSE DAMAGE TO THE FINISH, AS IT WOULD AN AUTOMOBILE FINISH. NEWMAR DOES NOT SUPPORT USING ANY STYLE, TYPE, MATERIAL OF BRUSH EVEN THOUGH IT MAY BE MARKETED AS SAFE OR SAFE OR APPROVED.

Damage caused by inappropriate or unapplied maintenance is not covered under warranty as expressed in the Newmar Expressed Limited Written Warranty.

Drying your RV

Drying your RV is just as important as washing it. Today is tap-water and well-water contain many chemicals that could water stain your RV is finish.

After washing, dry your RV with the **EZE Squeegee** (# 018462) or a clean 100% leather chamois. You can also use fresh Microfiber towels for drying. Please use caution as these towels are made partially with polyester (*which is plastic*) which can break down over time from extended use and washing, eventually causing damage to the clear coat finish.



Never use a strong solvent, such as lacquer thinner or harsh abrasives, on any of the exterior painted surfaces.

Waxing

The exterior finish will require a routine waxing. When water will not bead and roll off a freshly washed vehicle, a new coat of wax is needed. Wax not only improves the appearance of the vehicle, but it also protects the finish against oxidation and corrosive materials. The recommended type of wax is one that is compatible with painted or gel-coated fiberglass finishes, and contains a UV (ultra-violet) inhibitor. Buffing with a polishing compound will improve a dull or discolored finish.

\land important

When using a polishing compound that does not contain a wax preservative, reapplying a coat of hard wax after polishing is recommended.

Seals

The seals around doors, windows, vents, slide out trim and external seams should be checked at least twice a year. In addition, the roof seams should be inspected twice a year for cracking or peeling. If deterioration is noted during a routine maintenance inspection, reseal the seams or seals with an approved sealant to prevent leaks. Your dealer can perform the resealing inspections and work for you. It is recommended that a Newmar Authorized Service Center perform these inspections, and reseal when necessary.

Proper Sealants for Application

rioper sealants for Applicati	
Plas-T-Cote	Metal or fiberglass roof
Surebond #SB-140	Rubber laminated to metal roof and all skylights.
Carlisle #502-LSW	Rubber roof over wood Base
Self Leveling Sealant Silicone Sealant	To cover butyl and other sealants: not to be used as the main sealant
Parbond	To seal across tops of windows, etc. on exterior where silicone is not used

Striping & Decals

The striping and decals on your vehicle require little maintenance. Treat these as you would any painted surface on your vehicle. Wash them with mild soap and water, or any retail car soap. Never wash the vehicle in direct sunlight, while the vehicle is hot or with hot water. Rinse thoroughly to prevent soap residue accumulation. Use caution with high pressure wash nozzles. Keep them at least 18 inches from the edge of the decals. High pressure water may cause the decals to loosen and peel. Test small sections of decals when using any type of cleaning solution. \land important

Do not use solvents such as acetone, MEK, toluene, etc. on the decals. Any solvent including alcohol may soften or smear colors. Do not use lacquer thinner or paint on decals. Do not overcoat the decals with clear paint. Do not allow gasoline or other fuels to drip or stay on the decals for any length of time. If this occurs, immediately flush the area with water.

Simulator Care

The care and maintenance of your stainless steel wheel covers is simple and requires no special material or products. All products are constructed of highly polished 304L stainless steel. Timely care and cleaning will keep them looking great for many years. We suggest the following care:

- 1 Clean your wheel cover/liner on a regular basis to keep road dirt from building up.
 - A. Rinse with clean water to remove loose dust and dirt.
 - B. Clean with a mild soap and water solution. (Any non-abrasive household detergent works fine.) Apply with cloth, sponge, or soft bristled brush. Use solution liberally to avoid surface scratching due to trapped dirt on the applicator.



Do not use harsh detergents, acids, or abrasives which may scratch or dull the surface. The applicator cloth, sponge, or soft bristled brush should be non-metallic and non-abrasive

- C. Rinse thoroughly with clean water to remove excess soap and dirt.
- \square Repeat above steps as required.
- E. If stubborn stains persist, such as road tar, brake dust, oil, etc., use only a product compatible with stainless steel. An over-the-counter window cleaner (like Windex) will often remove foreign material. If a harsher cleaner is needed, we recommend "NEVR-DULL," available at many general hardware or automotive stores.
- 2 Surface rust: From time to time, surface "spin out" rust may appear on the stainless steel. Normally the "spin out" rust comes from the wheel, lug nuts, locator pins, etc. In many cases, regular normal cleaning of your decorative wheel product, as indicated above, will remove any surface rust. If, however, a stubborn rust spot remains, utilize "NEVR-DULL" (a wadding polish), applying constant pressure to remove any surface blemish. You may have to repeat this process on hard to remove spots. After cleaning with "NEVR-DULL," you may want to re-shine your wheel products using Windex or a similar product.
- ³ Petroleum based tire conditioners: While the use of these products (Armor-All, Son-of-a-Gun, etc.) may improve the appearance of your tires, these types of products will form a film on your stainless steel wheel cover product. To remove, use a mild cleanser, like Windex, to restore the shine.



Remember to periodically check the tightness of your wheel cover product.

Rubber Roof Care & Maintenance

Proper care and maintenance of your recreational vehicle, including your rubber roof, is important for trouble-free performance. Normal maintenance is simple and easy, and does not require special materials. Keep the roof clean. Clean the roof at least four (4) times annually. For normal cleaning:

1 Use RC100 Decor Synthetic Roof & General Purpose cleaner or a mild laundry detergent.

A CAUTION

Do not use general purpose cleaners or conditioners containing petroleum solvents, harsh abrasives or citric-based cleaners. You may cause irreparable damage to your roof.

- 2. Rinse the complete roof with clean water to remove any loose dirt or debris.
- 3. Using a medium bristle brush, along with your selected cleaner mixed with water, scrub the entire roof. Rinse thoroughly with clean water to avoid residue build up on the roof or sidewalls of the vehicle.
- 4. For more difficult stains, you may use cleaning materials mentioned above in a more concentrated mixture. For stubborn stains, use of a cloth dampened with household bleach. Household bleach can be used (fully concentrated) and allowed to soak in stubborn stain areas, then scrubbed with a medium bristle brush or rag. Rinse thoroughly. Do not pour the bleach on the roof and allow it to run down the sides of the vehicle. Concentrated bleach may damage the graphics.

▲ WARNING

Use caution when working on top of your vehicle. The wet roof membrane may be extremely slippery.

Battery Inspection & Care



Remove rings, metal watch bands, and other metal jewelry before working around batteries. Use caution when using metal tools. If a tool contacts a battery terminal or metal connected to it, a short circuit could occur which could cause personal injury, explosion or fire.

A CAUTION

Disconnect the 120 volt electrical power cord and the negative terminal from the coach batteries before working on the electrical system.

Remember that when batteries are not used for an extended period of time, they may lose their charge. Periodic charging of the batteries during storage of the unit will increase the life of the battery. Check the external condition of the battery periodically. Look for cracks in the cover and case. Check the vent plugs and replace them if they are cracked or broken. Keep the battery clean. Accumulations of acid film and dirt may permit current flow between the terminals, which could drain the battery.

To clean, wash the batteries with a diluted solution of baking soda and water to neutralize any acid present. Rinse thoroughly with clean water. Foaming around the terminals or on top of the battery is a sign that acid is being neutralized. Avoid getting the baking soda solution in the battery. Secure all vent caps. Dry the battery cables and terminals to prevent corrosion. Do not use grease on the bare metal inside the cable terminals. Grease can act as an insulator, and electricity will not flow through it. A plastic ignition spray will protect the terminals after they have been cleaned.

▲ WARNING

Do not allow the battery fluid to contact your skin, eyes, fabric, or painted surfaces. The fluid could cause serious personal injury or property damage. Wear eye protection when working with any battery.

The batteries should be removed and stored in a warm place when not using your motorhome for an extended period of time. Mark the cables, positive and negative, for easy identification. Batteries are not to be stored on concrete floors.

The batteries require periodic charging during storage. If the motorhome is to be stored for a long period of time, it is recommended that all of the batteries inside the unit be removed from clocks, radios, smoke alarms, etc. This will prevent unnecessary drain and corrosion of the batteries. The coach batteries are 6 volt RV/Marine deep cycle batteries. This type of battery consumes water and must be filled periodically. Please be sure to check the battery water level on a regular basis. Consult the owner's manual supplied by the battery manufacturer.

INTERIOR CARE

▲ warning

Urea-formaldehyde is used in the productions of particle board, hardwood plywood, and most paneling. Ureaformaldehyde resin may release formaldehyde vapors into the air, which may cause headaches, and in some people, eye, nose and throat irritation. Formaldehyde may intensify some allergies or upper respiratory problems like asthma. Providing proper ventilation as needed by operating the power roof vents and opening windows should reduce the risk of such problems.

A IMPORTANT

The fading of upholstery, carpet and other interior fabrics is generally caused by excessive sunlight. The drapes, blinds or shades should be kept closed when the vehicle is parked for an extended period of time to minimize the fading. Normal deterioration of appearance items due to wear and/or exposure is not covered by the Newmar Limited Warranty.

Carpet

A weekly routine of vacuuming the carpet and fabrics throughout the vehicle is recommended. Doing this will prevent an accumulation of dirt that can detract from the materials appearance and shorten its life. Remember to empty or replace vacuum bags before they become half full. In carpet areas that receive the most sunlight, close the curtains frequently to prevent fading. Act quickly to clean up when anything is spilled or dropped on the carpet.

Included in the Owner's Information Package is the carpet manufacturer's Carpet Care Guide. The Carpet Care Guide lists detailed information on cleaning soiled areas and removing stains from the carpet installed in the unit.

Fabrics

The fabrics used in this motorhome for the bedspread, draperies, headboard and valances contain fire-retardant additives that may be damaged by use of improper cleaning products. Cleaning instructions for these items are DRY CLEAN ONLY. Water-based products are not recommended for cleaning the fabrics in your new unit. Most water-based household cleaning products are not formulated for use on these fabrics and may cause excessive shrinkage or fading. For best results, the fabrics in this unit should be cleaned by a professional carpet and upholstery cleaner.

Spills, spots or stains should be treated as soon as possible to avoid permanent damage. If a spill occurs, blot the fluid with a dry towel. Do not rub the spill. Rubbing may cause the liquid to "set" in the fabric. When attempting to clean a spot or stain, always start from the outside and work inward to avoid spreading it further. Some stains or soils are extremely difficult or impossible to be removed completely. These should receive immediate, professional attention. Spills, spots, stains or soils are the responsibility of the owner, and are not covered by the Newmar Limited Warranty.

▲ WARNING

When cleaning the upholstery and fabric in the unit, do not use lacquer thinner, nail polish remover, laundry soaps or bleach. Never use carbon tetrachloride or gasoline for cleaning purposes. These items may cause damage to the materials being cleaned, and most are highly flammable.

Walls & Ceiling

The wall and ceiling coverings should be cleaned periodically to maintain a new appearance. Use a non-abrasive cleaner with a soft cloth on the walls. Do not use solvents of any kind. Solvents may damage the surface.

Dash

In order to keep the dash in like-new condition, follow these guidelines:

Do-

- Dust and clean the dash with a soft, damp cloth, or chamois, wiping the surface gently.
- Use a mild detergent and lukewarm water.
- Dry the surface, after washing and rinsing, by blotting with a damp cloth or chamois.

Do Not—

- Use harsh chemicals that may damage the dash.
- Use cloths containing grit or abrasive particles or kitchen scouring compounds to clean or dust the dash.
- Subject the dash to hard, direct blows.
- Use boiling water, strong solvents or other materials listed below to clean the dash, as they will soften the plastic.

Woodwork

The wood cabinetry should be cared for with furniture polish to sustain the natural beauty and luster of the wood. This will also keep your cabinetry looking new, and prevent the wood from drying. The simulated plank flooring should be protected from dents, scratches and nicks by installing protective pads on the bottom of chairs and tables. Use of area rugs and floor mats by the entrance door is recommended to trap dirt. To clean the flooring, begin by vacuuming the floor to remove loose dust and dirt. Then, damp mop the floor with one ounce of Wilsonart Flooring Cleaner diluted in one gallon of clean, warm water (or use a non-abrasive, soap-free cleaner). The mop should be damp, not dripping. Do not use soap-based cleaners, scouring powders, steel wool, abrasive cleaners, wax or polish on the floor. To remove stubborn spots like shoe polish, oil, tar, markers, scuffs, etc., use a household solvent, acetone or nail polish remover, then wipe with a damp cloth. To remove chocolate, grease, juice or wine, use warm water and a non-abrasive cleaner. To remove candle wax or chewing gum, carefully scrape off when the material has hardened. For further tips, please see the manufacturer's information sheet in your Owner's Information Packet.

Counter Tops

To properly care for the countertop in your new unit, always use a heat pad or trivet to protect the surface from hot objects that may mar or damage the surface. Also avoid cutting directly on the surface and avoid using harsh chemicals on the counter top. Wipe the counter top with a damp cloth to remove water spots. For most dirt and stains, wipe with a damp cloth and use soapy water or ammonia-based cleaners.

Accessories

The brass light fixtures, bath accessories and faucets can be cleaned by wiping with a soft, damp cloth. Washing with warm water will remove dry water spots. Do not use cleaners that contain harsh or abrasive chemicals. Alcohol or similar solvents should never be used.

Detectors

The CO and Propane detectors (if equipped) are self-contained and DO NOT require any maintenance other than normal cleaning and dusting. The smoke detector installed in this coach is 9 volt battery operated. The battery needs to be tested periodically and replaced when necessary. When cleaning the case on any of the detectors, use a damp cloth or paper towel. Do not spray cleaners or wax directly into the case as it may cause false alarms.

Condensation



Since surface condensation within the coach cannot be controlled by the manufacturer, damage caused by condensation is not covered by your Newmar Limited Warranty.

Damage may occur to your unit if excessive condensation exists. Accumulation of condensation on surfaces within your unit occurs when warm, moist air contacts a cool surface. It is most evident on the inside of windows. This problem can be controlled by:

- 1 Slightly opening a window or roof vent to allow the moisture to escape from the unit.
- 2. A small dehumidifier is also very effective in removing moisture from the air.
 - Condensation levels are highest during times when a person is cooking or taking a shower in the unit, but these are not the only times condensation is present.
 - Condensation can migrate through ceiling panels and saturate the fiberglass insulation in your ceiling cavity. This condition often causes the occupants to believe the recreational vehicle has a roof leak. Walls and ceiling panels may also become wet when the moisture accumulates on these surfaces.
 - Newmar Corporation does not recommend the use of any catalytic heaters.

ROUTINE MAINTENANCE

MIMPORTANT

Always follow the chassis maintenance guidelines found in the chassis manufacturer owner's manual.

All routine maintenance is the responsibility of the owner and is not covered by the Newmar Limited Warranty. Please note that damage caused by improper or unapplied maintenance is not covered by the Newmar Limited Warranty.

🛆 important

Cosmetic adjustments and alignments must be performed within the first three (3) months from date of original purchase for warranty consideration. Thereafter, these items are considered routine maintenance.

Items supplied by other manufacturers may require specific individual maintenance not listed herein. Please refer to the manufacturers' suggested maintenance guidelines in the Owner's Information Packet.

Monthly

• Check battery water level.

Every Three (3) Months

- Clean range hood exhaust fan filter and blades.
- Check gas lines for leaks with soap solution or leak detector.
- Test smoke alarm, carbon monoxide detector and Propane gas detector.
- Check operation of windows, latches and hinges.
- Clean the roof ducted air conditioner filter(s).
- Clean and inspect all door and window seals; reseal where necessary.
- Inspect and reseal around the tub and shower area where necessary.
- Lubricate the exterior door hinges and latches with a graphite (silicone) lubricant.
- Check, clean and tighten battery cables, and inspect batteries for proper fluid level.

Every Six (6) Months

- Inspect the slide out for proper seal. If realignment is necessary, please contact an Authorized Newmar Service Center.
- Inspect the exterior rubber slide out seals and apply a UV inhibitor, such as 303 Protectant.
- Rotate tires as recommended by the tire manufacturer.
- Check all gas appliances for proper operation.
- Have the Propane system inspected by a qualified technician.
- Lubricate the moveable parts on the entrance step.


Annually

- Inspection of roof seams and joints should be performed by an Authorized Newmar Service Center. If resealing is necessary, it is the owner's responsibility and is not covered by the Newmar Limited Warranty.
- Sanitize the fresh water system.
- Wax and buff all gel-coat surfaces on the vehicle as described previously in this chapter.

Winterizing

To store your unit for the winter months, it is necessary to winterize the water system to help prevent freezing. To do this, follow these instructions:

- 1 The water heater must remain off during this process. Shut off the water pump and make sure the water supply valves are closed.
- 2. To drain the fresh water tank, open the drain valves.
- 3. Open the low point drain valves. There is one drain valve for each water line, one cold and one hot. This is done to drain all of the water out of the system.
- 4. After the water heater has cooled off, remove the drain plug to drain the water from the water heater. In the exterior compartment beside the water heater there are two water heater shut off valves and a by-pass valve. The shut off valves must be closed and the by-pass valve must be open, prior to winterizing to prevent the antifreeze solution from entering the water heater.
- 5. Close the low point drains to prevent the antifreeze from draining through the lines onto the ground.
- 6. Remove the water filter. See Chapter 7 for more information.
- 7. Close the water supply valve that flows from the pump to the tank.

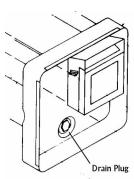

- 8. Use only non-toxic antifreeze that has been approved for use in drinking/potable water systems. Place the intake hose into the antifreeze supply. Open the antifreeze valve to allow the solution to flow freely. Once the water pump is turned on, proceed to the kitchen faucet, bath faucet, inside and outside shower, turning on the hot and cold, and flushing the stool until the antifreeze solution flows freely. If the unit is equipped with a washer, be certain to purge the air from it also. This forces the antifreeze through all of the water lines and faucets. It also allows the antifreeze solution to enter the drain lines and prevent the P-traps from freezing. Check the antifreeze solution from time to time to make sure there is an adequate supply.
- 9. Close the antifreeze valve when the winterizing process is complete. Store the in-take hose, and turn the water pump off.
- 10. Open the water supply valve that flows from the pump to the tank to help prevent freezing on that water line.
- To de-winterize your unit, open both of the low point drains to allow the antifreeze solution to drain from the water system. Next, close the low point drains and connect your unit to city water. Put water in the fresh water tank and pump at least one gallon through the water pump in order to remove the antifreeze from the water pump. Keep the water heater supply valve closed and the water heater bypass valves open. The supply valve for the fresh water tank from the pump must remain closed. As in winterizing, open the kitchen faucet, bath faucet, inside and outside shower, turning on both the hot and the cold, and flushing the stool until the antifreeze solution is flushed out of the system and the water flows clear. Once the system has been flushed, open the water heater supply valve and close the water heater bypass valve. Open the fresh water tank supply valve from the pump and the ice maker valve. Reinstall the water filter. Be sure to close the fresh water tank drain valves to allow the tank to fill.

Note: Remember, if your unit has the exterior shower installed you must winterize this system as well.

Head Lamps

Recreational Vehicle headlamp maintenance recommendations while your vehicle is parked for long periods:

- 1. Check headlamp regularly for condensed water drops (daily in high humidity areas).
- 2. If small drops of condensed water are noted, drive your RV with the headlamps "ON" or just turn "ON" the headlamps. This will evaporate the condensed water drops and will help in avoiding the accumulation of water. Depending on the size, shape and location of the lamp on the RV, the atmospheric conditions occurring, the amount of time required to clear the lamp may vary from 2 to 6 hours.

If water is allowed to accumulate, some stain marks on the reflective surfaces may appear, damaging the surface.

The headlamp seals should not be directly sprayed with high pressure (home or industrial) wash systems..

Cold Weather Use

Although great care has been taken to build a well-insulated unit, recreational vehicles are not intended for extended use in subfreezing weather without special precautions.

When the temperature drops below freezing, the furnace must be turned on to keep the unit warm. Continued use in cold weather will require the unit to be winterized.